


Assembly Instructions

Step 2


Connect 1 x rail assembly completed at Step 1 to large end **1** using 4 x 40mm hex bolt **A** and 4 x 30mm wooden dowel **B** as shown.

Repeat for other rail assembly.

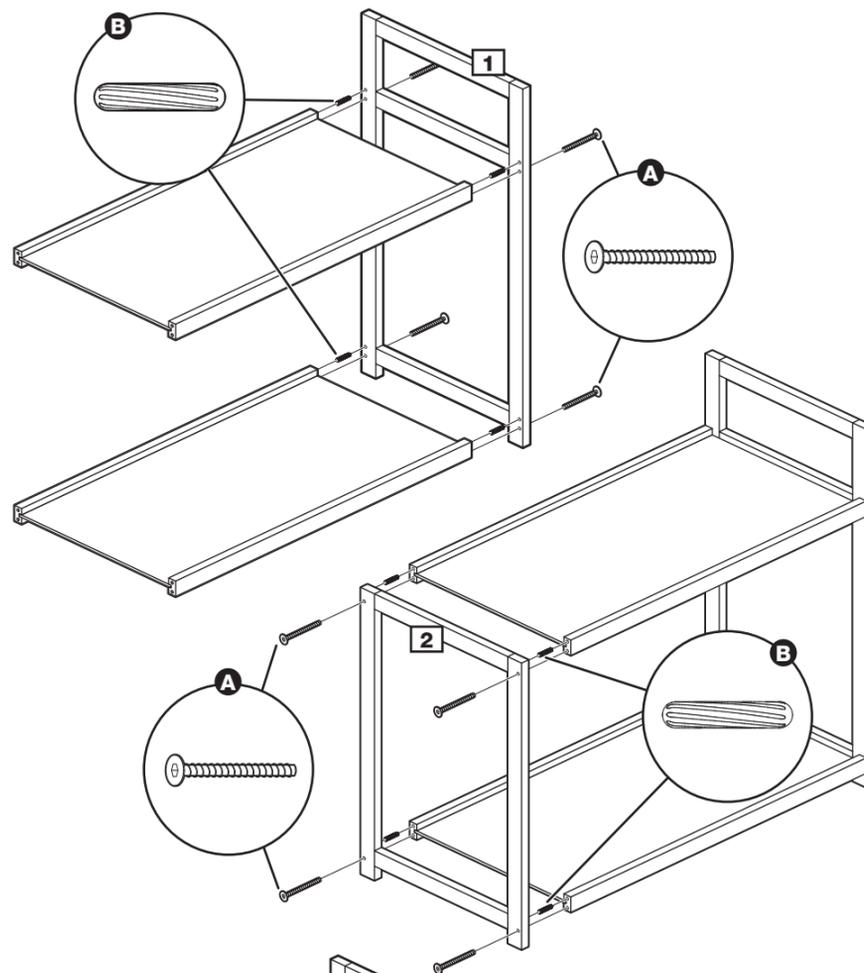

Step 3

Connect small end **2** to exposed ends of rail assemblies using 4 x 40mm hex bolt **A** and 4 x 30mm wooden dowel **B** as shown.

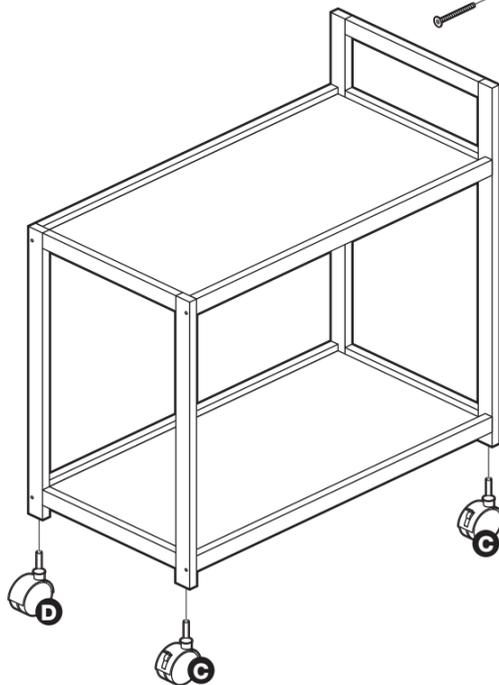

Step 4

Insert 2 x castor **D** and 2 x castor (with brake) **C** into the bottom of the legs as shown.


Assembly complete

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 0800
Home Retail Group, 489-499 Avebury Boulevard, Saxon Gate West, Central Milton Keynes, Bucks, MK9 2NW

Hostess Trolley

Assembly Instructions- please keep for future reference

901/3517

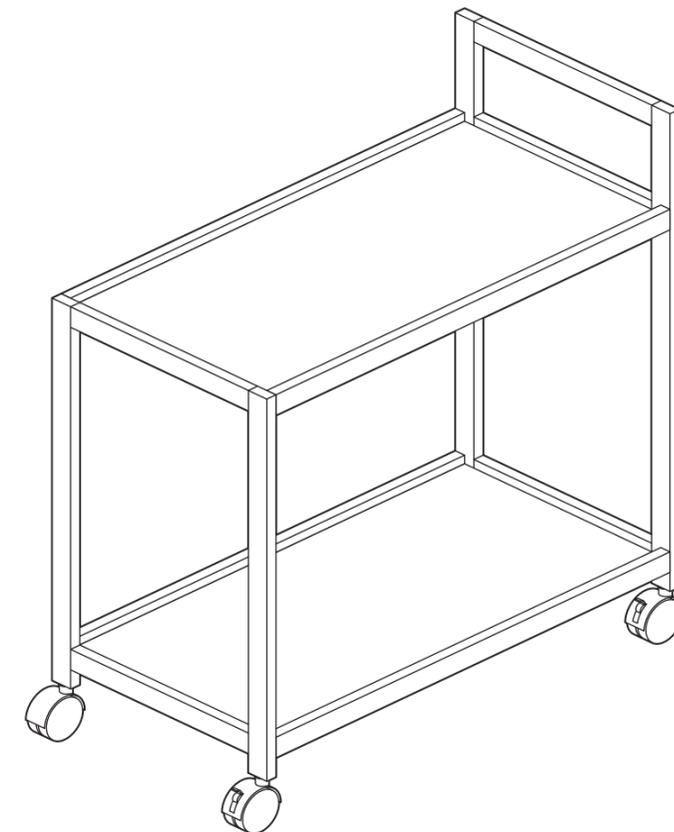

Dimensions

Width - 61cm
Depth - 34cm
Height - 75cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 0800

! Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed below and opposite.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.




- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels


Please check you have all the panels listed below

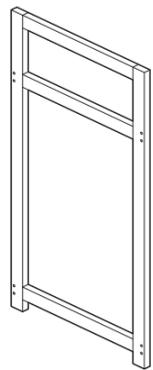


1 Large end x 1
(70(h) x 34(d)cm)

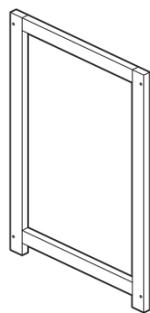

2 Small end x 1
(56(h) x 34(d)cm)

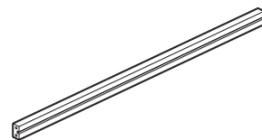

3 Rail x 4
(3.5(h) x 57.5(w)cm)

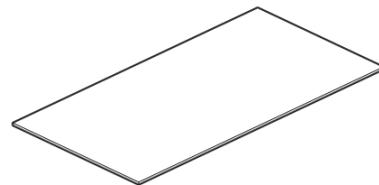


4 Shelf x 2
(57.2(w) x 31.2(d)cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the fittings listed below

 
Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.




A 40mm Hex bolt x 8

 


B 30mm Wooden dowel x 8

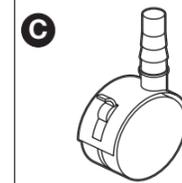

C Castor (with brake) x 2

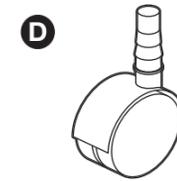

D Castor (no brake) x 2

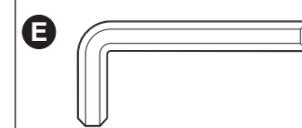

E Allen key x 1

Tools required

All tools required for assembly supplied

Ruler – Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Fit 1 x shelf **4** into slots of 2 x rail **3** as shown.

Repeat for other shelf and pair of rails.

