


Tolga 03R

Assembly Instructions - Please keep for future reference

462/6071

482/6369

 496/5581

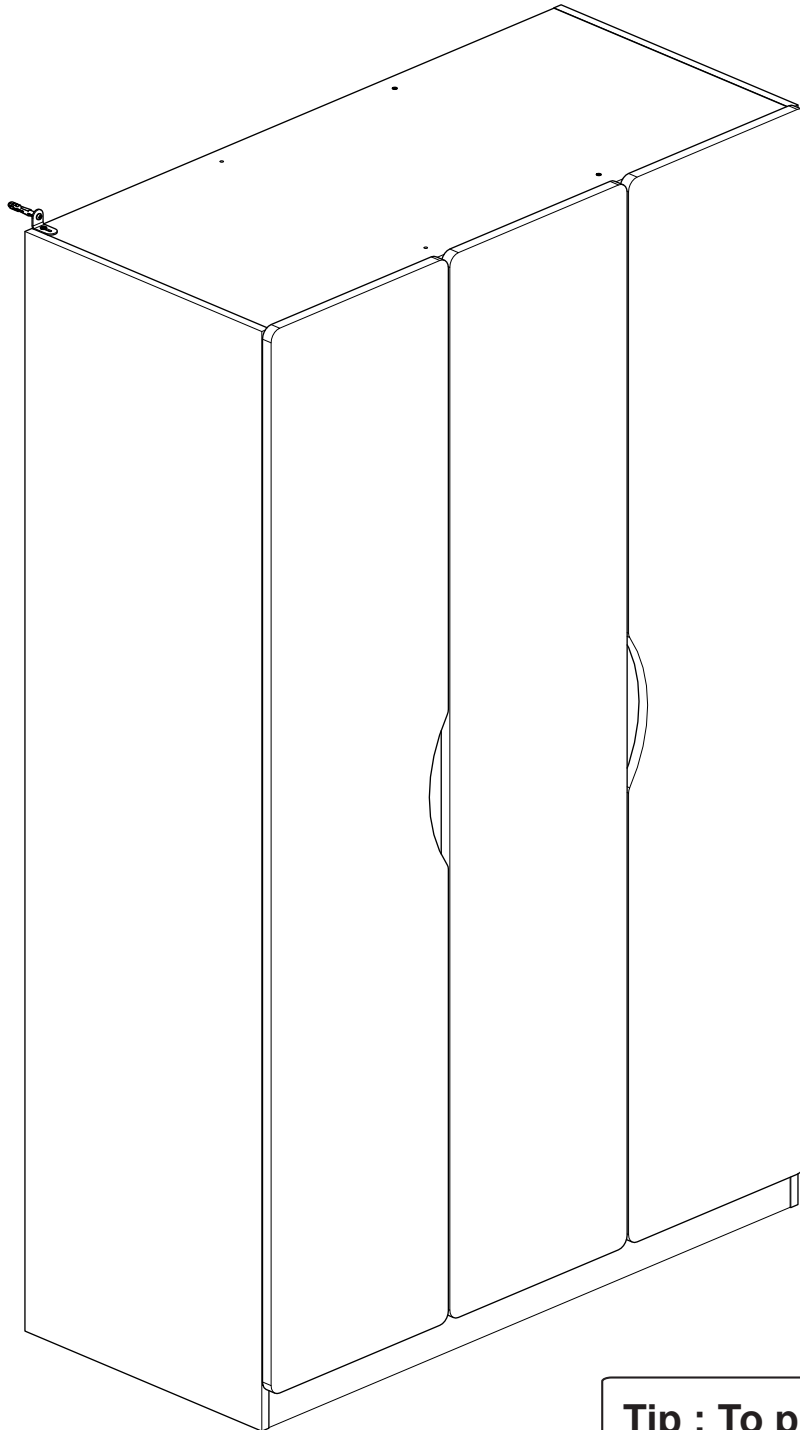

Dimensions

Width - 112,5cm

Depth - 51,75cm

Height - 180cm

462/6071	OAK
482/6369	PINK
496/5581	BLUE

Tip : To prevent damage, we recommend that you build your unit on the carton(s) it was packed in.


Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 03456 400 800



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
 - Remove all fittings from the plastic bags and separate them into their groups.
 - Keep children and animals away from the work area, small parts could choke if swallowed.
 - Make sure you have enough space to layout the parts before starting.
 - During assembly do not stand or put weight on the product, this could cause damage.
 - Assemble the item as close to its final position (in the same room) as possible.
 - Assemble on a soft level surface to avoid damaging the unit or your floor.
 - Parts of the assembly will be easier with 2 people.
- 
- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.
 - Assembly should be carried out by a competent adult only.
 - do not use this item if any components are missing or damaged.
 - this item is suitable for children from the age of 6.

Glue safety - Take care when using glue, please follow the advice below•

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400 800**

 
Please check you have all the panels listed below



1 Back Broad x1
(1723 x 741 x 2,5mm)
BO2579




2 Back Narrow x1
(1723 x 376 x 2,5mm)
BO2581

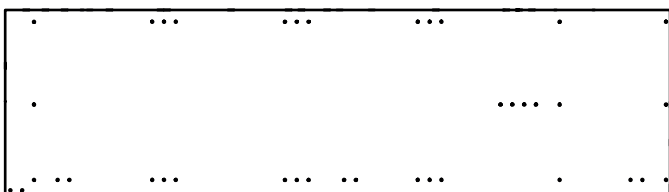


7 Right Side x1
(1800 x 497 x 15mm)
P2128



 
8 Mid panel x1
(1693 x 495 x 18mm)
P2129

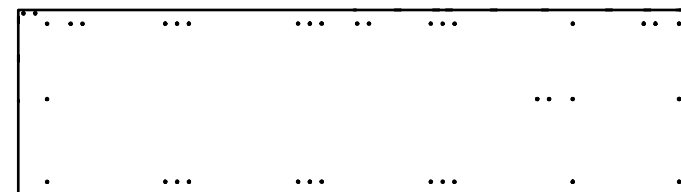

 
9 Left Side x1
(1800 x 497 x 15mm)
P2131

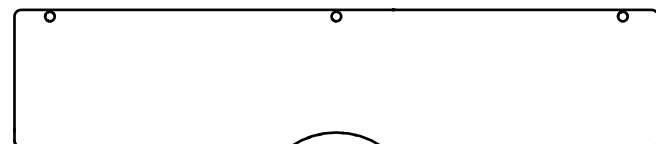

 
10 Door left/right x2
(1743 x 372 x 18mm)
P3136

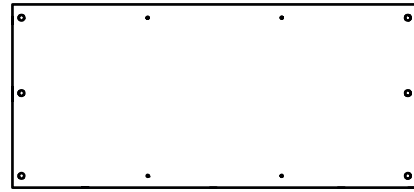


3 Top x1
(1095 x 496 x 18mm)
P1012

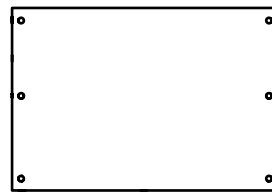 

 
4 Shelf Broad x1
(720 x 494 x 18mm)
P1013

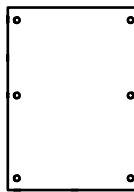

 
5 Shelf Narrow x1
(357 x 494 x 18mm)
P1014

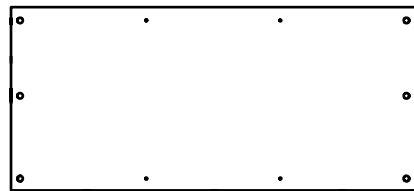

6 Bottom x1
(1095 x 496 x 18mm)
P1015

 

12 Plinth x1
(1095 x 70 x 15mm)
P7156

 
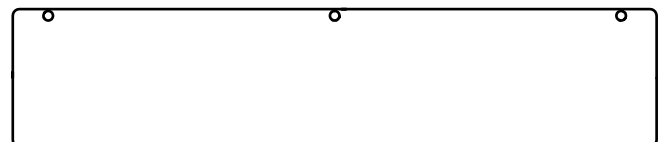

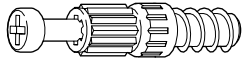




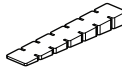











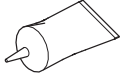
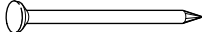


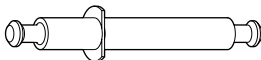11 Door Middle x1
(1743 x 372 x 18mm)
P3137


Components - Fittings

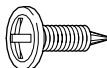Please check you have all the fittings listed below

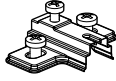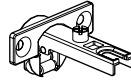
Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

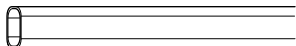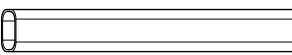A  FA1510 Glue x 1	B  FA1515 Nail x 60	C  FK1005 Confirmat screw x 4 (5x40mm)
D  FK1011 Locking screw x 18 (5x24mm)	E  FK1012 Locking Nut x 24 (15x12mm)	F  FK1013 Allen Key x 1 (3mm)
G  FK1018 Double locking bolt x 3 (7x62,5mm)	H  FK1223 Hanger Rail support x 4	I  FK1234 Peg, Brown x 1
J  FK1235 L-bracket x 1	K  FK1248 Corner connectro, white x 2	L  FK1309 Pozi Screw x 18 (4x12,5mm)
M  FK1311 Screw x 4 (3x15mm)	N  FK1400 Screw x 24 (4x15mm)	O  FK1410 Wood Dowel x 4 (5x30mm)
P  FK1415 Nail Holder x 1	Q  FK1262 Hinge back x 9	R  FK1263 Hinge x 9
S  ZF99936A Wall Plug x 1 (6mm)	T  ZF99936B Parkerscrew x 1 (dimension)	U  PM1804 Hanger rail x 1 (350mm)
V  PM1829 Hanger rail x 1 (712mm)		

 Tools required

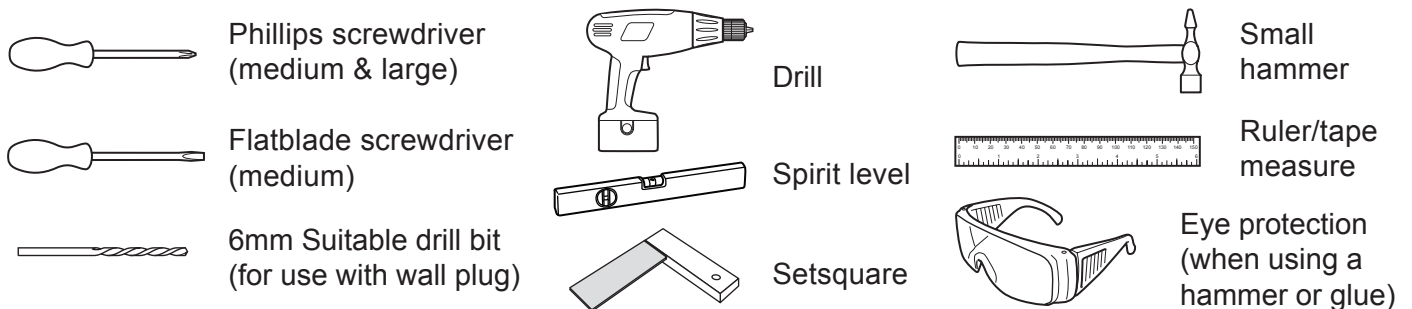

 Ruler - Use this ruler to help correctly identify the screws

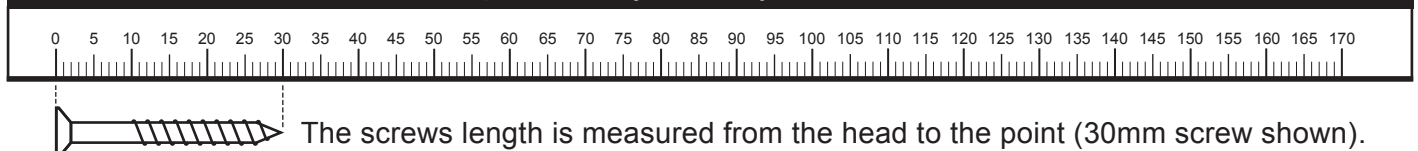


Assembly Instructions

Step - 1

Insert locking nuts **E** into shelves **3**.

Make sure the 'arrow' on locking nuts **E** points towards the hole in the edge of **3**.

 Repeat with panels: **4**, **5**, **6**.

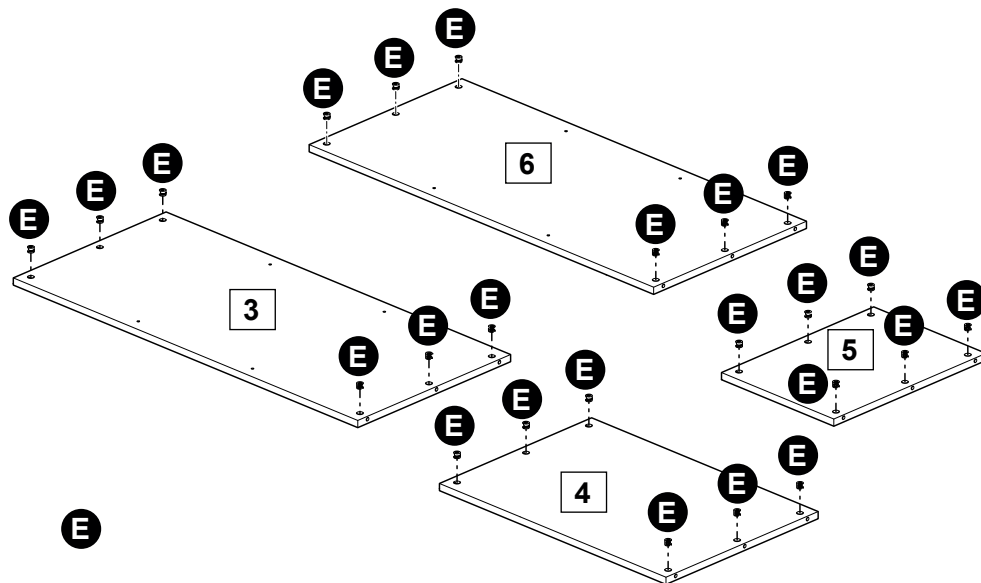



Step - 2

Screw locking screw **D** into left side **9**.

Note: Insert locking screw **D** as far as shown. **Do not over tighten.**

Attach hanger rail support **H** using 15mm screw **M** onto left side **9**.

  Screw hinge back **Q** onto left side **9**.

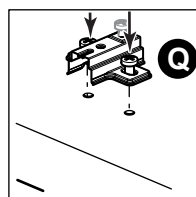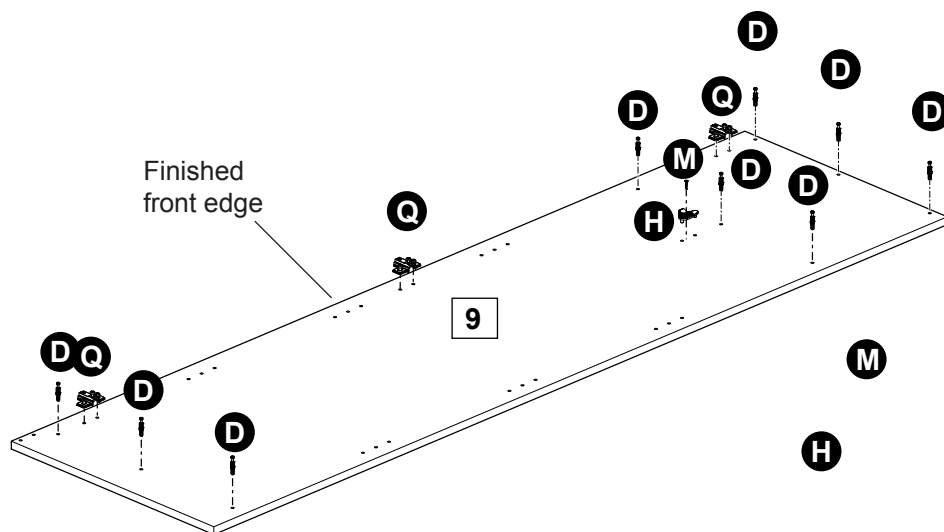

Assembly Instructions

Step - 3

 
 
Screw locking screw **D** into right side **7**.

Note: Insert locking screw **D** as far as shown. **Do not over tighten.**

Attach hanger rail support **H** using 15mm screw **M** onto right side **7**.

Note: Use the lower two holes to mount hanger rail support **H** onto right side **7**.

Screw hinge back **Q** onto right side **7**.

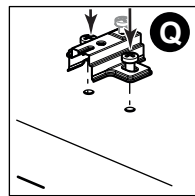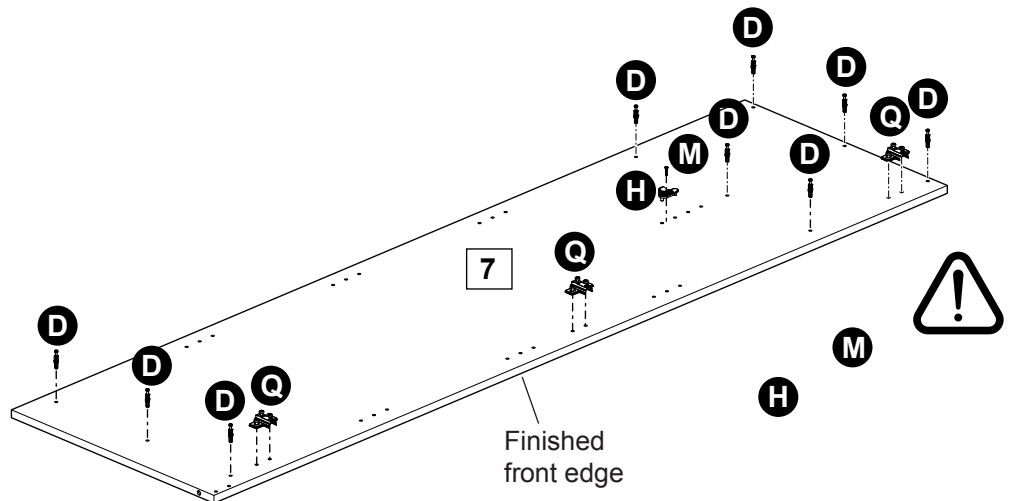


Step - 4

a: Attach hanger rail support **H** using 15mm screw **M** onto mid panel **8**.

Note: Use the lower two holes to mount hanger rail support **H** onto mid panel **8**.

 
Turn panel over

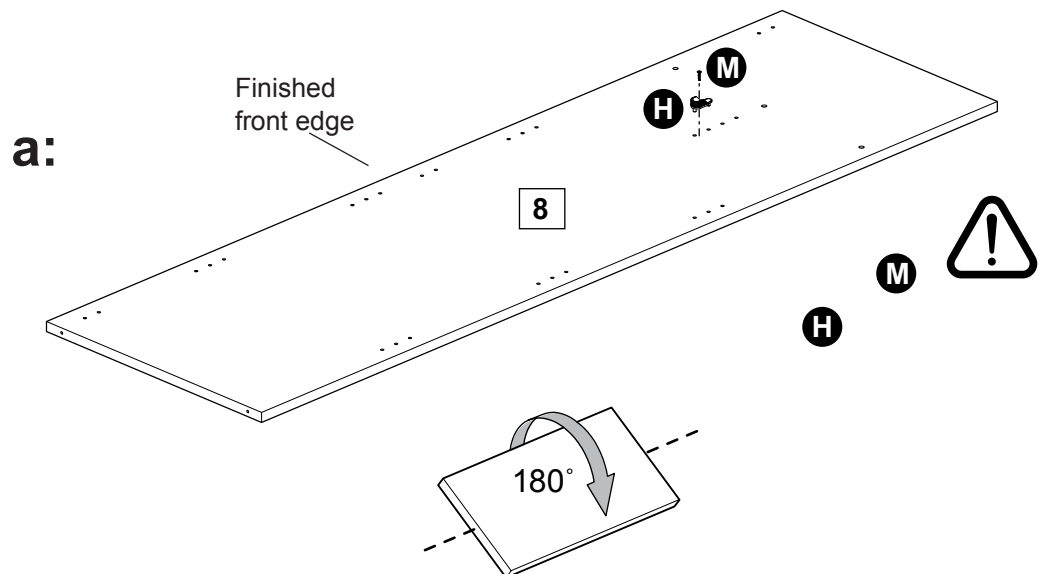

b: Attach hanger rail support **H** using 15mm screw **M** onto mid panel **8**.

Note: Use the upper two holes to mount hanger rail support **H** onto mid panel **8**.

 Screw hinge back **Q** onto mid panel **8**.


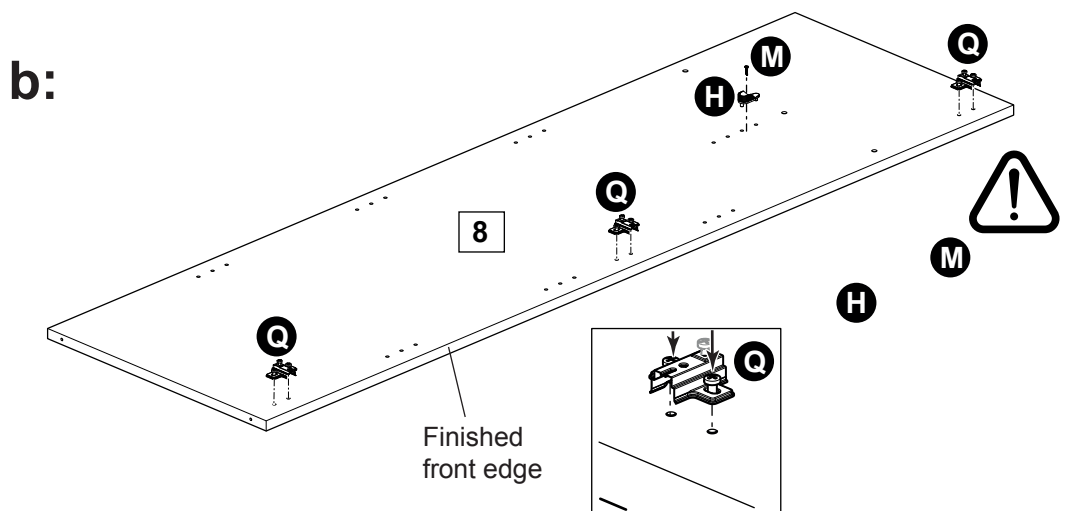


Assembly Instructions

Step - 4

Put drop of glue **A** into the 4 holes of plinth **13**.

  Put dowels **O** into the holes of plinth **13**.

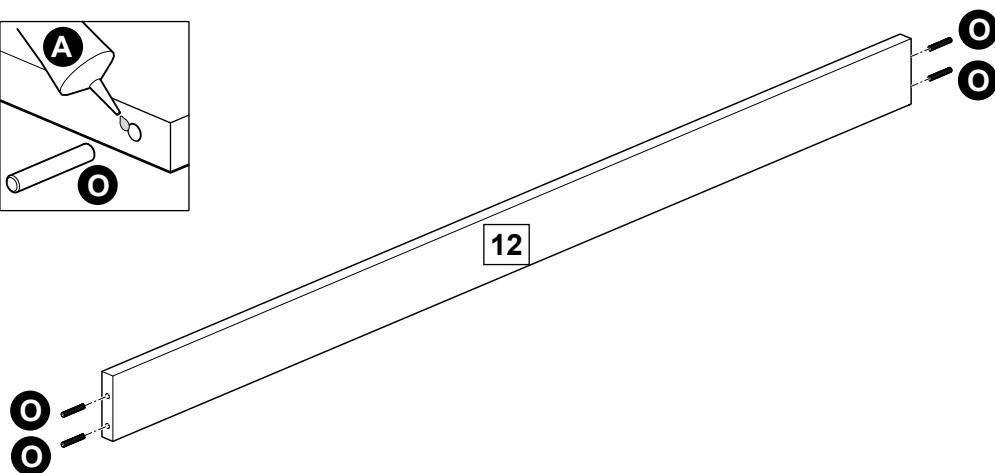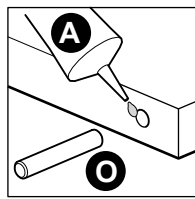


Step - 5

Attaching panels

Position Top panel **3** onto mid panel **8**. Insert two confirmat screws **C** through top panel **3** into mid panel **8** as shown.

Use allen key **F** to turn confirmat screw **C** into panel.

 Repeat with bottom **6**.

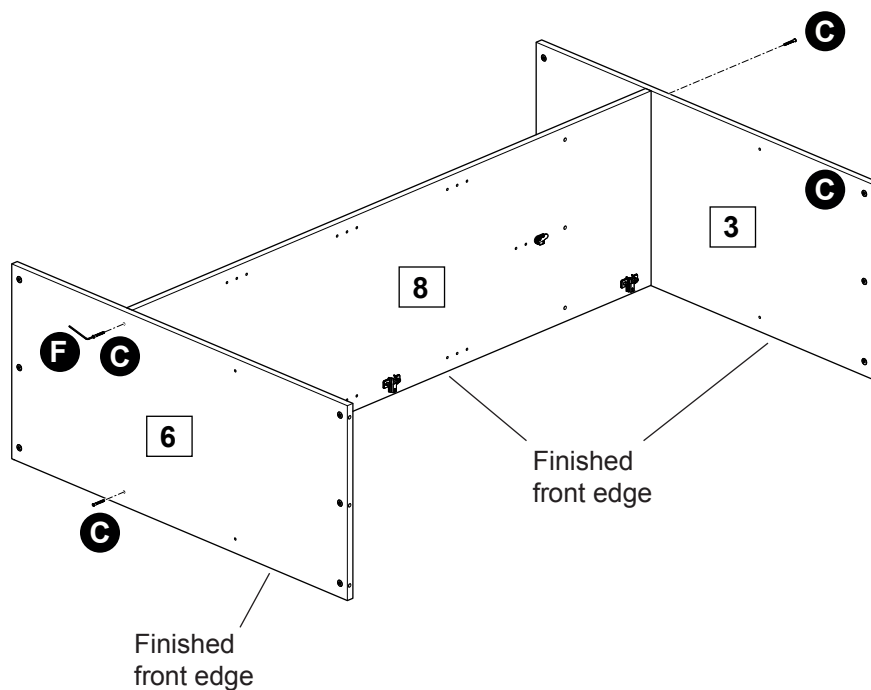

Step - 6

 
Attaching panels

Insert three double locking bolts **G** into mid panel **8** as shown.

Position shelf broad **4** onto mid panel **8**.

Use a screwdriver to turn locking nuts **E** clockwise to lock.

Repeat with shelf narrow **5**.

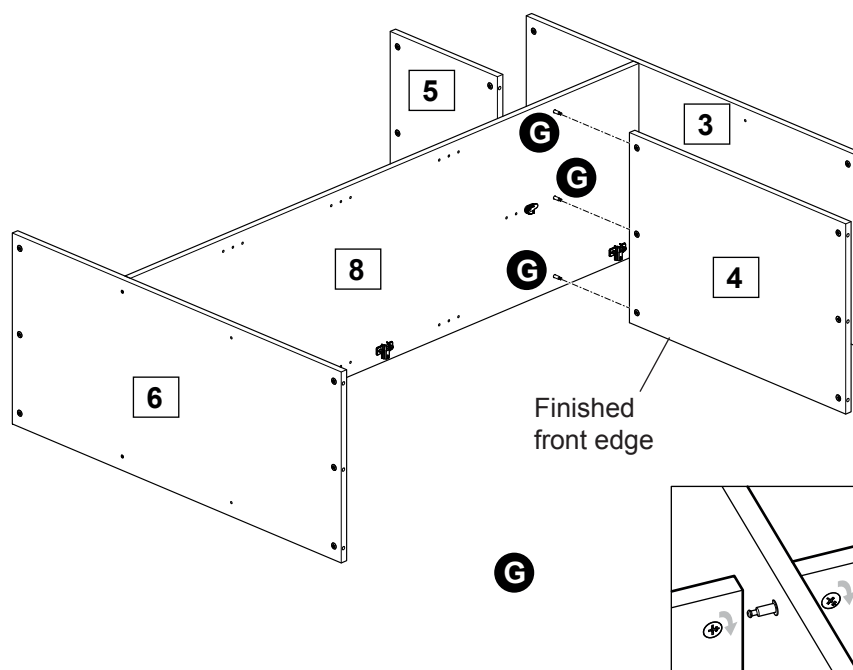



Assembly Instructions

Step - 7

Attaching panels

Position right side **2** onto the unit.

  Use a screwdriver to turn locking nuts **E** clockwise to lock.

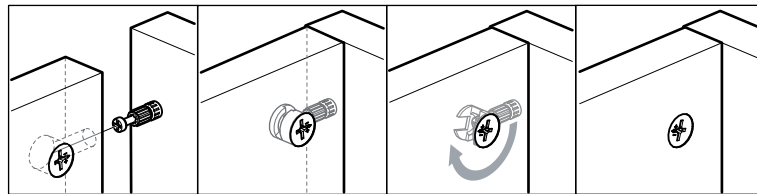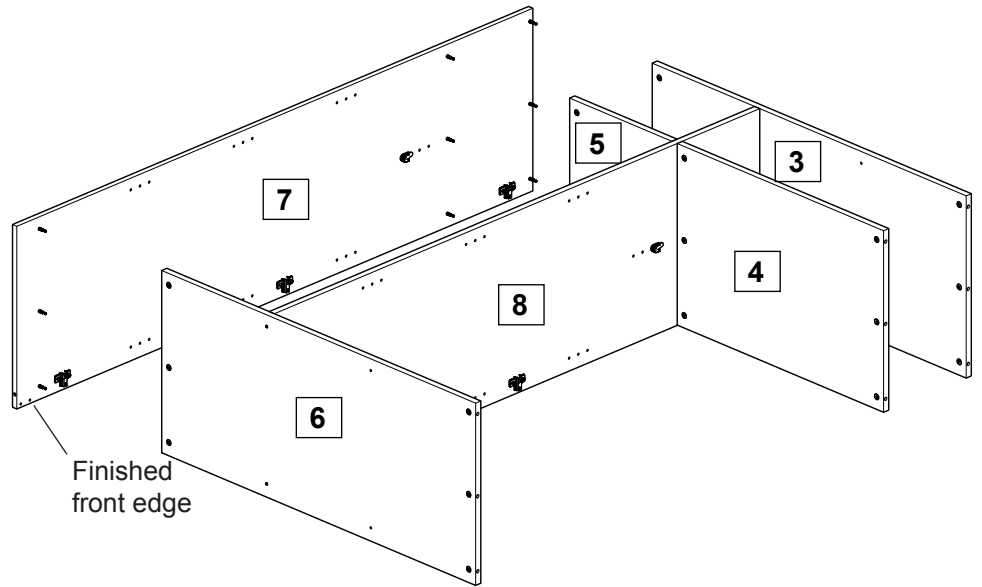



Step - 8

Attaching panels

Position Plinth **12** onto the unit as shown.

Position left side **9** onto the unit.

  Use a screwdriver to turn locking nuts **E** clockwise to lock.

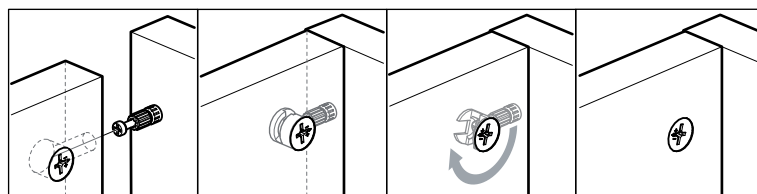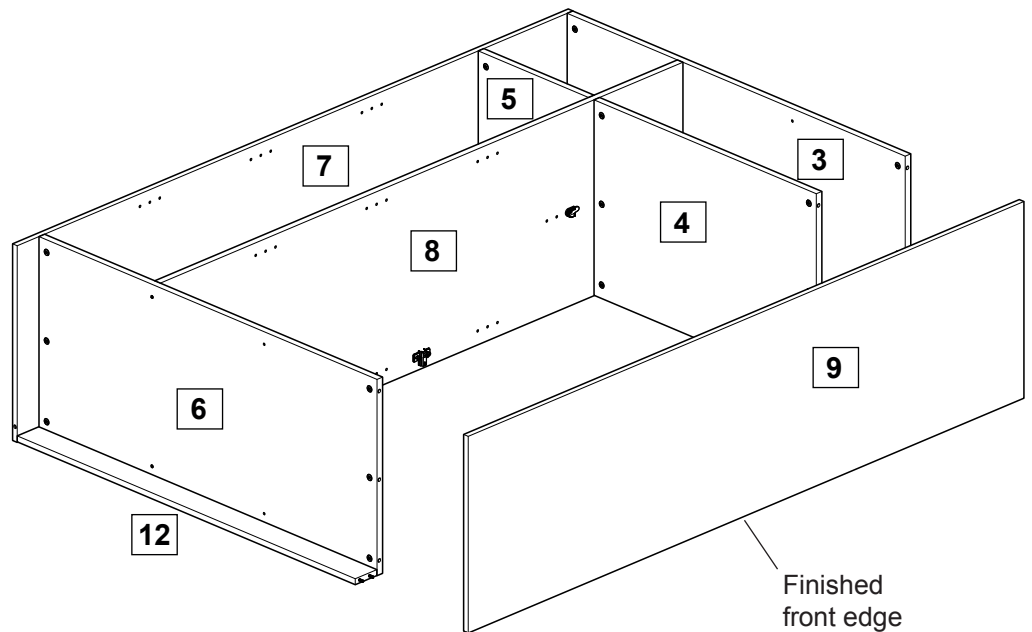

Assembly Instructions

Step - 9

Fitting back panel

Attach back **1**, **2** to the back with the coloured surface facing the inside using nails **B**.

 
 
 
 
Use nail holder **P** to hold the nails **B** vertical and at correct distance as you secure the back **1**, **2**. Nails **B** should be spaced about 150mm apart.

Use screw **N** into the holes of back **1**, **2** to attach to the shelf **6**.

Use screw **N** inbetween panel **1** and **2** to fix them to mid panel **8**.





Important:
Furniture **MUST** be 'square' when back is attached.

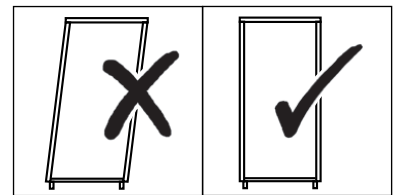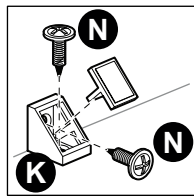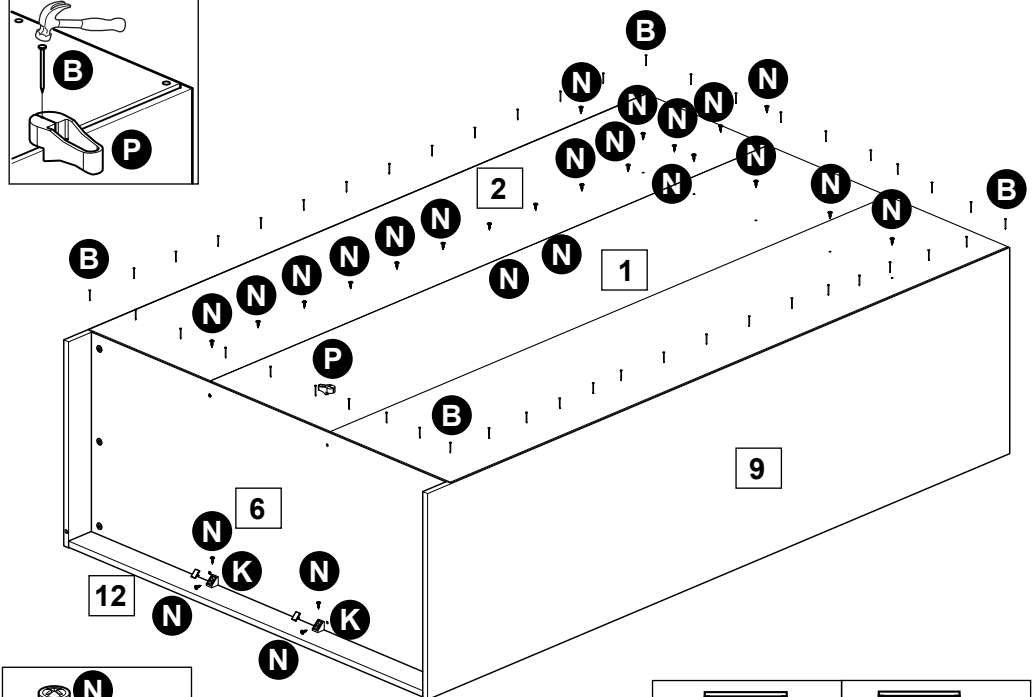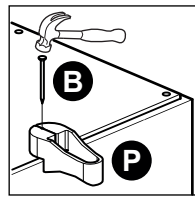

Step - 10

Fitting hinges to doors

  Fix hinge door **R** to doors **11**, **10** (2x) using 12,5mm Pozi screw **L** into the holes of doors **11**, **10** (2x).

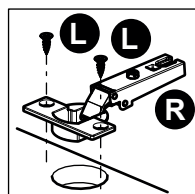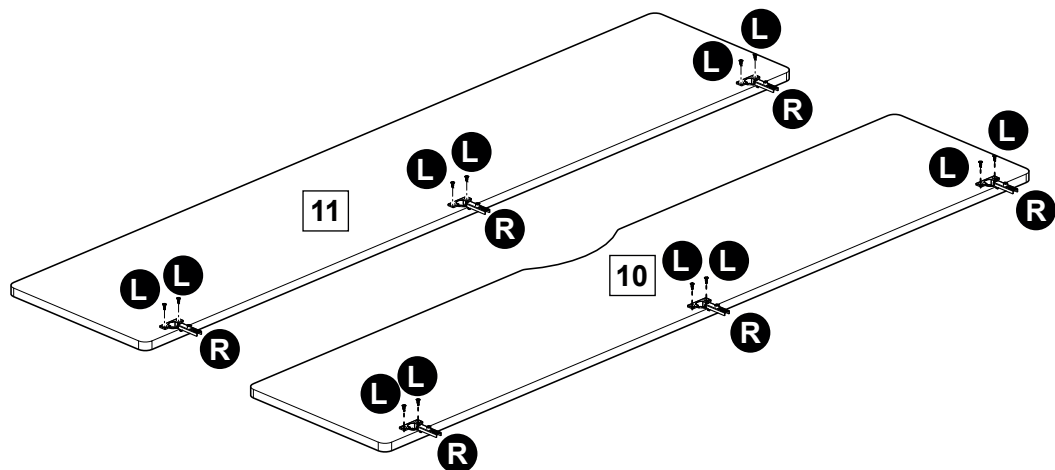


Assembly Instructions

Step - 11

Inserting hanger rail

Insert hanger rail large **V** into hanger rail support **H**.

 Insert hanger rail **U** into hanger rail support **H**.

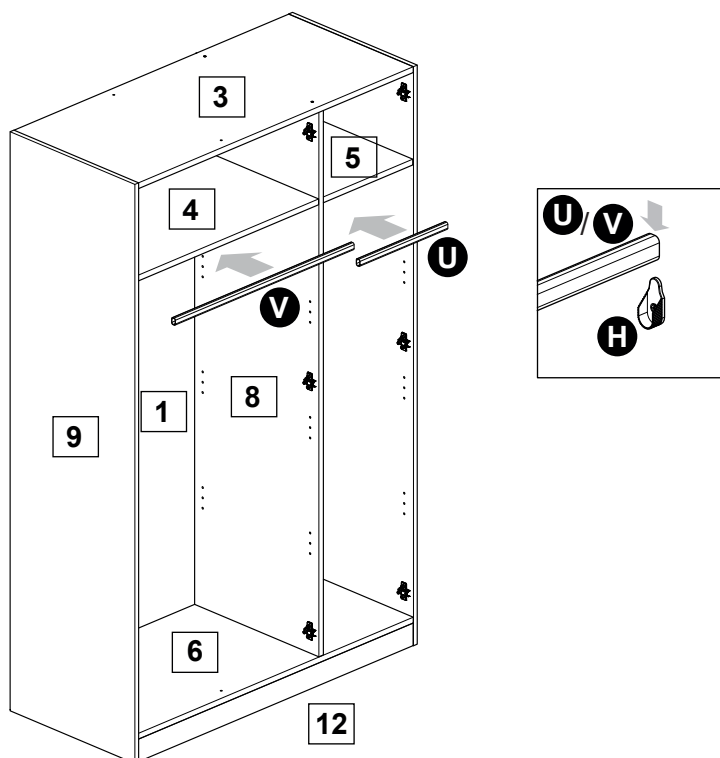

Step - 12

 
 
Hanging doors

With help, slot hinge door **R** onto hinge back **Q**.

Tighten screw shown to lock hinges in position.

Note: Look first to 'assemble' on page 'hinge instructions'

For adjusting the doors **10**, **11** see 'adjustment' on page 'hinge instructions'

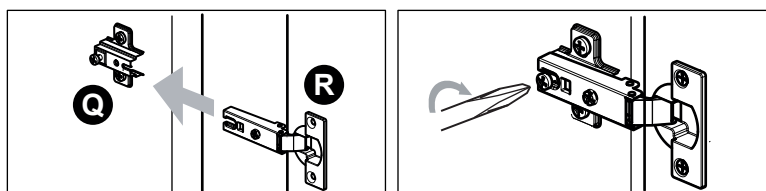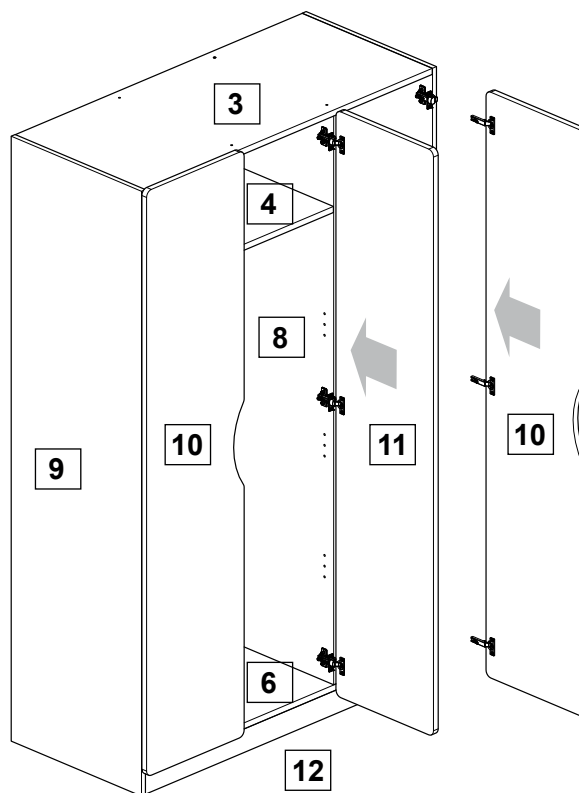

Assembly Instructions

Step - 13

Fixing to wall

It is recommended that the wardrobe is fixed to a wall.

Position L-Bracket **J** onto top **3** as shown, fix by using 15mm screw **N**.

Note: there are no pre-drilled holes for 15mm screw **N**.

With help, move wardrobe into position.



Warning:
The wardrobe is heavy.
Lift with care.

Mark fixing hole on wall and remove wardrobe.

Drill 6mm hole and insert wall plug **S**.



 
 
 
Warning:
Before drilling, check wall for hidden pipes and cables.

Reposition wardrobe and fix L-bracket with screw **T**.

Before adjusting the doors, use a spirit level to check if the base of this unit is level front-to-back and side-to-side in the three positions shown.

Use pegs **I** to square your unit. Knock peg **I** in, as far as you require, under the ends of the unit and then snap off flush with the panel.

Assembly is complete.

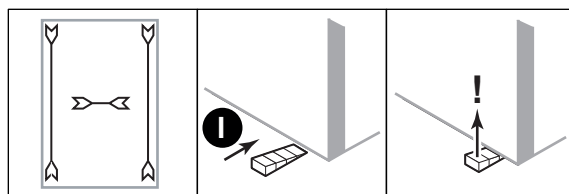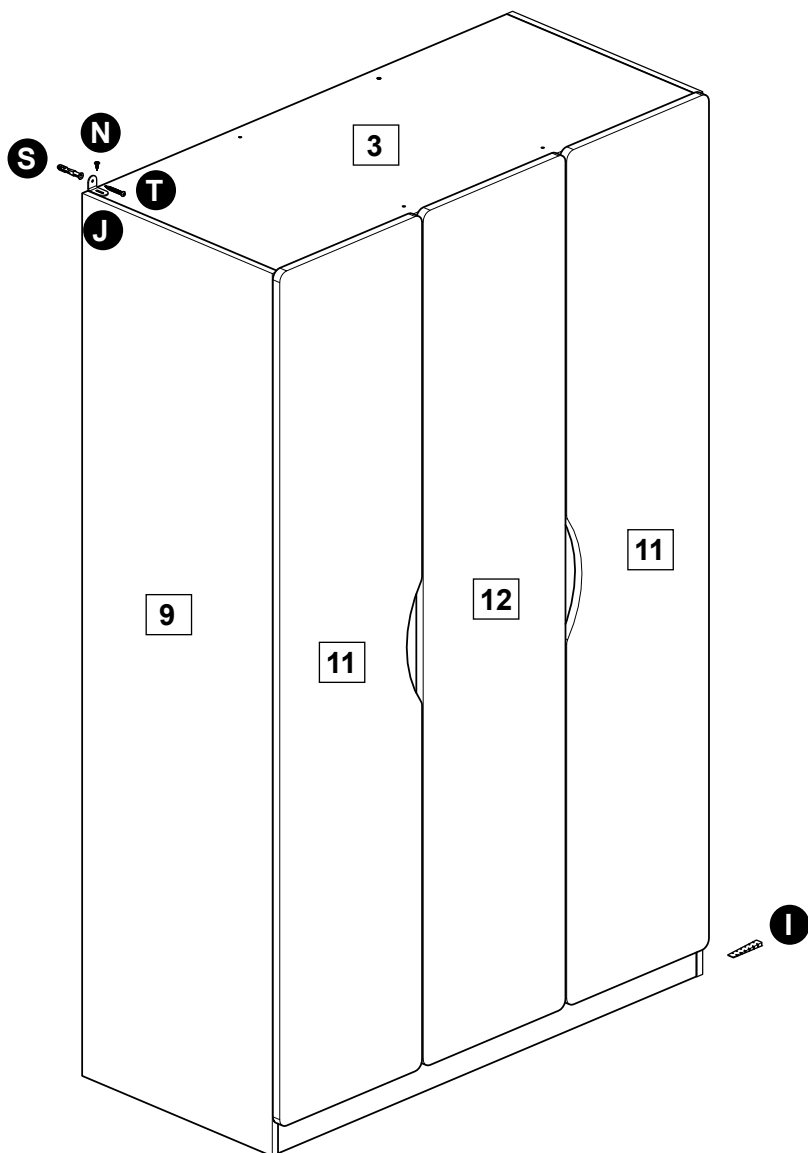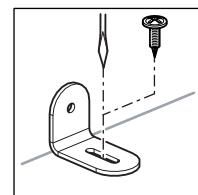


A Guide to - Hinge instructions

Assemble


a: Hook hinge door correctly to the hinge back as shown.

b: Tighten screw to lock hinges in position.

 
Note: The nick screw of hinge door should slide into the recess of hinge back.



Q
Hinge back

 

R
Hinge door

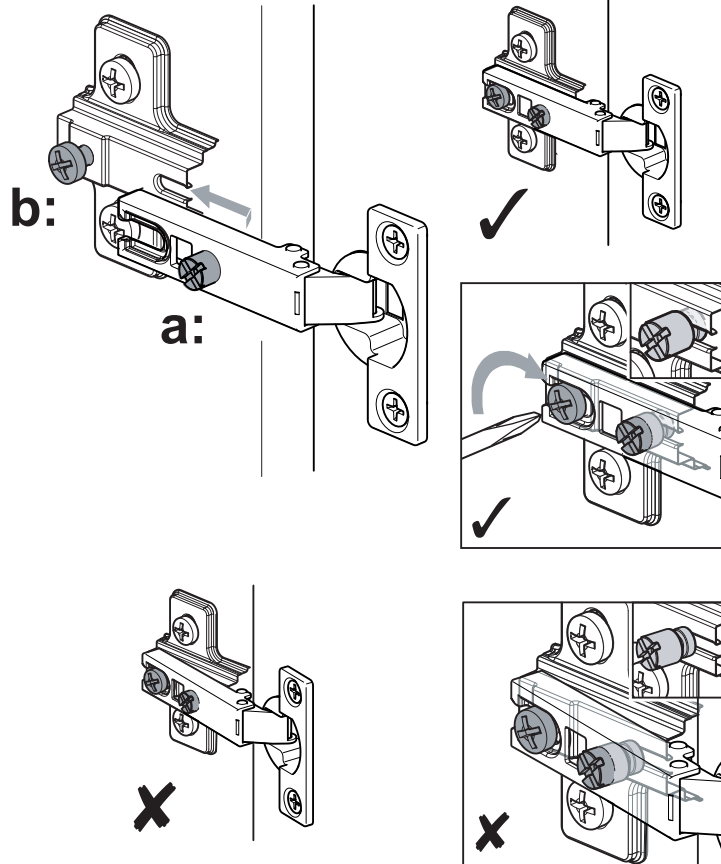 

Adjustment

a: To move doors up or down: loosen screws shown and move doors to suit.

 
Once doors are aligned, re-tighten.

b: To move doors in or out: loosen screw shown and move doors to suit.

Re-tighten screws.

c: To move doors left or right: loosen screw shown and move doors to suit.

Re-tighten screws.

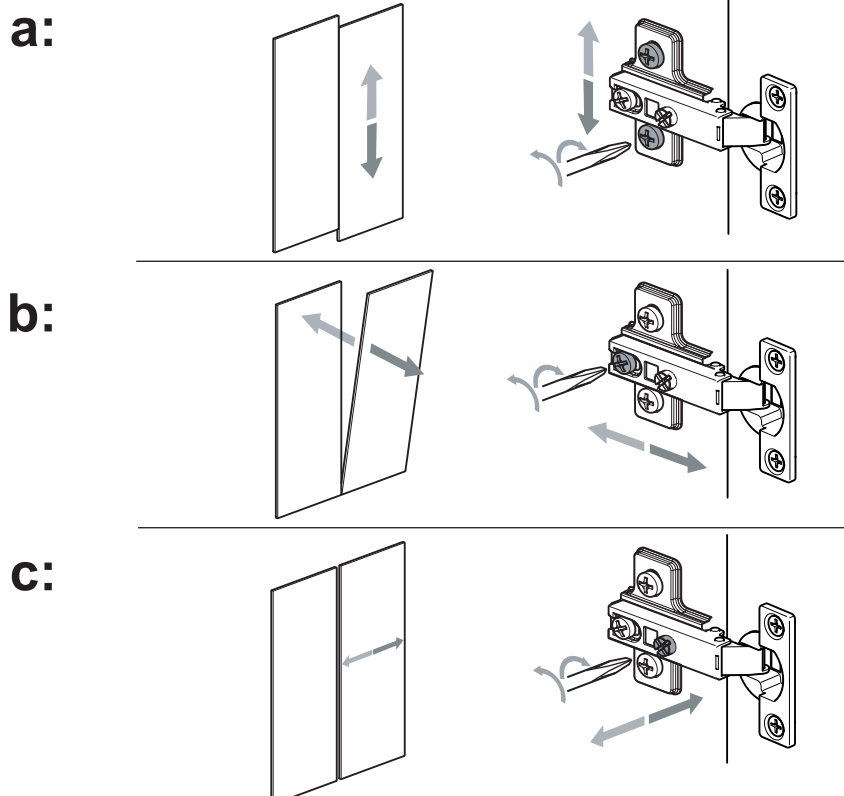

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- 1: **General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

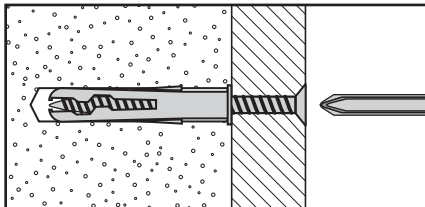


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug

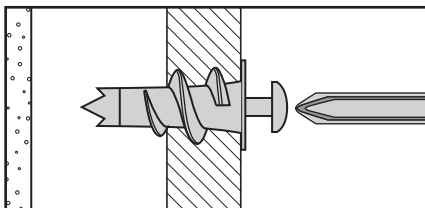


For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity Fixing" wall plug

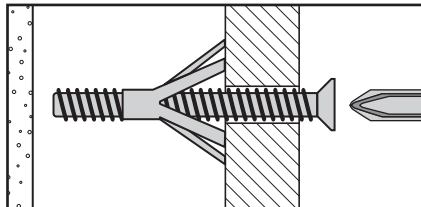


For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity Fixing-Heavy Duty" wall plug

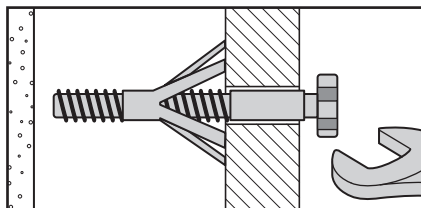


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug

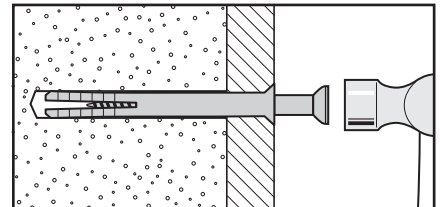

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads

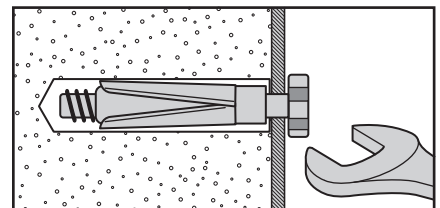

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.