afina dining chair

Assembly Instructions - Please keep for future reference

460/9043



Dimensions

Width - 49.5cm Depth - 54.5cm Height - 78.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:** Argos = 0345 6400800

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

 Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

 Keep children and animals away from the work area, small parts could choke if swallowed.

 Make sure you have enough space to layout the parts before starting. • During asembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

• The maximum safe weight of user : 110kg.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

 This produt should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

 Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts • Regularly check and ensure that all bolts and fittings are tightened properly.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline = Argos 0345 6400800**

Please check you have all the fittings listed below

NOTE: Components, listed below are required for one chair only.

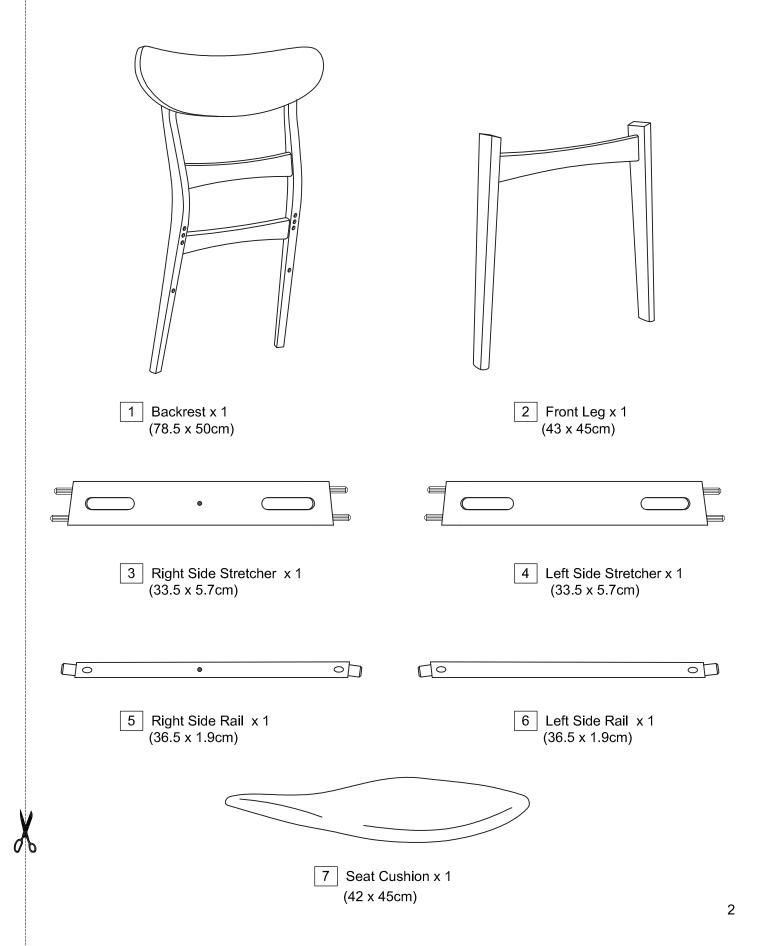



Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly for one chair. In some cases more fittings may be supplied than are required.

	B	G «
50mm Bolt + Spring Washer + Flat Washer x 4	Allen Key x 1	32mm Screw x 4
	e	
L - Bracket x 4	12mm Screw x 8	

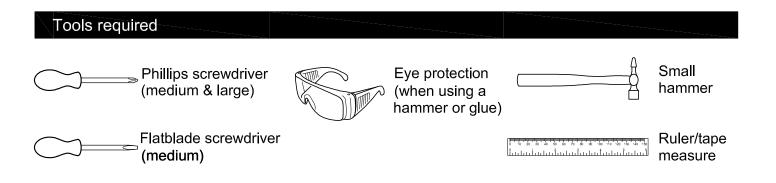

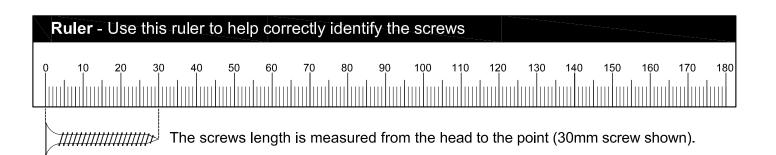

Assembly Instructions

Step 1

Note : Before assembly please make sure the Stretcher and Side Rail is right position. 3 and 5 has small hole for identification.

Fitting the Side Stretcher

a: Insert Bolt A + Spring washer + Flat washer with Allen key **B** to fix side stretcher 3 and 4 onto backrest 1.

Fitting the Side Rail

b: Insert Screw **G** to fix side rail <u>5</u> and <u>6</u> onto back rest <u>1</u> using Screwdriver.

Step 2


Note : It would be useful to ask someone to help you at this stage.

Fitting the Front Leg


c: Insert Bolt A + Spring washer + Flat washer with Allen key B to fix front leg 2 onto side stretcher
3 and 4.

d: Insert Screw **C** to fix side rail 5 and 6 onto front leg **2**.

Note : Do not fully tighten all the screw.

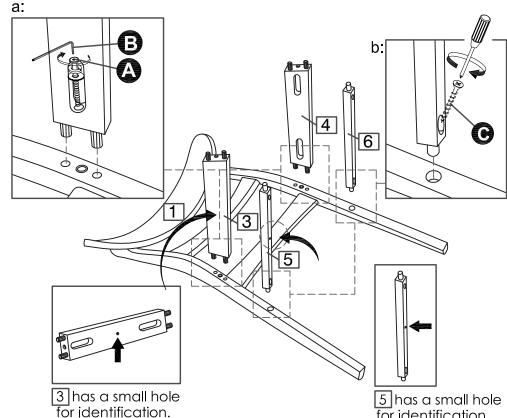

for identification.

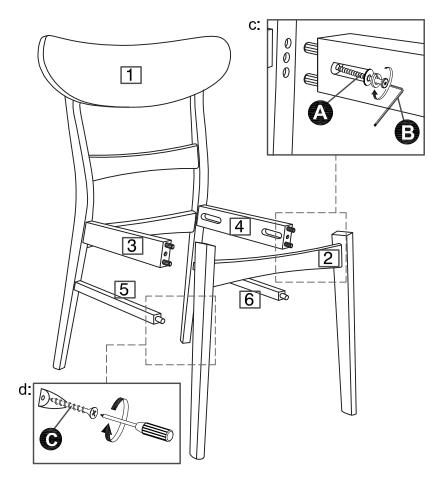

Assembly Instructions


Step 3

Fitting the Cushion

Note : It would be useful to ask someone to help you at this stage.

e: Use L-Bracket **●** and Screw **●** to fix cushion seat **7** onto the unit.

Note : Fully tighten all the screw now.

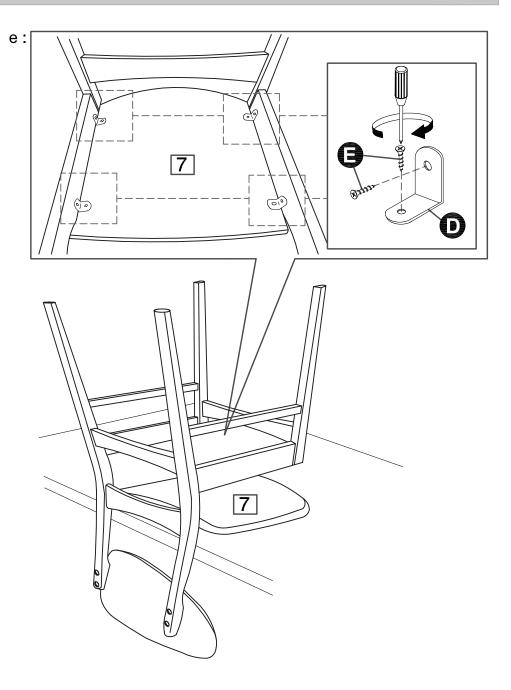

Assembly Instructions

Step 4

Finishing the unit

Note: Before use always make sure the unit is secure.

Note: The maximum safe weight of user: 110kg.



Warning:

•Do not stand on this chair. Do not use this chair as a step ladder.


•Use this product only for seating one person at a time.

•Do not use this chair unless all bolts, screws and knobs are firmly secured. •At least every 4 months, check all bolts, screws and knobs, to be sure they are tight.

If parts are missing, broken or damaged or worn, stop use of this product until repairs are made & using factory authorized parts.
Failure to follow these warnings could result in

Assembly is complete.

serious injury.

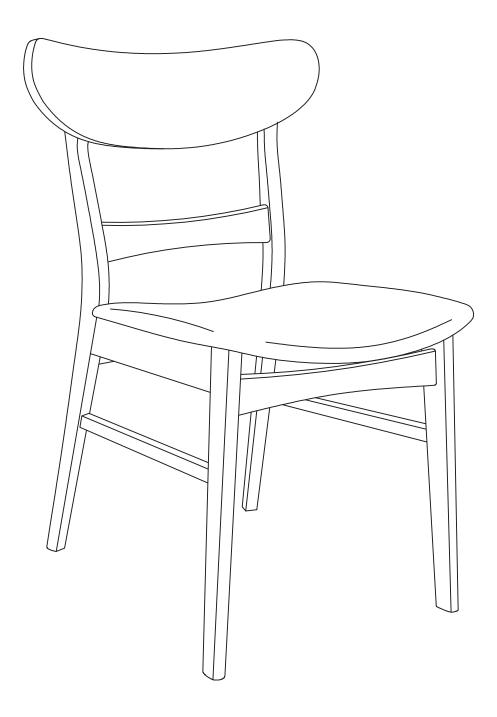

If you need help or have damaged or missing parts, call the Customer Helpline Argos = 0345 6400800