

vax

DynamoPower
CORDLESS

**GRAB & GO CORDLESS
CONVENIENCE FOR
QUICK CLEAN-UPS!**

LET'S GET STARTED.

**H85-DP-B21
H85-DP-B25**



Let's talk safety



Basic safety precautions

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

- It is a battery-operated appliance, the battery being charged outside the appliance.
- Only use the vacuum cleaner indoors and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the vacuum cleaner.

- This vacuum cleaner can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the vacuum cleaner in a safe way and understand the hazards involved. Children should not play with the vacuum cleaner. Cleaning and user maintenance should not be made by children without supervision.
- Only Vax recommend charger, tools and accessories should be used with this vacuum cleaner.



Don'ts

- Don't charge the Cordless upright outdoors, or leave the charger connected to the mains when not in use.
- Don't use this vacuum cleaner if it has been dropped, damaged, immersed in water or left outdoors.
- Don't handle the charger plug or use the vacuum cleaner with wet hands.
- Don't run over the charger cord or use the vacuum cleaner if the charger cord or plug is damaged. Please contact our Customer Care Line on: 0330 026 8455 (Mon-Fri 8:30am to 6:30pm, Sat 9:00am to 5:00pm).
- Don't vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.

- Don't use the charger cord as a handle, pull the charger cord around corners or sharp edges or close a door over the charger cord. Don't unplug charger by pulling on the charger cord.
- Don't attempt to remove blockages with sharp objects as this may cause damage to your vacuum cleaner.
- Don't use the vacuum cleaner with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.
- Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).



Do's

- Always make sure the filter and dirt container are fitted correctly before using your vacuum cleaner.
- Always turn off and unplug the vacuum cleaner from the charger before carrying out any maintenance.
- Turn off all controls on the vacuum cleaner before disconnecting or connecting the charger.
- Take extra care when cleaning on the stairs.
- Always protect the charger cord from heated surfaces or near open flames.

- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Always carry the vacuum cleaner by the handle.
- Store your vacuum cleaner in a cool, dry area.

Please keep instructions for further use.

Thank you for buying this Dynamo Power.

Taking care of your carpets and hard floors

The Dynamo Power is designed to make vacuuming carpets and hard floors regularly, as effective and efficient as possible and this user guide will help you get the most out of your machine.

Maintaining your carpets and hard floors will ensure they keep their appearance for longer and Vax will help you take good care of them.

Taking care of your Dynamo Power

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your carpets and hard floors.

Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:

vax.co.uk/support or call:

(UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.










Alternatively, you can write to us at:

Vax Ltd., Plot 302, Stonebridge Cross Business Park, Hampton Lovett, Droitwich, WR9 0LW, UK

This user guide can be found online at: vax.co.uk/support

 


Let us know what you think @VaxUK

-  [Let's talk safety](#)
-  [Getting to know your machine](#)
-  [Getting started](#)
-  [Using your machine](#)
-  [Taking care of your machine](#)
-  [Let's talk technical](#)
-  [Accessories](#)
-  [What to do if it goes wrong](#)
-  [Getting in touch](#)

Dynamo Power

Included with your machine




Docking station



2-in-1 tool



2-in-1 tool connector

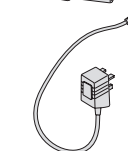

Charger



Technical Specification

Name **Dynamo Power 21.6V**
 Model No **H85-DP-B21**
 Battery voltage **21.6V**
 Run time **45 minutes***
 Charge time **5 hours**
 Weight **3.25kg**
 Dust bin capacity **0.5l**

Name **Dynamo Power 25.2V**
 Model No **H85-DP-B25**
 Battery voltage **25.2V**
 Run time **55 minutes***
 Charge time **5 hours**
 Weight **3.29kg**
 Dust bin capacity **0.5l**

Accessories & Consumables

Pre-motor filter (Type 132)
1-1-135931-00
 2-in-1 tool (Type 3)
1-1-135932-00

To purchase consumables and accessories, please visit vax.co.uk

Subject to technical change without notice. * Low speed setting on hard floors. Images are illustrative only.

PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE

Assembling your 2-in-1 vacuum cleaner



Line up floorhead with main body, push firmly into place.



Line up handle with main body and lower into place.



Insert screw into back of the handle and tighten with a cross head screwdriver until handle is secured into place.

Charging your 2-in-1 vacuum cleaner

NOTE: Charging will be required before first use. Initial charge requires 10 hours.



Plug the charger into the back of the docking station and plug into mains.



Slide the vacuum onto the docking station. The LED indicator on the handheld On/Off button will initially turn green, then illuminate red to indicate that it is in place and charging.



Once fully charged (8-10) hours LED indicator on the handheld On/Off button will illuminate green and turn off to power saving mode.



When the vacuum needs recharging the LED indicator on the handheld On/Off button will flash red and the machine will cut out.

Operating as an upright vacuum cleaner

NOTE: Do not use brushbar on hard floors as it may cause damage.



Unplug the charger from the mains and remove the vacuum from the docking station.



Place foot on the floorhead and pull the handle backwards to recline the machine.



Press the ON button on the handle to turn the machine on.



To select between fast and slow suction press the suction controller button.

The brushbar will not rotate when the vacuum cleaner is in the upright position.



Operating as a handheld vacuum cleaner



Press the handheld release button. Lift to remove the handheld from the main body.



Press the On/Off button to switch the handheld on.



For a more detailed clean, line up and push the 2-in-1 connector into the handheld nozzle, then push and attach the 2-in-1 tool securely onto the connector.



Press the On/Off button to switch the handheld off. Pull and remove the 2-in-1 tool and connector from the nozzle. Line up and return handheld into main body.

Always take extra care when cleaning stairs. Always switch the handheld off before connecting or disconnecting the accessories and before returning the handheld to the main body.

CAUTION



Taking care of your machine

Emptying the dirt container

CAUTION: Always switch off the vacuum cleaner before carrying out any maintenance or troubleshooting.



Press the handheld release button. Lift to remove the handheld from the main body.



Press the dirt container release button to remove the dirt container.



Squeeze tabs to remove filter, filter frame and separator.



Hold dirt container over a bin allowing dirt/debris to fall out.

Don't over fill the dirt container. Replace the filters every 6-9 months.



Taking care of your machine

Cleaning the filter

CAUTION: Always switch off the vacuum cleaner before carrying out any maintenance or troubleshooting. Do not use your vacuum cleaner without the filters in place.



Press the handheld release button. Lift to remove the handheld from the main body.



Press the dirt container release button to remove the dirt container.



 
Squeeze tabs to remove filter, filter frame and separator.



Tap filter, filter frame and separator over a bin to remove any dirt and debris. Do not wash filter frame or separator.



Pull foam filter from underneath of filter frame. Wash foam filter under running water (max 40°C).



Leave for at least 24 hours or until fully dry before replacing into the machine.

For best cleaning result filters require cleaning every 4-6 uses or as needed.



Cleaning the terminals

CAUTION: Always switch off the vacuum cleaner before carrying out any maintenance or troubleshooting. Do not use your vacuum cleaner without the filters in place.



Using a dry cloth or soft dusting brush remove any dust or debris from terminals in vacuum, on handheld and on docking station.

CAUTION For best performance terminals in vacuum, on handheld and on docking station must be free from dust and dirt.

Clearing blockages



Press the handheld release button. Lift to remove the handheld from the main body.



Press the floorhead release button and pull floorhead to remove.



Remove any blockage from the main body.

Cleaning blockage for the brushbar

If the brushbar has been obstructed, the motor protection sensor may have been activated. Clear any obstruction from the brushbar, stand the machine onto the docking station and wait 30 minutes for the vacuum cleaner to reset itself.



Using a pair of scissors remove any threads or hair caught around the brushbar.

Changing the brushbar



Turn the lock release to unlock the floorhead cover. Lift and remove floorhead cover.



Remove brush bar by lifting side of brushbar not connected to the spindle first.



Replace the brushbar. Fitting the spindle side first, line up and push the brushbar into the spindle. Push the other side of the brushbar back into the floorhead and refit the floorhead cover.

Don't forget your accessories!

Order at: www.vax.co.uk/spares-and-solutions

Pre-motor filter (Type 132)
1-1-135931-00



2-in-1 tool (Type 3)
1-1-135932-00

A replacement 2-in-1 tool for your Dynamo Power cordless vacuum.



Problem

Solution

Why does my vacuum cleaner have no power?

- Check the machine is fully charged. Go to 'Using your machine'.
- Check the charger is plugged into the mains and correctly connected to the docking station. Go to 'Getting started'.
- Check the handheld has been correctly fitted into the main body.
- Check terminals on vacuum, handheld and docking station are clean. Go to 'Let's talk technical'.
- If the brushbar has been obstructed, the Motor Protection Sensor may have been activated. Clear any obstruction from the brushbar. Wait 30 minutes for the vacuum cleaner to reset itself.

Why isn't my vacuum cleaner charging?

- Check the vacuum is connected correctly to the docking station. Go to 'Getting started'.
- Check terminals on vacuum, handheld and docking station are clean. Go to 'Let's talk technical'.
- Check charger and docking station for damage. If damaged please contact our Customer Care Line on: 0330 026 8455 (Mon-Fri 8:30am to 6:30pm, Sat 9:00am to 5:00pm).
- Check the charger is plugged into the mains and correctly connected to the docking station. Go to 'Getting started'.

Why won't the vacuum cleaner pick up?

- Empty the dirt container and clean filters. Go to the 'Taking care of your machine' page.
- There may be a blockage in the vacuum cleaner. Go to 'Clearing blockages'.
- The brushbar may not be turning. Go to 'My brushbar isn't turning?' below.
- Low suction has been selected, increase to high suction. Go to 'Using your machine'.

My brushbar isn't turning.

- If the brushbar has been obstructed, the Motor Protection Sensor may have been activated. Clear any obstruction from the brushbar. Wait 30 minutes for the vacuum cleaner to reset itself.
- The brushbar may be blocked. Go to the 'Let's talk technical' page.

Why is the LED light continually flashing?

- The Red light will flash when the vacuum needs recharging. Go to 'Getting started'.



† Registration required. Terms and conditions apply, see vax.co.uk for details.

* Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

GET IN TOUCH

 0330 026 8455  info@vax.co.uk  vax.co.uk  [VaxVacuums](https://www.facebook.com/VaxVacuums)  [@VaxUK](https://twitter.com/VaxUK)

EEC Statement of Compliance: Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the H85-DP B21/B25 are manufactured in compliance with the following Directives: **Safety:** 2006/95/EC Low Voltage Directive. **EMC:** 2004/108/EC Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

© 2015 Vax Limited. All rights reserved. The VAX trade mark and Vax lozenge is the property of Techtronic Floor Care Technology Ltd and is registered in the EU and may be pending or registered in other countries.

