

# 说明书递交文档

设计 DESIGN	蒋高敏 2016. 9. 5	图纸名称 PART NAME BUSH BFSBS (CE-BCD530WE-SQ) 说明书				图号/物料编码 PART NO. 16131000A15723	
校对 CO. BY	周军					材料 MATERIAL  双胶纸	
标准化 STANDARD		图样标记 REL	版本号 REV. NO.	重量(g) WEIGHT	比例 scale	美的冰箱事业部 MIDEA REFRIGERATION DIVISION	
业务 seller	曾斌		0		1:1		
批准 AUTHORIZE		共 页 TOTAL SHEETS		第 页 NO. OF SHEETS			

## 技术要求

 
1. 尺寸：32K；
2. 说明书印刷颜色：单色；
3. 样板需送设计部门封样；
4. 制件必须满足QMB-J53.005 产品说明书及其它类似印刷件技术规范。
5. 需要符合美的冰箱事业的最新版《QMB-GC08.007 有害物质管理规定》的限值要求。

标记 MARKER	变更内容	修改日期	签名
①			
②			
③			
④			
⑤			

# BUSH

## Instruction Manual

BFSBS

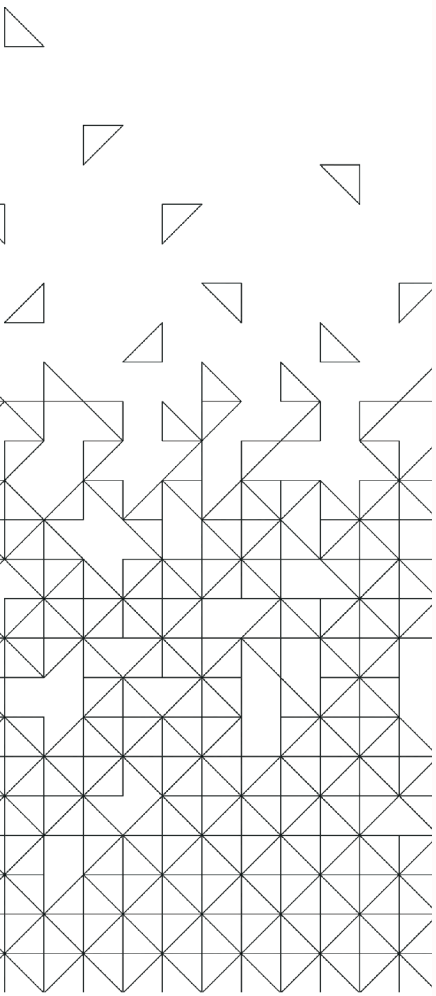

You'll soon be enjoying your new refrigerator.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started

## **Help and Guidance**

We're here to help you get the most from your refrigerator. Should you require any guidance, a simple solution can often be found online at.

**[www.argos-support.co.uk](http://www.argos-support.co.uk)**

If you still require further assistance, call one of our experts on 0345 257 7271.

 
# Contents

<b>1</b>	<b>Safety information</b>	
	Safety information	6
<b>2</b>	<b>Getting to know your refrigerator</b>	
	Ready? Let's begin...	11
	Parts	12
<b>3</b>	<b>Installing your refrigerator</b>	
	Transportation	15
	Installation	15
	Electrical Connection	17
<b>4</b>	<b>Using your refrigerator</b>	
	Before first use	20
	Using your appliance	20
	Useful information	22
<b>5</b>	<b>Care and Maintenance</b>	
	General	25
	Power failure	25
	Moving your appliance	25
	Disassembly / assembly the door	26
	Technical Specifications	27
	Disposal information	27
<b>6</b>	<b>Product support</b>	
	Trouble Shooting	30
	Help and assistance	31
	Guarantee	32



# Safety information

1

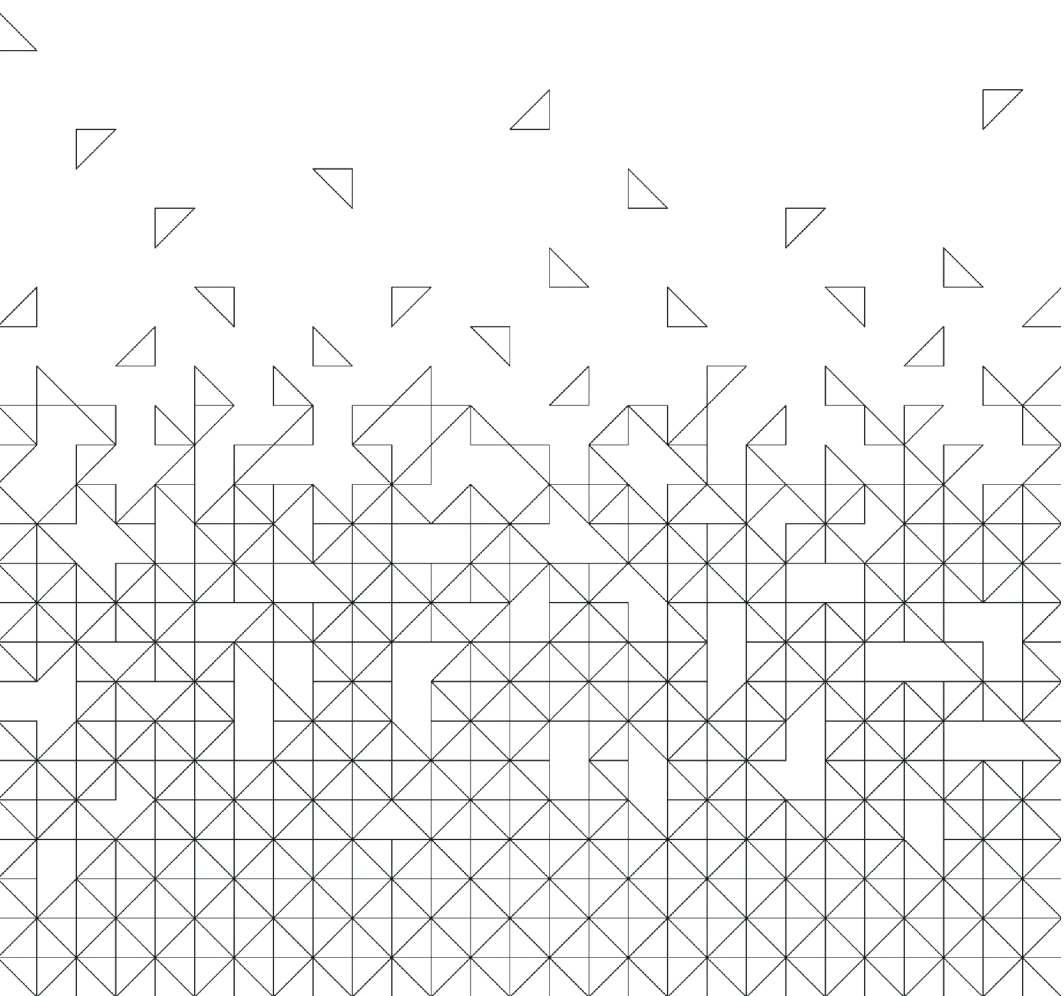



## Safety information

**Important**-Please read these instructions fully before installing or operating

### Before use

The installation of this appliance is best carried out by 2 people.

- Dispose of all packaging carefully and responsibly.
- The appliance is designed for **indoor use only** and must be protected from rain, moisture and extreme temperature variations.
- This appliance is designed for house hold use. **Do not** use the appliance for industrial and commercial use, or any other purpose.
- The appliance **MUST** be positioned on a firm level base.
- **Do not** splash water on the appliance. It may cause electrical parts to fail and result in an electric shock.
- Leave the appliance in its intended place of installation and in its correct orientation for at least 4 hours before switching on to allow the cooling system to settle before first use or after any transportation.
- Your appliance is an environmental friendly product and it contains non CFC/HFC gas substances in the cooling system (Called R600a) and in the insulation (Called cyclopentane) which are potentially flammable if exposed to fire. Therefore, take care not to damage, the cooling circuit/pipes of the appliance in transportation and in use. In case of damage do not expose the appliance to fire,



## Safety information

**Important**-Please read these instructions fully before installing or operating

potential ignition source and immediately ventilate the room where the appliance is situated.

- **Do not** sit, stand or place any other heavy objects on top of the appliance. This could result in injury or damage to the appliance.
- **Do not** allow children to play with the appliance to avoid the risk of entrapment and suffocation.
- Keep ventilation opening, in the appliance enclosure or in the built-in structure, clear of obstruction.

During use

- This appliance is not intended for use by persons (including

children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
- **Do not** use mechanical,






## Safety information

**Important**-Please read these instructions fully before installing or operating

electrical or chemical way to speed up the defrost process not recommended by the manufacturer.

 
- **Do not** use or place other electrical products inside the appliance not recommended by the manufacturer.
- **Do not** store liquids in glass containers in the freezer compartment as these may shatter.
- **Do not** store flammable materials such as alcohol, gasoline, LP gas or glue etc in the appliance.
- In case there is an inflammable gas leaking, open the window for air circulation and do not pull out the plug or turn the temperature knob. **Do not** touch the appliance until the valve of gas is turned off. Otherwise, sparks may happen.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **Do not** attempt to repair the appliance yourself. Contact the Customer Helpline:0345 257 7271.





# Getting to know your refrigerator

# 2

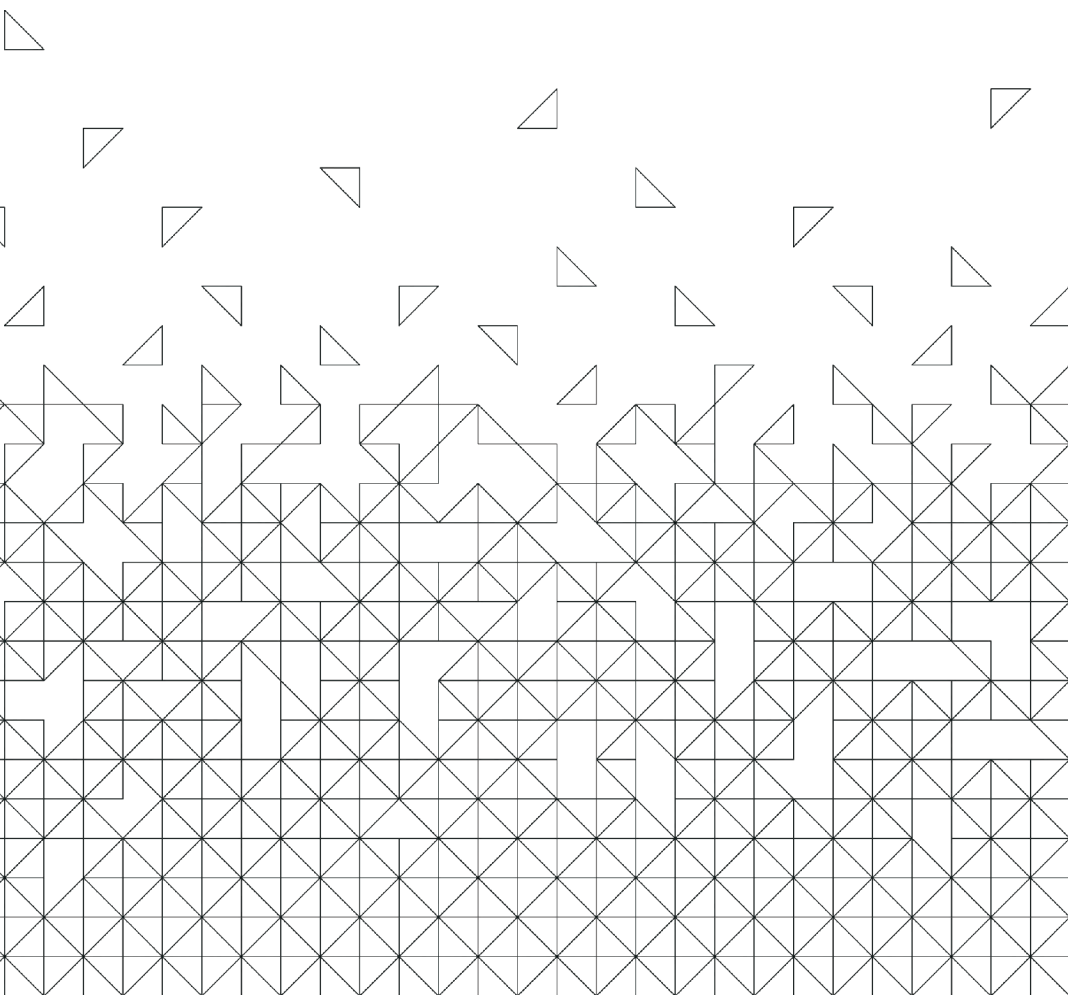

# Getting to know your refrigerator

You'll be up and running in no time

## **Ready? Let's begin...**

 
Please read these instructions carefully. They contain important information which will help you get the best from your refrigerator and ensure safe and correct installation and operation

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

# Getting to know your refrigerator

You'll be up and running in no time

## Parts

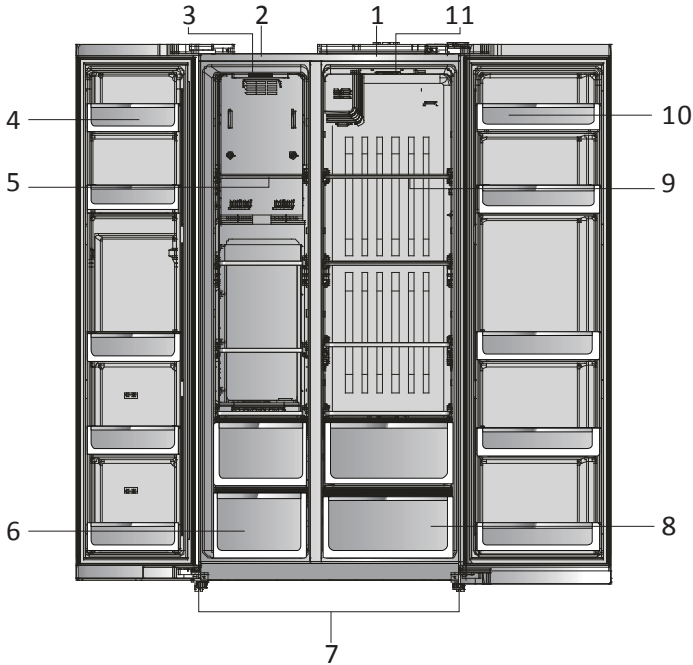


- |                      |                      |
|----------------------|----------------------|
| 1. Fridge            | 7. Leveling Feet     |
| 2. Freezer           | 8. Fridge Crisper    |
| 3. LED light         | 9. Fridge Shelves    |
| 4. Freezer Balconies | 10. Fridge Balconies |
| 5. Freezer Shelves   | 11. LED light        |
| 6. Freezer Tray      |                      |

## Accessories included



 Instructions x 1



Ice-cube tray x 2



Egg tray x 1




Wrench x 1





# Installing your refrigerator
 
# 3

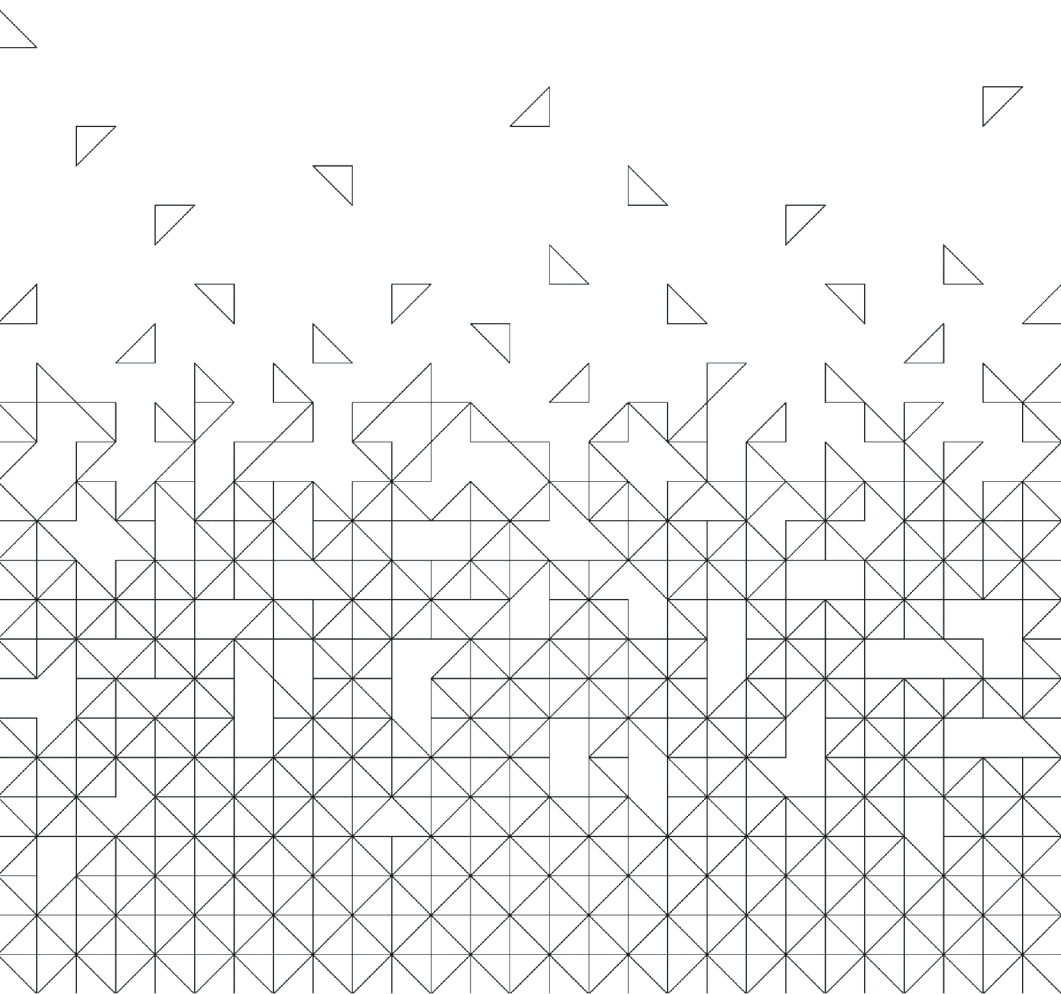

# Installing your refrigerator

## Bringing it all together

### Transportation



**Caution:** 2 people are required to unpack and handle the appliance, it is recommended that gloves are worn.

- The appliance should be transported only in an upright position. Do not tilt the appliance greater than 45 degrees. The packaging as supplied must be intact during transportation.
- After transporting the appliance, leave it for at least 4 hours before switching on to allow the cooling system to settle. Failure to comply could result in damage to the appliance.
- Do not move the appliance by pulling the door or handle as it may damage your flooring and wall coverings etc.
- Empty any water in the drain tray before moving
- Make sure that the defrost water pipe at the back of the product is fixed to the plastic evaporating pan on the top of the compressor, to avoid defrost water spillage on the floor.
- Ensure the electrical cable is not caught under the appliance during and after moving
- Carefully remove all packaging materials including the foam base, dispose of correctly

### Installation

- Ensure sufficient spacing is provided for the appliance to be installed. Leave space on both sides (50cm), back (100cm) and above the appliance (50cm) to ensure proper ventilation and door opening. See fig. 1&2
- Do not place the appliance near a heat source or in direct sunlight
- Do not put any heavy objects on top of the appliance. It will damage the appliance.
- Do not install the appliance in a moist or wet place. It should be installed on a smooth surface to avoid excessive vibration and noise.
- Move the appliance to the desired location and adjust the two front levelling feet to fix the appliance.

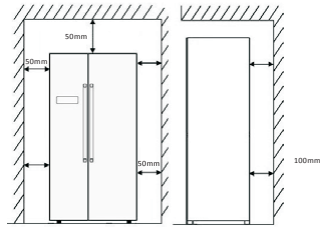 


Fig. 1

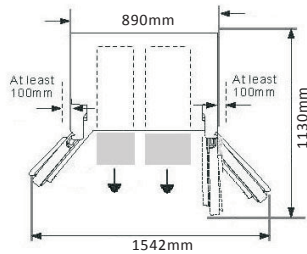 


Fig. 2



Fig. 3

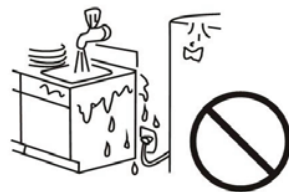 



Fig. 4



# Installing your refrigerator
 
## Bringing it all together

- Try some operations, i.e. Open/close door to confirm the appliance will not move under normal usage/operation. If the appliance moves, adjust the leveling feet again until it is fixed and do not move (See fig.3).
- If you need to relocate the appliance, please ensure the leveling feet on the front side have been screwed upwards before you move the appliance.
- If the doors of the appliance are not aligned then the height of right door can be adjusted, please follow the below steps.  
 Note: The maximum height adjustment is 5mm  
 Rotate the locking nut clockwise (as shown in Fig.5) with a wrench for 2 full rotations to loose it. You can now rotate the adjusting nut (as shown in Fig.5) to adjust the height of the right door. Once the door is set to your desired position, then tighten the locking nut by rotating it anti-clockwise.

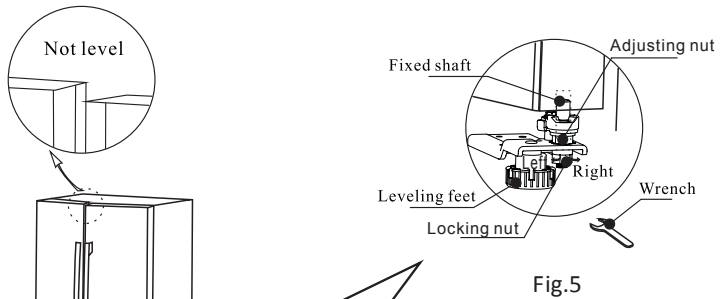

- Each appliance has a climate class (shown on the rating plate) that indicates the operating temperature range of the appliance. The appliance may not work properly if it is left for a long period at a temperature outside the specified range.
- Refer to section "Care and Maintenance" to prepare your appliance for use.

Climate Class	Amb.T.(°C)	Amb.T.(°F)
SN	10~32°C	50~90°F
N	16~32°C	51~90°F
ST	16~38°C	61~100°F
T	16~43°C	61~110°F

# Installing your refrigerator

## Bringing it all together

### Electrical connection



Any electrical work that is required to install this appliance **MUST** be carried out by a qualified electrician.



**Warning: THIS APPLIANCE MUST BE EARTHED**

Before making any electrical connections, ensure that:

- Electrical safety is only guaranteed when the earth system of your house is in accordance with the related local regulations.
- Do not damage the refrigerant circuit.
- Do not bend, stretch or pull the supply cable to avoid electric shock.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Ensure the power socket is suitable for the maximum power of the machine (fuses in the power circuit must be 13 amp).
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- The appliance should be earthed and in compliance with the applicable law.
- When installed, the power socket must be within easy reach.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- The use of adapters, multiple connectors or extension cables are not recommended.
- The appliance must be connected to a 220-240 volt 50Hz AC supply by means of a three pin socket, suitably earthed and protected by a 13 amp fuse.
- Should the fuse need to be replaced, a 13 amp fuse approved to BS1362 must be used.
- The plug contains a removable fuse cover that must be refitted when the fuse is replaced. If the fuse cover is lost or damaged, the plug must not be used until a replacement cover has been fitted or the plug is replaced.
- A damaged plug should be cut off as close to the plug body as possible, the fuse should be removed and the plug disposed of safely.

### Plug replacement (UK & Ireland only)

Should you need to replace the plug; the wires in the power cable are coloured in the following way:

Blue Neutral 'N'

Brown Live 'L'

Green & Yellow Earth 'E'

 
As the colours of the wires in the power cable may not correspond with the coloured markings identifying the terminals in your plug, and proceed as follows:

The green & yellow wire must be connected to the terminal in the plug that is marked with the letter E or by the earth symbol.

The blue wire must be connected to the terminal that is marked with the letter N.


The brown wire must be connected to the terminal that is marked with the letter L.

If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

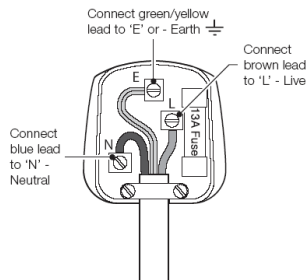



# Using your refrigerator 4

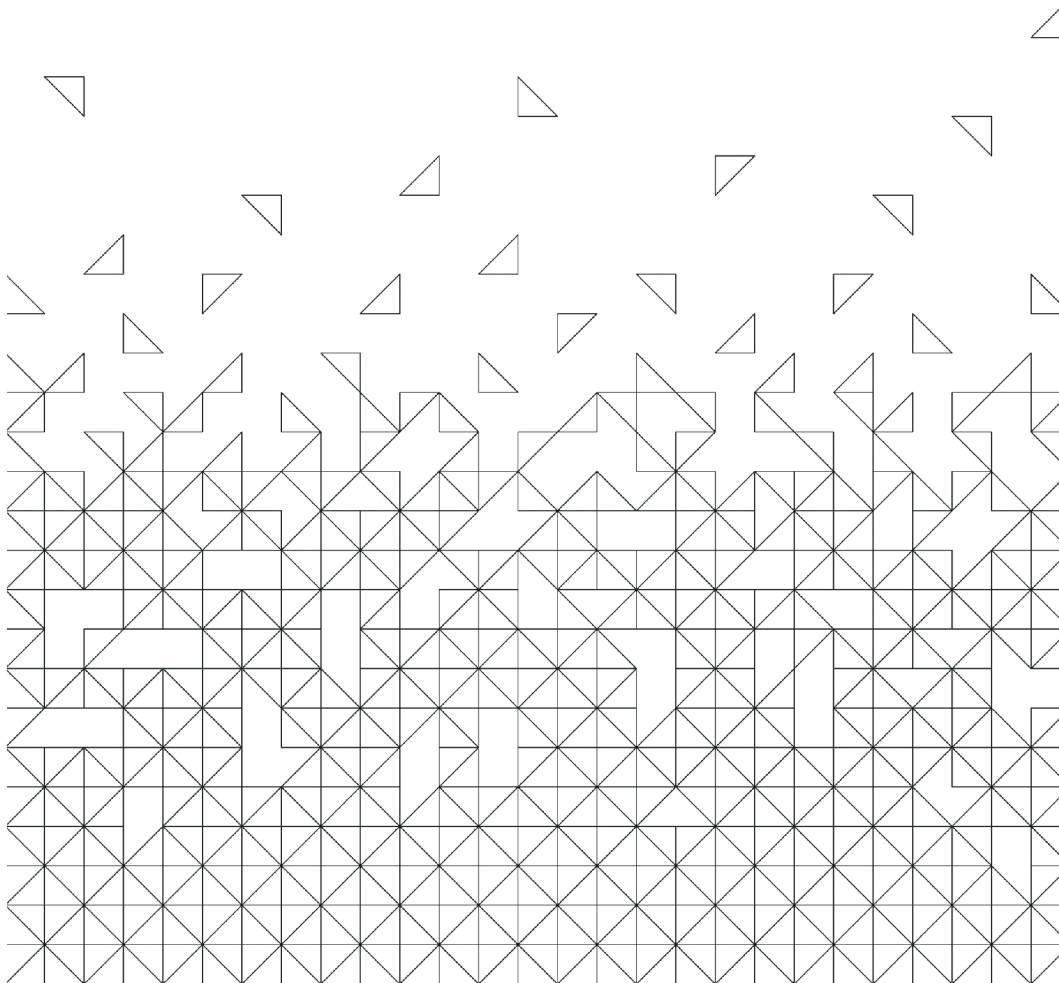 

# Using your refrigerator

## Getting the most from your appliance

### Before first use

#### Final checks before operating the appliance

1. Good air circulation around the appliance .
2. The feet have been adjusted for perfect levelling.
3. Clean the compartment per recommendation in section “Care and Maintenance” .
4. Plug in the appliance and the interior light will come on when the door is open.

 


The compressor starts up and in operation may produce some background noise .It is normal, this is not a defect.

### Using your appliance


 
#### 1. Control panel


- The control panel allows you to start and use all the functions of your refrigerator without opening the doors.

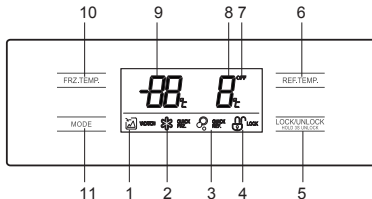



1. Vacation mode icon
2. Quick freeze mode icon
3. Quick cool mode icon
4. Lock/unlock icon
5. Lock/unlock/ confirm button
6. Fridge compartment temperature adjustment button
7. OFF mode icon
8. Fridge compartment temperature
9. Freezer compartment temperature
10. Freezer compartment temperature adjustment button
11. Mode function/setting button

#### 2. Lock / Unlock function

At lock state(  ),press and hold Lock/unlock/confirm button for 3 seconds,it will sound a beep and change to unlock state(  ).




 
It will change from unlock state to lock state if the appliance is idle for 60 seconds. Or you can press the Lock/unlock/confirm button for 3 seconds, then it will change to lock state(  ).

#### 3.Function mode selection

To change the function mode, the appliance must be in unlock state(  ). Press the Lock/unlock/confirm button for 3 seconds to change to unlock state(  ).

Continue to press Mode button, it will switch the function from normal to other as cycle in the below.

Vacation → Quick-Freeze → Quick-cold and freeze → Quick-cold → Normal

Program mode	Display	Freezer temperature	Fridge temperature	Remarks
Normal	/	-18 C	5 C	For normal use, both freeze & fridge temperature can be adjusted.
Vacation	 VACATION	-18 C	OFF	For vacation use, both freeze & fridge temperature cannot be adjusted.
Quick freeze	 QUICK FREEZE	-24 C	Unchanged	For quick freeze use, only fridge temperature can be adjusted.
Quick freeze + cool	 QUICK FREEZE + COOL	-24 C	2 C	For quick freeze + cool use, both freeze & fridge temperature cannot be adjusted.
Quick cool	 QUICK COOL	-18 C	2 C	For quick cool use, only freezer temperature can be adjusted.

# Using your refrigerator

## Getting the most from your appliance

### First Use

- 1 Allow to stand for a minimum of 4 hours before plugging in to the mains

### Setting the temperature

- The temperature of the refrigerator is controlled electronically by the control panel.
- It will default at -18°C (freeze) and 5°C (fridge) at 1st use.
- Setting the temperature of the fridge and the freezer can be done manually by pressing the fridge compartment temperature adjustment button(6) and the freezer compartment temperature adjustment buttons(10) until the required temperatures are shown on the display.
- To change the temperature of the fridge compartment, continue to press the fridge temperature button(6), until the desired temperature is reached. Press Lock/unlock/confirm button to confirm. The temperature of the fridge can be set between 2°C and 8°C.
- To change the temperature of the freezer compartment, continue to press the freezer temperature button(10), until the desired temperature is reached. Press Lock/unlock/confirm button to confirm. The temperature of the freezer compartment can be set between -16°C and -24°C.

### Hints and Tips

#### Storage of Fresh food

- Food should always be covered tightly with foil, wrapped in film, placed in an airtight bag or container. This will prevent it from dehydrating and prevent strong smells contaminating other food.
- Do not allow raw meat to come into contact with cooked foods.
- Fruit and vegetables should be stored in the bottom box with the glass cover in place.
- Space should be left between food items to allow free movement of cold air.
- Cool hot food down to room temperature before storing.

#### Storage of Frozen food

- Fresh foods such as fish and meat can be frozen to maintain freshness, and keep the nutrients in the food.
- Wrap food to be frozen or place it in an airtight container.
- Do not allow already frozen food into direct contact with food to be frozen.
- Ready frozen food should be placed in freezer as soon as possible.
- Do not re-freeze food once it has thawed.

### Quick Freeze

Quick Freeze the original freshness and nutrition constituent of foodstuffs can be retained. Fresh meat and fish to be stored for long time must be done by quick Freeze. (Quick freeze can continue operate for upto 26 hrs and then it will change back to normal mode.)

# Using your refrigerator

## Getting the most from your appliance

### Useful information

The following guidelines and recommendations are suggested to obtain the best results and storage hygiene.

- Frequent door openings can cause internal temperature to rise so the door should be closed as soon as possible after use.
- For hygiene reasons, it is always a good practise to pack, wrap and cover the food before storing.
- Use a polythene bag to store raw meat and place on the lowest shelf. Avoid contact with cooked food to prevent contamination. For safety reasons, store raw meat for two to three days only.
- Cooked dishes must be stored in airtight covered containers.
- Food and beverages should cool to room temperature before storing.
- Most vegetables should be blanched and chilled before freezing.
- Bottles can be placed in the door section.
- Some fruits and vegetables like pineapples, melons, tomatoes, and cucumbers should be wrapped in polythene bags.
- Do not leave frozen food at room temperature to thaw. You could defrost the food by putting it in the fridge to thaw slowly. Make sure you avoid defrosting food dripping food juices onto other food.

### Energy saving tips

- Place your fridge away from direct sunlight, your oven or any other heat sources. Allow 20 cm clear space on both sides and above, and at least 5 cm behind.
- Cover all food stored, and arrange it so that cold air can circulate freely.
- Higher cold setting will use more energy. Do not set to maximum cold if it is not necessary.
- Cool the hot/warm food to room temperature before putting them into your fridge.
- Frequently opening and closing the door

would cause the internal temperature to rise and it will consume more energy.

- Close the door(s) properly, and make sure the seals and hinges are airtight. Check the seals by putting a sheet of paper between the door and the main body of the fridge. If the paper moves, your seals need replacing.
- Defrost regularly if your refrigerator is not a frost-free or cyclic defrost model. Accumulated ice layer should not be more than 5 mm thick.
- The pre-set combination of drawers, baskets and shelves have already been set in the most efficient way for use of this product.

### Defrosting

#### Fridge Compartment

- The fridge compartment defrosts automatically. The defrosting water runs through the drain port to the drain tray at the back of the appliance.
- In the case, that some droplets may remain inside the compartment and re-freeze, after the defrosting cycle, this is normal. Do not use pointed or sharp objects, i.e. knives or forks, to remove the droplets which have frozen.
- Check the collection channel to ensure that no food particles have blocked the drain channel.

#### Freezer Compartment

To help you make the most of the freezing process, here are some important hints:

 
- the maximum quantity of food which can be frozen in 24 hrs. is shown on the rating plate;
- the freezing process takes 24 hours. No further food, to be frozen should be added during this period;
- only freeze top quality, fresh and thoroughly cleaned, foodstuffs;
- prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible to thaw only the quantity required;







# Care and Maintenance 5

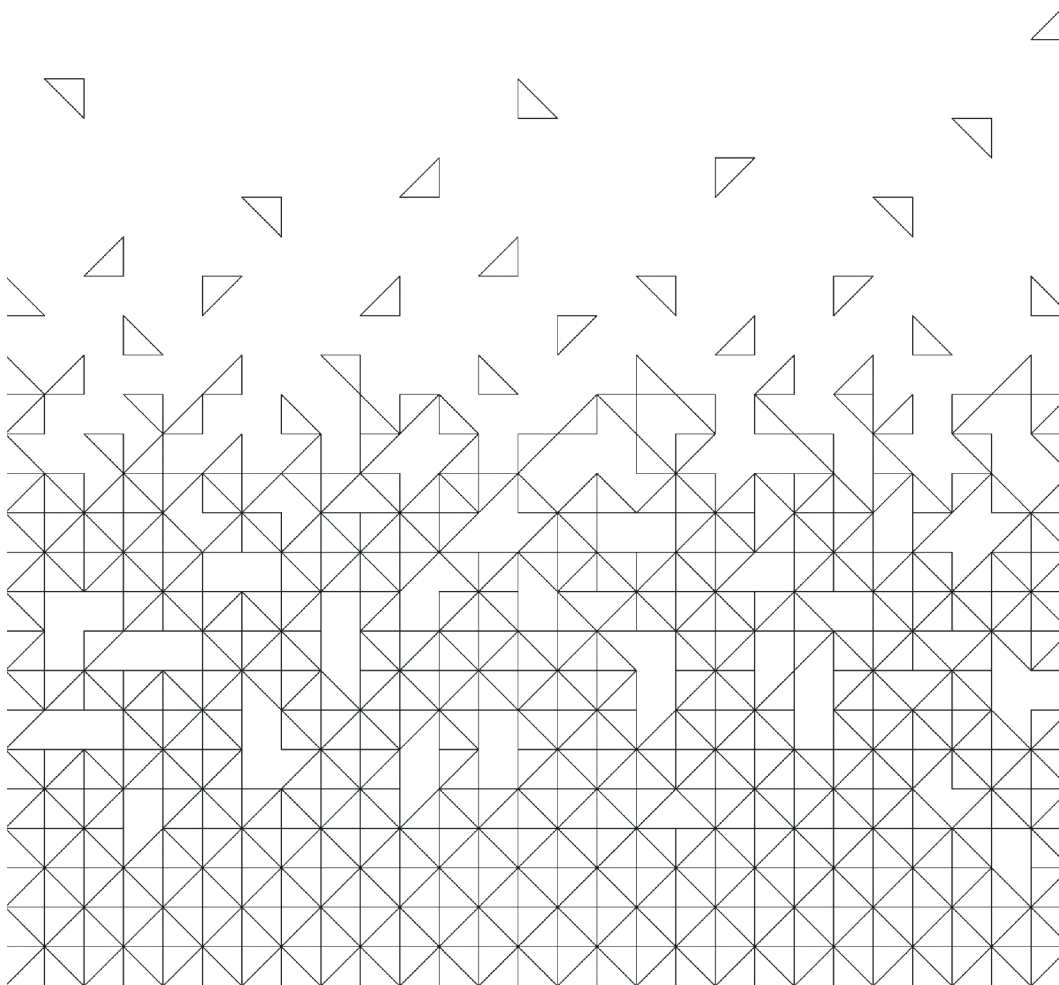

# Care and maintenance

## Looking after your appliance

### General



**Important:** Always unplug the appliance from the power socket during cleaning and maintenance.

- Never use any sharp instruments or abrasive substances, soap, household cleaner, detergent or wax polish for cleaning.
- Use lukewarm water to clean the cabinet of the appliance and wipe it dry.
- Never clean the appliance with flammable fluids. It could cause damage and a fire hazard.
- Clean the exterior of the appliance and door seal with a damp cloth and dry it through.
- Avoid water going into the temperature control box. Clean with a dry cloth only.
- Clean the condenser (located at the back of the appliance) with a vacuum cleaner. It is suggested to remove the dust every year.
- Shelves are all removable for cleaning purpose.



**Important:** Care must be taken while cleaning/carrying the appliance not to touch the bottom of the condenser metal wires at the back of the appliance, as this could cause injury to fingers and hands.

### Light bulb replacement

This appliance is equipped with an LED light. It can be used for a long time. If the LED light is blown, it must be replaced by a qualified person to avoid any hazard. Contact the service agent at 0345257 7271.

### Power failure

In case there is a power failure, you should contact the electricity supply company and take the following actions:

If it is less than 24 hours, keep the doors closed. This will allow the stored food to stay cold as long as possible.

If it lasts more than 24 hours, it is advised to empty the freezer compartment and temporarily store the food in a portable freezer or using artificial ice packs. Try to use up the food which is more easily perishable.

Remarks: A full appliance will stay cold longer than a partially filled one. If ice crystals are still visible on the food, it may be frozen again, although flavour and aroma may be affected. If food is found to be in a poor condition, it is best to throw it away.

### Short vacation

There is no need to disconnect the appliance from the mains if you will be away for two to three weeks. Use up the perishable food.

### Long vacation

Remove all the food if you are away for three weeks or more. Unplug the appliance and leave the doors open to provide air circulation to prevent odour and mould.

### Moving your appliance

#### Moving

Refer to section "Transportation" under "Installation"

### Error code

What to do in case of such failure is happened.

Error code	Possible issue	Solution
E1	Temperature detection circuit of cooler	Contact service provider
E2	Temperature detection circuit of freezer	Contact service provider
E5	Freezer defrosting temperature detection circuit	Contact service provider
E6	Communication fault	Contact service provider
E7	Ambient temperature detection circuit	Contact service provider

# Care and maintenance

## Looking after your appliance

### Disassembly / assembly the door

- In case, there is a problem with a door, you can contact the service agent for a replacement or you can replace it by yourself.
- The size of the doors are, Freezer 395mm(W)x1714mm (H) and Fridge 500mm(W)x1714mm(H).



Warning: 2 people may be required to re-align the door.

- A Philips screwdriver will be required for this task.
- Put a protective layer on the floor before taking off the door.

#### To disassemble the door.

1. Unscrew the screw fixing the top hinge cover (Fig.a).
2. Remove the top hinge cover (Fig.b).
3. Unscrew the screw that secures the top hinge (Fig.c).
4. Press on the lock of the cable connector (Fig.d) and separate the lead wire (Fig.e).
5. One person should hold the door.
6. Remove the top hinge (Fig.f) from the door. Take care of the lead wire to avoid any damage to the wire.
7. Move the door upward to release it from the bottom hinge (Fig.g&h).
8. Lay the door on the floor on a protective layer to avoid making scratches on the surface.

#### To assemble the door

1. Carefully lift the door. Align the hole in the lower corner of the door over the lower hinge. Lower the door onto the lower hinge.
2. Insert the upper hinge into the hole on the upper edge of the door.
3. One person should hold the door in place.
4. Make sure the hinge is level between the upper hinge hole and the hole on the top of the cabinet.
5. Reattach the hinge screws to secure the door.
6. Reconnect the lead wires and refit the top hinge cover. Reattach the hinge cover with the screw.



Fig.a

 


Fig.b



Fig.c



Fig.d

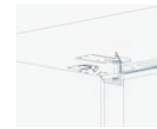 


Fig.e



Fig.f



Fig.g




Fig.h

# Care and maintenance

## Looking after your appliance

### Technical Specifications

Model	BFSBS
Energy efficiency class	A+
Energy consumption Kwh/year	408
Net storage volume fresh food (litres)	344
Net storage volume frozen food (litres)	183
Total net storage (litres)	527
Frozen food compartment rating	4star 
Climate class	SN/N/ST
Operating noise level dB(A)	43
Minimum Operation Temperature	10 °C

### Disposal information

 


The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.

**Remember : Old fridges must be disposed of carefully- older models contain CFC gases that are harmful- if in doubt , contact your local council for details on how to dispose of an old fridge.**



# Product support 6

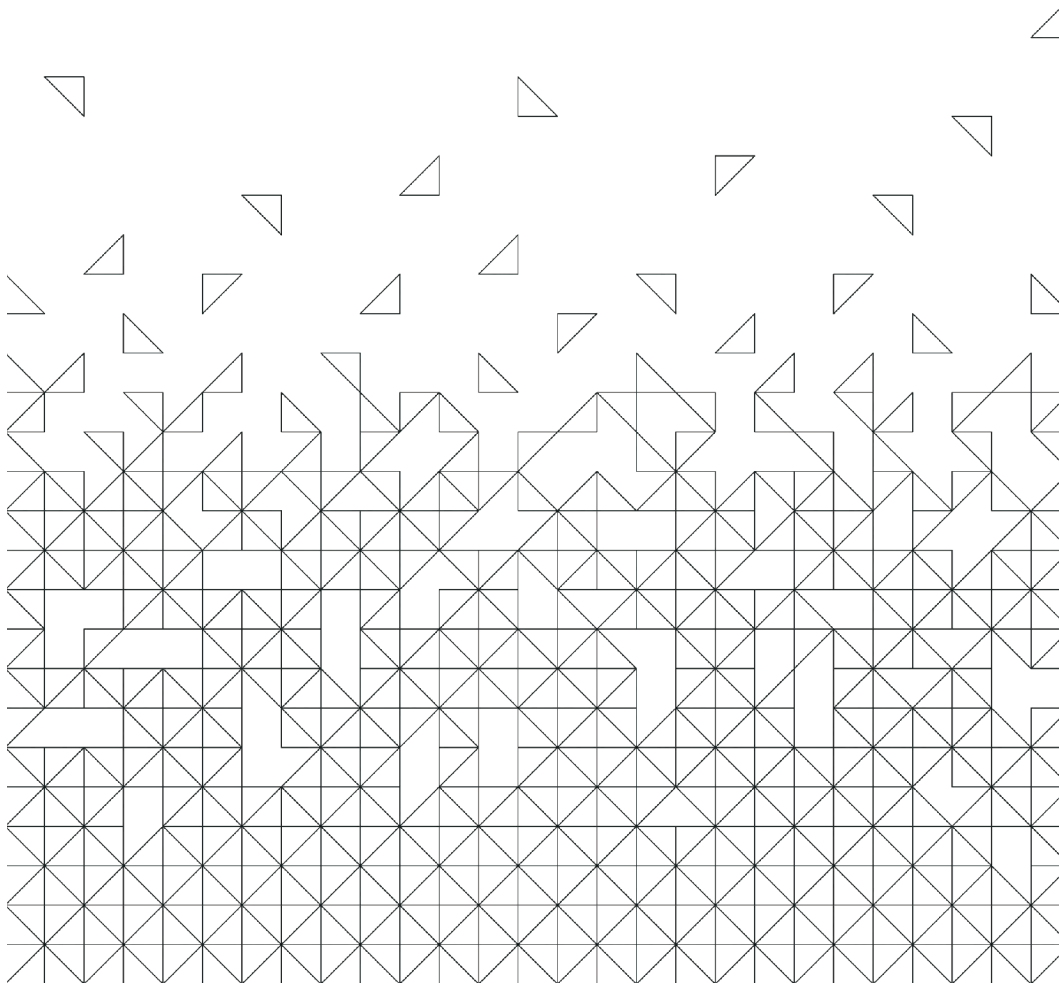

# Product support

## Help is always at hand

### Troubleshooting

If you have a problem with your product, these questions may be able to assist you?

#### **Question- Appliance does not work.**

Answer

Appliance is not switched on - Switch on the appliance.

Mains plug is not plugged in or is loose. - Insert mains plug.

Fuse has blown or is defective - Check fuse, replace if necessary.

Socket is defective - Mains malfunctions are to be corrected by an electrician.

#### **Question - Appliance cools too much.**

Answer

Temperature is too cold - Change to a warmer setting in front control panel.

#### **Question - The food is too warm.**

Answer

Temperature is not properly adjusted - Change to a cooler setting.

Door was open for an extended period - Open the door only as long as necessary.

A large quantity of warm food was placed in the appliance - Change to a cooler setting.

Cool warm food before placing in the refrigerator.

The appliance is near a heat source - Position the refrigerator away from a heat source.

#### **Question- Interior light does not work.**

Answer

Light bulb is defective - Replace the LED light part by service agent.

#### **Question- Heavy build up of frost, possibly also on the door seal.**

Answer

Door seal is not air tight - Carefully warm the leaking sections of the door seal with a

hair dryer (not hotter than approx 50 degree). At the same time shape the warmed door seal

by hand such that it sits correctly.

#### **Question - Water on the floor or on storage shelves.**

Answer

Water drain hole is blocked - Remove food residue or ice from the entrance of the drain hole.

#### **Question - Appliance is making unusual noises**

Answers

Appliance is not level - Readjust the front levelling feet.

Appliance is in contact with wall or other objects. - Push appliance away a short distance

A part at the back of the appliance e.g. a tube, is in contact with another appliance part or

wall - Gently bend this part away carefully if necessary

# Product support

## Help is always at hand

### Help and assistance

If you require any technical guidance or find that your refrigerator is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 257 7271**. To help give us give you a fast and efficient service please have the following information ready.

Model Ref.

You can find these on the rating plate—a small information panel (usually a sticker or metal plate) on the rear of your appliance

Serial number

Date of purchase


This will be shown on your receipt

Local call rates applies\*

Line open 8am-7pm Monday to Saturday and 10am-4pm Sunday

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purpose, telephone calls to and from customer service centres may be recorded and monitored. Call from Republic of Ireland will attract international call charges.

 This appliance complies with the following EEC directives:  
2014/35/EEC Low voltage directive  
2014/30/EMC directive



# Product support

Help is always at hand

# BUSH

## Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sale service and useful updates.

[www.bushregistration.co.uk](http://www.bushregistration.co.uk)

FREEPHONE\*

0800 597 8548

Lines are open 8am-8pm, 365 days a year. \*Call may be recorded and monitored.

## Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product
- This guarantee is in addition to and does not diminish your statutory or legal rights

## Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purpose (as set out in the important Data Privacy notice displayed overleaf) for which their personal data will be processed

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have

any inaccuracies in your information corrected

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV128JP

# BUSH

## Contact

[www.argos-support.co.uk](http://www.argos-support.co.uk)

Helpline: 0345 257 7271