


Argos

Value Range

18V Cordless Handstick

Instruction Manual - Please keep for future reference

VSS01B15P

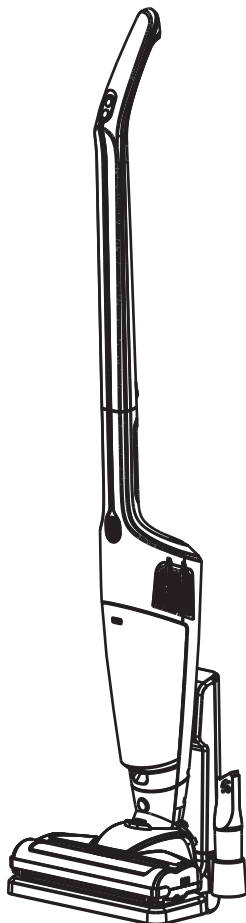

For the relevant accessories information, please visit <http://www.argosspares.co.uk/>
Or call 08445570320

Important - Please read these instructions fully before installing or using

These instructions contain important information which will help you get the best from your appliance and ensure safe and correct use and maintenance.

Contents

Safety Information	2-3
Parts	4
Assembly	5
Charge	6
Operation	7
Maintenance	8
Store	9
Disassemble	10
Troubleshooting	11
Technical Specifications	12
Guarantee	13

Safety Information

Important - Please read all instructions before use and keep for future reference

FOR HOUSEHOLD USE ONLY.

This appliance should only be used for domestic cleaning, as described in this user guide.

Please ensure that this guide is fully understood before operating the appliance.

1. Always switch off and remove the charger from the socket before cleaning the appliance or any maintenance task.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
3. If the power cord is damaged stop using the appliance immediately.
4. Keep hands, feet, loose clothing and hair away from rotating brushes. Use only the original charger supplied with the appliance.

5. Check that your supply voltage is the same as that stated on the charger.
6. When charging the appliance, the power switch must be off.
7. Never charge the batteries in temperatures above 37°C or below 0°C.
8. It is normal for the charger to become warm to the touch when charging.
9. Use only attachments provided.
10. Static electricity: some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health.
11. Do not use your appliance out of doors or on any wet surface or for wet pick up.
12. Do not pick up hard or sharp objects, matches, hot ashes, cigarette ends or other similar items.
13. Do not spray with or pick up flammable liquids, cleaning fluids, aerosols or their vapours.
14. Do not run over the power cord when using your appliance or remove the plug by pulling on the power cord.
15. Do not continue to use your appliance or charger if it appears faulty.

Safety Information

Important - Please read all instructions before use and keep for future reference

16. Do not replace the batteries with non-rechargeable batteries.



WARNING: Before charging the product, please make sure your hands are dry.



WARNING: Please don't touch the rolling brush with your hands when the machine is in function.



WARNING: Please use the charger we supplied with the machine when charging. Other chargers main cause breakdown or even danger.

End of Product Life Battery Disposal

If the cleaner is to be disposed of the batteries should be removed. Used batteries should be taken to a recycling station and not disposed of with household waste. To remove the batteries, please proceed according to the following instructions:

IMPORTANT: Always fully discharge the batteries before


removal and ensure the charger is unplugged.

1. Run the cleaner until the batteries are completely empty.
2. Remove the ergonomic handle and the screws, in the main body to open the cleaner.
3. Remove the motor battery housing and disconnect the cables.
4. Remove the batteries from the housing.

Note: Should you experience any difficulties in dismantling the unit or for more detailed information about treatment, recovery and recycling of this product, please contact your local city office or your household waste disposal service.

Parts

Please familiarise yourself with parts and accessories listed below

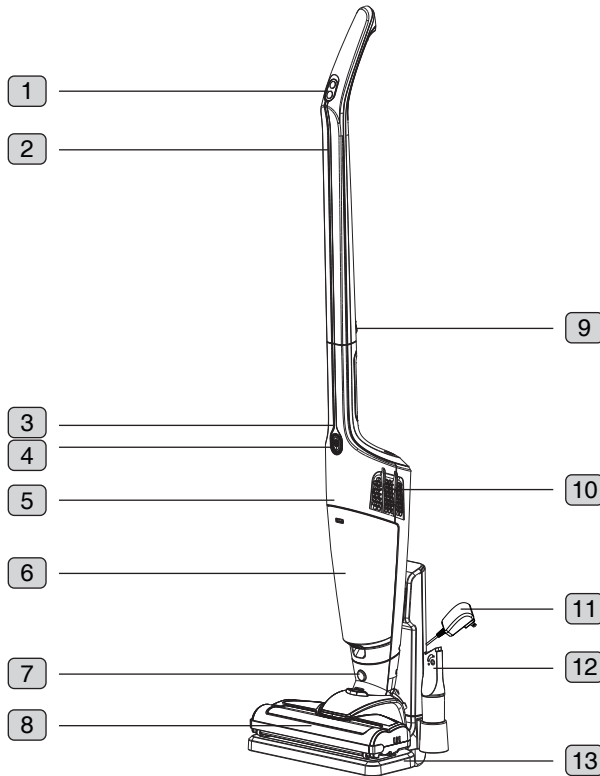

- 1 Handle switch / Speed button
- 2 Handle
- 3 Light cover
- 4 Body switch
- 5 Body
- 6 Dust cup latch
- 7 Lock brush


- 8 Electric brush
- 9 The handle button
- 10 The air board
- 11 Charger
- 12 2 in 1 brush
- 13 Charging stand

Assembly


How to assemble

A. After open the package, please check all the part for VSS01B15P like below.


1. A handset
2. The electric brush
3. Charger
4. Charging cradle
5. The handle
6. Charging cradle chassis
7. 2 in 1 brush

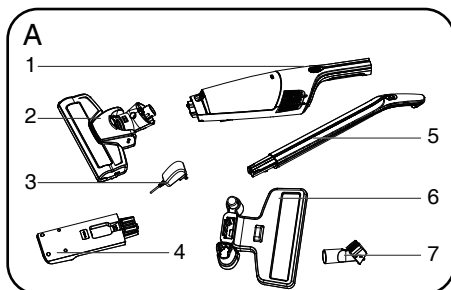


B. How to assemble the brush:
Align the joint of brush with the main unit and then connect the two parts together.

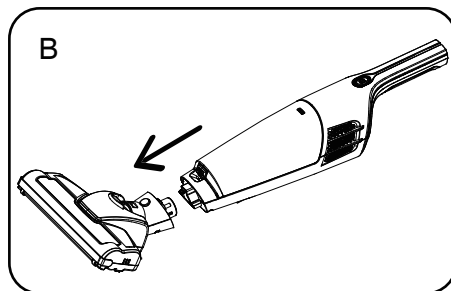

C. How to assemble the handle:
Align the joint of the handle with the main unit and then connect the two parts together.

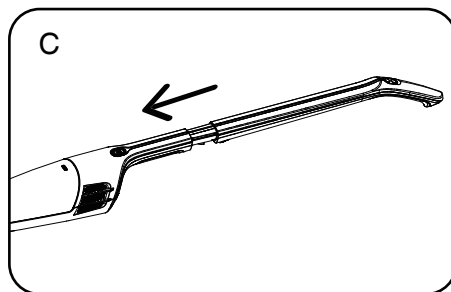


D. How to assemble the charger:
Align the charging base with charging cover and then connect the two parts together.

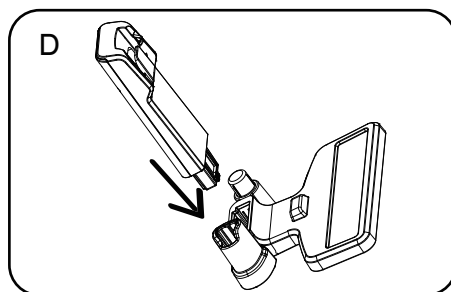


Charge

How to charge

A. How to assemble the charger:
Align charger with charging stand,
insert the charger plug into power
source.

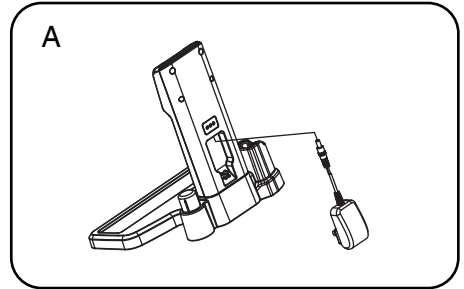

B. How to charge the main unit:
Connect the main unit with the
charging stand.

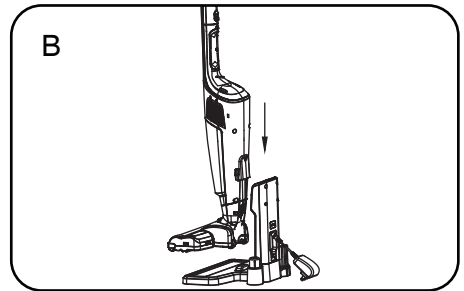





Operation

How to use

A. Press on/off button in handle to start operation. (P1)
Power can be regulated as you change from max to min. (P2)

2. Remove the handle, the handheld can be used with brush, just press the on/off button in (P3).


3. Remove the handle and the brush, the handheld can be used with other accessories in (P4).

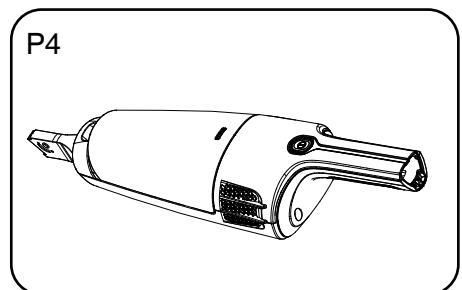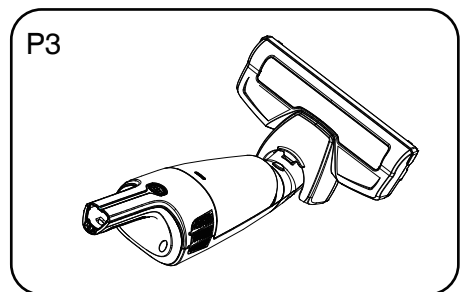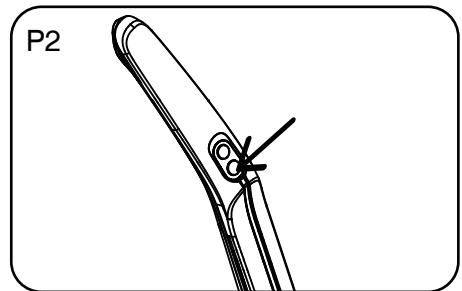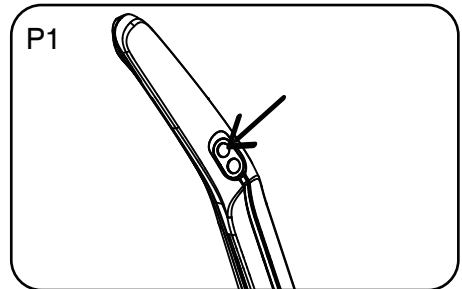


Maintenance

Emptying the Dust Tank


1. P5: Press dust cup release button, release the dust cup

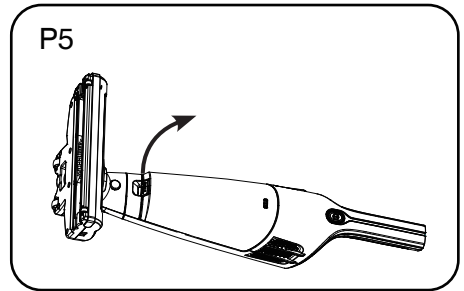

2. P6: Empty the dust.

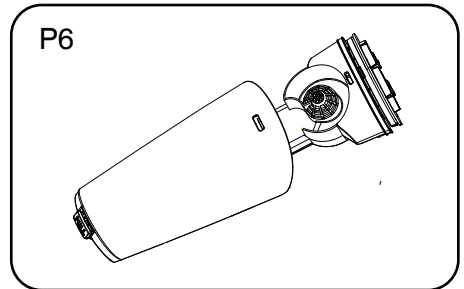



3. P7: After VSS01B15P was used for a certain period, please take out filter sponge, wash it with water and naturally dry it. Make sure all filters dry thoroughly before fitting them back to the unit.

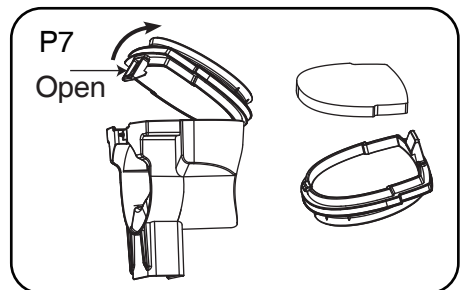

Store

How to store

Please connect main unit with charging stand and place it against the wall.(P8,P9)

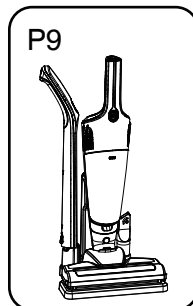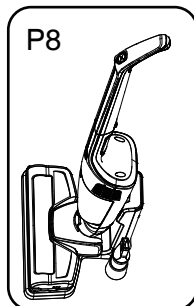


More about the functions

1. Green light indicates normal operation.
2. When green light flashes, VSS01B15P is of low battery, need to be charged.
3. Red light indicates “in charging now”.
4. The red light will turn to green when finish charging, the green light will last for the certain time and then will be off.

THE PRODUCT NEEDS TO BE CHARGED PERIODICALLY(2-3 MONTHS) TO REMAIN WORKABILITY IF YOU HAVE NO INTENTION IN USING IT FOR A LONG TIME.


P10 On/off button with indicator light around

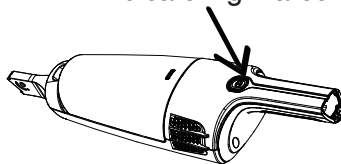


Disassemble

How to disassemble



1. Press brush lock/unlock button to pull out the brush. (P11)

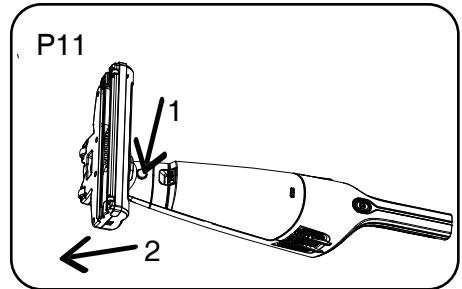

2. Press handle lock/unlock button to pull out the handle. (P12)

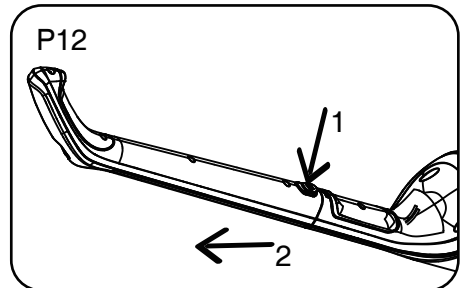

3. Roll the button in (P13) to disassemble the brush. Pull the rolling brush (P14) for cleaning or replacement.

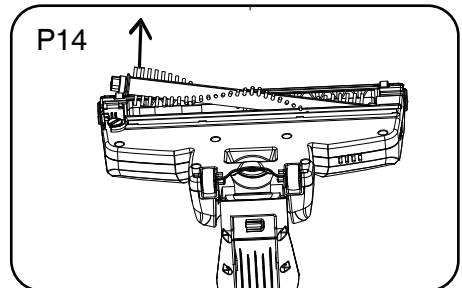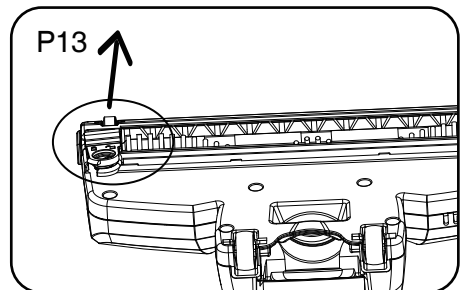

Troubleshooting

Problem	Possible causes	Solutions
An accessory is needed due to broken or missing	1. Accessories are broken or missed after use	1. Please visit http://www.arogsspares.co.uk or call 08445570320 to buy a new accessory.
The vacuum cleaner does not switch on	1. The power button on the unit has not been depressed 2. There is no electricity to the power socket	1. Depress the power switch on the unit 2. Seek expert help from a qualified electrician
The machine stopped when using and can't start again	1. The dust cup is full of dust so that the machine start overheating protection mode.	1. Clear the dust cup, put the product in a draft and then start again after the machine cools down
The vacuum cleaner won't pick up	1. The accessories are not correctly fitted 2. There are blockages in the hose/ accessory 3. The dust bag is full 4. The filters are blocked/clogged	1. Check hose/tools are correctly attached to the machine/hose/tube; refer to 'ASSEMBLY/ OPERATION' section 2. Check the air paths of the hose/accessory are not obstructed by blockages 3. Check dust bag and if necessary empty 4. Frequently cleaning filters will maintain performance; see 'MAINTENANCE' section
Dust is escaping from the vacuum cleaner	1. The filters/dust bag are not fitted correctly 2. The filters are damaged	1. See 'PARTS' and 'MAINTENANCE' sections 2. If the filters are damaged these will need to be replaced
Accessories won't pick up dust/debris	1. The wrong tool is fitted for the task 2. The tools are blocked 3. The filters are blocked 4. The dust bag is full 5. The hose/tubes are blocked	1. See 'PARTS' section 2. Check the air paths of the tools are not obstructed by blockages 3. Frequently cleaning filters will maintain performance; check 'MAINTENANCE' section 4. Check and empty the dust bag 5. Check the air paths of the hose/tubes are not obstructed by blockages
The blockage indicator (if applicable to model) activates	1. The filters/dust bag are blocked 2. The dust bag is full 3. The accessories/hose/tube are blocked	1. Frequently cleaning filters will maintain performance; check 'MAINTENANCE' section 2. Check and empty dust bag 3. Check the air paths of the accessories/hose/ tubes are not obstructed by blockages
The stick powered off automatically after starting up, in between you find green and red light alternately flashes.	1. The power is insufficient, please charge the stick. 2. The stick is in protection mode because there are hair or dust on the rolling brush.	1. Charge the stick, refer to P6. 2. Clean the rolling brush, refer to instruction 3 in P10.

Technical Specifications

Model Number	VSS01B15P
Voltage	220-240V~ 50Hz
Sound power level	82 dB(A)
Battery	18V Lithium
Operating time	23-35 minutes




EEC statement of compliance



Manufacturer/EEC importer: Hereby on our own responsibility, declare that the VSS01B15P is manufactured in compliance with the following Directives:

Safety: 2006/95/EC Low Voltage Directive
EMC: 2004/108/EC Electromagnetic Compatibility Directive

 Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.
- In the event of a problem with the product within the guarantee period call the Customer Helpline on 0345 640 0800.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW