

 
Sophia 2 Door Robe

Assembly Instructions - Please keep for future reference

499/5520

459/9342

462/9762

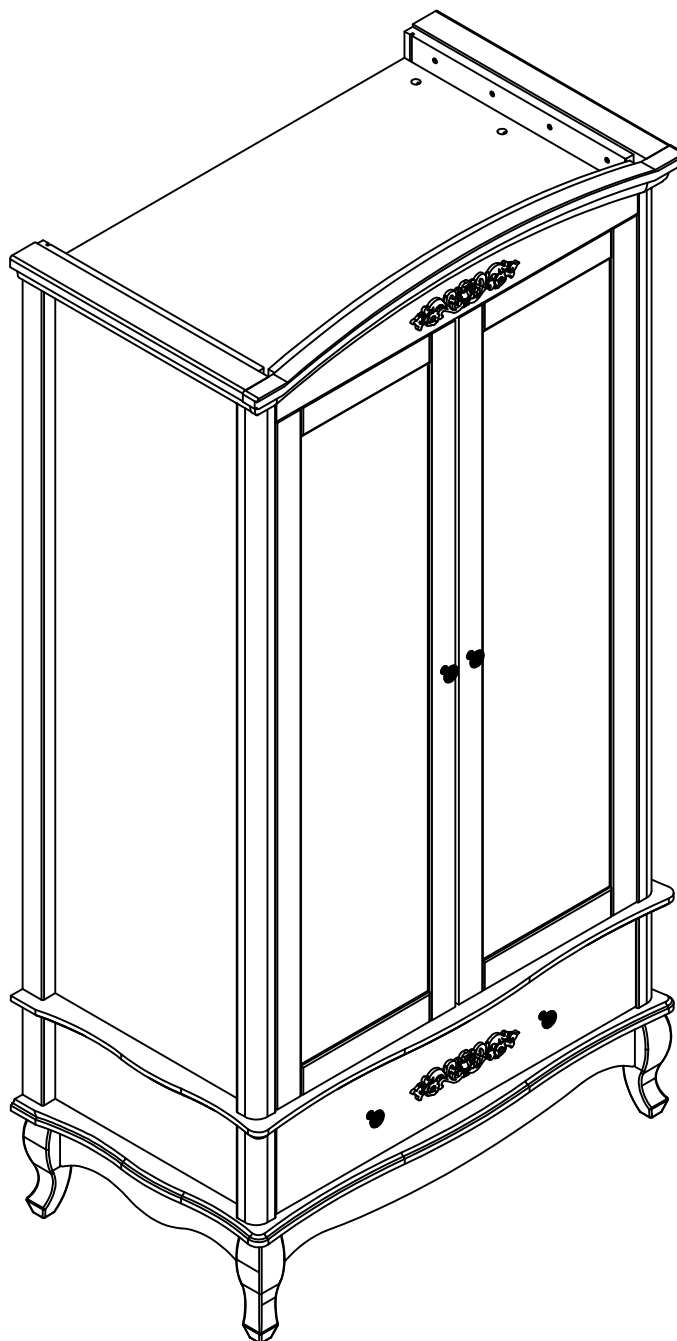

Dimensions

Width - 90cm
Depth - 55cm
Height - 190cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**.
For further assistance please visit <http://www.argos-support.co.uk/>



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2, 3 and 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

 
- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing componets, call the
Customer Helpline:03456 400800. For further
 assistance please visit <http://www.argos-support.co.uk/>


Please check you have all the panels listed below




1 Top plinth bar × 1 (95.6 × 17cm)

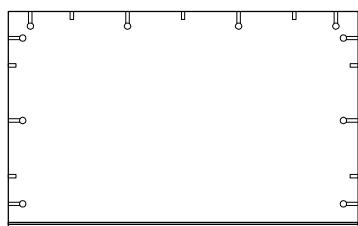 


2 Top × 1 (80.6 × 50.2cm)

 


3 Side plinth bar × 2 (52.1 × 5.6cm)

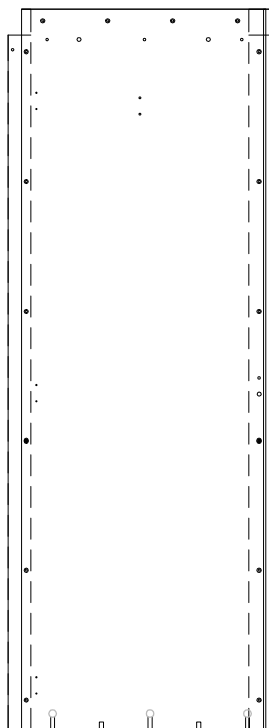 


4 Left Side, top × 1 (142.3 × 52cm)

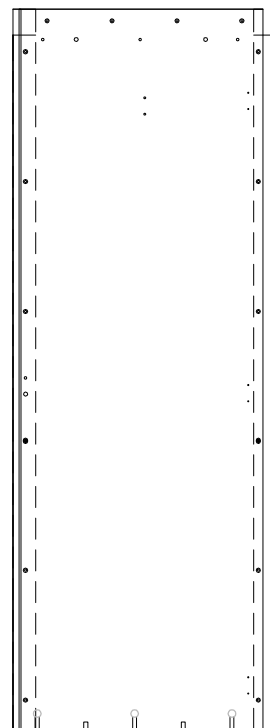 


5 Right Side, top × 1 (142.3 × 52cm)

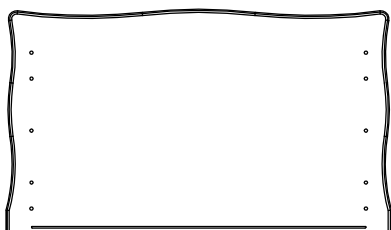 

6 Shelf × 1 (95 × 55cm)

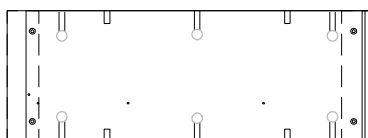 

7 Left Side, bottom × 1 (52 × 18.6cm)

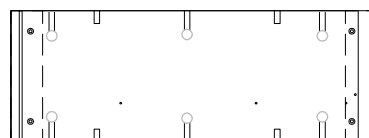 

8 Right Side, bottom × 1 (52 × 18.6cm)



9 Base frame × 1 (95 × 55cm)

 


10 Leg × 4 (20 × 5.6cm)




Components - Panels


Please check you have all the panels listed below

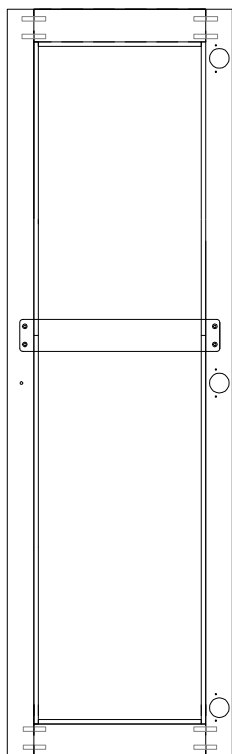

11 Door, left × 1
(132.6 × 39.9cm)

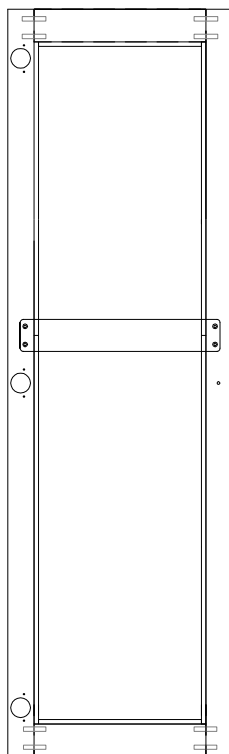 


12 Door, right × 1
(132.6 × 39.9cm)

 


13 Back panel, top × 2
(136.5 × 40.7cm)



 14 Drawer front × 1 (80.2 × 18cm)



15 Drawer side, left × 1
(40 × 12cm)

 

16 Drawer side, right × 1
(40 × 12cm)



17 Drawer back × 1 (75.7 × 11.7cm)



18 Drawer base × 1 (76.8 × 39.9cm)



19 Support rail (38.8 × 5.7cm)



20 Back Rail × 1 (80.6 × 6.8cm)



 
 
 
 
 
 
 
 
 
 
 
21 Back panel, bottom × 1 (81.7 × 19.7cm)




Components - Fittings


Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Wooden dowel × 21	B  Large locking pin × 20	C  Large locking nut × 32
D  Ø6×40mm Screw × 8	E  Ø3.5×30mm Screw × 8	F  Ø3.5×15mm Screw × 54
G  Ø3.5×25mm Screw × 7	H  Small locking pin × 5	I  Small locking nut × 5
J  Hanger rail support × 2	K  washer × 9	L  washer × 8
M  Door hinge × 6	N  Cross plate × 6	O  Handle × 4
P  Ø5×22mm Screw × 4	Q  Ø6×84mm Locking pin × 6	R  Wall strap × 1
S  Allen key × 1	T  Back panel support × 1	U  400mm Runner, outside left × 1
V  400mm Runner, outside right × 1	W  400mm Runner, inside left × 1	X  400mm Runner, inside right × 1
Y  Plastic bar × 1 L=1352mm	Z  Hanger rail × 1 L=797mm	AA  Ø3.0×15mm Screw for Back panel × 4

 
Tools required

 Phillips screwdriver
(medium & large)

  Flatblade screwdriver
(medium)

  Rubber mallet

 Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Fitting dowels

 
 
 
a: Insert Wooden dowels **A** into Top Left sides **4** and Top Right side **5**.

b: Insert Large locking Pin **B** into Top Left sides **4** and Top Right side **5**.

Note: Insert locking pin as shown.

Do not over tighten.


c: Fixing Hanger rail support **J** and Cross plate **N** to Top Left sides **4** and Top Right side **5** by using screws **F**.

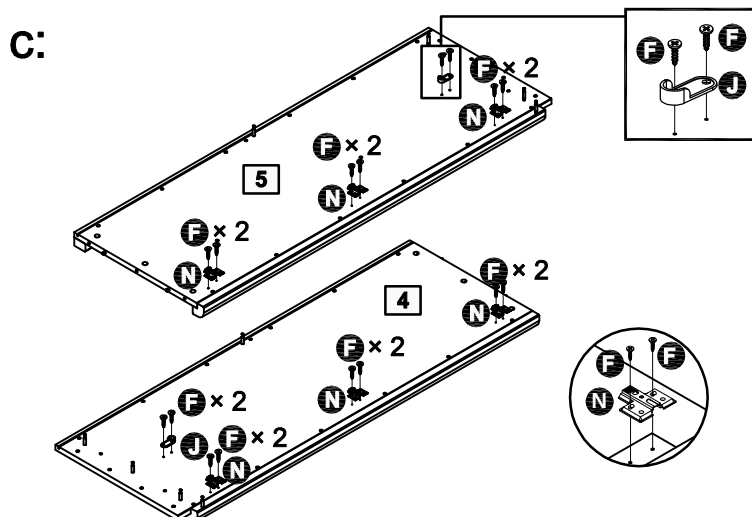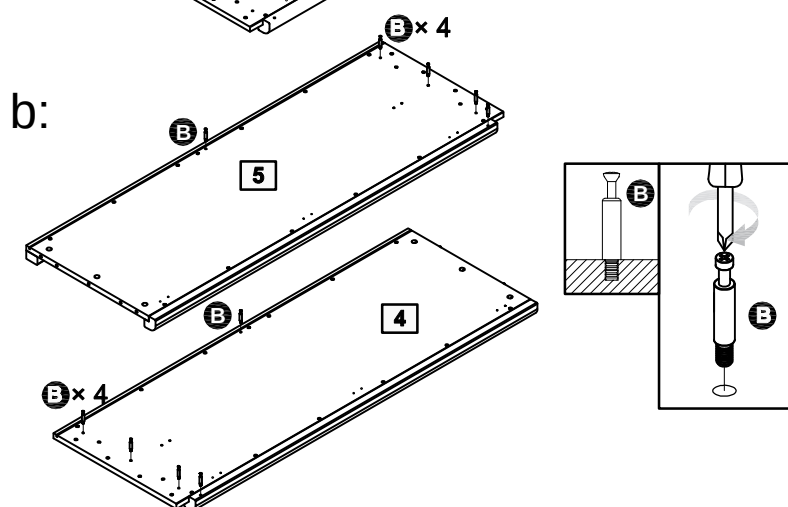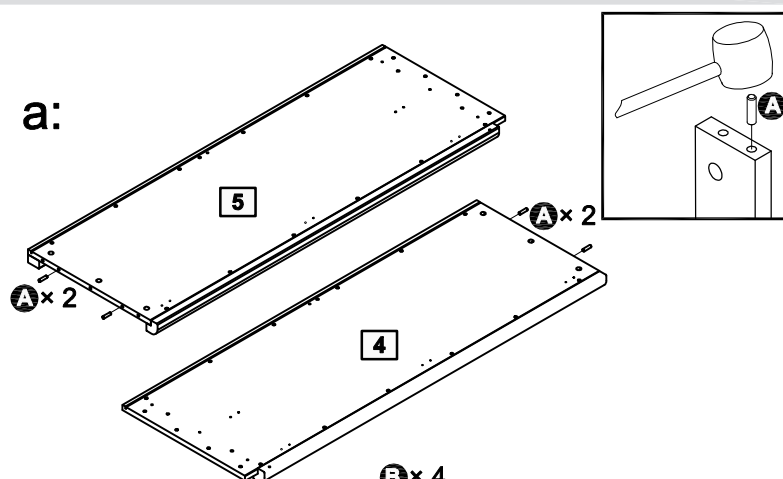

Step 2

Fitting dowels

 Insert Wooden dowel **B** into Support rail **19**.

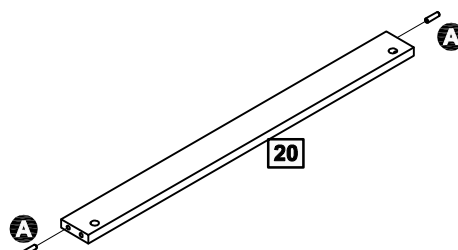

Assembly Instructions

Step 3

 
Fitting dowels and Locking nuts

Insert Wooden dowel **A** to Top **2**.

Insert Large locking pin **B** to Top Plinth **1**.

Note: Insert locking pin as shown.

Do not over tighten.

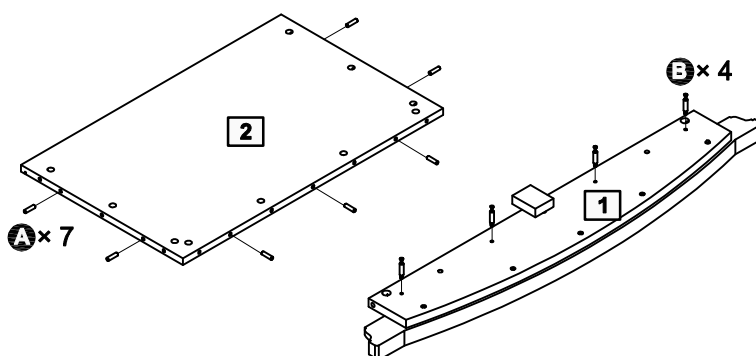


Step 4

Attach Top Plinth **1** to Top panel **2**.

Insert Large locking nuts **C** into Top panel **2** as shown on picture.

 Use a screwdriver to turn Locking nuts **C** clockwise to lock.

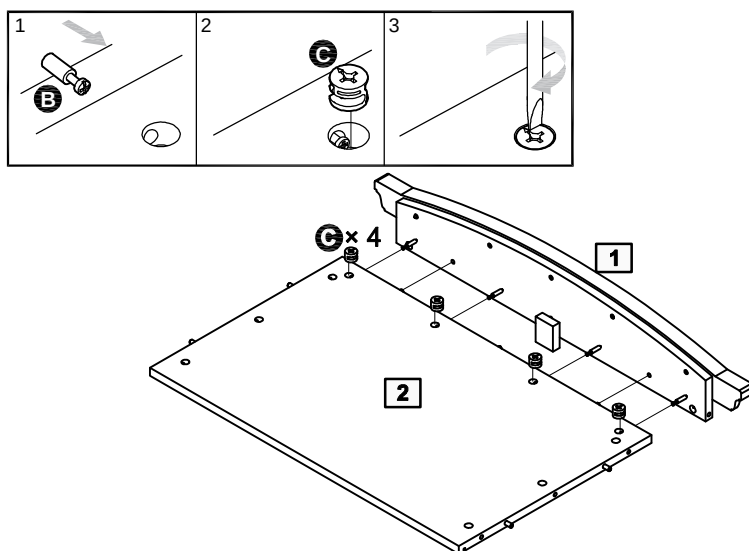

Step 5

 
Attaching sides

Two people are needed here.

Attach Top panel **2** and Back Rail **20** onto the Top sides **4** and **5**.

Insert Large locking nuts **C** as show on picture shown.

Use a screwdriver to turn locking nuts **C** clockwise to lock.

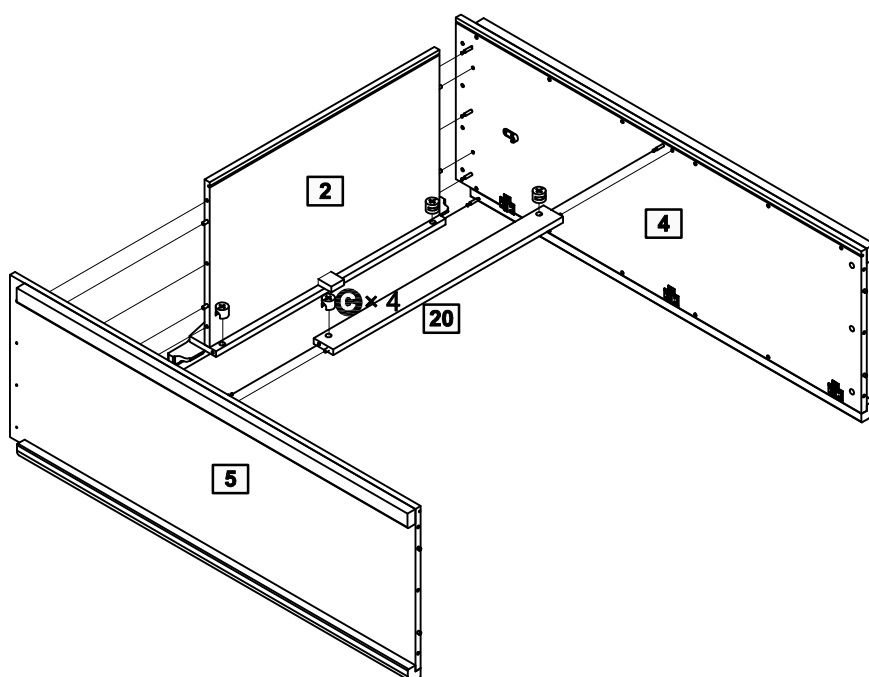

Assembly Instructions

 
 
Step 6

Fitting Top Side Plinth

Insert Large locking Nut **C** into Top panel **2** as shown on picture.

Use a screwdriver to turn Locking nuts **C** clockwise to lock.

Attach Top Side Plinth **3** to the Sides as shown on picture and fix by Screw **E**.


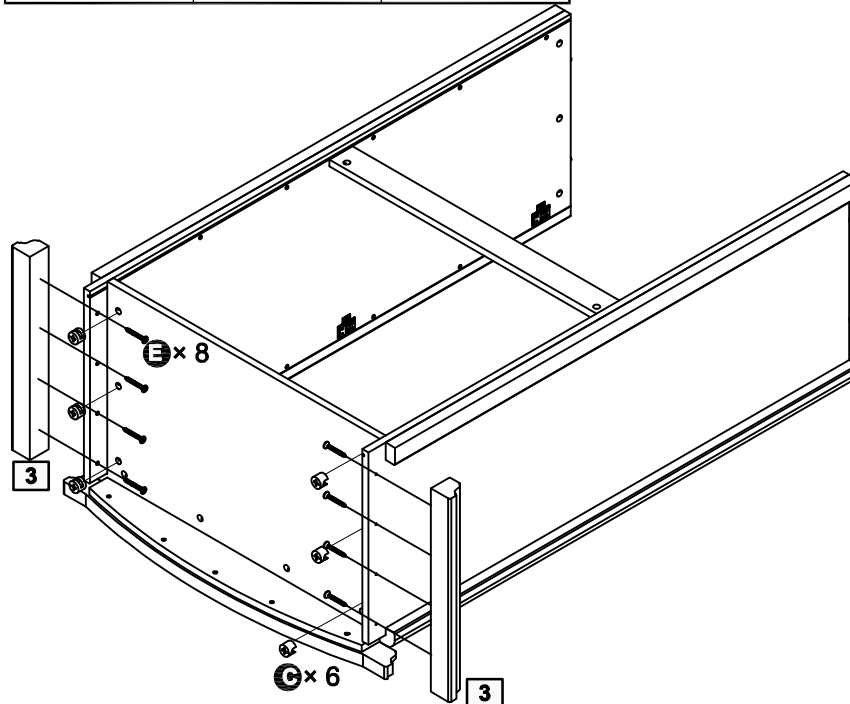
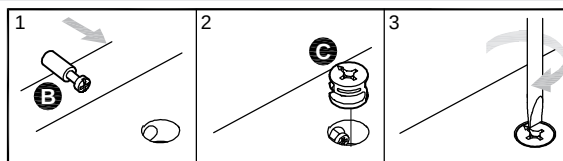


Step 7

Fixing back panel

Join 2 back panels **13** by Plastic bar **Y** then slip the back panels into the groves on the sides. Fix the back panels by using screws **AA** as shown on picture.

   Fix Wall Strap **R** by Back panel support **T** Washer **K** and Screw **G**.

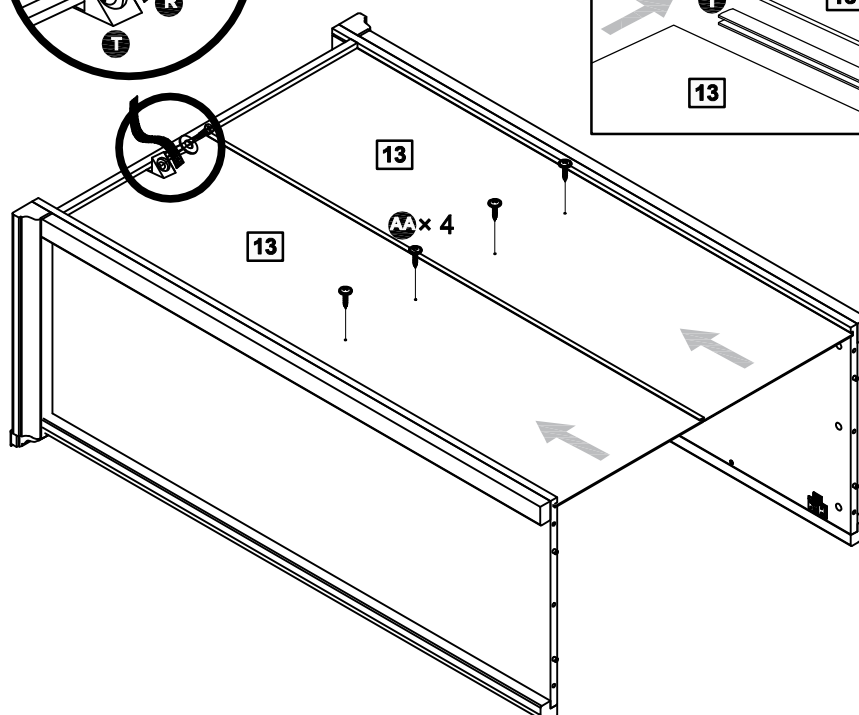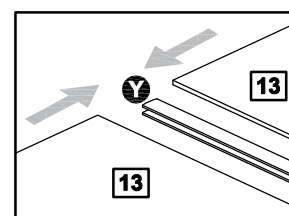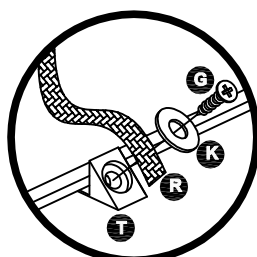



Assembly Instructions

Step 8

Fitting dowels


a: Insert Wooden dowels **A** into Sides, bottom **7** and **8**.

  a:

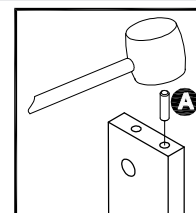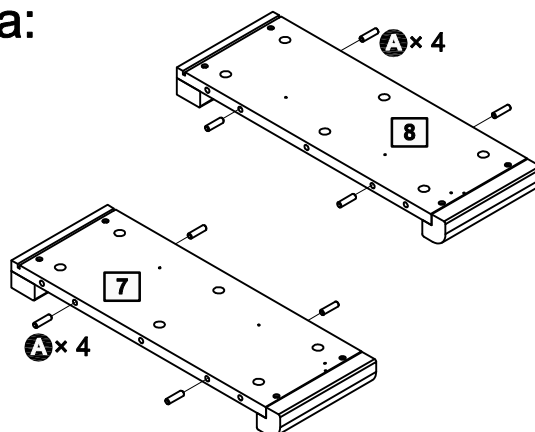

b: Fixing Runner outside left **U** to Side bottom left **7** and Runner outside right **V** to Side bottom right **8** by Screw **F**.

 
b:

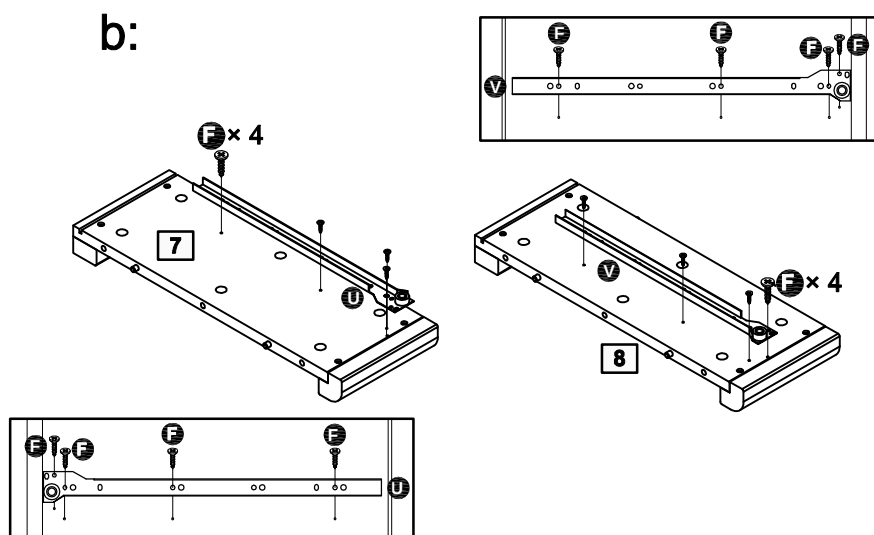

Step 9

Fixing legs

 Attach Legs **10** to the Base frame **9** and fix by Screw **D** Washer **L** and **K** and use Allen key **S** turn clockwise to fix.

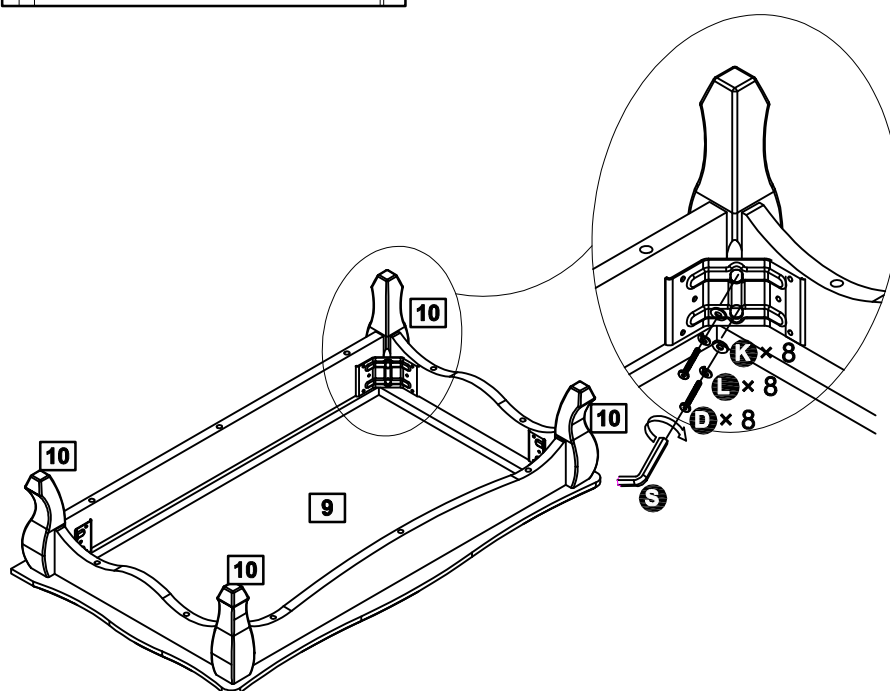


Assembly Instructions

Step 10

Insert Large locking pin **B** to Bottom frame **9**.

Note: Insert locking pin as shown.


 
Do not over tighten.

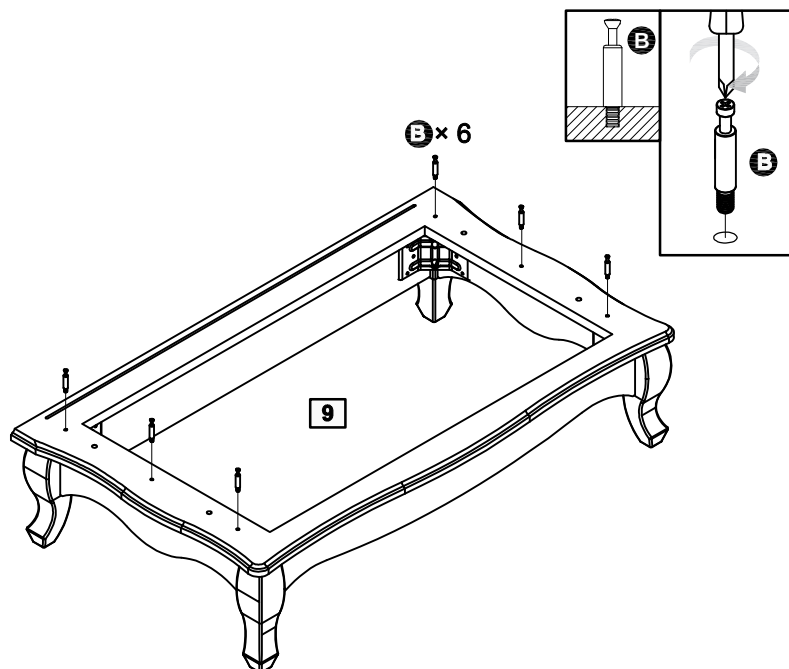

Step 11

Attaching Shelf and Bottom Sides

  Attach Shelf **6** and bottom Sides **7** & **8** to the top unit by Locking Pin **Q**. Insert Large Locking Nut **C** as shown on picture and use a screw driver turn locking nut **C** clockwise to fix.

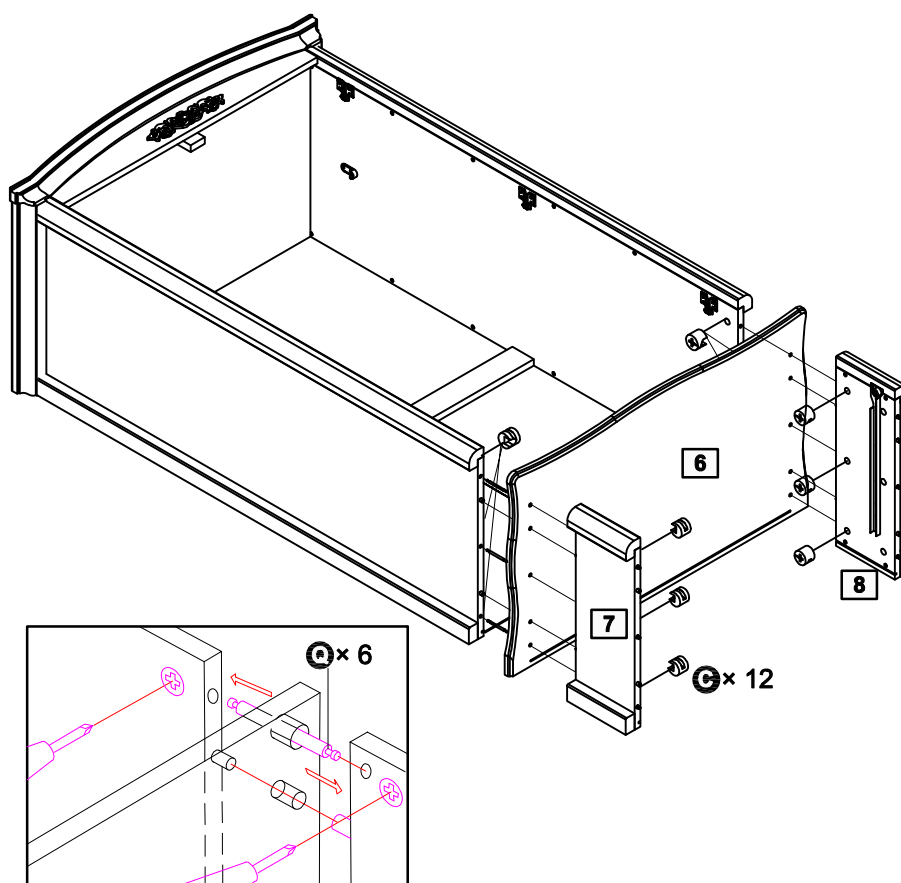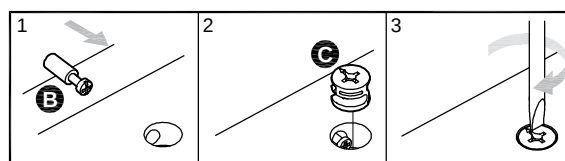


Assembly Instructions

Step 12

Insert bottom back panel

 Slip the bottom Back panel **21** into the grooves on bottom Sides.

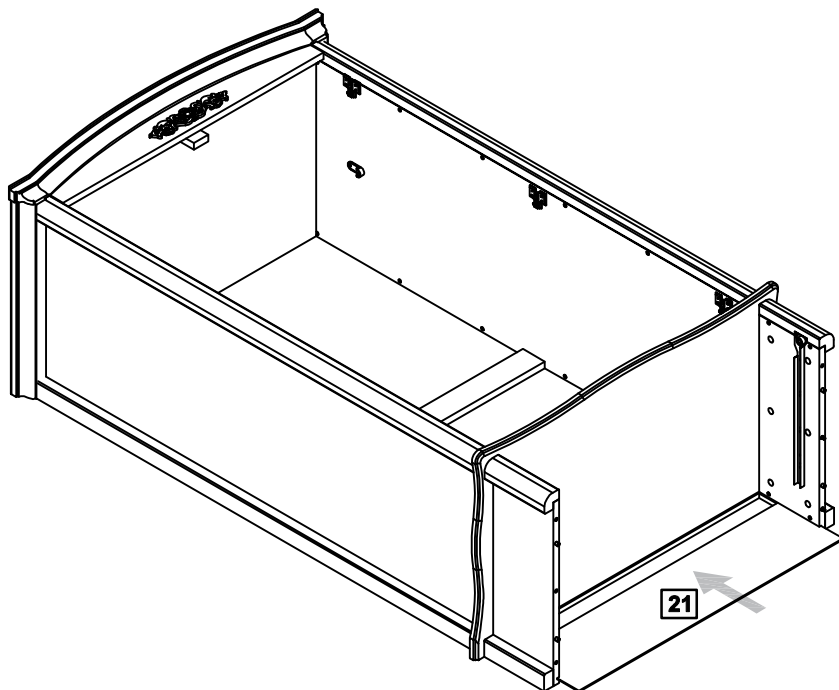


Step 13

Fixing Base frame

Attach base frame to the unit as show on picture.

 Insert Large locking nuts **C** as show on picture and use a screwdriver to turn locking nuts clockwise to lock.


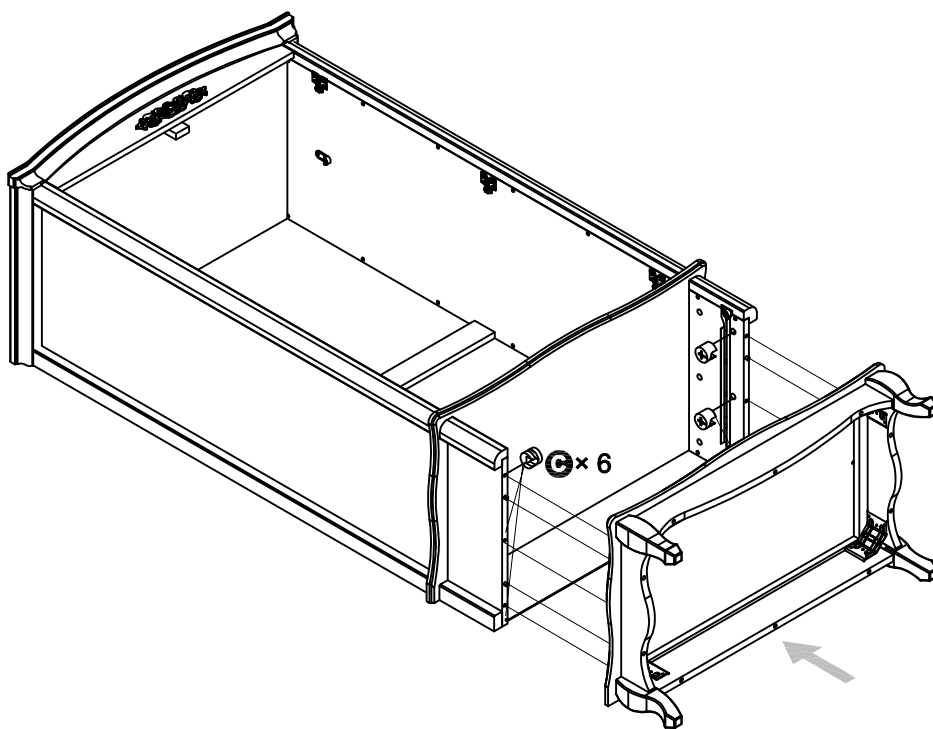


Assembly Instructions

Step 14

Attach hanging rail

 
 
Lift the wardrobe unit up and then attach the Hanging rail **Z** as show on picture.

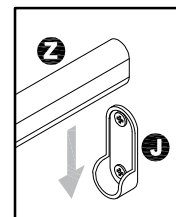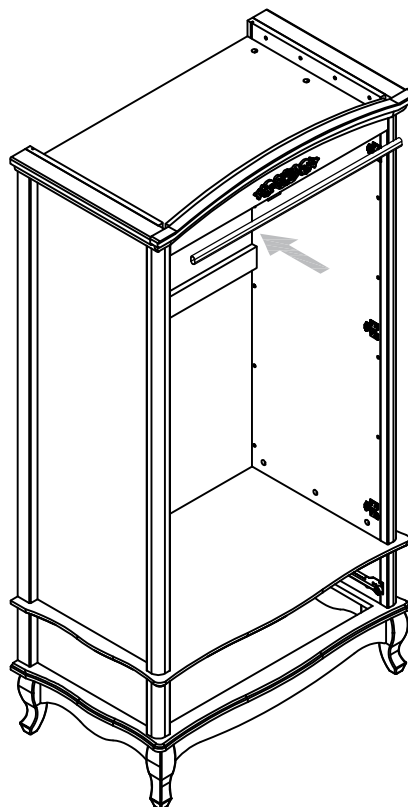

Step 15



a. Fixing hinges

  Fix door Hinges **M** to the Doors **11** & **12** by Screw **F**.

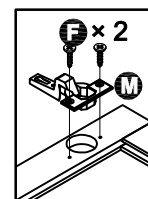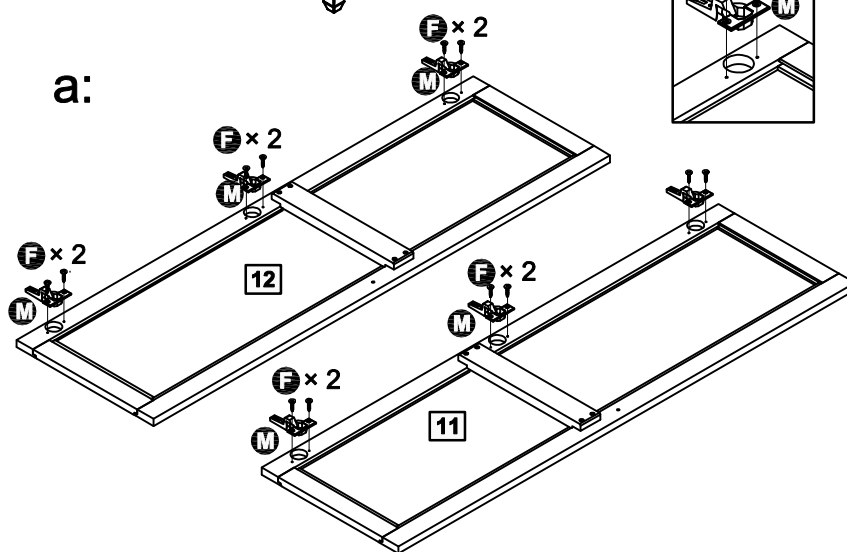

b. Fixing handles

  Fix Handles **O** to the Doors **11** & **12** by Screw **P**.

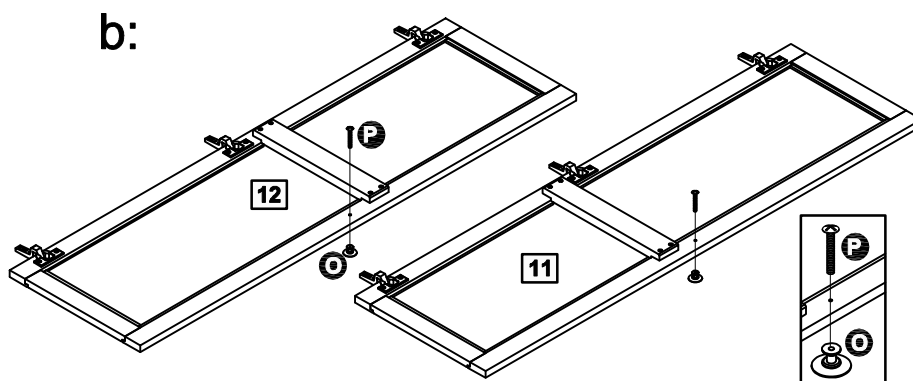


Assembly Instructions

Step 16

Assembly doors

 
- With help, slot Door hinges **M** onto Cross Plate **N**.
- Tighten screw as shown to lock hinges in position.

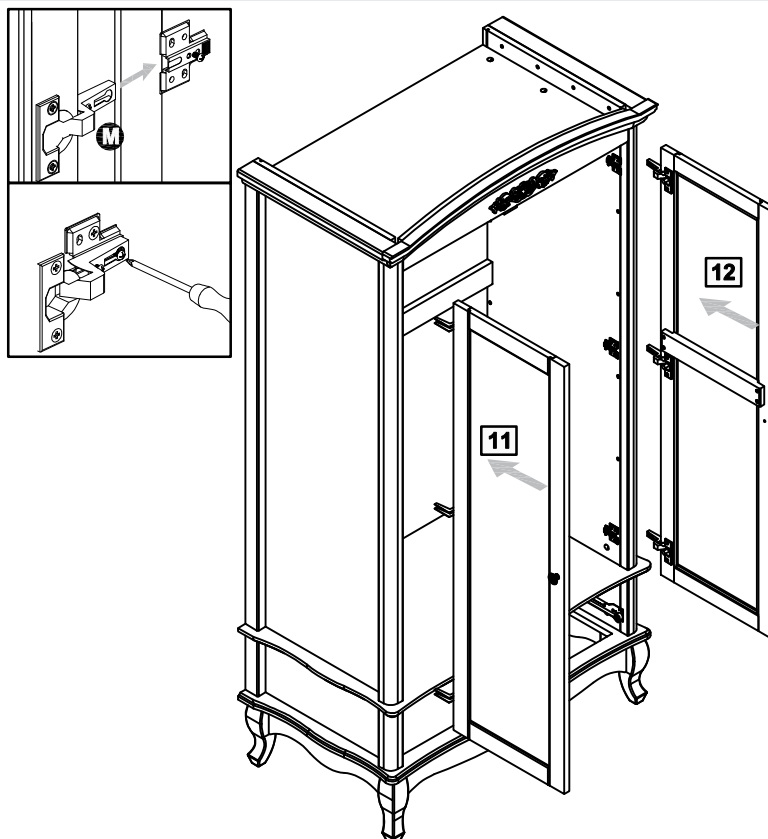

Step 17

Adjust the doors up or down a little bit to make sure the doors can close well.

 Fix each Cross plate **N** by another 2 Screws **F** as show in picture to finally fixing the doors.

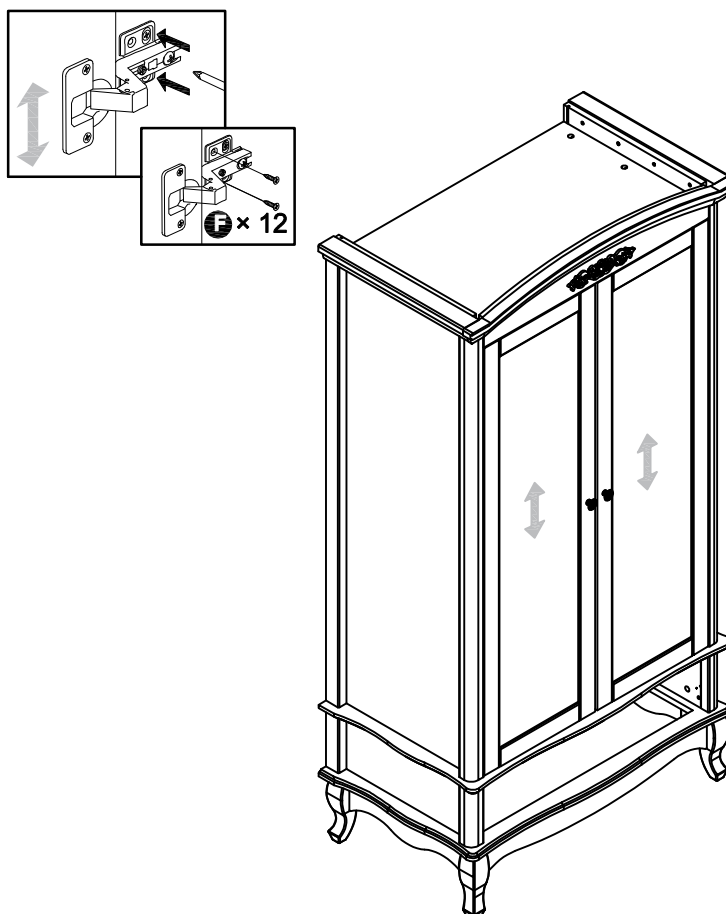

Assembly Instructions

Step 18

Drawer assembly

a: Insert Small locking pin **H** into holes shown on back of Drawer front **14**.

Note: Insert Locking pin as far as shown.

Do not over tighten.

b: Fix Drawer sides **15** and **16** and Support rail **19** to Drawer front **14**.

Insert Small locking nuts **I** into Drawer sides **15** & **16**.

 
Use a screwdriver to turn locking nuts **I** clockwise to lock.

c: Slip Drawer base **18** into grooves on Drawer sides.

d: Position Drawer back **17** to sides and fix by using Screws **G**.

e: Fix Handles **O** onto Drawer front **14** by using Screw **P**.

f: Fix Runner inside left **W** and Runner inside right **X** onto the drawer sides of by using Screws **F**.


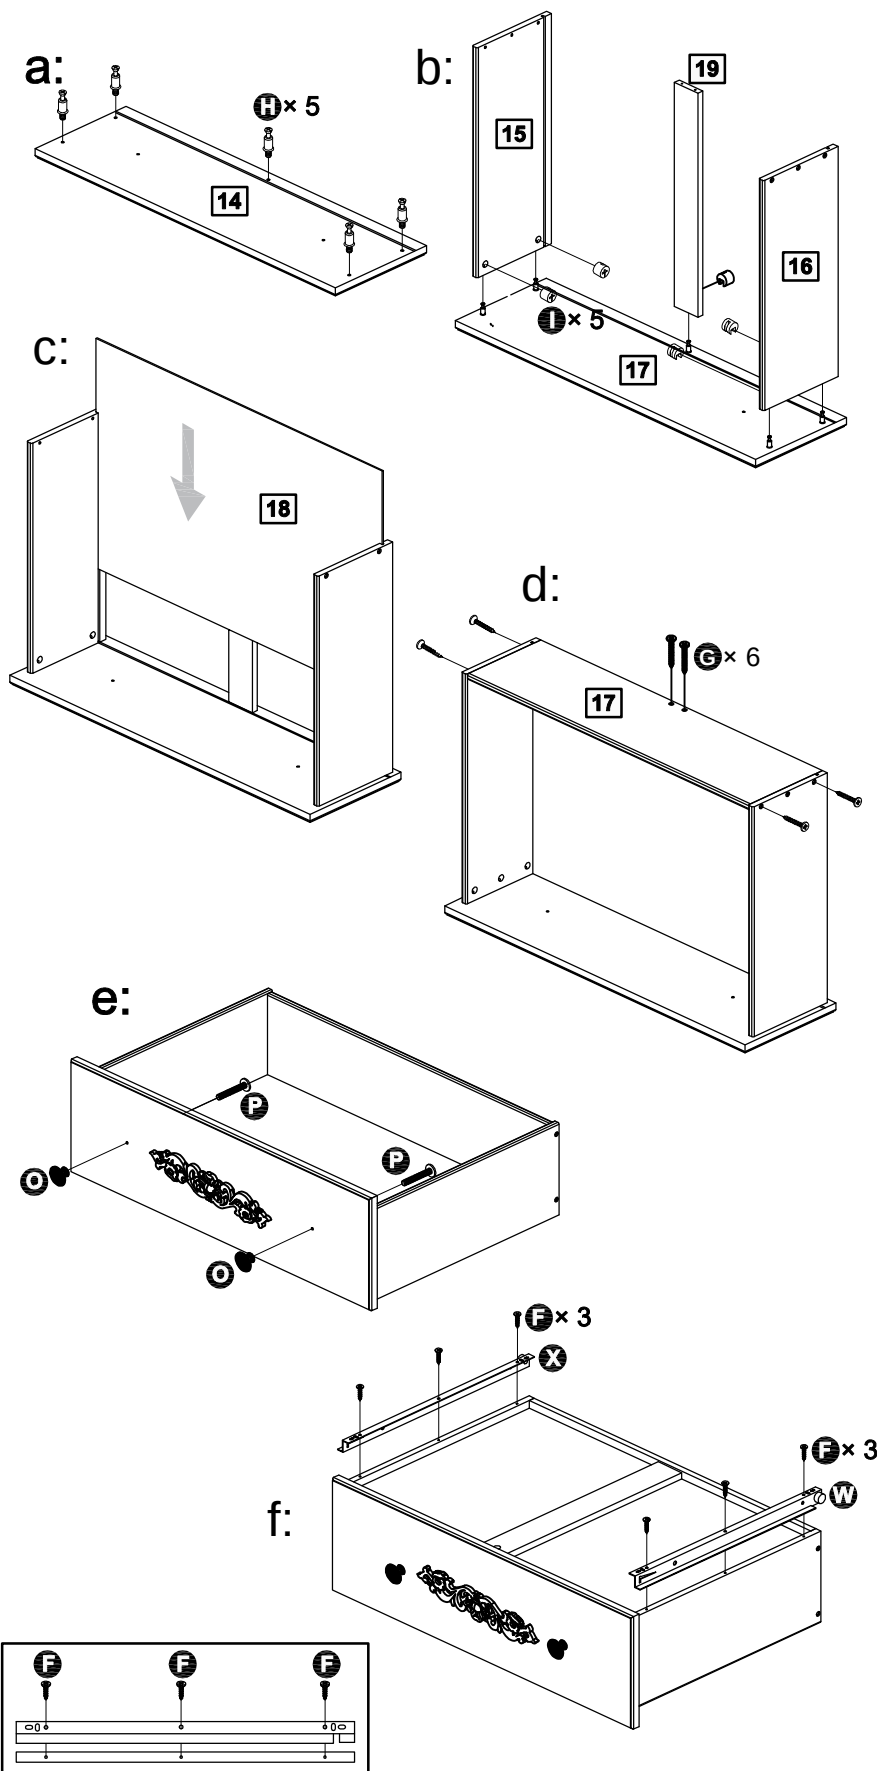


Assembly Instructions

Step 19

Inserting Drawers

  Carefully put in the drawer.

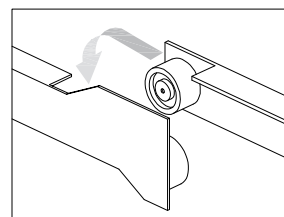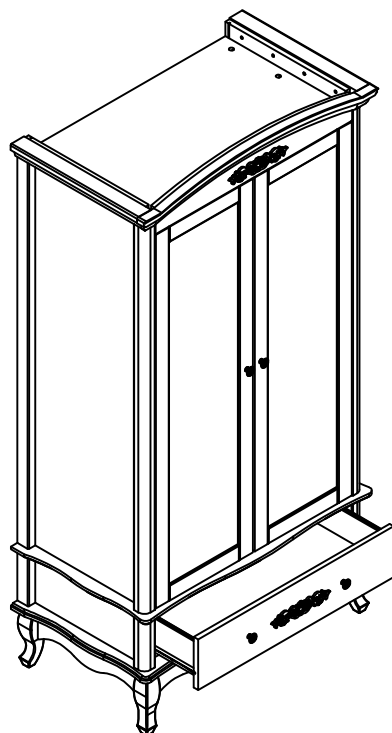

Fixing to wall

It is recommended that the Wardrobe is fixed to a wall.

With help, move Wardrobe into position.

Mark fixing hole on wall and remove Wardrobe.

Drill hole and insert wall plug.



 
Warning:
The Wardrobe is heavy.
Lift with care

Reposition Wardrobe and fix wall strap using washer and screw.



Warning:
Before drilling, check wall for hidden pipes and cables.

Assembly is finished.

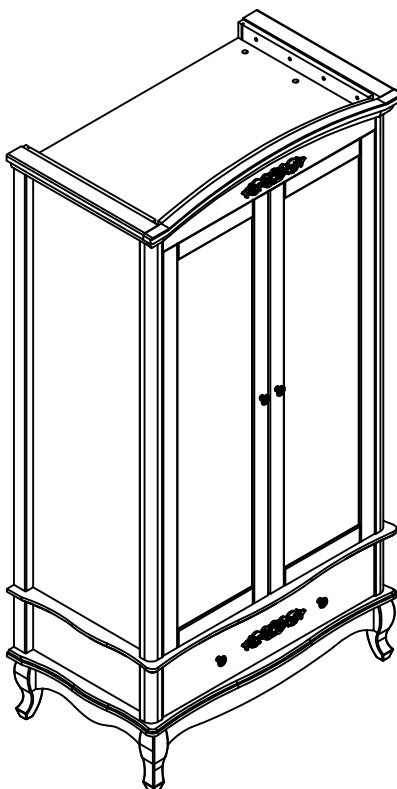

Note: wall plugs are not supplied.

The correct type of fixing must be used for your wall, seek professional advice in doubt.

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

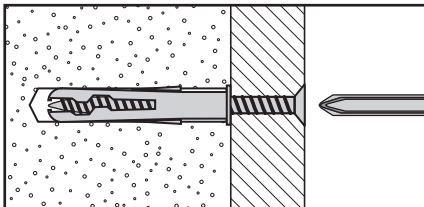


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug

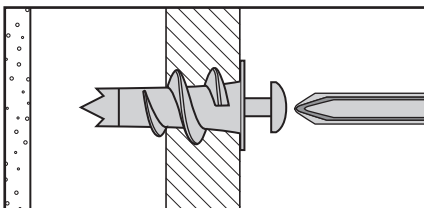


For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity Fixing" wall plug

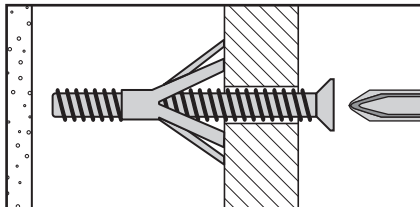


For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity Fixing-Heavy Duty" wall plug

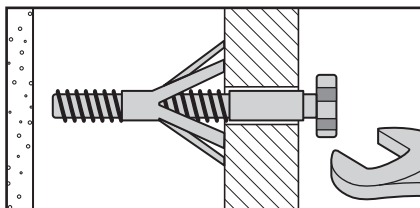


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug

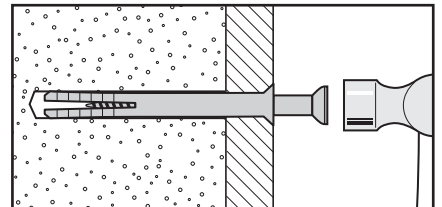

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads

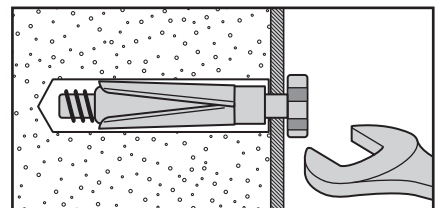

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.