

Instruction manual

CD8TDW

011

-

You'll soon be enjoying your new <condenser dryer>.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your <condenser dryer>. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on 0345 257 7271.

Contents

1	Safety information	
	Safety information	6
2	Getting to know your < condenser dryer >	
	Ready? Let's begin	10
	Accessories	12
3	Installing your < condenser dryer>	
	Installation requirements	14
	Electrical connection	15
4	Functions	
	Functions	18
5	Using your < condenser dryer >	
	Using your <condenser dryer=""></condenser>	24
0		
6	Care and Maintenance	
	Cleaning	28

Product fiche

7 Product support

Troubleshooting	34
Help and assistance	35
Declaration of conformance to product standards	36
Disposal	37

or online atwww.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Safety information





Safety information

Important - Please read these instructions fully before installing or operating

Before use

- The installation of this appliance is best carried out by 2 people.
- Dispose of all packing carefully and responsibly.
- The appliance is designed for **indoor** use only and must be protected from rain, moisture and extreme temperature variations.
- This appliance is designed for household use. **Do not** use the appliance for Industrial and commercial use, or any other purpose.
- The appliance **MUST** be positioned on a firm level base.
- **Do not** splash water on the appliance It may cause electrical parts to fail and result in an electric shock.
- For appliance with ventilation openings in the base, the carpet **must** not obstruct the openings.
- The appliance **must not** be installed behind a lockable door, a sliding door or a door with a hinge on the or behind a lockable door, a sliding door dryer. opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- **Do not** sit, stand or place any other heavy objects on top of the appliance. This could result in injury o'r 'damage to the appliance.
- **Do not** allow children to play with the appliance to avoid the risk of entraphent and suffocation.
- Keep ventilation opening, in the appliance enclosure or in the built-in structure, clear of obstruction.

- The lint trap has to be cleaned frequently, if applicable.
- Clean lint screen before or after each load.
- Never use the dryer without the lint filter.

During use

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervisión or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Lint must not to be allowed accumulate around the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber(latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions,



BUSH



Safety information

Important - Please read these instructions fully before installing or operating

- Fabrics softeners, or similar products, should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensure that the items will not be damaged.
- Remove all objects from pockets such as lighters and matches.
- WARNING: Never stop a tumble dryer before the end of drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Children of less than 3 years should be kept away unless continuously supervised.
- Do not attempt to repair the appliance yourself.
 Contact the Customer Helpline: 0345 257 7271.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil.
 Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

 If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.







Getting to know your
<condenser dryer > 2



Getting to know your < condenser dryer >

You'll be up and running in no time


Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your <condenser dryer> and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Getting to know your < condenser dryer >

You'll be up and running in no time

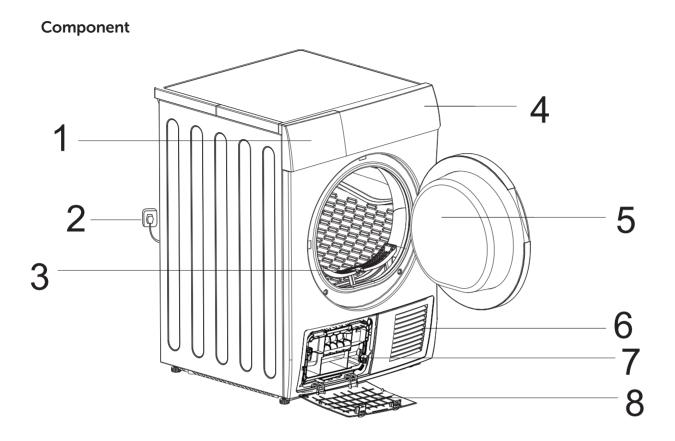

Water Container
 Power Cord & Plug
 Lint filter
 Control Panel

5.Door6.Air inlet7.Condenser Unit8.Condenser Cover





Getting to know your < condenser dryer >

You'll be up and running in no time

Model	capacity	Energy class	Color
CD8TDW	8kg	В	White

Accessories

This machine includes below accessories

 
• Instructions X 1



Tools

You may use this tools to help install above parts

- glove
- screwdriver



Installing your < condenser dryer>



Installing your < condenser dryer >

Bringing it all together

Installation requirements

Transportation

- 🖄 Caution: 2 people are required to unpack and handle the appliance, it is recommended that gloves are worn.
- The appliance should be transported only in an upright position. Do not tilt the appliance greater than 45°. The packaging as supplied must be intact during transportation.
- Do not move the appliance by pulling the door or handle as it may damage your fllooring and wall coverings etc.
- Ensure the supply cable is not caught under the appliance during and after moving.
- Carefully remove all package materials including the foam base, dispose of correctly.


Unpacking condenser dryer

Caution: 2 people are required to unpack the tumble dryer, it is recommended that gloves are worn.

Carefully remove all packaging materials Including the foam base, dispose of correctly.

Installation

- Please install the dryer on solid and flat ground.
- Please do not place the dryer on the slope, soft carpet or wooden floor.
- Please do not install the dryer outdoors, to prevent the dryer from being frozen to damage of machine parts.
- If the floor is obviously uneven, it needs to be adjusted. It vibrates the machine, causing machine to move from its position. Using tools to adjust the height of four machine legs to adjust the levelness of this dryer.(Fig1)

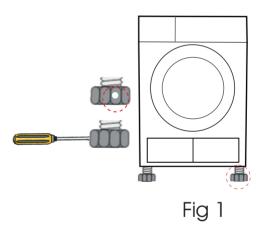

Installing your < condenser dryer >

Bringing it all together

Electrical connection



Any electrical work that is required to install this appliance MUST be carried out by a qualified electrician.



Warning: THIS APPLIANC MUST BE EARTHED

Before making any electrical connections, ensure that:

- Electrical safety is only guaranteed when the earth system of your house in accordance with the related local regulations.
- Do not bend, stretch or pull the supply cable to avoid electric shock.
- Ensure the power socket is suitable for the Maximum power of the machine (fuses in the power circuit must be 13 amp).
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- The appliance should be earthed and in compliance with the applicable law.
- When installed, the power socket must be within easy reach.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- The use of adapters, multiple connectors or extension cables are not recommended. The appliance must be connected to a 220-240 volt 50Hz AC supply by mean of a three pin socket, suitably earthed and protected by a 13 amp fuse.
- Should the fuse need to be replaced, a 13 amp fuse approved to BS1362/A must be used.
- The plug contains a removable fuse cover that must be refitted when the fuse is replaced. If the fuse cover is lost or damaged, the plug must not be used until a replacement cover has been fitted or the plug is replaced.
- A damaged plug should be cut off as close to the plug body as possible, the fuse should be removed and the plug disposed of safety.

Plug replacement (UK & Ireland only)

Should you need to replace the plug;the wires in the power cable are coloured in the following way:

Blue - Neutral ' N'

Brown - Live ' L'

Green & Yellow - Earth 'E'


As the colours of the wires in the power cable may not correspond with the coloured markings identifying the terminals in your plug, and proceed as follows(Fig2):

The green & yellow wire must be connected to the terminal in the plug that is marked with the letter E or by the earth symbol.

The blue wire must be connected to the terminal that is marked with the letter N.

The blue wire must be connected to the terminal that is marked with the letter L.

If power supply cord is damaged , it must replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

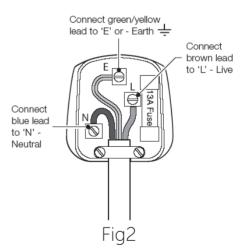


or online atwww.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.





Simple everyday use

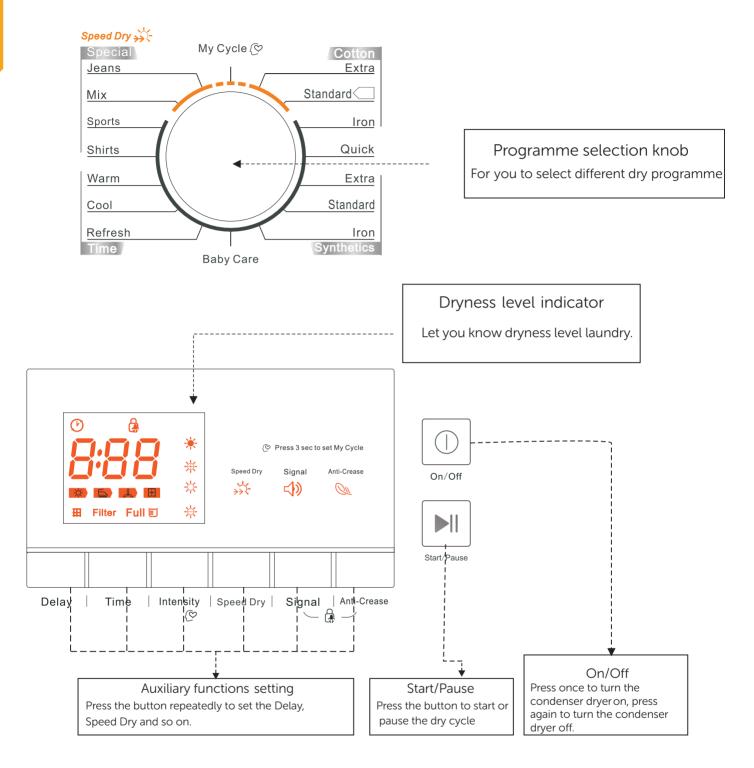



Simple everyday use

Select the programme

1. Press the [On/Off] button, when the LED display screen brighten up, rotate the programme knob to select the desired programme.
2.Select the [Delay], [Time], [Intensity], [Speed Dry], [Signal] or [Anti-Crease] functions for additional option.
3.Press the [Start/Pause] button.

Programme start

The drum will keep rotating after the programme start, the state light in the display area will flash in sequence, the remaining time displayed will change automatically.

Programme end

The drum will stop running after the programme ends, the display will show " ^{DD} the last cycle phase status light will flash. The dryer will start [Anti-crease] function if user doesn't remove the load in 1 minute (refer to page 21). Please press[On/Off] key to cut off power.

Cotton

For cottons and coloureds made of cotton or linen.

Quick

For washing which is to be dried quickly, eq, made of acrylic fibres or for individual small items. Also for subsequent drying.

Synthetics

For non-iron washing made of synthetic and blended fabrics, cotton.

Baby Care

To dry the clothes of the baby.

Special

Jean - To dry jeans or leisure clothes that are spun at high speeds in the washing machine.

Mix - If you can not determine what the clothing's material is, please choose Mix.

Sports - To dry sportswear, thin fabrics, polyester, which are not ironed.

Shirts - To dry thin synthetic fabrics which are also to be ironed, such as knitwear, shirts.

My Cycle

Define and save your favorite programme.

Time

Warm - To warm clothes from minimum 10 min. to maximum 120 min.(in 10 min. steps).

Cool - To air clothes without blowing hot air from minimum 10 min. to maximum 30 min.(in 10 min. steps).

Refresh - To refresh the clothes that have been kept at closed environments for a long time from minimum 20 min. to maximum 150 min.(in 10 min. steps).



Simple everyday use

Specialty drying function

1. [Delay] drying procedure

To delay the drying programme up to 24 hours. this function can start the machine after the set time. When the delay programme starts, the time will start to count down and the (P) icon blinks.

Steps in details

- (1).Load your laundry and make sure the machine door is closed.
- (2).Press the [On/Off] button, then to turn the programme selector knob and select a desired programme.
- (3).You can select the [Anti-Crease] or [Signal] functions according to your need.
- (4).To press the [Delay] key.
- (5).Continue to press the [Delay] to select the delay time.
- (6).After the [Start/Pause] button is pushed, the dryer is at the run condition. The drying procedure will be automatically performed when the delay time is over.
- (7). If you push the [Start/Pause] button again, the delay function will be paused.

(8).If you want to cancel the "Delay" function, please press the [On/Off] button.

Example: Select [Cotton extra] programme to start up on 2 hours later.

Select [Cotton extra] and [Delay], then press [Delay] button until dispaly show "2H", then

press [Start/pause], the dryer will perform automatically after 2 hours.

2. [Time] function

When the warm or cool or refresh programme is selected, the [Time] button can be used to adjust the drying time in 10 min. steps.

3. [Intensity] function

Used to adjust the dryness level of the laundry . The level has four grades * $\times \times \times$ The drying time increases 3 minutes in every grade.

(1). The intensity function can be activated only before the programme start.

- (2). Press the [Intensity] button repeatedly to select the drying time.
- (3).Except the [Cotton Iron] [Quick] [Synthetic Iron] [Baby Care] [Warm] [Cool] [Refresh], all the other programmes can be setted the [Intensity] function.

4. [My Cycle] function

Used to define and save your favorite proragmmes that are used frequently.

- (1). Use the programme selector to select the required programme and other drying functions.
- (2). Press and hold the [Intensity] button for 3 seconds until thedryer sound one time and the required programme has been saved.
- (3). Turn the programme selector to the [My Cycle] position, you can start your favorite proragmmes. If you want to change the [My Cycle] settings, repeat the steps (1) and (2)

Example: Set [Cotton extra] and [speed dry] programme to [My cycle].

Select [Cotton extra] and [Speed dry], then press [Intensity] for 3 seconds. The dryer will sound one time and the programme has been added into [My cycle].

To use the programme in My cycle, select [My cycle], the dryer will perform under programme [Cotton extra] and [Speed dry] automatically.

5. [Speed dry] function

Used to reduce the time of drying.

Different programme reduce different time if select [Speed dry], generally, the drying time will be reduced by about 10%.



Simple everyday use

6. [Signal on/off] function

The buzzer has set to ON before packing. To set the buzzer to off, press "Signal" once. To set the buzzer to on again, press "Signal" once again.

When the buzzer is on:

- (1) The dryer will give the leading sound if press the extra function buttons.
- (2) If the dryer is running, rotate the function choosing knob, the dryer will remind the operator it is an invalid choose.
- (3) When the drying programme is end, the buzzer will also remind the user.

7. [Anti-Crease] function

At the end of the drying cycle, it will display end for 1 min. Then it will automatically launch the anti-crease operation for 30 minutes. If this function has been selected, the anti-crease operation will be lasted for 120 minutes. You can stop this function at any time when you press the start/ pause button once.

The [Anti-Crease] indicator shall illuminate when the anti-crease function is selected. This function prevents the laundry from creases. The laundry can be removed during the anti-crease phase. Except [Cool], [Refresh] and [Baby Care], all the other programme have this function

8. [Child Lock] feature

(1).This machine incorporates a special child safety lock, which can prevent children from carelessly pressing keys or making the faulty operation.

(2).When the dryer is at the operation state, press the [Anti-Crease] and [Signal] buttons at the same time for over 3 seconds to start child lock function. When child lock function is set, it displays and no key can effect to the dryer except [On/Off] button. Under child lock mode, press the [Anti-Crease] and [Signal] buttons at the same time for over 3 seconds to release the child lock function. the " a " will go off.

9. Once programme has started

- Changing the program

Press [on/off], the machine will stop running. Then press [on/off] again, you can choose another program which you prefer. Then press [start/pause], the machine will continue to work under the new programme.

- Cancelling the programme

Open the door, the unit will stop immediately. Press on/off once to switch off unit and cancel the programme at the same time.

- Add or remove laundry

Open the door, the machine will stop running, you can add or remove laundry then press [start/pause], the machine will continue to work.

- Time remaining

The display of the control panel will shows how many minutes the programme will finish.

10. Power save mode

When the unit is standby mode for 3 minutes, it will go into the power save mode and display "-" only. You can touch any key to turn the unit back to standby mode.



Simple everyday use

Programme table

Progr	ramme	Customer expected result	Max load	Application/Properties	Speed Dry	
	For cottons	and coloureds made	of cotton or	linen.		
	Extra			To dry cotton pieces of clothing. Drying level: extra dry.	Y	
Cotton	Standard	Ready to wear	8.0kg	To dry cotton pieces of clothing. Drying level: cupboard dry.	Υ Υ	
	Iron	Ready to iron	0.0Kg	To dry cotton pieces of clothing. Drying level: applicable to iron.	N	
Quick	Quick	Ready to wear	3.0kg	For washing which is to be dried quickly,eg,made of acrylic fibres or for individual small items. Also for subsequent drying.	N	
	For non-iror	n washing made of sy	nthetic and	blended fabrics,cotton.	1	
	Extra			To dry thick or multi-layered synthetic fabrics. Drying level: extra dry.		
Synthetics	Standard	Ready to wear	7 Eka	To dry thin synthetic fabrics which are not ironed, such as easy care shirts, table linen, baby clothes, socks.	N	
	Iron	Ready to iron	3.5kg	To dry thin synthetic fabrics which are also to be ironed, such as knitwear, shirts.		
Baby Care	Baby Care	Ready to wear	1.0kg	To dry the clothes of the baby.	N	
	Jean		8.0kg	To dry jeans or leisure clothes that are spun at high speeds in the washing machin	ne. Y	
	Mix		3.5kg	If you can not determine what the clothing's material is, please choose Mix.		
Special	Sports	Ready to wear	3.0kg	To dry sportswear, thin fabrics, polyester, which are not ironed.		
	Shirts		1.0kg	For easy care clothes such shirts and blouses with anti-crease mechanism for minimum ironing effort. Place clothes loosely in the dryer. Once dried, hang it on a clothes hange	N	
My Cycle	My Cycle			Define and save your favorite programme.		
Time	Warm	Ready to wear		To warm clothes from minimum 10 min. to maximum 120 min.(in 10 min. steps).		
	Cool	Ready to wear		To air clothes without blowing hot air from minimum 10 min. to maximum 30 mir (in 10 min. steps).	^{1.} N	
	Refresh	Ready to wear	1.0kg	To refresh the clothes that have been kept at closed environments for a long time from minimum 20 min. to maximum 150 min.(in 10 min. steps).		

Note: 1. This symbol means the energy efficiency test programme "standard cotton programme", which is most suitable to dry normal cotton load at rated load capacity

2.The programme above are only recommended for using, users can choose the appropriate programme according to the personal habits. Thick and multi-layered fabrics,e.g. bedlinen, jeans, jackets etc, are not easy to dry, you'd better choose Jeans programme and maximum drying intensity level..



Using your < condenser dryer > 5



Using your < condenser dryer >

Getting the most from your appliance

Before first use

 
Final checks before operating the appliance 1.Good air circulation around the appliance positioned appliance. 2. The feet have been adjusted for perfect leveling. 3.Plug in the appliance.

Garments suitable for drying in tumble dryer

Before using the tumble dryer, you have to ensure the laundry is suitable to dry in the tumble dryer. Always follow the advice on the garment labels. Dry only laundry with a label stating they are suitable for drying in the dryer and select the appropriate programme.











Tumble dry, middle

heat

Dry





Do not dry

Do not tumble dry



Tumble dry, high heat



Tumble dry, low

Dry horizontally

Hang without spinning

Dry on a hanger

heat

Garment NOT suitable for drying in tumble dryer

- Do not dry articles that have been previously cleaned in, washed in, soaked in or spotted with
- Petrol,/gasoline, dry-cleaning solvents or other flammable or explosive substances as they give off vapors that could ignite or explode.
- Do not dry the articles containing rubber, plastic or similar elastic materials such as padded bras, tennis shoes, galoshes, bath mats, rugs, bibs, baby pants, raincoat plastic bags or pillows that may melt or burn. Some rubber materials, when heated, can under certain circumstances produce fire by spontaneous combustion.
- Do not dry clothes / articles made of foam or rubber as they may be deformed.
- Clothes / articles made of containing meal, hard plastic and similar materials, such as belt buckles, jeans, bra wires, buttons and similar accessories will damage the machine and may cause breakdow
- Do not place such items in the tumble dryer.
- Do not dry items such as woolen, silk articles and nylon stockings, delicate embroidered fabrics, garments with metal accessories and items such as sleeping bags.
- Too wet laundry or laundry with dripping water must not be put into the tumble dryer.

Preparation for the clothes to be dried

- Thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption.
- Separate your laundry before placing them into the tumble dryer.
- Sort the laundry according to their types thickness. Put the same type of laundry together.

Using your < condenser dryer > Getting the most from your appliance **Quick start** 6.Press [start/Pause] 1.Open the door and load the laundry 5.Select the desired programme 2.Close the door 4.Press On/Off 3.Plug the power supply





Looking after your appliance

General



Important: Always unplug the appliance from the power socket during cleaning and maintenance.

- Never use any sharp instruments or abrasive substance, soap, household cleaner, detergent or wax polish for cleaning.
- Use luke warm water to clean the cabinet of the appliance and wipe it dry.
- Never clean the appliance with flammable fluids. It could cause a damage and fire hazard.
- Clean the exterior of the appliance, inner tube and door seal with a damp cloth. Open the door for aeration to dry the inner tube through.
- Avoid water going in the control panel. Clean with a dry cloth only.
- Clean the lint filter after each use.

NOTE!

1. The lint filter accumulated on the filter will block the air circulation, which will cause the extension of drying time and consumption; therefore, the scrap thread filter shall be cleaned after each use. 2. Do not operate the dryer without the lint filter !

- 3.Clean the lint filter after each use to prevent lint accumulation inside the dryer.
- 4. The icon \blacksquare will flash to remind you to clean the filter.

Cleaning the door

Periodically clean the interior part of the door to remove any fluff from the seals around the filter. Accurate cleaning ensures correct drying(Fig4).

Cleaning the filter:

1.Open the loading door.

- 2.Remove the cover filter by pulling it up and open the filte(Fig5,6).
- 3.Clean lint, fibre, and cotton raveling by hand or with a soft piece of cloth(Fig7,8).
- 4. Close the filter and place it back into its seat.


NOTE!

Do not be alarmed by the amount of fluff. It is not due to excessive wear caused by the dryer.

All fabric loses fluff when drying but it goes unnoticed in the air. In a tumble dryer it simply collects in the filter.

After a while, a whitish film due to detergent residue on laundry forms on the filters. When this occurs, clean the filters with warm water using a brush.



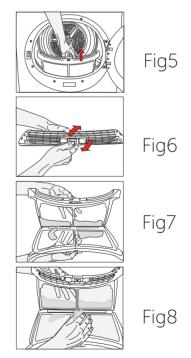



Looking after your appliance

Cleaning the condenser

 1.Clean with water only; do not use hard/sharp-edged objects! Do not operate the dryer without the air condenser!
 2.During drying, water may collect between the window and the seal, but this does not affect the function of your dryer!


The condenser is situated at the lower part of the cabinet behind a small door. To open the door, push the catch as per picture above. During the drying cycle or at the end, it is normal for water to be present on the surface of the condenser unit(Fig9).

 
To pull out the condenser, first turn the two red stops downwards and then remove the condenser unit holding it at the handle(Fig10).

Clean it with a brush and rinse it under the shower if necessary(Fig11). Also clean the outside, removing all fluff. Clean the rubber seal round the condenser cabinet and in the inner part of the small door with a damp cloth.

Important! Do not use pointed objects or utensils to clean the spaces between the plates, as this could damage the condenser and make it permeable. Re-fit the condenser, turn the red stops upwards and close the door.

Do not use this appliance if the condenser has not been fitted.

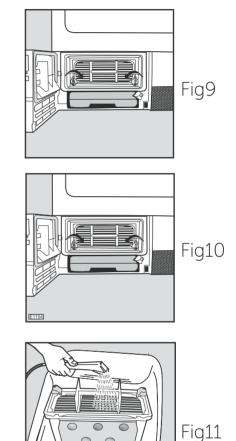





Looking after your appliance



WARNING:

1.Empty the water container after each use, the programme will be paused and the "icon will flash if the water container is full during the drying process. After the container is empty, the dryer can be restarted by pressing [Start/Pause] button.
2.Do not drink the condensed water.
3.Do not use the dryer without the water container.

Empty the water container

1.Hold and pull out the water container with two hands(Fig12).

2.Tilt the water container, pour out the condensed water(Fig13).

3.Insert the water container.


The tank must be re-inserted correctly.

After emptying and inserting the tank the Start/Pause button has to be pressed again to allow the programme to continue.

Cleaning the drum

When your laundry does not reach the desired degree of dryness, in other words, when it turns out either too dry or too damp, we advise you to clean the inside of the drum with a cloth soaked with vinegar.

This will eliminate the slight film that has formed in the drum (due to residues of detergent and softeners used in the washing, and from the lime contained in the water), which prevents the probes from detecting the correct degree of dryness.

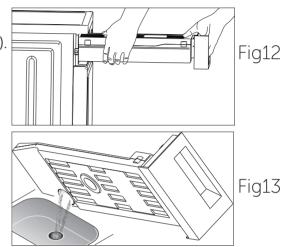

Looking after your appliance

Technical specifcation

Model	CD8TDW	
Energy efficiency class 1	В	
Energy consumption – pre year 2	561kWh	
Rated capacity (max.)	8kg	
Operating noise level dB(A)	69	
Product dimension	H845xW595xD615	
Net Weight	42kg	
Rated power input	2700W	
Rated voltage/Frequency	220-240V~/50Hz	
Minimum operation temperature	+5°C	

- The rated capacity is the maximum capacity, make sure that the dry clothes which are loaded to the appliance do not exceed the rated capacity each time.
- Do not install the tumble dryer in a room when there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
- There is a risk of damage if the condensed water is allowed to freeze in the pump, hoses and / or condensed water container.

NOTE:

1 A+++(most efficiency) to D (least efficiency) 2 Energy consumption 561.0kWh per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.

We apologise for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.



31

Looking after your appliance

Product fiche


The 'standard cotton programme' used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton.

NOTE:

1 A+++(most efficiency) to D (least efficiency) 2 Energy consumption 561.0kWh per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.

We apologise for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.



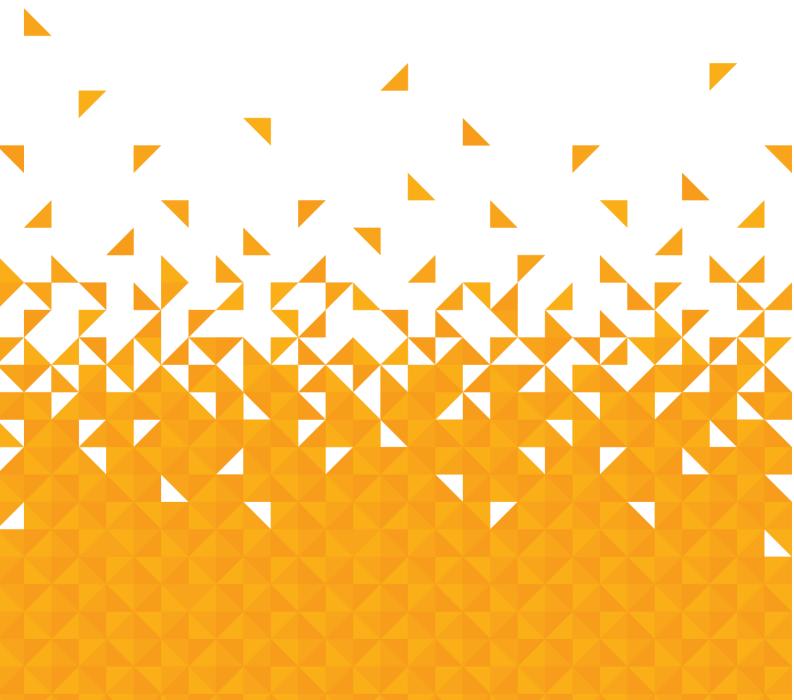

Help is always at hand

Troubleshooting

1.Tumble dryer doesn't operate? Please make sure the power plug was inserted well and check the protection devices and fuses.

2.Laundry has shrunk? Please review the advice on the garments label to select the suitable programme setting.

3.Laundry not dry enough at the end of drying? Please reduce the quantity of clothes for drying each time and clean the lint filter after each use.

4.Laundry too dry? Please take out the clothes immediately while the drying cycle is finished and review the advice on the garments label to select the suitable programme setting.

5. The tumble dryer has noisy? Please make sure the tumble dryer was installed on even surface and leveling the appliance.

6. ∎ is flashing? Please empty condensation container.

7. \blacksquare is flashing? Please clean air cooler and lint filter.

Help is always at hand

Help and assistance

If you require any technical guidance or find that your <condenser dryer> is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.argos-support.co.uk**

If you still require further assistance, call one of our experts on **0345 257 7271*** To help give us give you a fast and efficient service please have the following information ready:

Model Ref. Serial number	You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on
Senachumber	the rear of your appliance
Date of purchase	This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tarif. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

or online atwww.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.



Help is always at hand

CE

This appliance complies with the following EEC directives: 2006/95/EEC low voltage directive 2004/108/EMC directive 2009/125/EC EU Directive

Notes on disposal:



This marking indicates that this product should not be disposed with other household wastes throughout the EU.To prevent possible harm to the environment or human health from uncontrolled waste disposal,recycle it responsibly to promote the sustainable reuse of material resources.To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.

Remember: Old machine must be disposed of carefully – Cut off the mains plug and /or remove the door to be unusable before disposed – if in doubt, contact your local council for details on how to dispose of an old dryer.

Help is always at hand



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected. re-sold or has been damaged by inexpert repair.

- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection **Officer, Domestic & General, Leicester House** 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

or online atwww.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.



37



Contact:

www.argos-support.co.uk Helpline: **0345** 257 7271