PIFCO ROBOTIC VACUUM CLEANER

YOUR SAFETY & INSTRUCTION MANUAL PLEASE READ CAREFULLY

MODEL **P28021**





TECHNICAL DATA

Description:	Robotic Vacuum Cleaner	
Model:	P28021	
Voltage:	220V	
Frequency:	60Hz	
Input:	DC16.8V 300mA	
Battery:	DC14.4 800mAh Ni-MH	

DOCUMENTATION

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2004/108/EC	Electromagnetic Compatibility Directive.
2006/95/EC	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.

RKW Quality Assurance, United Kingdom

WARRANTY

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RKW has limited liability for incidental or consequential loss or damage.
- This guarantee is only Valid in the UK and Eire Only.

An extended warranty is available for this appliance. See back page for details.

PRODUCT SAFETY

When using **any** electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- Do not immerse cords, plugs or any part of the appliance in water or any other liquid.
- Do not leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- Do not let the cord hang over the edge of a



table or counter or let it come into contact with any hot surfaces.

- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Do not use this product for anything other than its intended use.
- This appliance is for household use only.
- Do not carry the appliance by the power cord.
- Do not use the appliance outdoors.
- Use extra care when cleaning on stairs.
- Do not immerse cord, plug or machine in water or any other liquid.
- Keep hair, loose clothing, fingers, feet and all parts of body away from moving parts.
- Do not close doors on the cord or move the vacuum by pulling the cord around sharp edges or corners.
- Unplug cleaner when not in use.
- Turn all controls off before unplugging from mains.
- Use only original accessories.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the service department.

WHAT'S IN THE BOX

Robot Vacuum Cleaner Rechargeable Battery Wiping Board Cloth x 3 Charger

- 1. Handle
- 2. Battery Cover
- 3. Charger Cover
- 4. On/Off Switch
- 5. Air Outlet
- 6. Dust Box
- 7. Dust Box Release Buttons
- 8. Baffle Plate
- 9. Indicator Lights
- 10. Wheels
- 11. Universal Wheels
- 12. Wiping Board
- 13. Suction Nozzle





BEFORE YOUR FIRST USE:

- 1. Remove the appliance from the box.
- 2. Charge the appliance as directed.
- 3. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Dispose of the packaging in a responsible manner.

USING YOUR APPLIANCE

Charging the battery:

- 1. Make sure that the dust catcher is powered off before fitting the battery.
- 2. First press the battery cover locking catch to release the cover.
- 3. Open the battery cover.
- Place the rechargeable battery into the compartment and attach the electrical wire to the batteries plug.
- 5. Close the battery compartment cover.
- Please make sure the voltage the name plate shows is the same as the voltage you are using.
- When charging for the first time, it should be charged for 12 hours. After that it normally charges for 9 hours.
- 8. The other end of the plug is inserted into alternating current socket.
- 9. Use the charger supplied.
- 10. Don't use it if the connection of the battery is damaged.
- 11. Don't touch the charger, plug or electric wire with wet hands.
- 12. Stop charging and pull out the plug before using the dust catcher.
- 13. When you use the dust catcher and the electric quantity is sufficient, the right light will shine once every 0.5 second. When there is only red shining slowly, it means the electric quantity of the battery is not enough. When charging, the right light will shine quickly. If the right light is always on, it means the electricity charging has already finished.

Installing operation method of cleaning plate

- 1. Take out the wiping board and the cloth.
- 2. Use the screwdriver to insert the four corner of the fabric into the clamp.
- 3. Install the wiping board to the vacuum cleaner.

Troubleshooting

Important! Be sure to power off before checking it.

If the problems mentioned below still exist, please send it to the appointed service centre. If there is any change about the product forgive us not to issue a separate notice.

Electrical Machinery Non-rotating	Battery plug loose or non- charged	Insert the battery plug tightly or use after charging
Suction weaken	Filtration system blocked.	Clear up the dirt on the filtration cloth Change or wash filtration cloth or empty the dust pot
	The pipe is blocked	Dislodge the blockage
Machine body is generating heat		Generating a little heat is a normal phenomenon

NOTE:

Filter must be used at all times when operating this vacuum.

Keep the suction opening clear of obstructions as the motor could be damaged due to overheating.

CLEANING AND CARE

- Open the dust box and remove.
- Pull out the filter.
- Empty dust from the filter.
- Rinse the filter in cold water and dry thoroughly before putting back into the collection container.

CAUTION:

Never immerse the motor part of the vacuum in water.

Always unplug the vacuum and allow to cool before cleaning.

DO NOT use the vacuum cleaner without the filters.

WARNING: DO NOT IMMERSE THE UNIT IN WATER



DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

We hope you enjoy your appliance for many years.

As a thank you for purchasing one of our fantastic products, we are giving you an extra 2 years peace of mind.

To receive your extra 2 years guarantee, register your appliance online by visiting



www.pifco.co

Should you have a problem with your appliance or need any spare parts please call our Service Department on:

+44 (0) 871 221 3615

Distributed throughout the UK by RKW LTD



0715.VI