



®

GENERATION FUTURE

# HOOVER



USER MANUAL

## IMPORTANT SAFETY REMINDERS

This appliance should only be used for domestic cleaning, as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

Do not leave the appliance plugged in. Always switch off and remove the plug from the socket after use, or before cleaning the appliance or any maintenance task.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorised Hoover service engineer must replace the power cord.

Keep hands, feet, loose clothing and hair away from rotating brushes.

Use only attachments, consumables or spares recommended or supplied by Hoover.

When using cleaning tools ensure that the appliance is kept in the upright (parked) position. This will avoid possible damage to the carpet or floor covering. When cleaning stairs, do not position the appliance above you.

Static electricity: some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health.

Do not use your appliance out of doors or on any wet surface or for wet pick up.

Do not pick up hard or sharp objects, matches, hot ashes,

cigarette ends or other similar items.

Do not spray with or pick up flammable liquids, cleaning fluids, aerosols or their vapours.

Do not run over the power cord when using your appliance or remove the plug by pulling on the power cord.

Do not continue to use your appliance if it appears faulty.

Hoover service: To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised Hoover service engineer.

Do not stand on or wrap the cord around arms or legs when using your appliance.


Do not use the appliance to clean animals or people.

When using the cleaning tools, ensure to always steady the appliance with your other hand. This will ensure that the appliance does not fall while in use.

**WARNING:** A thermal cut out switches off the appliance to prevent overheating if it is used when full or there is a blockage or dirty filters. If this should happen then switch off, unplug and correct the fault. It will take approximately 45 minutes for the cut out to automatically reset.

### The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.

 
 This appliance complies with the European Directives 2006/95/EC, 2004/108/EC and 2011/65/EU.

HOOVER Limited, Pentrebach, Merthyr Tydfil, Mid Glamorgan, CF48 4TU, UK

## GETTING TO KNOW YOUR CLEANER

# Effortless cleaning with your new Hoover


This vacuum cleaner is supplied with an Energy Label as required by European Regulation (EU) 665/2013. The label shows a red prohibition circle on the right covering the hard floor symbol. This indicates that the vacuum cleaner is not suitable for use on hard floors.

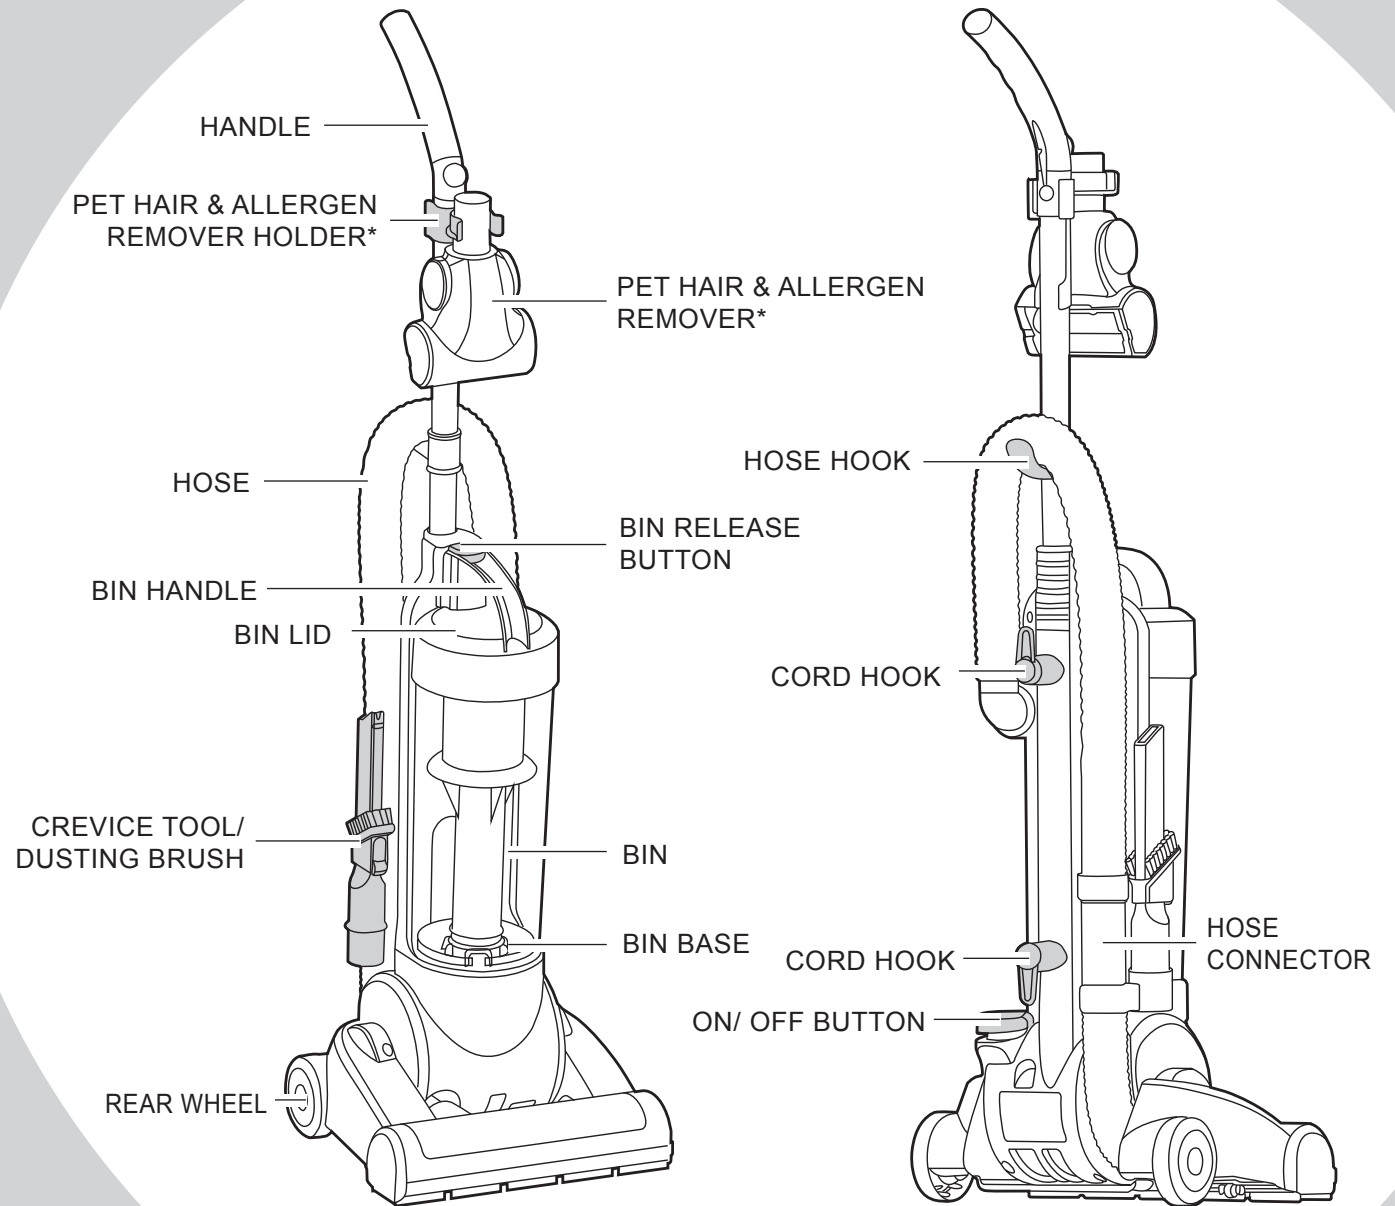


(\*Certain models only)

## PREPARING TO USE YOUR CLEANER

 
1. Using a cross head screw driver, remove the screw from rear of the cleaner main body.

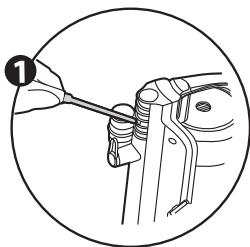

 
2. Insert the handle into the main body of the cleaner.

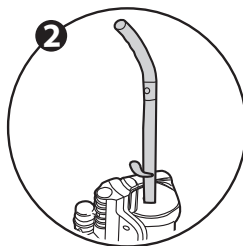

 3. Insert the screw through the handle and into the main body, tighten securely.

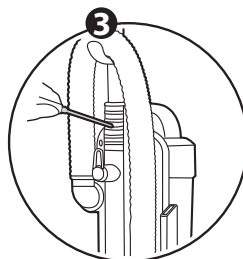


 4. Place the crevice tool /dusting brush into the tool holder.

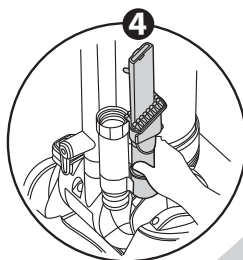

## POWER SWITCH SETTING
 
### Switching on and off

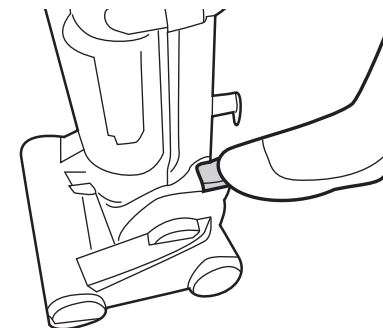

1. Plug cord into an electrical outlet.
2. Press the on /off switch to operate cleaner.

## CLEANER RELEASE

 


Unlock the cleaner by placing on the foot on the hood and leaning the handle backward. For cleaning under low furniture simply lower handle to floor.

## CLEANING TOOLS


**! IMPORTANT:** When using cleaning tools, the cleaner must be kept in the upright position, particularly when cleaning stairs.

To Detach the cleaning hose rotate the hose end anti-clockwise and pull upwards.

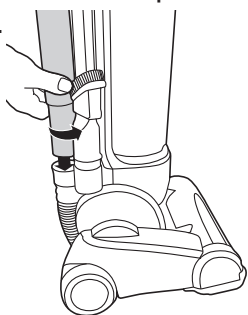


Attach crevice tool to the hose end connector.

 To use the dusting brush function simply press the button and slide to the end of crevice tool .

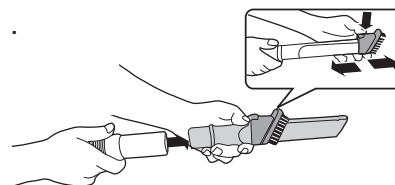

Fit the Per Hair & Allergen Remover\*

 


All accessories can fit on the end of the tube.

## CLEANING THE STAIRS

 IT IS DANGEROUS TO PLACE THE CLEANER ABOVE YOU WHEN CLEANING STAIRS.


**ALWAYS** work with the cleaner below you. Ensure it is positioned up against the bottom step.

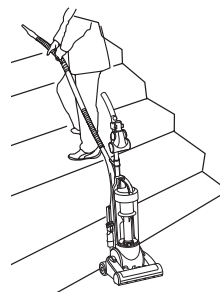


(\*Certain models only)

## REMOVAL AND EMPTYING OF THE DUST CONTAINER

 
To remove the dust container from the cleaner, press the bin release button.

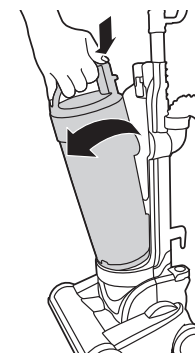

 Hold the container over a bin and push the easy open button placed at the rear of the dust container.

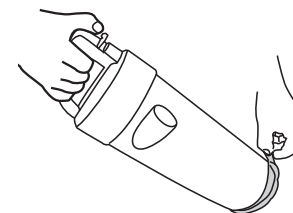

 The dust container door will open and you can empty with no contact with dust.

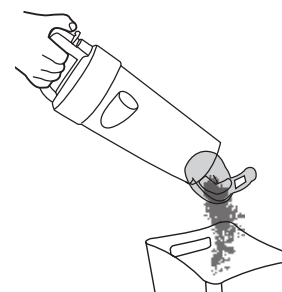


**! IMPORTANT:** Do not fill above the MAX level mark shown on the bin.


**MAX**
 
## MAINTAINING THE DUST CONTAINER AND FILTERS


( PERIODIC MAINTENANCE IS REQUIRED TO MAINTAIN OPTIMUM PERFORMANCE )

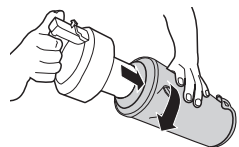

 Remove the dust container as described on the previous page.




 Hold the dust container lid and with the other hand rotate the container in a anti-clockwise direction to release.




Hold the container lid and rotate the separator in an anti-clockwise direction to release.

 Remove the pre motor filter from inside the separator and tap to remove any excess dirt from the filter, it is also recommended to clean the separator. Once dirt is removed the filter can be rinsed under the tap.

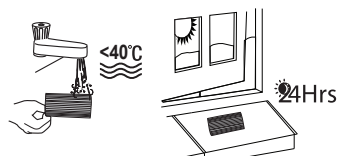

The pre-motor filter should be washed after every five bin empties. Wash under hand warm water. Remove excess water and leave to dry for 24 hours. When completely dry, refit the filter.

### Cleaning the Exhaust Filter

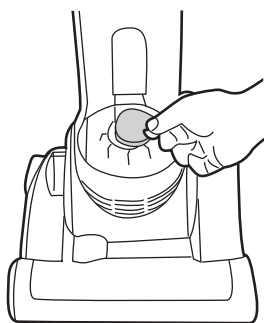 

Underneath the dust container you can find the exhaust filter.


Lift to remove the exhaust filter.

Remove any dirt/debris by rinsing under water(Max  $40^{\circ}\text{C}$ )


Leave to dry for 24 hours or until fully dry before replacing back into the cleaner.

**IMPORTANT:** Do not operate your cleaner without either the dust container or filters in the right place.


### Cleaning the Separator

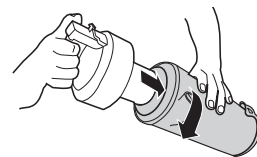 

 Turn the dust container lid anti-clockwise to unlock and lift to take out.

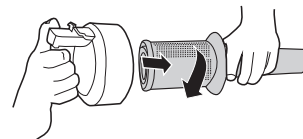


 Turn the separator anti-clockwise to remove from the dust container lid.

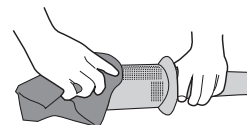


Tap separator over a bin to remove any dirt/debris.

 Using a soft brush clean any dirt/debris out of the separator.

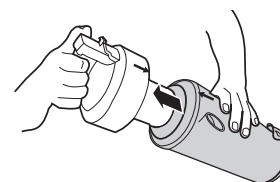

Refit the container top.

 Please pay attention to alignment tab.

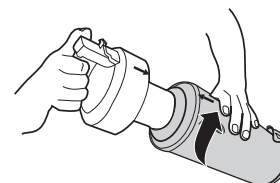


Twist the top part of the container whilst holding the lower part to lock together.

## CHANGING THE BELT OR BRUSH

 If your cleaner is not picking up efficiently, the belt or brush (or both) may need replacing, but first make sure you have:


- Emptied the dust container
- Cleaned the filters
- Checked for blockages

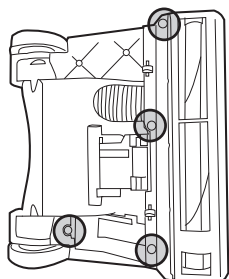

### Remove foot plate

Turn the machine over.

 
Locate the four screws as shown opposite.

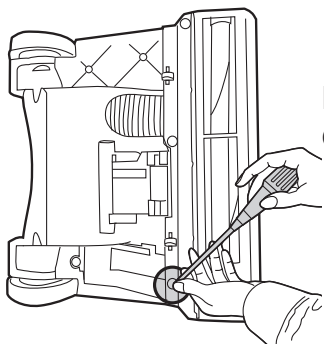

Remove the screws completely.




 **IMPORTANT:** Switch cleaner off and remove plug from electricity supply before checking the brushes or removing hood.

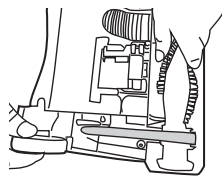


### Replace belt

 
Remove the old belt then locate the new belt around the motor spindle and the brush. Locate the right hand of the brush into the cleaner housing .

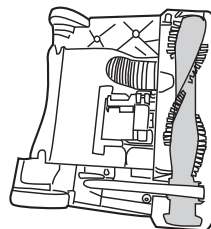

 Hold the brush assembly and stretch the belt until brush mountings slot down into the cleaner housing.

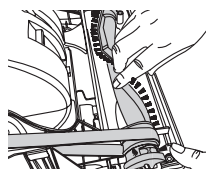

 Rotate the brush to ensure free movement of the belt.

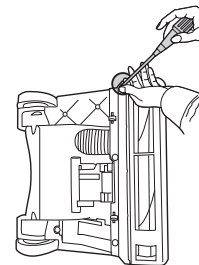


### Replace opposite

Refit sole plate opposite secure with screws.


## CLEARING A BLOCKAGE

**!** **IMPORTANT:** Switch the cleaner off and remove the plug from electricity supply before dismantling cleaning.

 
This cleaner is unlikely to become blocked, except by overfilling of dust container or accidentally picking up large solid objects. Cleaning a blockage is simple.

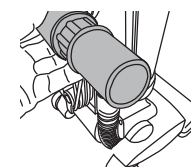

 If cleaning tools were in use, check cleaning tool. Next check hose handgrip.

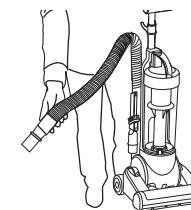

 Turn the cleaner ON and stretch the hose to its full length.

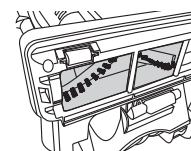

Check that the brushes are free of debris and can rotate.



Check for a blockage in the hose socket.

## User checklist

If your cleaner is not working properly run through the following checklist.

1. Is there a working electricity supply to the cleaner? Check with another electrical product.
2. Is the dust container full or choked with fine dust? To empty the dust container see the instructions on page 5/6.
3. Is the hose blocked? To clear a blockage, see the instructions on page 6.
4. Is there a blockage in the cleaner base? To clear a blockage, see the instructions on page 6.
5. Are the filters blocked? To clear the filters, see the instructions on page 5.
6. Are the brushes rotating correctly? To check the brushes, see the instructions on page 6.
7. Has the cleaner overheated? If so, it will take about 45 minutes to reset itself.

If there is any doubt call the Hoover Service Office for advice. They may be able to assist you over the telephone. A service charge will be made if the cleaner is examined and found to be in

Working order, has not been assembled in accordance with these instructions or has been used incorrectly.

## WARNING!

A thermal cut out switches off the cleaner to prevent overheating if it is used when full or there is a blockage or dirty filters. If this should happen switch off, unplug and correct the fault.

It will take about 45 minutes for the cut out to automatically reset.

**IMPORTANT:** Do not run cleaner over the supply cord as this could damage the supply cord insulation.

## IMPORTANT INFORMATION

### Hoover Service

Should you require service at any time, please contact your local Hoover Service Office.

### Hoover spares and Consumables

Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering parts always quote your model number.

## USE ONLY HOOVER SPARES

SPARE PARTS & CONSUMABLES	CODE
FILTERS KIT	U76 - 35601699
HOSE	D156 - 35601698
AGITATOR	Y36 - 35601697
BELT	V37 - 35601700
PET HAIR & ALLERGEN REMOVER	J44 - 35601064

## Quality

Hoover's factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001

## GUARANTEE STATEMENT

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Subject to change without notice.





GENERATION FUTURE

Hoover Limited  
Pentrebach  
Merthyr Tydfil  
Mid Glamorgan  
CF48 4TU

HOOVER CUSTOMER HELPLINE  
03444 995599

© 2015 48017172