

vax

Power8

**LIGHTWEIGHT WITH
COMPACT DESIGN**

LET'S GET STARTED.



C84-TJ-Be
C84-TJ-Pe

Let's talk safety



Basic safety precautions

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

- Only use the vacuum cleaner indoors on dry surfaces and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the vacuum cleaner.



Don'ts

- Don't use this vacuum cleaner if it has been dropped, damaged or left outdoors or the filters not in their original place.
- Don't run over the power cord or use vacuum cleaner if the power cord or plug is damaged. Please contact our Customer Care Line on: 0330 026 8455 (Mon-Fri 8.30am-6.30pm Sat 9.00am-5.00pm).
- Don't handle the plug or use the vacuum cleaner with wet hands.
- Don't pull or carry this vacuum cleaner by the power cord.
- Don't use the power cord as a handle, pull the power cord around corners, sharp edges or close a door over the power cord.
- Don't unplug vacuum cleaner by pulling on the power cord.
- Don't lift or carry the vacuum cleaner by the dirt container handle.



Do's

- Turn off all controls on the vacuum cleaner before disconnecting or connecting the power cord.
- Always make sure both the pre-motor/post-motor filters are in place before use.
- Always switch off the vacuum cleaner before disconnecting or connecting the hose and accessories.
- Keep all openings clear and free from debris as this may affect the airflow/suction.
- Always replace the fuse in the plug with a British 13amp fuse.

- This vacuum cleaner can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the vacuum cleaner in a safe way and understand the hazards involved. Children shall not play with the vacuum cleaner. Cleaning and user maintenance shall not be made by children without supervision.
- Only Vax recommend tools and accessories should be used with this vacuum cleaner.

- Don't vacuum up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the vacuum cleaner in an area with explosive vapours or liquid.
- Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).
- Don't attempt to remove blockages with sharp objects as this may cause damage to your vacuum cleaner.
- Don't vacuum up hard or sharp objects such as glass, nails, screws or coins etc.
- Don't use the vacuum cleaner with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.

- Always protect the power cable from heated surfaces and open flames.
- Take extra care when positioning and using the vacuum cleaner on the stairs.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Store your vacuum cleaner in a cool, dry area. If filters have been cleaned as per user guide instructions ensure they are thoroughly dry before storing away.

Please keep instructions for further use.

Thank you for buying this Power 8 product.

Taking care of your carpets and hard floors

The Power 8 product is designed to make vacuuming carpets and hard floors regularly as effective and efficient as possible and this user guide will help you get the most out of your machine.

Maintaining your carpets and hard floors will ensure they keep their appearance for longer. You've chosen the carpets and hard floors for your home for a reason and Vax will help you take good care of them.

Taking care of your Power 8 product

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your carpets and hard floors.

Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:

vax.co.uk/support or call:

(UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

Alternatively, you can write to us at:

Vax Ltd., Plot 302, Stonebridge Cross Business Park, Hampton Lovett, Droitwich, Worcestershire, WR9 0LW, UK

This user guide can be found online at: vax.co.uk/support

The Vax logo is displayed in a bold, orange, sans-serif font.

Let us know what you think @VaxUK

Contents

Let's talk safety

Getting to know your machine

Getting started

Using your machine

Taking care of your machine

Let's talk technical

Accessories

Notes

What to do if it goes wrong

Getting in touch

C84-TJ-Be
(Included in all models)

 
Included with your machine



Accessory hose and handle



Telescopic extension tube



Combination floorhead



3-in-1 tool

C84-TJ-Pe



Turbotool

Initial Setup for normal operation

1. Use the base accessories.
 - a. Shortest hose
 - b. Extension tube set to shortest practicable length.
2. Clean filters installed.
3. Dust receptacle empty.
4. All Bleeds must be closed.
5. Floor heads/tools set to Carpet Mode for carpet cleaning.
6. Mechanical Agitation turned ON for carpet cleaning.
7. Floor heads/tools set to Hard Floor Mode for hard floor cleaning.
8. Mechanical Agitation turned OFF for hard floor cleaning.

Getting to know your machine

Dirt container lid

Dirt container

Cyclone separator and shroud




Hose connector

Carry handle

Dirt container release button

Floorhead parking slot

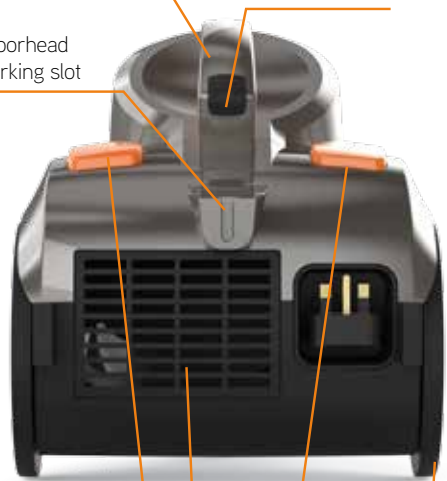

On/Off button

Post-motor filter

Cord rewind button

Wheel

Technical Specification

Name **Power 8**
Voltage **220V-240V 50Hz**
Wattage **800W**
Cord Length **6m**
Weight **4.9kg**

Accessories & Consumables


Filter Kit (Type 97)
1-1-134248-00

PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE


Before you begin cleaning

IMPORTANT: The vacuum cleaner is equipped with a thermal cut-out. If for any reason the vacuum cleaner does overheat the thermostat will automatically turn the vacuum cleaner off. If this happens, switch the vacuum cleaner off and unplug. Remove and empty the dirt container also check the vacuum cleaner for blockages. Allow the vacuum cleaner to cool for approximately 1 hour (if you have cleaned the filters please wait 24 hours for the filters to fully dry before putting back into the machine).

Assembling your vacuum cleaner

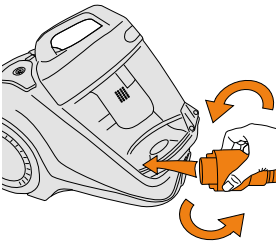


Twist and lock hose into hose entry point.

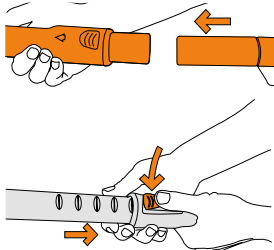


Insert the hose grip into telescopic extension tube.

Press button on telescopic extension tube and adjust to required length.

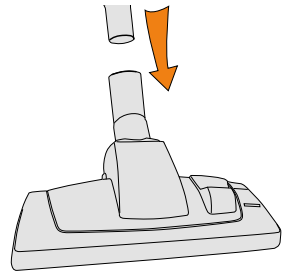


Insert the other end of the telescopic tube into the floorhead.

Using accessories

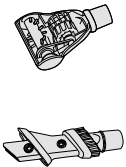

Choose an accessory and push onto the telescopic extension tube or hose.

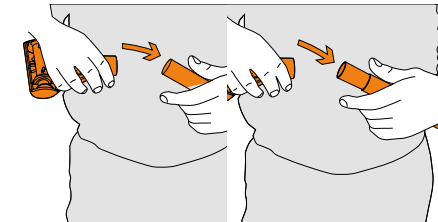

The tool connector must be fitted on the hose when using the TurboTool (some models only).

IMPORTANT: The combination floorhead can be attached directly to the telescopic tube or hose handle.

Always switch off the vacuum cleaner before connecting or disconnecting the hose /attachments, or removing and emptying the dirt container.

CAUTION




Using your machine


IMPORTANT: The base of the vacuum cleaner should always be positioned flat on the floor when starting and in use.

CAUTION: When unwinding the power cord do not pull further than the yellow marker.


Operating the appliance and accessories

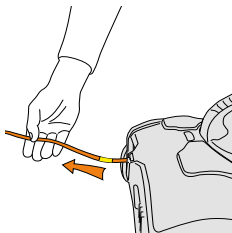

Unwind the power cord.
Do not pull further than
the yellow marker.

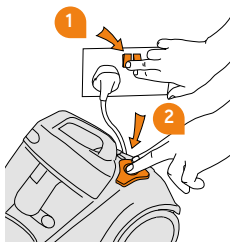


Plug into mains and push
the On/Off button to turn
your machine on.

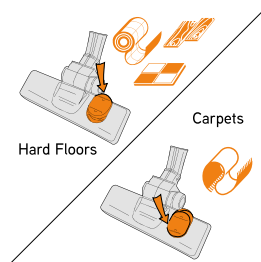


For use on carpets, click
rocker switch forward.
For use on hard floors click
rocker switch back.

Storing your vacuum cleaner

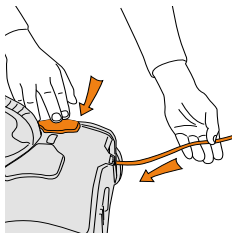

Press cord rewind
button to retract cord.

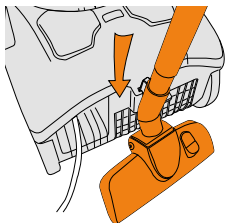


Place floorhead into
parking slot on the back
of vacuum cleaner for
storage and carrying.

IMPORTANT: For convenience there is a parking slot located at the rear of the vacuum cleaner where the floorhead and tubes can be attached for storage and carrying.

Taking care of your machine

Emptying and cleaning the dirt container

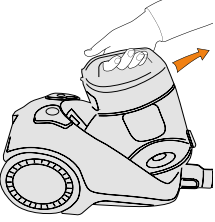


Press the dirt container release button and lift to remove the dirt container.



Hold the dirt container over a bin and press dirt release clip on the bottom of the dirt container allowing dirt and debris to fall out.

Cleaning the pre-motor filter

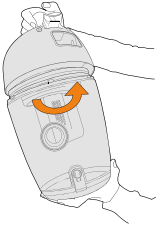

Twist the dirt container lid to open.

 


Pull the tab on the pre-motor filter to remove.

40°c max




Rinse the filter under water (40°c Max).



Leave to dry for 24 hours until completely dry before placing back in the machine.

Taking care of your machine


Cleaning the shroud

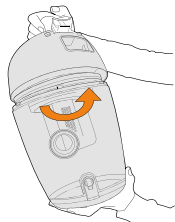


Twist the dirt container lid to open.



Pull the tab on the pre-motor filter to remove.

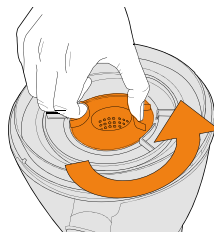


Twist the shroud separator anti-clockwise.

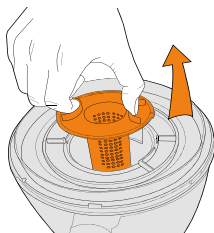

Pull to remove the shroud from the container.



Tap the shroud over a bin to remove the dirt and debris.

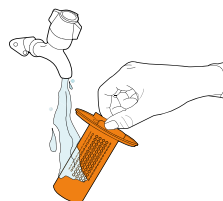


Rinse the shroud under water.




Leave to dry for 24 hours before placing back in the machine.

IMPORTANT: The shroud is accessed by removing the dirt container lid and is located underneath the pre-motor filter.


Cleaning the post-motor filter

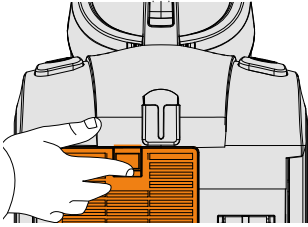

Press down the release button on the post-motor filter cover, pull to remove.

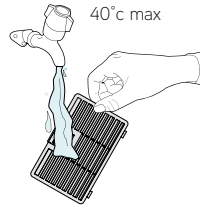


Rinse both the frame and foam under water (40°c Max).

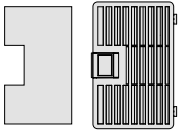

Leave to dry for 24 hours or untill fully dry before placing back in the machine.

IMPORTANT: Remove accessory from hose or telescopic extension tube before performing maintenance or trouble shooting checks.

Removing a blockage from the hose

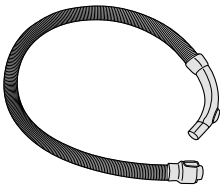

Remove the hose from the vacuum cleaner and telescopic extension tube. Insert a broom handle or into the hose to remove blockage

To test for a blockage in the hose, drop a small ball of paper into the hose. The paper will drop through if the hose is clear.




Don't forget your accessories!

Order at: www.vax.co.uk/spares-and-solutions

Pro Cleaning Kit (Type 2)

1-1-133326-00

All our best tools all in one kit that makes cleaning your home quicker, easier and with even better results. We've taken care of cleaning all of the hard to reach areas such as on top of cupboards and in between blinds to the dust that collates behind and within the radiator.

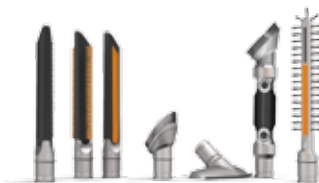

TurboTool (Type 6)

1-1-134419-00

Use the TurboTool for vacuuming your stairs, upholstery and car interiors. It's great for picking up stubborn pet hair.



Fur 'n' Fluff Tool

1-1-131392-00

Specifically designed to remove extra stubborn pet hair from upholstery, furniture and carpets.





What to do if it goes wrong

Problem

Solution

Is there an accessory missing?

- Check the 'This pack contains' panel on the box to make sure the part is included with your vacuum cleaner.

Why won't the vacuum cleaner pick up?

- The dirt container may not be correctly fitted, remove the dirt container from the vacuum cleaner and check pre-motor filter and dirt container are assembled correctly, refit ensuring it's locked into place. Go to 'Taking care of your machine'.
- The filter may be clogged, clean the filter. Go to 'Taking care of your machine'.
- The dirt container may be blocked, empty the dirt container. Go to 'Taking care of your machine'.
- There may be a blockage in the hose/tube. Disconnect from the vacuum cleaner and carefully remove any blockages. Go to 'Let's talk technical'.

Why does my vacuum cleaner have no power?

- The plug may not be fully pushed into the electrical socket.
- Check the fuse in the plug if this needs replacing, always replace with a 13amp fuse.
- The motor thermostat may have tripped. If this has happened, unplug the vacuum cleaner. Remove and empty the dirt container and check the hose for blockages. Clean the filters and allow the vacuum cleaner to cool for approximately 1 hour (if you have washed the filters you will need to wait 24 hours for the filters to fully dry before putting them back into the vacuum cleaner).

Why is dust escaping from the vacuum?

- The filters may be clogged, clean the filter. Go to 'Taking care of your machine'.

CAUTION: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance /troubleshooting checks.

It's quick and easy to
register for your **FREE**

**2 year
guarantee[†]**

Online at: **vax.co.uk/guarantees**

Please retain your original receipt for proof of purchase.

we're here if you need us

Online **vax.co.uk/support**

Call: (UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm*

Alternatively, you can write to us at:

Vax Ltd. Plot 302, Stonebridge Cross Business Park, Hampton Lovett,
Droitwich, WR9 OLW, UK

[†] Registration required. Terms and conditions apply, see vax.co.uk for details.

* Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

GET IN TOUCH

 0330 026 8455  info@vax.co.uk  vax.co.uk  [VaxVacuums](https://www.facebook.com/VaxVacuums)  [@VaxUK](https://twitter.com/VaxUK)

EEC Statement of Compliance: Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the C84-TJ-Be/Pe are manufactured in compliance with the following Directives: **Safety:** 2006/95/EC Low Voltage Directive. **EMC:** 2004/108/EC Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

© 2015 Vax Limited. All rights reserved. The VAX trade mark and Vax lozenge is the property of Techtronic Floor Care Technology Ltd and is registered in the EU and may be pending or registered in other countries.

