

YOUR SAFETY & INSTRUCTION MANUAL PLEASE READ CAREFULLY

MODEL P28023S





TECHNICAL DATA

Description:	Dual Cyclone Handy Vac	
Model:	P28023S	
Rated Voltage:	220 - 240V	
Frequency:	~ 50/60Hz	
Power consumption:	800W	

DOCUMENTATION

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2004/108/EC	Electromagnetic Compatibility Directive.
2006/95/EC	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.
2009/125/EC	Eco-design of energy related products.

RKW Quality Assurance, United Kingdom

WARRANTY

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RKW has limited liability for incidental or consequential loss or damage.
- This guarantee is only Valid in the UK and Eire Only.

An extended warranty is available for this appliance. See back page for details.

WIRING SAFETY FOR UK USE ONLY

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:



The wires in the mains lead are coloured in accordance with the following code:

Blue neutral [N] Brown live [L]

Plug Fitting Details (Where Applicable).

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black.

The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red.

On no account must either the brown or the blue wire be connected to the [EARTH] terminal \clubsuit .

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - and then cut it off the mains lead and immediately dispose of its safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:

This appliance is double insulated. Do not connect any wire to the earth terminal.

PRODUCT SAFETY

When using **any** electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- Do not immerse cords, plugs or any part of the appliance in water or any other liquid.
- Do not leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children.
- Take care when any appliance is used near pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be undertaken by

children without supervision.

- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments other than those supplied is not recommended.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Do not use this product for anything other than its intended use.
- This appliance is for household use only.
- Do not carry the appliance by the power cord.
- Do not use any extension cord with this appliance.
- This appliance is for household use only.

- Do not carry the appliance by the power cord.
- Do not use any extension cord with this appliance.
- Do not use the appliance outdoors.
- Use extra care when cleaning on stairs.
- Do not immerse cord, plug or machine in water or any other liquid.
- Keep hair, loose clothing, fingers, feet and all parts of body away from moving parts.
- Do not close doors on the cord or move the vacuum by pulling the cord around sharp edges or corners.
- Unplug cleaner when not in use.
- Turn all controls off before unplugging from mains.
- Use only original accessories.
- Do not vacuum liquids, sharp objects like nails or drawing pins.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the service department.



WHAT'S IN THE BOX

Instruction Manual Crevice Tool

- 1. Connection Bush
- 2. Suction Pipe
- 3. Dust Cup Container
- 4. Dust Cup Container Release
- 5. On/Off Power Switch
- 6. Dust Cup Filter
- 7. Locking Clip
- 8. Extension Pipe
- 9. Floor Glider with Wheels



BEFORE YOUR FIRST USE:

- 1. Remove the product from the box.
- 2. Remove any packaging from the product.
- 3. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Dispose of the packaging in a responsible manner.

ACCESSORIES

Main Connector: Put the thicker end of the main connector into the silver suction pipe. If the connector feels loose, you may need to insert the other end.



The main connector is all you need to connect either of the long Extension Pipes, or the large crevice tool.

Floor Glider:

Attach the floor glider to either the Extension Pipes or the main connector.



Extension Pipes:

There are two long Extension Pipes included. Once the main connector has been attached to the silver suction pipe, the long Extension Pipes can



be attached. The floor glider and crevice tool can both be attached to the long Extension Pipes ready for use. If the cone tube extension is added to the long Extension Pipe, any of the small accessories can also be used in conjunction.

Cone Tube Extension:

Attaching the cone tube extension to the main connector allows you to attach any of the smaller accessories to the cone tube extension.



Crevice Tool:

The crevice tool can be connected to the Extension Pipes or the main connector.

Small Crevice Tool:

The Small Crevice tool can be attached to any of the following accessories: the cone tube extension, small extender tube joint or the cylinder tube extensions.



Small Concentrator Brushes x 2: The Dual Cyclone Handheld Vac comes with two small concentrator brushes –a round one and a



rectangle one. The small concentrator brushes can be attached to the following: the cone tube extension, small extender tube joint or the cylinder tube extensions.

Small Cylinder Crevice Tool:

Attach the small cylinder crevice tool to the cone tube extension for particularly small spots.



Cylinder Tube Extensions x 2:

There are two cylinder tube extensions included. Attach the thinner end of a cylinder tube



extension to the cone tube extension or the small extender joint. The two cylinder tube extensions can be attached to each other. Any of the included small accessories can be included.

Small Extender Joint:

The small extender joint helps you to get to the hard to reach areas. Attach it to the cone tube extension or the cylinder tube



extension. You can then attach any of the small accessories to the free end of the small extender joint for use.

USING YOUR APPLIANCE

Attaching the Tools to the Main Body

- 1. Push the connection bush into the suction pipe opening.
- 2. Push the required tool into the other end of the connection bush.
- 3. If you require the extension Pipe with the floor glider, make sure that it is securely in position.

The On/Off power switch has two different positions.

• Push on the "I" side to turn the vacuum ON.

- Push on the "O" side to turn the vacuum OFF.
- Press the "1" position on the On/Off power switch turn the unit on. When finished using the unit, press the "0" position on the On/Off power switch to turn the unit off.

Cleaning & Changing the Dust Cup Filter

In order to achieve the best performance, empty the dust cup container and clean the dust cup filter after each use.

- To remove the dust cup container, press down on the dust cup container release button and separate the dust cup container from the main unit.
- 5. Rotate and pull out the filter
- 6. Empty the dust cup filter.
- 7. Empty the dust from the dust cup container.
- 8. Rinse the dust cup filter in cold water, and then let it air dry for 24 hours before replacing it back in the dust cup container.
- Replace the dust cup filter carefully into the dust cup compartment. NEVER operate the stick vac without the dust cup filter in place.
- 10. Attach the dust cup container to the main body of the unit.

Important Note: DO NOT use a washing machine to clean the dust cup filter. Do not use a hair dryer to dry it. AIR DRY ONLY.

It is recommended that the dust cup filter be replaced every 3 months (depending on usage) to ensure peak performance of the unit.

TROUBLESHOOTING

Problem	Possible Reason	Possible Solution
Vacuum will not operate	No power in electrical outlet.	Check fuse or breaker. Replace fuse/ reset breaker.
Vacuum will not pick-up or suction power is weak	Dust cup container is full. Dust cup filter needs cleaning or replacement.	Empty dust cup container. Remove dust cup filter and check for object(s) in air duct and remove. Clean or replace dust cup filter. Charge unit.
Dust escaping from vacuum	Dust cup container is full. Dust cup filter is not installed correctly. Puncture/ hole is dust.	Empty dust cup container. Review dust cup filter installation instructions.

NOTE:

Filter must be used at all times when operating this vacuum.

Keep the suction opening clear of obstructions as the motor could be damaged due to overheating.

CLEANING AND CARE

- Open the collection container and remove
- Pull out the filter
- Empty dust from the filter
- Rinse the filter in cold water and dry thoroughly before putting back into the collection container
- Attach collection container to the vacuum.

WARNING: DO NOT IMMERSE THE UNIT IN WATER

NOTES:



DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish.

You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

We hope you enjoy your appliance for many years.

As a thank you for purchasing one of our fantastic products, we are giving you an extra 2 years peace of mind.

To receive your extra 2 years guarantee, register your appliance online by visiting



www.pifco.co

Should you have a problem with your appliance or need any spare parts please call our Service Department on:

+44 (0) 333 220 6054

Distributed throughout the UK by RKW LTD



1115.V4