

**Panasonic**<sup>®</sup>

TX-24DS500B

TX-32DS500B

TX-40DS500B

TX-49DS500B

TX-55DS500B

TX-40DS400B

*e***HELP**

 English

## Home Screen

### my Home Screen

• Information	10
• How to use	11
• Settings	12
• OSD Colour	14

### APPS List

• Information	15
• How to use	16
• Settings	17

## Watching

### Basic

• Basic connection	18
• Selecting channel	20
• Information banner	22
• Option Menu	25
• Subtitle	27
• Last view	28
• Off Timer	29
• Energy saving functions	30
• Adjusting time	32
• Language	33

### External equipment

• External connection	35
• Watching external input	38
• Operating with TV's remote control	40
• HDMI features	42
• Valid input signals	44

### For best picture

• Viewing Mode	45
• Ambient Sensor	46
• Aspect	47

• Aspect Control Signal	49
• Basic settings	51
• Noise reduction settings	52
• Advanced Settings	53
• Option Settings	56
• Screen Settings	58
• Copy Adjustment	59
<b>For best audio</b>	
• Sound mode	60
• Basic settings	61
• Volume settings	62
• Voice Guidance Settings	63
• Audio Description	64
• Advanced settings	65
<b>TV Guide</b>	
• Using TV Guide	67
<b>Teletext</b>	
• Digital text service	70
• Viewing Teletext	71
• Teletext mode	73
• Teletext Character Set	74
<b>Tuning and editing channels</b>	
• Setting menu	75
• Favourites Edit	76
• Channel List	78
• Auto Setup	79
• Channel Sorting by Region	80
• Manual Tuning	81
• Update Channel List	82
• New Channel Message	83
• Signal Condition	84
• Other settings	85

## Media Player

### Using Media Player

- Information ..... 86
- Selecting device / mode ..... 88
- Network device ..... 90

### Photo mode

- Selecting file ..... 91
- Viewing photo ..... 92
- Sorting photos ..... 93
- Using Slideshow ..... 94

### Video mode

- Selecting file ..... 99
- Watching video ..... 100
- Video Setup ..... 102
- Audio output settings ..... 104

### Music mode

- Selecting file ..... 105
- Playing music ..... 106
- Music Setup ..... 107

### Technical information

- Device handling caution ..... 108
- USB devices ..... 109
- Photo format ..... 110
- Video format ..... 111
- Music format ..... 114

## Network

### Internet content

- Information ..... 115
- Selecting internet content ..... 116
- Note ..... 117

### DLNA

- In-House streaming ..... 118

• Using DLNA	120
<b>Network connections</b>	
• Internet connection	121
• DLNA connection	122
• Note	124
<b>Network settings</b>	
• Network Connection	125
• Custom - Wireless	127
• Custom - Wired	130
• Custom - Wireless Access Point	132
• Network Status	133
• my Home Cloud Settings	134
• VIERA Name	135
• TV Remote App Settings	136
• Network Link Settings	137
• File Sharing Settings	138
• Mirroring Settings	139
• Software Update	140
• New Software Message	141
<b>Photos</b>	
• Selecting file	142
• Viewing photo	143
• Using Slideshow	144
<b>Videos</b>	
• Selecting file	146
• Watching video	147
• Video Setup	149
• Audio output settings	151
<b>Music</b>	
• Selecting file	152
• Playing music	153
• Music Setup	154

DIGA Recorder	
• Controlling DIGA Recorder	155

## Technical information

• Photo format	156
• Video format	157
• Music format	160

## Functions

### Mirroring

• How to use	161
• Mirroring Settings	162

### VIERA Link “HDAVI Control™”

• Summary of VIERA Link	163
• Preparations	168
• Easy playback	169
• Power on Link	170
• Power off Link	171
• Standby Power Save	172
• Intelligent Auto Standby	173
• VIERA Link Control	174
• Speaker Selection	176
• Note	177

### Child Lock

• Using Child Lock	178
• PIN number	179
• Parental Rating	180

### Common Interface

• Caution	181
• Using Common Interface	182

### Shipping Condition

• Shipping Condition	183
----------------------	-----

### Updating the TV Software

• Information	184
---------------	-----

• Auto update	185
• Manual update	186
<b>Setting characters</b>	
• Using Numeric buttons	187
<b>Keyboard</b>	
• Keyboard	188
<b>Settings</b>	
<b>Setting menu</b>	
• How to use	189
<b>Picture</b>	
• Viewing Mode	191
• Basic settings	192
• Ambient Sensor	193
• Noise reduction settings	194
• Advanced Settings	195
• Option Settings	196
• Screen Settings	197
• Copy Adjustment	198
• Reset to Defaults	199
<b>Sound</b>	
• Mode	200
• Basic settings	201
• Volume settings	202
• Voice Guidance Settings	203
• Audio Description	204
• Advanced settings	205
• Reset to Defaults	206
<b>Network</b>	
• Network Connection	207
• Network Status	208
• my Home Cloud Settings	209
• VIERA Name	210

• TV Remote App Settings	211
• Network Link Settings	212
• File Sharing Settings	213
• Mirroring Settings	214
• Other settings	215

## Timer

• Off Timer	216
• Time Zone	217
• Auto Standby	218
• No signal Power off	219

## Setup

• Eco Navigation	220
• TV Guide Settings	221
• USB Device Setup	222
• Child Lock	223
• Tuning Menu	224
• Language	226
• Display Settings	227
• VIERA Link Settings	229
• System Menu	230
• Other Settings	231

## Support

### Help menu

• Using Help menu	232
-------------------	-----

### FAQs

• Picture	233
• Digital TV	235
• Analogue TV	237
• Sound	238
• HDMI	239
• Network	240
• Other	242



• Detailed information	243
------------------------	-----

## Maintenance


• Care and Cleaning	244
---------------------	-----

## Licence

• Licence	245
-----------	-----

 Letters enclosed in brackets indicate remote control buttons.

 Letters in cyan indicate on-screen display items.

  References in this eHELP

- The images shown in this eHELP are for illustrative purposes only.
- 
- This eHELP contains the pages for all models and some features are not available on all models.
  - Refer to a paper manual, actual menu in TV set, etc. to confirm your model's features.

# Home Screen


## my Home Screen

### Information

---

“my Home Screen” is a gateway to the TV, applications, and more.

It provides easy access to special features such as Media Player, videos, games, communication tools, etc. as shown below (example).

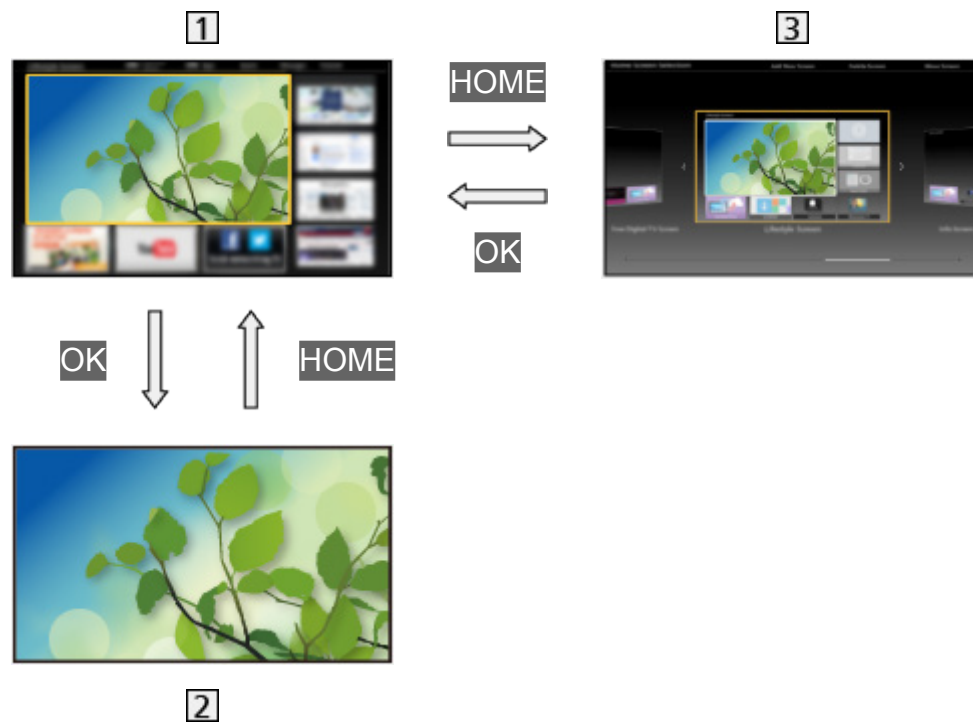

1 Home Screen

2 Selected content screen (TV, application, etc.)

3 Home Screen Selection

- Your preferred Home Screen can be selected.


## How to use

---

Home Screen provides access to special features such as Media Player, TV, internet content, data services, communication tools, etc.

1. Display Home Screen with **HOME**.

(Example)

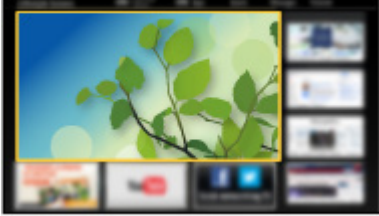

- The last viewed Home Screen is displayed when the TV is turned on.
- Press again to select or add your preferred Home Screen layout.

 → [Home Screen](#) > [my Home Screen](#) > [Settings](#)

2. Select a feature and press **OK** to access.

- To watch full-screen TV
  - 1) Select the TV viewer.

(Example)



- 2) Press **OK** to watch.

(Example)



- Also refer to [Tutorial](#) from the tool guide.

# Settings

---

Select the setup menu from the tool guide on the top of the screen.

(Example)



- Display the tool guide with **HOME** if it is not displayed.

## ■ Home Screen Selection

1. Display Home Screen Selection with **HOME**.

(Example)



2. Select the screen and press **OK** to set.

### Full Screen TV:

Displays full-screen TV.

### Free Digital TV Screen:

Displays the TV and Digital TV streaming services (if available). (UK only)

### TV Home Screen:

To make your TV experience more convenient and comfortable

### Lifestyle Screen:

Displays the TV with useful information and services for everyday life.

### Info Screen:

Enjoy internet content while watching TV.

## ■ Settings

You can customise any Home Screen. (For example, changing the wallpaper, renaming freely, editing applications, setting the screen launched when the TV is turned on, etc.)





1. Select [Settings](#) from the tool guide.
2. Follow the on-screen instructions.

## ■ Search

You can search the content from various features.

1. Select [Search](#) from the tool guide.
2. Follow the on-screen instructions.

= Note =

- To change the colour type of on-screen displays, set [OSD Colour](#).  
 → [Home Screen > my Home Screen > OSD Colour](#)
- A broadband network environment is required to fully use this function. Ensure the network connections and network settings are completed.  
 → [Network > Network connections](#)  
 → [Network > Network settings](#)
- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you may not be able to use my Home Screen. You can update the software later manually.  
 → [Network > Network settings > Software Update](#)

## OSD Colour

---

1. Display the menu with **MENU**.
  2. Select **Setup > Display Settings > OSD Colour** and press **OK** to access.
  3. Set the item and press **OK** to store.
- 

### OSD Colour

([Jet black](#) / [Pale grey](#) / [Organic brown](#) / [Sand beige](#))

Selects the preferred colour type of on-screen displays.

- This function is available for the information banner, menu screen, Home Screen, etc.

# APPS List

## Information

---

Various applications (internet content, network content, Media Player, etc.) can be accessed easily from APPS List.

### ■ APPS List

(Example)



= Note =

- APPS List is subject to change without notice.

## How to use

---

You can access special features such as internet content, network content, Media Player, etc. from APPS List.

1. Display APPS List with **APPS**.

(Example)



- To exit APPS List

**EXIT**

2. Select an icon of the features and press **OK** to access.

Internet content

 → Network > Internet content

Netflix

- You can also access the service pressing **NETFLIX**.
- A broadband network environment is required to fully use this function.
- This service may be stopped or changed without notice.

Media Player

 → Media Player > Using Media Player > Selecting device / mode

Media Server

 → Network > DLNA > Using DLNA

VIERA Link

 → Functions > VIERA Link "HDAVI Control™"



# Settings

---

You can customise APPS List (screen settings, etc.).

1. Display APPS List with **APPS**.
2. Select the icon for settings on APPS List and press **OK** to access.



3. Follow the on-screen instructions.

= Note =

- Setup menu items may be changed without notice.

# Watching

## Basic

### Basic connection

---

Please ensure that the unit is disconnected from the mains socket before attaching or disconnecting any cables.

- External equipment and cables shown are not supplied with this TV.

#### ■ Aerial




1 Terrestrial terminal

2 RF cable

3 Terrestrial aerial

- For DVB, Analogue

#### ■ DVD Recorder / VCR

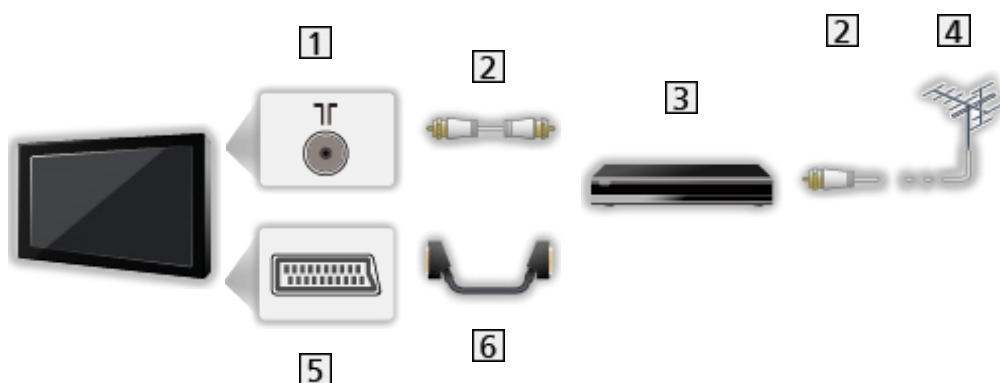

1 Terrestrial terminal

2 RF cable


3 DVD Recorder / VCR

4 Terrestrial aerial

5 AV1 (SCART) terminal


6 SCART cable

## ■ DVD Recorder (VCR) / Satellite receiver

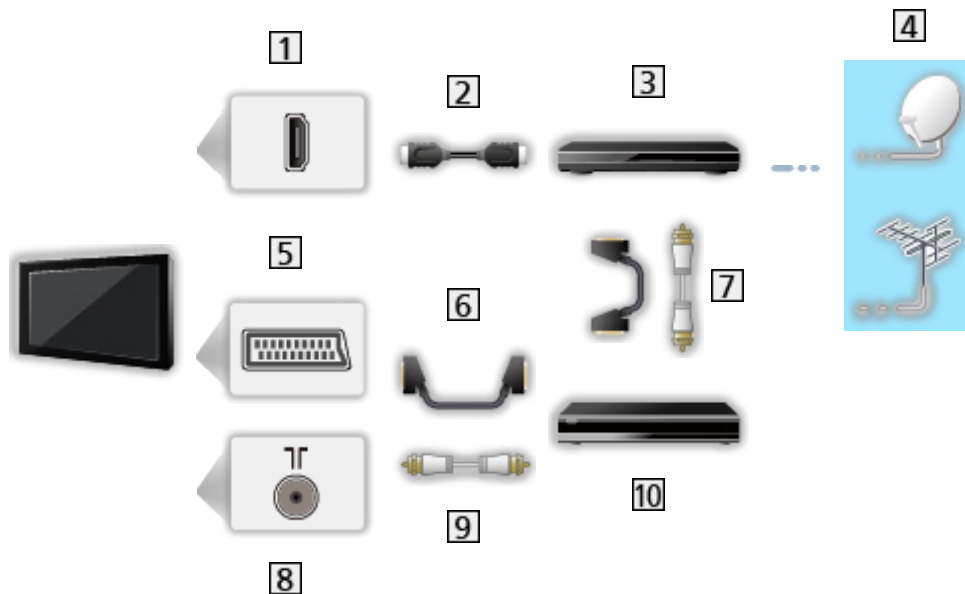

- 1 HDMI terminal
- 2 HDMI cable
- 3 Satellite receiver
- 4 Satellite dish / Terrestrial aerial
- 5 AV1 (SCART) terminal
- 6 SCART cable
- 7 RF cable / SCART cable
- 8 Terrestrial terminal
- 9 RF cable
- 10 DVD Recorder / VCR

= Note =

- For details of VIERA Link connections  
 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)
- Please also read the manual of the equipment being connected.
- Keep the TV away from electronic equipment (video equipment, etc.) or equipment with an infrared sensor, otherwise distortion of image / sound may occur or operation of other equipment may be affected.
- Use a fully wired HDMI compliant cable.
- Use a fully wired SCART cable.
- Check the terminal type and cable plugs are correct for connection.

## Selecting channel

 
---

1. Select the mode with **TV**.

### DVB / Analogue

- Selectable modes vary depending on the channels stored.

2. Select a channel with **Channel Up / Down** or **Numeric buttons**.



- DVB channel position begins from number 1 upward. Analogue channel position numbers are in the 0 - 99 range.

### ■ To select a channel using information banner

1. Display information banner with **i** if it is not displayed.
2. Select a channel and press **OK** to watch while the banner is displayed.

 → [Watching > Basic > Information banner](#)

### ■ To select a channel using TV Guide

1. Display **TV Guide** with **GUIDE**.
2. Select the current programme and press **OK** to access.
  - The current programme is displayed on the top left of the screen.
3. Press **OK** to exit **TV Guide**.

 → [Watching > TV Guide > Using TV Guide](#)

- Not valid in Analogue

### ■ To select the type of channel list

Automatically selects all channels or favourites list in the information banner when the TV is turned on.

1. Display the menu with **MENU**.
2. Select **Setup > Other Settings > Power on Channel List** and press **OK** to access.
3. Select **All Channel List / Last** and press **OK** to set.

## ■ To watch pay-TV

- For details of the encrypted channels

 → [Functions > Common Interface > Using Common Interface](#)


- Consult the operator / broadcaster or CI module manufacturer for more information and conditions of the services.

# Information banner




Display information banner with .

- Also appears when changing a channel.

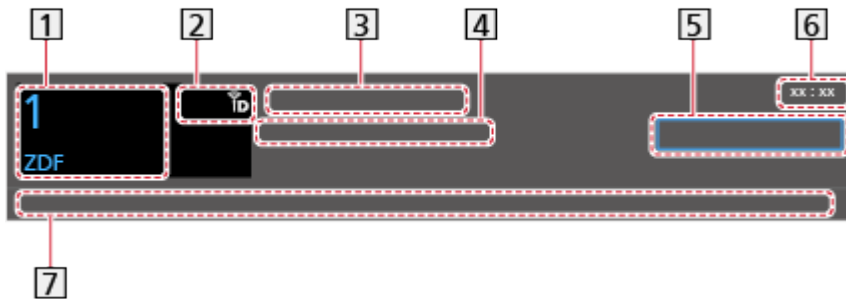(Example)



**1** Channel position and name

**2** Channel type (Radio, HDTV, etc.) / Encrypted channel () / TV mode (, )


**3** Programme

**4** Start time / End time (except Analogue)

Channel position, etc. (Analogue)

Progress time indicator of the selected programme (except Analogue)

**5** [All DVB Channels](#) / [All Analogue Channels](#) / [Favourites](#)

- Press  (blue) to switch. (DVB)
- To list favourite channels, set [Favourites Edit](#).

 → [Watching > Tuning and editing channels > Favourites Edit](#)

**6** Current time

**7** Features available / message meanings

**Bad signal:**

Poor quality TV signal

**Dolby D+, Dolby D, HE-AAC:**

Dolby Digital Plus, Dolby Digital or HE-AAC audio track

**AD:**

Audio Description service available

- This function can aid visually-impaired viewers by providing an additional audio track to describe events on screen.

 → [Watching > For best audio > Audio Description](#)

Also in :

Same programme available as HD broadcast (UK only)

- To display the extra information for details



STTL:

Subtitle service available

TEXT:

Text service available

Multi Audio:

Multiple audio available

Stereo, Mono, NICAM:

Audio mode

1 – 90:

Off Timer remaining time

 → [Watching > Basic > Off Timer](#)

- To confirm another tuned channel



- To watch the channel listed in the banner



- Information on the next programme (DVB)



- Extra information (DVB)



– Press again to hide the banner.


- To hide the banner



- To adjust banner timeout, set [Banner Display Timeout](#).

1) Display the menu with .

2) Select [Setup > Display Settings > Banner Display Timeout](#) and press  to access.

3) Set the item and press  to store.

- To change the colour type of on-screen displays, set [OSD Colour](#).

 → [Home Screen > my Home Screen > OSD Colour](#)

- To display the introduction banner for the internet service
  - 1) Display the menu with **MENU**.
  - 2) Select **Setup > Display Settings > Smart Banner** and press **OK** to access.
  - 3) Select **On / Off** and press **OK** to set.
- To change the type of channel banner
  - 1) Display the menu with **MENU**.
  - 2) Select **Setup > Display Settings > Banner & TV Guide Selection** and press **OK** to access.
  - 3) Select **Freetime / Panasonic** and press **OK** to set.
    - For DVB (UK only)
- **AD, STTL, TEXT, Multi Audio** indications are displayed as available on particular programmes, but may not be available for all individual programmes being broadcast. Display the extra information to confirm availability of these functions.



## Option Menu

---

Confirm or change the current status.

1. Display the option menu with **OPTION**.
2. Select one of the following items and press **OK** to access.

[Voice Guidance Settings](#) / [Audio Type](#) / [Multi Audio](#) / [Monaural Audio](#) / [Subtitle Language](#) / [Teletext Character Set](#) / [Teletext Language](#) / [NICAM](#) / [Volume Correction](#)

- The function items vary depending on the TV mode and country you select.

3. Set the item and press **OK** to store.
- 

### Voice Guidance Settings

Guidance settings for visually impaired users

 → [Watching](#) > [For best audio](#) > [Voice Guidance Settings](#)

---

### Audio Type

Set to [Audio Description](#) if the programme has Audio Description service, then you will hear an additional audio track to describe events on screen (if available).

- For DVB
- To adjust the volume for Audio Description

 → [Watching](#) > [For best audio](#) > [Audio Description](#)

---

### Multi Audio

Selects between alternative language or Audio Description for sound tracks (if available).

- This setting is not memorised and it returns to the default setting once you exit the current programme.
  - For DVB
  - [Multi Audio / AD](#) is displayed instead of [Multi Audio](#). (Ireland only)
- 

### Monaural Audio

Selects stereo / monaural (if available).

- This setting is not memorised and it returns to the default setting once you exit the current programme.
  - Not valid in Analogue
-

### Subtitle Language

Selects the language in which subtitles should appear (if available).

- This setting is not memorised and it returns to the default setting once you exit the current programme.
  - Not valid in Analogue
- 

### Teletext Character Set

Sets the teletext language font.

 → Watching > Teletext > Teletext Character Set

- Ireland only
- 

### Teletext Language

Selects between alternative languages for teletext (if available).

- For DVB (Ireland only)
- 

### NICAM

Switches NICAM sound (if available).

 → Watching > For best audio > Advanced settings

- For Analogue
- 

### Volume Correction


Adjusts the volume of each individual channel or input mode.

# Subtitle

---

## ■ DVB

Display / hide subtitles (if available) with **STTL**.

- To select the preferred subtitle type
  - 1) Display the menu with **MENU**.
  - 2) Select **Setup > Display Settings > Preferred Subtitle Type** and press **OK** to access.
  - 3) Select **Standard / Hard of Hearing** and press **OK** to set.
    - **Hard of Hearing** provides aids in understanding and enjoyment with digital channel subtitles (depending on the broadcaster).
    - Ireland only
- **Preferred Subtitles 1 / 2** in Language are given priority.
  -  → **Watching > Basic > Language**
  - Ireland only

## ■ Analogue

Display subtitles with **STTL**.

- Hide subtitles with **EXIT**.

= Note =

- If you press **STTL** in Analogue, the TV switches to teletext service and calls up a favourite page. Press **EXIT** to return to TV mode.
- This is the same as switching to analogue teletext service and selecting “P888” (subtitle service).

 → **Watching > Teletext > Viewing Teletext**

## Last view

---

Switch to a previously viewed channel or input mode easily with **LAST VIEW**.

- Press again to return to the current view.

= Note =

- Switching channel may not be available depending on the condition.
- Watching less than 10 seconds is not reflected in the previously viewed channel or input mode.

## Off Timer

---

Switch to TV Standby mode automatically after a fixed period.


1. Display the menu with **MENU**.
2. Select **Timer** > **Off Timer** and press **OK** to access.
3. Select the time in 15-minute increments and press **OK** to set.  
**90 / 75 / 60 / 45 / 30 / 15 / Off (minutes)**
  - To cancel, set to **Off** or turn the TV off.
  - The remaining time is displayed on the bottom right of the screen.
  - The remaining time will flash on the screen when less than 3 minutes.

## Energy saving functions

---

The TV can be eco-friendly using energy-saving functions.

The TV goes into Standby mode in the following conditions:

- **Eco Navigation** is set to **Set to Eco**.
- **Off Timer** is active.  
 → **Watching > Basic > Off Timer**
- No operation is performed for 4 hours while **Auto Standby** is set to **On**.
- No signal is received and no operation is performed for 10 minutes while **No signal Power off** is set to **On**.

### ■ Auto Standby

1. Display the menu with **MENU**.
2. Select **Timer > Auto Standby** and press **OK** to access.
3. Select **On / Off** and press **OK** to set.

---

#### Auto Standby

(On / Off)

Automatically turns the TV to Standby mode for energy saving when no operation is performed for 4 hours.

- Automatic input switching with the connected equipment affects this function and time-count resets.
- A notification message will appear 3 minutes before going into Standby mode.
- Changing the default configuration may result in higher energy consumption of the product.

## ■ No signal Power off

1. Display the menu with **MENU**.
  2. Select **Timer > No signal Power off** and press **OK** to access.
  3. Select **On / Off** and press **OK** to set.
- 

### No signal Power off

(On / Off)

Automatically turns the TV to Standby mode to prevent unnecessary power consumption when no signal is received and no operation is performed for 10 minutes.

- A notification message will appear 3 minutes before going into Standby mode.

## ■ Eco Navigation

Automatically sets the TV to the most suitable energy-saving mode.

The concerned items and their current settings are displayed. Select **Set to Eco** to set them to the energy-saving settings at once.

1. Display the menu with **MENU**.
  2. Select **Setup > Eco Navigation** and press **OK** to access.
  3. Select **Set to Eco** and press **OK** to set.
- **Auto Standby** and **No signal Power off** are active when **Eco Navigation** is set to **Set to Eco**.

## ■ Radio Mode

Sets the timer for turning off the screen automatically when a radio channel is selected.

1. Display the menu with **MENU**.
2. Select **Setup > Display Settings > Radio Mode** and press **OK** to access.
3. Select the time and press **OK** to set.

**20 / 15 / 10 / 5 / Off (seconds)**

- Sound is active even if the screen is turned off. This function is effective in reducing power consumption when listening to a radio channel.
- Press any buttons except Standby On / Off switch, **Volume Up / Down** and **MUTE** to turn the screen on.



- Not valid in Analogue

## Adjusting time

---

Adjusts the time data.

1. Display the menu with **MENU**.
2. Select **Timer** > **Time Zone** and press **OK** to access.
3. Set the item and press **OK** to store.
  - The time data are corrected based on GMT.
  - Ireland only



# Language

---

1. Display the menu with **MENU**.
2. Select **Setup > Language** and press **OK** to access.
3. Select one of the following items and press **OK** to access.

[Preferred Multi Audio](#) / [Preferred Audio 1 / 2](#) / [Preferred Subtitles 1 / 2](#) / [Preferred Subtitles](#) / [Preferred Teletext](#)

4. Set the item and press **OK** to store.
- 

## Preferred Multi Audio

Selects the preferred language for digital channel multi audio (depending on the broadcaster).

- UK only
- 

## Preferred Audio 1 / 2

Selects the first and second preferred language for digital channel multi audio (depending on the broadcaster).

- Ireland only
- 

## Preferred Subtitles 1 / 2

Selects the first and second preferred language for digital channel subtitles (depending on the broadcaster).

- Ireland only
- To display subtitles

 → [Watching > Basic > Subtitle](#)

---

## Preferred Subtitles

Selects the preferred language for digital channel subtitles (depending on the broadcaster).

- To display subtitles

 → [Watching > Basic > Subtitle](#)

- provides aids in understanding and enjoyment with subtitles (depending on the broadcaster).
  - UK only
-

### Preferred Teletext

Selects the preferred language for digital channel teletext service (depending on the broadcaster).

- Ireland only

# External equipment

## External connection

---


These diagrams show our recommendations for connection of your TV to various pieces of equipment. For other connections, consult the instructions for each piece of equipment.

- For details of basic connection

 → [Watching > Basic > Basic connection](#)

- Check the terminal type and cable plugs are correct for connection.
- External equipment and cables shown are not supplied with this TV.

### ■ HDMI equipment

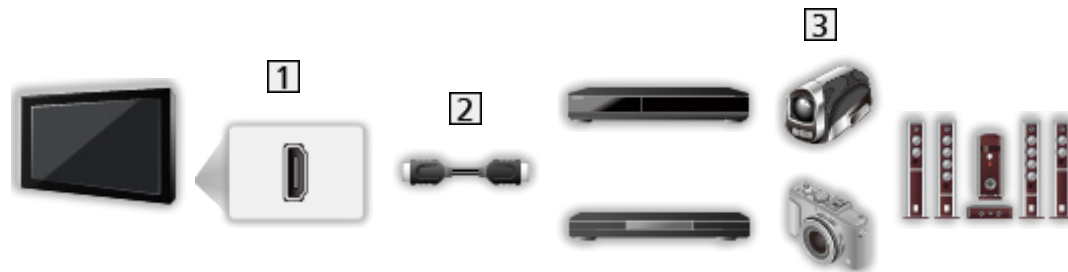

**1** HDMI terminal

**2** HDMI cable

**3** Recorder / Player / Set top box / Camcorder / Amplifier with speaker system


= Note =

- Use a fully wired HDMI compliant cable.
- For details of VIERA Link connections

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Use HDMI2 to connect the TV to an amplifier which has ARC (Audio Return Channel) function.

## ■ AV devices

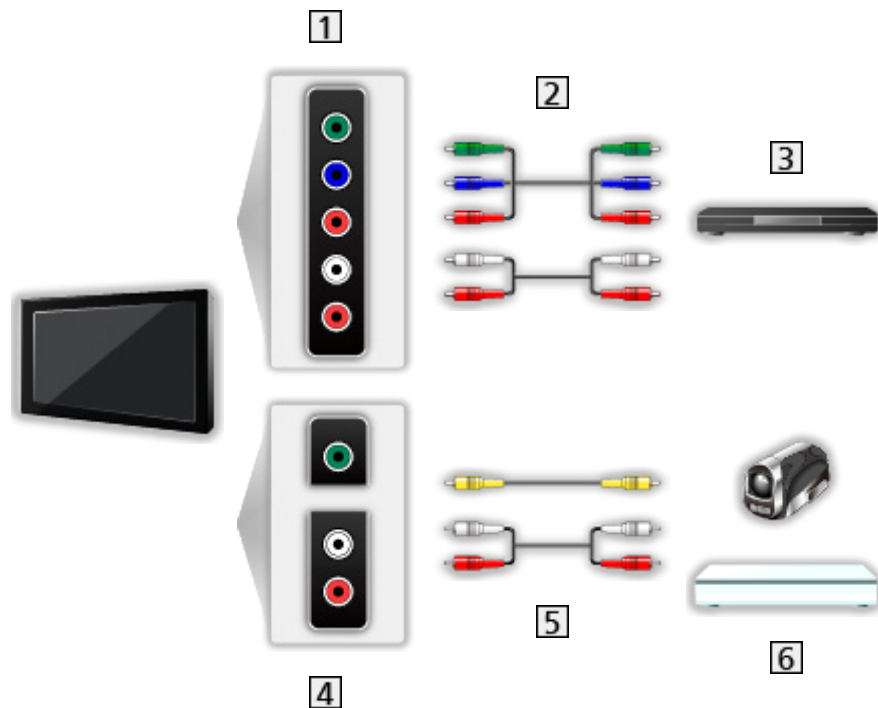

1 AV2 (COMPONENT) terminals

2 Component cables

3 DVD Player

4 AV2 (VIDEO) terminals

5 Composite cables

6 Camcorder / Game equipment

## ■ USB devices



1 USB port

2 USB devices

= Note =

- It is recommended to connect the device to the TV's USB port directly.
- Some USB devices or USB HUB may not be used with this TV.
- You cannot connect any devices by using USB card reader.

## ■ Listening with external speakers



1 DIGITAL AUDIO


2 Optical digital audio cable

3 Amplifier with speaker system

- To enjoy multi-channel sound from external equipment (e.g. Dolby Digital 5.1ch), connect the equipment to the amplifier. For information about the connections, read the manuals of the equipment and amplifier.
- To select the sound output to adjust volume, set [Speaker Setting](#).

 → [Watching > For best audio > Volume settings](#)

## ■ Headphones

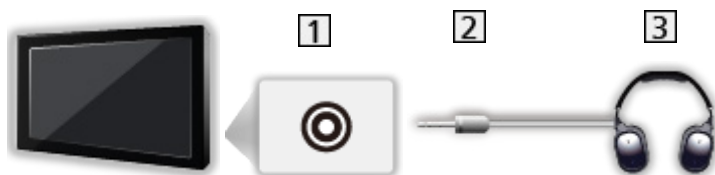

1 Headphone jack

2 M3 stereo mini plug

3 Headphones

- To adjust volume, set [Headphone Volume](#).

 → [Watching > For best audio > Volume settings](#)

- To select the sound output to adjust volume, set [Speaker Setting](#).

 → [Watching > For best audio > Volume settings](#)

## Watching external input

---

Connect the external equipment (VCR, DVD, etc.) and you can watch through the input.

1. Display the input selection menu with **AV**.
2. Select the input mode connected to the equipment and press **OK** to watch. (The selected mode is displayed on the top left of the screen.)

- TV receives input signals automatically connecting with SCART when playback starts.
  - Input signals are automatically identified by the SCART (pin 8) terminal.
  - This function is also available for HDMI connections when [VIERA Link](#) is set to [On](#).

 → [Functions > VIERA Link "HDAVI Control™" > Easy playback](#)

- When input mode is not switched automatically, perform as above or check the setup of the equipment.
- You can also select the input pressing **AV**. Press repeatedly until the desired input is selected.
- You can select [COMPONENT](#) and [VIDEO](#) in [AV2](#).
- You can label or skip each input mode. Skipped inputs will not be displayed when **AV** is pressed. ([Input Labels](#))
- The remote control is capable of operating the content or external equipment.

 → [Watching > External equipment > Operating with TV's remote control](#)

- To return to TV mode



= Note =

- If the external equipment has an aspect adjustment function, set it to [16:9](#).
- For details, read the manual of the equipment or ask your local dealer.

## ■ Input Labels

Accessing the input labels list allows you to change the input name or skip the input if unconnected, improving identification and selection in the [Input Selection](#) banner.

 → [Watching](#) > [Basic](#) > [Information banner](#)

1. Display the menu with **MENU**.
2. Select [Setup](#) > [Display Settings](#) > [Input Labels](#) and press **OK** to access.
3. Set the item and press **OK** to set.
  - To name each input mode freely, select [User input](#) and set characters (maximum 10 characters).
  - To skip the input mode, select [Skip](#).

## Operating with TV's remote control

---

You can operate the content in Media Player / media server, recording functions or the connected equipment with the following buttons of this TV's remote control.



Playback (VCR / DVD / video content)



Stop the operations



Rewind, view the picture rapidly in reverse (VCR)

Skip to the previous track, title or chapter (DVD / video content)



Rewind, view the picture rapidly in reverse (VCR)

Search backward (DVD / video content)



Fast-forward, view the picture rapidly forward (VCR)

Skip to the next track, title or chapter (DVD / video content)



Fast-forward, view the picture rapidly forward (VCR)

Search forward (DVD / video content)



Pause / Resume

Press and hold to play at slow speed (DVD)



Start recording (DVD Recorder / VCR)



## ■ How to change the code

Each Panasonic product has its own remote control code. Change the code according to the product for operation.

1. Press and hold Standby On / Off switch during the following operations.



2. Enter the appropriate code as follows with **Numeric buttons**.



- Codes for each product and features

70: DVD Recorder, DVD Player, Blu-ray Disc Player

71: Player theatre, Blu-ray Disc theatre

72: VCR

73 (default):

Using in Media Player, DLNA features or VIERA Link

3. Press  to change.

= Note =

- Confirm if the remote control works correctly after changing the code.
- The codes may be reset to defaults if batteries are replaced.
- Some operations may not be available depending on the equipment.

## HDMI features

---

HDMI (high-definition multimedia interface) is the world's first complete digital consumer AV interface complying with a non-compression standard.

HDMI allows you to enjoy high-definition digital images and high-quality sound by connecting the TV to external equipment.

HDMI-compatible equipment\* with an HDMI or DVI output terminal, such as a DVD player, a set top box or game equipment, can be connected to the HDMI terminal using a fully wired HDMI compliant cable.

 → [Watching > External equipment > External connection](#)

\*: The HDMI logo is displayed on HDMI-compliant equipment.

### ■ Applicable HDMI features

- Input audio signal:

2ch LPCM

- Input video signal:

Matches the output setting of the digital equipment.

 → [Watching > External equipment > Valid input signals](#)

- VIERA Link (HDAVI Control 5)

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)


- Content Type
- Audio Return Channel
  - Audio Return Channel (ARC) is a function to send digital sound signals via an HDMI cable.
  - For HDMI2

## ■ DVI connection

If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adaptor cable. When using the DVI to HDMI adaptor cable, connect the audio cable to the audio input terminal (use COMPONENT / VIDEO audio terminals).

- Enquire HDMI adaptor cable at your local digital equipment retailer shop.

= Note =

- Audio settings can be made on [HDMI Input](#) in the Sound Menu.  
 → [Watching > For best audio > Advanced settings](#)
- If the connected equipment has an aspect adjustment function, set the aspect ratio to “16:9”.
- These HDMI connectors are “type A”.
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- Equipment having no digital output terminal may be connected to the input terminal of component or video to receive analogue signals.
- This TV incorporates HDMI™ technology.

## Valid input signals

---

### ■ COMPONENT, HDMI

Signal name	COMPONENT	HDMI
525 (480) / 60i, 60p	○	○
625 (576) / 50i, 50p	○	○
750 (720) / 60p, 50p	○	○
1 125 (1 080) / 60i, 50i	○	○
1 125 (1 080) / 60p, 50p, 24p		○

○: Applicable input signal

= Note =

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

# For best picture

## Viewing Mode

---

1. Display the menu with **MENU**.
  2. Select **Picture > Viewing Mode** and press **OK** to access.
  3. Select the mode and press **OK** to set.
- 

### Viewing Mode

(**Dynamic** / **Normal** / **Cinema** / **True Cinema** / **Custom**)

Selects your favourite picture mode for each input.

#### **Dynamic:**

Improves contrast and sharpness for viewing in a bright room.

#### **Normal:**

Normal use for viewing in a normal lighting condition.

#### **Cinema:**

Improves the performance of contrast, black and colour reproduction for watching movies in a darkened room.

#### **True Cinema:**

Reproduces the original image quality precisely without any revision.

#### **Custom:**

Adjusts each menu item manually to suit your favourite picture quality.

- The following items can be adjusted and stored for each mode.

**Backlight** / **Contrast** / **Brightness** / **Colour** / **Tint** / **Sharpness** / **Colour Temperature** / **Vivid Colour** / **Adaptive Backlight Control** / **Ambient Sensor** / **Noise Reduction** / **MPEG Noise Reduction**

## Ambient Sensor

---

1. Display the menu with **MENU**.
  2. Select **Picture** > **Ambient Sensor** and press **OK** to access.
  3. Select **On / Off** and press **OK** to set.
- 

### Ambient Sensor

(On / Off)

- Automatic Brightness Control function

Adjusts picture settings automatically depending on ambient lighting condition.

# Aspect

---

Change the aspect ratio (image size) with **ASPECT**.

## ■ To change the aspect ratio manually

1. Display **Aspect Selection** with **ASPECT**.
2. Select the mode and press **OK** to set.
  - You can also change the mode pressing **ASPECT**.  
(Press repeatedly until you reach the desired mode.)

### Auto:

The best ratio is selected automatically according to the “Aspect Control Signal”.

 → Watching > For best picture > Aspect Control Signal

### 16:9:

Directly displays the image at 16:9 without distortion (anamorphic).

### 14:9:

Displays the image at the standard 14:9 without distortion.

### Just:

Displays a 4:3 image full-screen. Stretching is only noticeable at right and left edges.

### 4:3:

Displays the image at the standard 4:3 without distortion.

### Zoom:

Displays a 16:9 letterbox or 4:3 image without distortion.

### 4:3 Full:

Displays a 4:3 image enlarged horizontally to fit the screen.

- For HD (High definition) signals

### Sidecut Just:

Displays a 16:9 letterbox (anamorphic) image full-screen. Stretching is only noticeable at right and left edges.

- For HD (High definition) signals

### Sidecut Zoom:

Displays a 16:9 letterbox (anamorphic) image full-screen without distortion.

- For HD (High definition) signals

= Note =

- Display the image (TV, external input, etc.) full-screen to use this function completely.
- Aspect mode can be memorised separately for SD (Standard definition) and HD (High definition) signals.
- Aspect cannot be changed in teletext service.



# Aspect Control Signal

---

Programmes usually contain an “Aspect Control Signal”. (Widescreen signal, Control signal through SCART / HDMI terminal)

In **Auto** mode, aspect mode will appear in the top left of the screen if a Widescreen signal (WSS) or a Control signal through SCART (pin8) / HDMI terminal is found. The aspect switches to the appropriate ratio.

 → Watching > For best picture > Aspect

## ■ Available conditions

---

### ● Terrestrial terminal (WSS only)

Valid input signal format:

DVB

PAL I

Invalid input signal format:

PAL 525/60 6.0 MHz

M.NTSC 6.0 MHz

---

### ● AV1 (SCART) terminal / AV2 (VIDEO) terminals

Valid input signal format:

PAL

PAL 525/60 \*

M.NTSC \*

NTSC \*

\*: Control signal through SCART (pin 8) / HDMI terminal only

---

### ● AV2 (COMPONENT) terminals (WSS only)

Valid input signal format:

625 (576) / 50i, 50p

Invalid input signal format:

525 (480) / 60i, 60p

750 (720) / 60p, 50p

1 125 (1 080) / 60i, 50i

---

- HDMI terminal

Valid input signal format:

525 (480) / 60i, 60p

625 (576) / 50i, 50p

750 (720) / 60p, 50p

1 125 (1 080) / 60i, 50i

1 125 (1 080) / 60p, 50p, 24p

- HDMI terminal does not receive WSS signal.
- 

= Note =

- If the screen size looks unusual when a widescreen-recorded programme is played back on a VCR, adjust the tracking of the VCR. Read the manual of the VCR.

## Basic settings

---

1. Display the menu with **MENU**.
  2. Select **Picture** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**Backlight / Contrast / Brightness / Colour / Tint / Sharpness / Colour Temperature / Vivid Colour / Adaptive Backlight Control**
  4. Set the item and press **OK** to store.
- 

### **Backlight, Contrast, Brightness, Colour, Tint, Sharpness**

Adjusts the levels of these options according to your personal preference.

---

### **Colour Temperature**

Sets the overall colour tone of the picture (bluer - redder).

---

### **Vivid Colour**

(On / Off)

Automatically adjusts colours to vivid ones.

---

### **Adaptive Backlight Control**

Automatically controls the level of backlight according to the images.

## Noise reduction settings

---

1. Display the menu with **MENU**.
  2. Select **Picture** > **Noise Reduction** / **MPEG Noise Reduction** and press **OK** to access.
  3. Set the item and press **OK** to store.
- 

### Noise Reduction

(Auto / Max / Mid / Min / Off)

Reduces unwanted picture noise.

- Not valid when **1080p Pixel Direct** is set to **On**
- 

### MPEG Noise Reduction

(Auto / Max / Mid / Min / Off)

Reduces flicker noise in contoured parts of a picture and block noise.

- Not valid when **1080p Pixel Direct** is set to **On**

# Advanced Settings

---

You can adjust and set up the detailed picture settings when **Viewing Mode** is set to **Cinema**, **True Cinema** or **Custom**. The settings in **True Cinema** or **Custom** can be stored for each input.

 → **Watching > For best picture > Viewing Mode**

1. Select the input mode with **AV** or **TV**.
2. Display the menu with **MENU**.
3. Select **Picture > Viewing Mode** and press **OK** to access.
4. Select the mode and press **OK** to set.

**Cinema / True Cinema / Custom**

## ■ Adjust the detailed picture settings

1. Display the menu with **MENU**.
2. Select **Picture > Advanced Settings** and press **OK** to access.
3. Select one of the following items and press **OK** to access.

**Contrast Control / White Balance / Colour Management / Gamma / Reset to Defaults**

4. Set the item and press **OK** to store.

## ■ Contrast Control

---

### Contrast Control

(**Custom / Auto / Off**)

Automatically adjusts the detailed contrast settings. Select **Custom** to set **Contrast Control Setting** manually.

---

### Contrast Control Setting

#### **Adaptive Gamma Control:**

Adjusts the gamma curve to make the image brighter.

#### **Black Expander:**

Gradually adjusts the shades of black.

#### **Reset to Defaults:**

Resets items for **Contrast Control Setting**.

## ■ White Balance

---

### [R-Gain / G-Gain / B-Gain](#)

Adjusts the white balance of bright red / green / blue areas.

---

### [R-Cutoff / G-Cutoff / B-Cutoff](#)

Adjusts the white balance of dark red / green / blue areas.

---

### [Reset to Defaults](#)

Resets [White Balance](#) to the default settings.

## ■ Colour Management

---

### [R-Hue / R-Saturation / R-Luminance](#)

Adjusts the picture hue / saturation / luminance of red areas.

---

### [G-Hue / G-Saturation / G-Luminance](#)

Adjusts the picture hue / saturation / luminance of green areas.

---

### [B-Hue / B-Saturation / B-Luminance](#)

Adjusts the picture hue / saturation / luminance of blue areas.

---

### [Reset to Defaults](#)

Resets [Colour Management](#) to the default settings.

## ■ Gamma

---

### [Gamma](#)

Switches the gamma curve.

- Please note the numerical values are reference for the adjustment.
- 

### [Reset to Defaults](#)

Resets [Gamma](#) to the default settings.

## ■ Reset to Defaults

---

### [Reset to Defaults](#)

Resets [Advanced Settings](#) to the default settings.

## Option Settings

---

[Some features are not available on all models. Available menu items are displayed on your TV screen.]

1. Display the menu with **MENU**.
  2. Select **Picture > Option Settings** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**Film Cadence Mode / 1080p Pixel Direct / HDMI Content Type / HDMI RGB Range / 3D-COMB**
  4. Set the item and press **OK** to store.
- 

### Film Cadence Mode

(On / Off)

Improves vertical resolution for movie images.

- This function is available for interlaced signals (except in Network services).
- 

### 1080p Pixel Direct

(On / Off)

Reproduces the original image quality in detail for 1080p (HDMI) input signal.

---

### HDMI Content Type

(Graphics / Photos / Auto / Off)

Adjusts the picture settings of each HDMI input according to the selected content type.

#### Auto:

Automatically adjusts the picture settings according to the received HDMI content if the connected equipment supports HDMI Content Type.

- To set the availability of each content type for Auto mode, select **Auto Detail Setting**.
  - For HDMI
-



## HDMI RGB Range

(Auto / Full / Normal)

Adjusts the black level of the image for each HDMI input.

- When the black level is not suitable, select **Full**.
  - For HDMI
- 

## 3D-COMB

(On / Off)

Makes still or slow moving pictures more vivid.

- Occasionally, while viewing still or slow moving pictures, colour patterning may be seen. Set to **On** to display sharper and more accurate colours.
- For PAL / NTSC signal reception in TV mode or from composite connection

# Screen Settings

---

1. Display the menu with **MENU**.
  2. Select **Picture > Screen Settings** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
[16:9 Overscan](#) / [H-Size](#) / [Zoom Adjustments](#) / [Screen Display](#)
  4. Set the item and press **OK** to store.
- 

## 16:9 Overscan

(On / Off)

Selects the screen area displaying the image for 16:9 aspect.

**On:**

Enlarges the image to hide the edge of the image.

**Off:**

Displays the image in the original size.

- Set to **On** if noise occurs on the edge of the screen.
  - This function can be memorised for SD (Standard definition) and HD (High definition) signals respectively.
  - Not valid for photo content
- 

## H-Size

Switches horizontal picture size.

---

## Zoom Adjustments

Adjusts the vertical position and size when aspect is set to **Zoom**.

---

## Screen Display

(On / Off)

Turns the screen off when you select **Off**.

- This function is effective in reducing power consumption when listening to the sound without watching the TV screen.
- Press any buttons (except Standby On / Off switch) to turn the screen on.

## Copy Adjustment

---

Copies the picture settings of [True Cinema](#) or [Custom](#) to those of the other input mode or Viewing Mode.

1. Display the menu with **MENU**.
2. Select [Picture](#) > [Copy Adjustment](#) > [Destination Viewing Mode](#) / [Destination Input](#) and press **OK** to access.
3. Select the destination to copy to and press **OK** to set.
4. Select [Copy Start](#) and press **OK** to copy.
5. When a confirmation screen is displayed, select [Yes](#) and press **OK** to set.

= Note =

- [Option Settings](#) and [Screen Settings](#) are not copied.

# For best audio

## Sound mode

---

1. Display the menu with **MENU**.
  2. Select **Sound** > **Mode** and press **OK** to access.
  3. Select the mode and press **OK** to set.
- 

### Mode

(**Standard** / **Music** / **Speech** / **User**)

Selects your favourite sound mode for each input.

#### Standard:

Provides the suitable sound quality for all types of scenes.

#### Music:

Improves sound quality for watching music videos, etc.

#### Speech:

Improves sound quality for watching news, drama, etc.

#### User:

Adjusts the sounds manually using the equaliser to suit your favourite sound quality.

- The following items can be adjusted and stored for each mode.

**Bass** / **Treble** / **Surround**

- For the User mode, **Equaliser** is available in the Sound Menu instead of **Bass** and **Treble**. Select **Equaliser** and adjust the frequency.

 → **Watching** > **For best audio** > **Basic settings**

- This function is effective only for the sound from TV speakers.

## Basic settings

---

1. Display the menu with **MENU**.
  2. Select **Sound** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**Bass / Treble / Equaliser / Balance / Surround**
  4. Set the item and press **OK** to store.
- 

### Bass

Adjusts level to enhance or minimise lower, deeper sound output.

---

### Treble

Adjusts level to enhance or minimise sharper, higher sound output.

---

### Equaliser

Adjusts the frequency level to suit your favourite sound quality.

- This function is available when **Mode** is set to **User**.
  - Select the frequency and adjust the frequency level.
  - To enhance the bass sound, raise the level of the lower frequency. To enhance the treble sound, raise the level of the higher frequency.
  - To reset the levels of each frequency to the default settings, select **Reset to Defaults** and press **OK**.
  - This function is effective only for the sound from TV speakers.
- 

### Balance

Adjusts volume level of right and left speakers.

---

### Surround

(On / Off)

Provides a dynamic enhancer of width to simulate improved spatial effects.

- This function is effective only for the sound from TV speakers.

## Volume settings

---

1. Display the menu with **MENU**.
  2. Select **Sound** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**Speaker Setting / Headphone Volume / Auto Gain Control / Volume Correction / Speaker Distance to Wall**
  4. Set the item and press **OK** to store.
- 

### Speaker Setting

(**TV Speaker / Headphones / Off**)

Selects the sound output to adjust volume. Set to **Off** when using the external speakers.

- Sound from TV speaker turns off when **Headphone** or **Off** is selected.
- 

### Headphone Volume

Adjusts the volume of headphones.

---

### Auto Gain Control

(**On / Off**)

Automatically regulates large sound level differences between channels and inputs.

---

### Volume Correction

Adjusts the volume of each individual channel or input mode.

---

### Speaker Distance to Wall

(**Up to 30cm / Over 30cm**)

Compensates for the low frequency sound due to the distance between the speakers and the wall.

- If the back space between the TV and wall is within 30 cm, **Up to 30cm** is recommended.
- If the back space between the TV and wall is over 30 cm, **Over 30cm** is recommended.
- This function is effective only for the sound from TV speakers.

## Voice Guidance Settings

---

1. Display the menu with **MENU**.
  2. Select **Sound** > **Voice Guidance Settings** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**Voice Guidance** / **Speed** / **Volume** / **User Level** / **Web Browser**
  4. Set the item and press **OK** to store.
- 

### Voice Guidance

(On / Off)

Set to **On** to enable voice guidance of the basic features (on-screen messages, etc.) for visually impaired users.

---

### Speed

(Fast / Normal / Slow)

Selects the readout speed for the voice guidance.

---

### Volume

(Max / Mid / Min)

Selects the volume for the voice guidance.

---

### User Level

(Beginner / Expert)

Selects the level of verbosity for the voice guidance.

---

### Web Browser

(On / Off)

Set to **On** to enable voice guidance of the network content in web browser function.

---

= Note =

- Voice guidance function may not correspond exactly.

## Audio Description

---

1. Display the menu with **MENU**.
  2. Select **Sound** > **Audio Description** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**Preferred Audio Type** / **Volume** / **Speakers** / **Headphones**
  4. Set the item and press **OK** to store.
- 

### Preferred Audio Type

(**Audio Description** / **Standard**)

Narration settings for visually impaired users

Set to **Audio Description** to activate the narration sound track when available on the broadcast.

- The availability of audio description sound track is indicated by **AD** in the information banner.
  - For DVB
- 

### Volume

Adjusts the volume for Audio Description.

- For DVB
- 

### Speakers

(**Mix** / **Standard**)

Set to **Mix** to activate the description sound track from TV speakers.

- For DVB
- 

### Headphones

(**Mix** / **Standard**)

Set to **Mix** to activate the description sound track from headphones.

- For DVB



## Advanced settings

---

1. Display the menu with **MENU**.
  2. Select **Sound** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**NICAM / Audio Preference / SPDIF Selection / SPDIF Delay / HDMI Input**
  4. Set the item and press **OK** to store.
- 

### NICAM

(On / Off)

Near Instantaneous Companded Audio Multiplex

Reproduces NICAM stereo sound.

- Set to **Off** if reception is poor. (FM monaural sound)
  - For Analogue
- 

### Audio Preference

(Multichannel / Stereo / MPEG)

Selects the initial setting for audio tracks.

#### Multichannel:

The priority is given to multi-channel audio track.

#### Stereo:

The priority is given to stereo (2ch) audio track.

#### MPEG:

The priority is given to MPEG.

- MPEG is an audio compression method that compresses audio to the smaller size without any considerable loss of audio quality.
  - For digital
  - Ireland only
-

## SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

### Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM.

### PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.
- For DVB, video content

 → [Media Player > Video mode > Audio output settings](#)

 → [Network > Videos > Audio output settings](#)

---

## SPDIF Delay

Adjusts the delay time of the sound output from DIGITAL AUDIO and HDMI2 (ARC function) terminals if the sound does not synchronise the image.

- For digital
  - Ireland only
- 

## HDMI Input

(Digital / Analogue)

Selects to fit the input signal.

 → [Watching > External equipment > HDMI features](#)

### Digital:

When sound is carried via the HDMI cable connection

### Analogue:

When sound is not carried via the HDMI-DVI adaptor cable connection

- For HDMI

# TV Guide

## Using TV Guide

---

**TV Guide** - Electronic Programme Guide (EPG) provides an on-screen listing of the programmes currently broadcast and the forthcoming broadcasts over the next seven days (depending on the broadcaster).

1. Select the mode with **TV**.  
**DVB / Analogue**
2. Display **TV Guide** with **GUIDE**.
  - To change the layout of **TV Guide**, set **TV Guide View**.
    - 1) Display the menu with **MENU**.
    - 2) Select **Setup > TV Guide Settings > TV Guide View** and press **OK** to access.
    - 3) Select **Normal / Full / Info** and press **OK** to set.

### **Normal:**

Default TV Guide screen

### **Full:**


Displays channels and programmes full-screen without the operation guide

### **Info:**

Displays details of the selected programme at the bottom without the operation guide

- To change the type of TV Guide
  - 1) Display the menu with **MENU**.
  - 2) Select **Setup > Display Settings > Banner & TV Guide Selection** and press **OK** to access.
  - 3) Select **Freetime / Panasonic** and press **OK** to set.
- For DVB (UK only)

(Example)

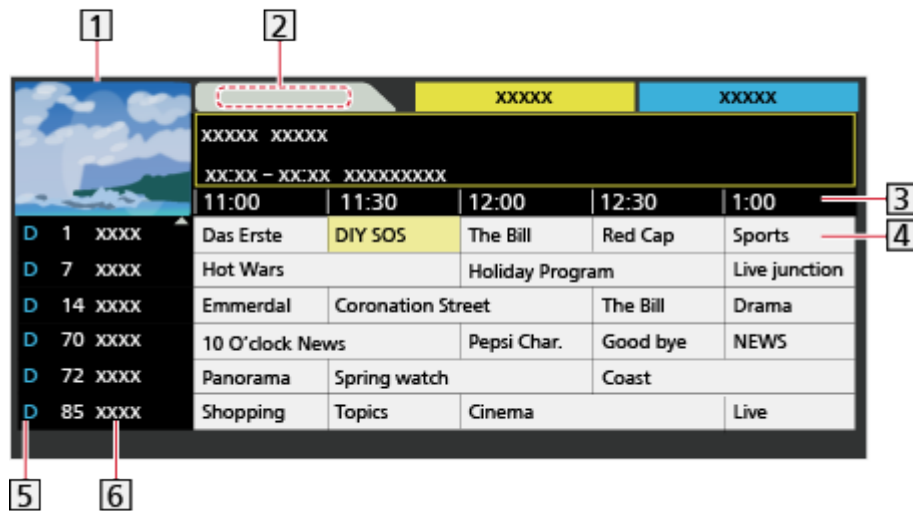

1 TV screen

2 Date

3 Time

4 Programme

5 D (DVB) / A (Analogue)

6 Channel position and name

- To watch the programme

1) Select the current programme.

– The current programme is displayed on the top left of the screen.

2) Press **OK** to watch.

- To the previous day

 (red)


- To the next day

 
 (green)





- To view a channel list of the selected type

1) Display the type list with  (yellow).

2) Select the type and press **OK** to view.

- To search programme titles and view a list of the searched programmes (if available)
  - 1) Display the search list with  (yellow).
  - 2) Select [Search](#) and press **OK** to access.
  - 3) Enter characters with **Cursor buttons** or **Numeric buttons**, and press **OK** to set.



- 4) Press  (green) to start searching.
    - All the programme titles including the word you set are listed.
    - Searching without any characters lists all programmes including current programmes.
- To view a channel list of the selected category
    - 1) Display the category list with  (blue).
    - 2) Select the category and press **OK** to view.
      - To list favourite channels, set [Favourites Edit](#).
-  → [Watching](#) > [Tuning and editing channels](#) > [Favourites Edit](#)
- To view more details of the programme
    - 1) Select the programme.
    - 2) Press  to view.
      - Press again to return to [TV Guide](#).
  - To exit [TV Guide](#)

**EXIT**

= Note =

- When this TV is turned on for the first time, or the TV is switched off for more than a week, it may take some time before TV Guide is completely shown.
- DVB and Analogue channels are displayed on the same TV Guide screen. **D** means DVB channel and **A** means Analogue channel. There is no programme listings for Analogue channels.

# Teletext

## Digital text service

---

Digital text services (MHEG) differ greatly from analogue teletext.

When you switch to a digital text service, the images you see can contain graphics and text, laid out and controlled in a manner decided by the broadcaster.

1. Select **DVB** with **TV**.
  - DVB programmes may have digital text services (MHEG).
2. Switch to a digital text service with **TEXT**.

### ■ How to operate services

In all cases, it is possible to navigate the pages using buttons on the remote control, but because the commands available must apply to all manufacturers of digital equipment, some on-screen commands may not correspond exactly to the remote control buttons.

- To exit a digital text service



**TEXT**

 
= Note =

- As soon as you switch to a digital channel with links to a digital text service, software is downloaded in the background over air to enable the teletext function. This means that when switching to a digital channel, you should wait for approx. 5 seconds before pressing **TEXT** - this allows the software to be downloaded. If you press **TEXT** before download is complete, it will be ignored and you will have to press **TEXT** again when the download is complete.

## Viewing Teletext


---

1. Switch to teletext with **TEXT**.
  - Displays the index page (content varies depending on the broadcaster).
  - Current / sub page numbers are displayed on the top left of the screen.
  - Time / date is displayed on the top right of the screen.
  - Colour bar is displayed on the bottom of the screen.
2. Select the page with **Cursor buttons**, **Numeric buttons** or   (coloured buttons).





- To adjust contrast
  - 1) Press **MENU** twice to display **Contrast**.
  - 2) Adjust and press **OK** to set.
- To exit teletext  
**EXIT**

### ■ Reveal hidden data


1. Press **MENU**.
2. Reveal with  (red).
  - Press again to hide.

### ■ To view a favourite page stored

Press **STTL** to view a favourite page.

- Call up the page stored on  (blue). (List mode)
- Factory setting is "P888" (subtitle service) on  (blue). (List mode)





### ■ FULL / TOP / BOTTOM






1. Press **MENU**.
2. Press  (green) to change the layout.

### ■ Watch TV and teletext in two windows at once

1. Press **TEXT** to view in multi window.
  - Operations can be made only in teletext screen.
2. Press **TEXT** repeatedly to return to TV or teletext.

## ■ Store frequently viewed pages in the colour bar (List mode)



1. Press     (coloured buttons) while the page is displayed.
2. Press and hold **OK**.






- The stored page number changes to white.
- If you use subtitles, do not change number on  (blue).
- To change stored pages
  - 1) Press     (coloured buttons) to change.
  - 2) Enter a new page number with **Numeric buttons**.



- 3) Press and hold **OK**.

## ■ View sub page

The number of sub pages is displayed on the top of the screen. Press  /  to view sub page. (Only when teletext has more than one page.)

- The number of sub pages varies depending on the broadcaster (up to 79 pages).
- Searching may take time while you are watching TV.
- To view a specific sub page
  - 1) Press **MENU**.
  - 2) Press  (blue).
  - 3) Enter the 4-digit number (e.g. P6, press    ).



## Teletext mode

---

Teletext services are the text information provided by the broadcaster.

- The features may vary depending on the broadcaster.
  - The availability of teletext services for a programme is indicated by **TEXT** in the information banner.
1. Display the menu with **MENU**.
  2. Select **Setup > Display Settings > Teletext** and press **OK** to access.
  3. Select **FASTEXT / List** and press **OK** to set.

### ■ FASTEXT mode

In FASTEXT mode, four differently coloured subjects are situated on the bottom of the screen.

To access more information about one of these subjects, press the appropriate coloured button.

This facility enables fast access to information on the subjects shown.

### ■ List mode

In List mode, four differently coloured page numbers are situated on the bottom of the screen. Each of these numbers can be changed and stored in the TV's memory.

 → **Watching > Teletext > Viewing Teletext**

## Teletext Character Set

---

Selects teletext language font.

1. Display the menu with **MENU**.
  2. Select [Setup](#) > [Display Settings](#) > [Teletext Character Set](#) and press **OK** to access.
  3. Select the font and press **OK** to set.
- 

### West:

English, French, German, Greek, Italian, Spanish, Swedish, Turkish, etc.

### East1:

Czech, English, Estonian, Lettish, Rumanian, Russian, Ukrainian, etc.

### East2:

Czech, Hungarian, Lettish, Polish, Rumanian, etc.

- Ireland only

# Tuning and editing channels

## Setting menu

---

You can retune channels, edit channel lists, create your favourite channel lists, etc.

1. Select the mode with **TV**.

[DVB / Analogue](#)

2. Display the menu with **MENU**.

3. Select [Setup](#) > [Tuning Menu](#) and press **OK** to access.

[DVB Tuning Menu / Analogue Tuning Menu](#)

- The menu name varies depending on the TV mode.

4. Select one of the functions and press **OK** to access.

[Favourites Edit](#) / [Channel List](#) / [Auto Setup](#) / [Channel Sorting by Region](#)  
[/ Manual Tuning](#) / [Update Channel List](#) / [New Channel Message](#) / [Signal Condition](#) / [Add New Channels](#) / [Add TV Signal](#)

- The function items vary depending on the TV mode and country you select.





# Favourites Edit

---

## ■ List favourite DVB channels


Create your favourite channel lists from various broadcasters (up to 4: [Favourites 1 to 4](#)).

The DVB favourites lists are available for switching in the information banner and from [Category](#) in the TV Guide screen.



1. Select [Favourites Edit](#) and press **OK** to access.
2. Select a channel to list from all DVB channels.
  -  appears when the channel is encrypted.
  - To display other favourites
    -  (green)
3. Press **OK** to add it to favourites list.
  - To add all channels to the list (if available)
    - 1) Press  (yellow).
    - 2) Press  (green) to add all.
4. Press **BACK/RETURN** and **OK** to store.

## ■ Edit DVB favourites list

You can edit the favourites list while the cursor is on the channel in the favourites list.

- To move the channel
  - 1) Select the channel.
  - 2) Press  (green).
  - 3) Select the new position with **Cursor buttons** or select the turn with **Numeric buttons**.

 


- 4) Press  (green) to store.
- To delete the channel
    - 1) Select the channel.
    - 2) Press **OK** to delete.
      - Press  (yellow) to delete all channels.

- To name the favourites

1) Press  (red).


2) Enter characters (maximum 10 characters) with **Cursor buttons** or **Numeric buttons**, and press **OK** to set.



3) Press **BACK/RETURN** to store.

= Note =

- Channel position numbers (known as logical channel numbers) can be swapped in [Channel List](#).

 → [Watching > Tuning and editing channels > Channel List](#)

# Channel List

---

## ■ Skip unwanted channels

You can hide (skip) unwanted channels. The hidden channels cannot be displayed except in this function.

1. Select **Channel List** and press **OK** to access.
2. Select a channel.
3. Press **OK** to set **Reveal / Hide** (skip).

: **Reveal**

: **Hide** (skip)


- To reveal all channels (if available)

 (yellow)

## ■ Edit DVB / Analogue Channels

- To swap the channel position number (logical channel number)

1) Press  (green) to edit.

2) Enter the new position number with **Numeric buttons**, and press  (green) to store.



- To retune each channel (**Manual Tuning**)

 
 (red)

- Only for the revealed channels

- To rename the channel name (Analogue)

1) Press  (blue) to edit.

2) Enter characters (maximum 5 characters) with **Cursor buttons** or **Numeric buttons**, and press **OK** to set.



3) Press **BACK/RETURN** to store.

= Note =

- If a VCR is connected only with the RF cable in Analogue, edit **VCR**.

# Auto Setup

---

Automatically retunes the channels received in the area.

- This function is available if channel tuning is already performed.
- Only the selected mode is retuned. All the previous tuning settings are erased.
- Child Lock PIN number is required to retune locked channels.

 → [Functions > Child Lock > PIN number](#)

- If tuning has not been done completely, set [Manual Tuning](#).

 
 → [Watching > Tuning and editing channels > Manual Tuning](#)

## ■ DVB, Analogue

1. Select [Auto Setup](#) and press **OK** to access.
2. A confirmation screen is displayed and press **OK** to start [Auto Setup](#). (Settings are made automatically.)
  - When the operation is completed, the channel at the lowest position will be displayed.

## ■ Auto Setup using the buttons on the TV

1. Press and hold INPUT/OK/HOLD for MENU button for 3 seconds to display the menu.
  2. Set [Auto Setup](#) with following control panel buttons.
- Move the cursor / select from a range of options / select the menu item



- Access the menu / store settings after adjustments have been made or options have been set with INPUT/OK/HOLD for MENU button

## Channel Sorting by Region

---

You can sort DVB channels so that those with the best signal quality, or those for your preferred region, appear nearer the top of your channel list. (UK only)

1. Select the region and press **OK** to access.
2. Select repeatedly until you reach the available region.
  - Normally, you should select [Best signal quality \(All Regions\)](#).
  - If you choose to select your preferred region, you could find channels with a weaker signal appear nearer the top of your channel list. If you have any image or sound problems, select [Best signal quality \(All Regions\)](#) instead.



## Manual Tuning

---

- Normally use [Auto Setup](#) or [Update Channel List](#) to retune DVB channels.
- If tuning has not been done completely or for adjusting the direction of the aerial, use this function. (DVB)
- All DVB channels found are added to [Channel List](#).

### ■ DVB (UK only)

1. Select [Frequency](#).
2. Press **OK** to search.
  - All channels found are added to [Channel List](#).

### ■ DVB (Ireland only)

1. Select a channel and adjust frequency for each channel.
  - Set where the level of [Signal Quality](#) becomes the maximum.
2. Press **OK** to search.

### ■ Analogue

Set Analogue channel manually after [Auto Setup](#).

1. Select the channel position with **Numeric buttons**.



2. Select the channel with **Channel Up / Down**.



3. Set [Manual Tuning](#).
4. Select [Store](#) and press **OK** to set.
  - Use [Fine Tuning](#) to make small adjustments to the tuning of an individual programme (affected by weather conditions, etc.).
    - Ireland only
  - If a VCR is connected only with the RF cable, select channel position **0**.

## Update Channel List

---

By updating the DVB channel list, you can add new channels, delete removed channels or change channel names and positions automatically.

- The channel list is updated while keeping your settings in [Favourites Edit](#), [Channel List](#), [Child Lock](#), etc.
- Depending on the signal condition, the update may not work properly.

## New Channel Message

---

Selects whether to give a notification message when a new DVB channel is found or not.

- When a notification message appears, you can perform [Update Channel List](#) pressing **OK**.

## Signal Condition

---

Selects a channel and checks the signal condition with indicators.

- A good Signal Strength is not an indication of suitable signal reception.
- Vertical lines show the maximum signal value of the selected channel.
- To change the channel



- For DVB

## Other settings

---

### Add TV Signal

Adds the TV mode.

- Allows you to add any TV mode which was skipped during initial [Auto Setup](#).

# Media Player

## Using Media Player

### Information

---

Media Player allows you to enjoy photo, video or music recorded on the USB Flash Memory / network device.

(Example)



Photo mode:

Still pictures recorded with digital cameras are displayed.

Video mode:

Moving pictures recorded with digital video cameras and digital video data are played back.

Music mode:

Digital music data are played back.

- During the operation, audio signal is output from DIGITAL AUDIO and HDMI2 (ARC function) terminals. But no video signals are output. To use HDMI2 with ARC function, connect an amplifier that has ARC function and set to use theatre speakers.

 → [Functions > VIERA Link "HDAVI Control™"](#)

- **Date** shows the date on which the recording was made by the recording equipment. For a file without a valid record date “\* \*” is shown.
- Pictures may not appear correctly on this TV depending on the recording equipment used.
- Displaying may take some time when there are many files and folders.
- Partially degraded files may be displayed with reduced resolution.
- Picture setting may not work depending on the condition.
- Folder and file names may be different from those on the digital camera or digital video camera used.



## ■ To insert or remove the USB Flash Memory

Ensure alignment is straight and complete when inserting or removing.



- To remove the USB Flash Memory safely from the TV, perform [Safely remove USB](#) in [USB Device Setup](#).
  - 1) Display the menu with **MENU**.
  - 2) Select [Setup](#) > [USB Device Setup](#) and press **OK** to access.
  - 3) Select the device and press **OK** to set.

= Note =

- Check the terminal type and devices are correct for connection.
- For details of the devices
  -  → [Media Player > Technical information](#)
- For details of supported file formats
  -  → [Media Player > Technical information](#)

## Selecting device / mode

---

1. Insert the USB Flash Memory to the TV.

 → Media Player > Using Media Player > Information

- To play back content in the network device, ensure the connection and settings are completed.

 → Media Player > Using Media Player > Network device

2. Display APPS List with **APPS**.

3. Select **Media Player** and press **OK** to access.

4. Select the device and press **OK** to access.

- If only one device is connected, this step will be skipped.
- The network device already connected to the TV is also displayed.

 : Enter **User / Password** to access.

 : **User / Password** are already entered.

5. Select **Photo / Video / Music** and press **OK** to access.

### Photo

 → Media Player > Photo mode

### Video


 → Media Player > Video mode

### Music

 → Media Player > Music mode

6. The thumbnail view is displayed.

(Example)

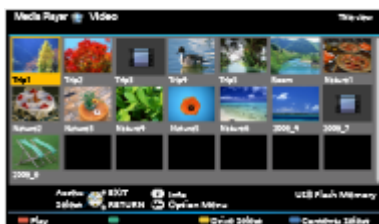

- To display / hide information of the highlighted content





= Note =

- You may also access each mode directly from APPS List.

 → Home Screen > APPS List > How to use


- Select the appropriate device and content for playing back each file.
- You can use the following buttons during playback. Confirm the remote control code is “73”.



 → Watching > External equipment > Operating with TV's remote control


### ■ To change the device

You can change the current device to another device directly in the same mode when two or more available devices are connected.

1. Display the device selection screen with  (yellow) while the thumbnail is displayed.
2. Select the device and press **OK** to access.

### ■ To change the mode

You can switch to another mode of Media Player from the thumbnail view.

1. Display the content selection screen with  (blue) while the thumbnail is displayed.
2. Select the content and press **OK** to access.
  - The mode can be switched in the current device.

## Network device

---

You can enjoy photo, video or music stored in the network devices.

 
- To enable this function, connect this TV to your home network.

 → Network > Network connections

 → Network > Network settings

### ■ How to set User / Password

1. Display the menu with **MENU**.
2. Select **Network** > **File Sharing Settings** > **Network Device List** and press **OK** to access.
3. Select the network device and press **OK** to access.
4. Enter **User** / **Password** with **Cursor buttons** or **Numeric buttons** and press **OK** to set.



- Press **BACK/RETURN** to store.
  - To register the new network device, set **Server Name** / **Shared Folder**. For details, read the manual of the equipment.
5. Select **Register** and press **OK** to set.
    - To delete the registered device, select **Delete** and press **OK** to set.

= Note =


- Regarding performance, not all servers are guaranteed.
- Up to 16 devices can be registered.

# Photo mode

## Selecting file

---

Select the file in the thumbnail view and press **OK** to start playback.

 : Error display

- To change the size of photos in the thumbnail view
  - 1) Display the option menu with **OPTION**.
  - 2) Select **Change Size** and press **OK** to change.
- For details of supported file formats

 → [Media Player > Technical information > Photo format](#)

## ■ Thumbnail view

- To display / hide information of the highlighted content



- To display [Slideshow Settings](#)

 (red)

 → [Media Player > Photo mode > Using Slideshow](#)


- To sort

 (green)

- To change the device

 (yellow)



- To change the content

 (blue)

## Viewing photo

---


### ■ Playback

- To operate Single view
  - ◀ : To the previous photo
  - ▶ : To the next photo
  - ▽ : Stop (return to thumbnail)
  - OK : Slideshow
- To display / hide the operation guide
  - 
- To rotate 90°
  -  (blue)
- To return to thumbnail
  - BACK/RETURN

## Sorting photos

---

### ■ To sort by folder, recorded date or recorded month

1. Display the view selection in the thumbnail view with  (green).
2. Select [Folder view](#) / [Sort by Date](#) / [Sort by Month](#) and press **OK** to set.


#### [Folder view](#):

Displays the thumbnail grouped by folder.

- Files which are in the root folder are collected to the folder named "P".

#### [Sort by Date](#) / [Sort by Month](#):



Displays the thumbnail grouped by the same date or month.

- The group of the photos without recorded dates is shown as [Unknown](#).
- To return to the thumbnail of all photos
    - 1) Display the view selection in the thumbnail view with  (green).
    - 2) Select [All photos](#) and press **OK** to set.

## Using Slideshow

---

Slideshow ends when all photos within the current thumbnail are viewed.

1. Select the file from the thumbnail of photos for the first view.
2. Start Slideshow with  (red) and **OK**.
  - To display / hide the operation guide  

  - To pause (return to Single view)  
**OK**
  - To return to thumbnail  
**BACK/RETURN**
  - You can change the back ground music by setting [Back Ground Music](#) in [Slideshow Settings](#) (see below).

## ■ Slideshow Settings

Set up the settings for Photo mode.

1. Display the option menu with **OPTION**.
2. Select **Slideshow Settings** with **OK**.
3. Select one of the following items and press **OK** to access.

**Frame / Colour Effect / Transition Effect / Auto Makeup / Aspect / Burst Playback / Interval / Repeat / Back Ground Music**

4. Set the item and press **OK** to store.
- 

### Frame

(Off / Multi / Collage / Drift (+ calendar) / Drift / Gallery (+ calendar) / Gallery / Cinema)

Selects the frame type of the slideshow.

#### Multi:

9 photos are displayed orderly at once.

#### Collage:

Each photo is displayed at a random position and random scale.

#### Drift (+ calendar) / Drift:

Photos are displayed with flow images.

- You can select whether to display the calendar or not. Press ◀ / ▶ to change the month of calendar.

#### Gallery (+ calendar) / Gallery:

Various sizes of photos in the frames are displayed.

- You can select whether to display the calendar or not. Press ◀ / ▶ to change the month of calendar.

#### Cinema:

Photos are displayed as old films (sepia tone).

---

### Colour Effect

(Off / Sepia / Gray scale)

Selects the colour effect of photos.

- Not valid when **Frame** is set to **Drift**, **Gallery** or **Cinema**
-

## Transition Effect

(Off / Fade / Dissolve / Motion / Random)

Selects the transition effect for switching photos during the slideshow.

### Fade:

The next photo fades in gradually.

### Dissolve:

Each photo is dissolved when switching to the next photo.

### Motion:

Each photo is displayed with an effect of enlarging, reducing, moving up or moving down.

### Random:

The transition effect is selected at random.

- This function is available when **Frame** is set to **Off**.
- 

## Auto Makeup

(On / Off)

Automatically detects the face in the photo and improves luminance and contrast.

---

## Aspect

(Original / Zoom)

Selects enlarged or normal viewing.

- Not valid when **Transition Effect** is set to **Motion**
  - Not valid in the following conditions:
    - **Frame** is set to **Collage**, **Drift**, **Gallery**, **Cinema**.
    - **Transition Effect** is set to **Motion**.
  - Depending on the photo size, the photo may not be fully enlarged to fill the screen (e.g. portrait style picture).
-



## Burst Playback

(On / Off)

Selects whether to display burst photos in a fast-paced slideshow mode or not.

- Not valid in the following conditions:
    - **Frame** is set to **Drift**, **Gallery**, **Cinema**.
    - **Transition Effect** is set to **Motion**.
  - Not valid when **Frame** is set to **Drift**, **Gallery** or **Cinema**
- 

## Interval

(Long / Normal / Short)

Selects slideshow interval.

- Not valid when **Transition Effect** is set to **Motion**
  - Not valid when **Frame** is set to **Drift**, **Gallery** or **Cinema**
- 

## Repeat

(On / Off)

Slideshow repeat

---

## Back Ground Music

(Off / Type1 / Type2 / Type3 / Type4 / Type5 / User / Auto)

Selects the background music during Photo mode.

### Type1 - 5:

Music files installed on this TV at the factory settings are played back.

### Auto:

Music files stored in the current device are played back.

- If there is no available music data, no sound is played back.

### User:

Music files in the device registered by yourself are played back.

- If no music files have been registered or the device which had registered music files is removed, no sound is played back.

### ● To register music

1) Select the music file and press **OK** to access.

- Depending on the condition of the device, select folders until you reach the desired music file.

2) Select **File** / **Folder** and press **OK** to set.

### File:

The selected music file is registered.

### Folder:

All the music files in the folder which contains the selected music file are registered.

---

= Note =

- Picture quality may be degraded depending on the slideshow setting.
- Picture setting may not work depending on the slideshow setting.

# Video mode

## Selecting file

---

1. Select the title in the thumbnail view.

 : Error display

 : The file does not support thumbnail view.

- The preview will start when the title / scene is highlighted in the thumbnail view if it supports a preview. To turn off the preview, set [Video Preview](#) to [Off](#).

 → [Media Player > Video mode > Video Setup](#)

2. Start playback with  (red).

- If you have stopped the last playback halfway, a confirmation screen may be displayed to select whether to start from where you stopped last time or from the beginning.
- For details of supported file formats

 → [Media Player > Technical information > Video format](#)

### ■ Thumbnail view

- To display / hide information of the highlighted content



- To start playback

 (red)

- To change the content

 (blue)

- To change the device


 (yellow)

## Watching video

---




### ■ Playback from the selected scene in the title

Playback of the selected scene starts and continues until the end of the title.

1. Select the title and press **OK** to access.
2. Select the scene.
3. Start playback with  (red).
  - The structure of titles and scenes may vary depending on the digital video camera used.
  - Playback may not continue depending on the condition.
  - To repeat playback

 → Media Player > Video mode > Video Setup

### ■ Playback

- To operate playback
  - ◀ : Rewind
  - ▶ : Fast forward
  - ▽ : Stop
  - OK** : Pause (displays the time seek bar) / Playback
- To jump to the specified time point
  - 1) Display the time seek bar with **OK**.
  - 2) While the time seek bar is displayed
    - Press ◀ / ▶ :
    - Search approx. 10 seconds
    - Press and hold ◀ / ▶ :
    - Search rapidly
  - 3) Jump to the specified time point with **OK**.
- To display / hide the operation guide and information banner
  - 
- To the previous title / scene
  -  (red)
- To the next title / scene
  -  (green)

- To change aspect
  - 1) Display **Aspect Selection** with **ASPECT**.
  - 2) Select the mode and press **OK** to set.
    - Aspect1:**

Displays the content enlarged without distortion.
    - Aspect2:**

Displays the content full-screen.
    - Original:**

Displays the content in original size.
- You can also change the mode pressing **ASPECT**. (Press repeatedly until you reach the desired mode.)
- Aspect cannot be changed depending on the content.
- To return to thumbnail  
**BACK/RETURN**

## Video Setup

---

Set up the settings for Video mode.

1. Display the option menu with **OPTION**.
  2. Select [Video Setup](#) with **OK**.
  3. Select one of the following items and press **OK** to access.  
[Video Preview](#) / [Multi Audio](#) / [Dual Mono Audio](#) / [Repeat](#) / [Subtitle Settings](#)
    - Menu items and selectable options vary depending on the content.
  4. Set the item and press **OK** to store.
- 

### [Video Preview](#)

([On](#) / [Off](#))

Sets to start the preview of the title or scene in the thumbnail view.

- Images may not be displayed for an instant in the thumbnail view. Set the preview [Off](#) to solve this.
  - This function is available in the thumbnail view.
- 

### [Multi Audio](#), [Dual Mono Audio](#)

Selects for selectable sound tracks (if available).

- It may take several seconds to change the sound.
  - This function is available during playback.
- 

### [Repeat](#)

([On](#) / [Off](#))

Playback repeat within the title or selected file (depending on the content)

---

## Subtitle Settings

Sets the subtitle setting.

- This function is available during playback.

### Subtitle:

Display / hide subtitles (if available).

### Subtitle Text:

Selects the font type to display subtitles correctly (if available).

### Subtitle Text Size:

Selects the font size of subtitles.

### Subtitle Text Colour:

Selects the colour of subtitles.

### Subtitle Text Position:

Adjusts the position of subtitles on the screen.

### Subtitle Text Delay:

Adjusts the delay time for the subtitles.

## Audio output settings

---

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status

 → Media Player > Video mode > Video Setup

1. Display the menu with **MENU**.
  2. Select **Sound** > **SPDIF Selection** and press **OK** to access.
  3. Select **Auto** / **PCM** and press **OK** to set.
- 

### SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

#### Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM.

#### PCM:

Digital output signal is fixed to PCM.


- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.



# Music mode

## Selecting file

---

1. Select the folder in the thumbnail view.
2. Start playback with  (red).

- For details of supported file formats



→ [Media Player > Technical information > Music format](#)

### ■ Thumbnail view

- To display / hide information of the highlighted content



 
- To start playback



- To change the device




- To change the content



## Playing music

---

### ■ Playback of the selected file in the folder


1. Select the folder and press **OK** to access.
2. Select the file.
3. Start playback with  (red).

### ■ Playback

- To operate playback

 : Rewind

 : Fast forward

 : Stop

**OK** : Pause (displays the time seek bar) / Playback



- To jump to the specified time point

1) Display the time seek bar with **OK**.

2) While the time seek bar is displayed

Press  /  :

Search approx. 10 seconds

Press and hold  /  :

Search rapidly

3) Jump to the specified time point with **OK**.

- To display / hide the operation guide



- To the previous track

 (red)

- To the next track

 (green)

- To return to thumbnail

**BACK/RETURN**

## Music Setup

---

Set up the setting for Music mode.

- This function is available in the thumbnail view.
1. Display the option menu with **OPTION**.
  2. Select **Music Setup** > **Repeat** with **OK**.
  3. Select **Off / Folder / One** and press **OK** to set.

### Folder:

Playback repeat within the selected folder

### One:

Playback repeat of the selected one file

# Technical information

## Device handling caution

---

- Data modified with a PC may not be displayed.
- Do not remove the device while the TV is accessing data. Otherwise this can damage the device or TV.
- Do not touch the pins on the device.
- Do not subject the device to a high pressure or impact.
- Insert the device in the correct direction. Otherwise this can damage the device or TV.
- Electrical interference, static electricity, or erroneous operation may damage the data or device.
- Back up the recorded data at regular intervals to prevent data deterioration, data damage or erratic operation of the TV. Panasonic is not liable for any deterioration or damage of recorded data.

## USB devices

---

- It is recommended to connect the device to the TV's USB port directly.
- Some USB devices or USB HUB may not be used with this TV.
- You cannot connect any devices using a USB card reader.

### ■ USB Flash Memory

USB Flash Memory format:

FAT16, FAT32 or exFAT

- USB HDDs formatted on a PC are not guaranteed to work in Media Player.

# Photo format

---

## ■ Supported Photo formats

---

- JPEG (.jpg, .jpeg)

Sub-sampling:

4:4:4, 4:2:2, 4:2:0

Image resolution (pixel):

8 × 8 to 30 719 × 17 279

- DCF and EXIF standards
  - Progressive JPEG is not supported.
- 

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

# Video format

---

## ■ Supported Video formats

---

- AVI (.avi)

Video codec:

H.264, MPEG1, MPEG2, MPEG4, VC-1, WMV9

Audio codec:

AAC, ADPCM, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3, WMA, WMA Pro

---

- MP4 (.f4v, .m4v, .mp4)

Video codec:

H.264, MPEG1, MPEG2, MPEG4

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MP3

- This TV supports this container recorded with Panasonic products. For details, read the manual of the products.
- 

- MKV (.mkv)

Video codec:

H.264, MPEG1, MPEG2, MPEG4

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MP3, Vorbis

---

- ASF (.asf, .wmv)

Video codec:

MPEG4, VC-1, WMV9

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3, WMA, WMA Pro

- Copy-protected files cannot be played back.
-

- FLV (.flv)

Video codec:

H.264

Audio codec:

AAC, MP3

---

- 3GPP (.3gp, .3g2)

Video codec:

H.264, MPEG4

Audio codec:

AAC, HE-AAC

---

- PS (.mod, .mpg, .mpeg, .vob, .vro)

Video codec:

H.264, MPEG1, MPEG2, VC-1

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3

---

- TS (.mts, .m2ts, .tp, .trp, .ts, .tts)

Video codec:

H.264, MPEG1, MPEG2, VC-1

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MP3



## ■ Supported Subtitles formats

---

- MicroDVD, SubRip, TMLPlayer (.srt, .sub, .txt)
    - The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
    - If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt”, “.sub”, “.txt”.
- 

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Some subtitles or chapter functions may not be available.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.
- Supported formats are different in Media Player and media server.

# Music format

---

## ■ Supported Music formats

---

- MP3 (.mp3)

---

- AAC (.m4a)

- Copy-protected files cannot be played back.
- 

- FLAC (.flac)

---

- WMA / WMA Pro (.wma)

- Copy-protected files cannot be played back.
- 

- LPCM (.wav)

---

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

# Network

## Internet content

### Information

---

You can access some specific websites supported by Panasonic, and enjoy internet content such as videos, games, communication tools, etc. from APPS List.

(Example)



- A broadband network environment is required to use this function. Ensure the network connections and network settings are completed.

 → [Network > Network connections](#)

 → [Network > Network settings](#)

## Selecting internet content

---

### 1. Display APPS List with **APPS**.

- For details of APPS List

 → Home Screen > APPS List

- Depending on the usage conditions, it may take a while to read all the data.

### 2. Select the desired item and press **OK** to access.

(Example)



- To return to APPS List

**APPS**

- To exit APPS List

**EXIT**

- You can connect a keyboard for character input in the applications. You can also use the keyboard for TV operation.

 → Functions > Keyboard

## Note

---

- If you cannot access the internet content, check the network connections and settings.

 → Network > Network connections

 → Network > Network settings

- Design and specifications are subject to change without notice.
- Not all the features of the websites are available.
- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you may not be able to use APPS List. You can update the software later manually.

 → Network > Network settings > Software Update

- The services through APPS List are operated by their respective service providers and such service may be discontinued either temporarily or permanently without notice. Therefore, Panasonic will make no warranty for the content or the continuity of the services.
- Content may not be available depending on the country you select.
- Content may be presented in specific languages.
- Depending on the connection environment, the internet connection may be slow or may not be successful.

# DLNA

## In-House streaming

---

This TV is a DLNA Certified™ product.

DLNA® (Digital Living Network Alliance) is a standard that makes DLNA Certified digital electronics easier and more convenient to use on a home network. To learn more, visit [www.dlna.org](http://www.dlna.org).

- To enable this function, connect this TV to your home network.


 → [Network > Network connections](#)

 → [Network > Network settings](#)

### ■ Playback of sharing content stored in the media server

Store photo, video or music content into the DLNA Certified media server (for example, PC, DIGA Recorder, etc.) connected to your home network. And then you can enjoy the content on this TV.

(Example)

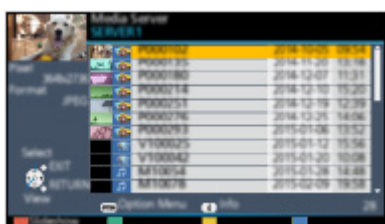

- For details of watching and operating content on this TV

 → [Network > DLNA > Using DLNA](#)

- For details of supported file formats

 → [Network > Technical information](#)

- To use a DLNA compatible DIGA Recorder as a media server

By connecting a DLNA compatible DIGA Recorder to your home network, you can control it as one of the media servers.

- Please read the manual of your DIGA Recorder to check if the recorder is compatible with DLNA.

## ■ Playback of sharing content on this TV with the DMC (Digital Media Controller) network equipment

You can enjoy content stored in the media server by controlling with the DMC network equipment (smartphone, PC, etc.) connected to your home network.

- To use this function with your smartphone or PC, set [TV Remote App Settings](#) of this TV.

 → [Network > Network settings > TV Remote App Settings](#)

And you need to install the application for controlling VIERA on your smartphone.

 → [Support > FAQs > Detailed information](#)

For the operations, refer to the support information of the application.

## ■ Sharing the content of this TV with another piece of network equipment

You can enjoy the content of this TV with another network equipment connected to your home network.

Available content:

- Photo, video or music content of this TV

Available network equipment:

- DLNA Certified VIERA
- To use this function with another DLNA Certified VIERA, set [Network Link Settings](#) of this TV.

 → [Network > Network settings > Network Link Settings](#)

- Only 1 piece of other equipment can share the content of this TV.

= Note =

- To use this function, turn this TV on.

# Using DLNA

To use DLNA® features, ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > In-House streaming

 → Network > Network connections


 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** and press **OK** to access.
3. Select one of the media servers and press **OK** to access.
  - For the operations to access another TV, select the name of another TV from the displayed media server list.
  - To display / hide information of the highlighted media server



4. Select the file and press **OK** to access.

(Example)

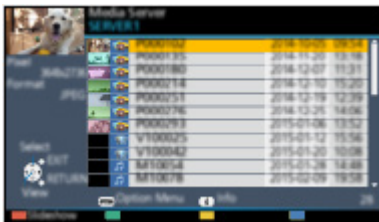


- Depending on the condition of media server, you may need to select the folder before selecting the file.
- To display / hide information of the highlighted file



= Note =

 - Non-playable files are also listed but cannot be selected.
- You can use the following buttons during playback. Confirm the remote control code is “73”.



 → Watching > External equipment > Operating with TV's remote control



# Network connections

## Internet connection

---

A broadband network environment is required to use internet services.

- If you do not have any broadband network services, please consult your retailer for assistance.
- Dial-up internet connections cannot be used.
- Required speed (effective): at least 1.5 Mbps for SD (Standard Definition) and 6 Mbps for HD (High Definition) picture quality, respectively. If the transfer speed is not enough, content may not be played back properly.

### ■ Wireless connection



1 Built-in wireless LAN (Rear of the TV)

2 Access point

3 Internet environment

### ■ Wired connection



1 ETHERNET terminal

2 LAN cable (Shielded)

- Use Shielded Twist Pair (STP) LAN cable.

3 Internet environment


## DLNA connection

To use DLNA features, you need a home network environment and you can operate the features without a broadband network environment.

- A broadband network environment is required to use internet services.


 → [Network > Network connections > Internet connection](#)

### ■ Wireless connection (For DLNA and internet service)

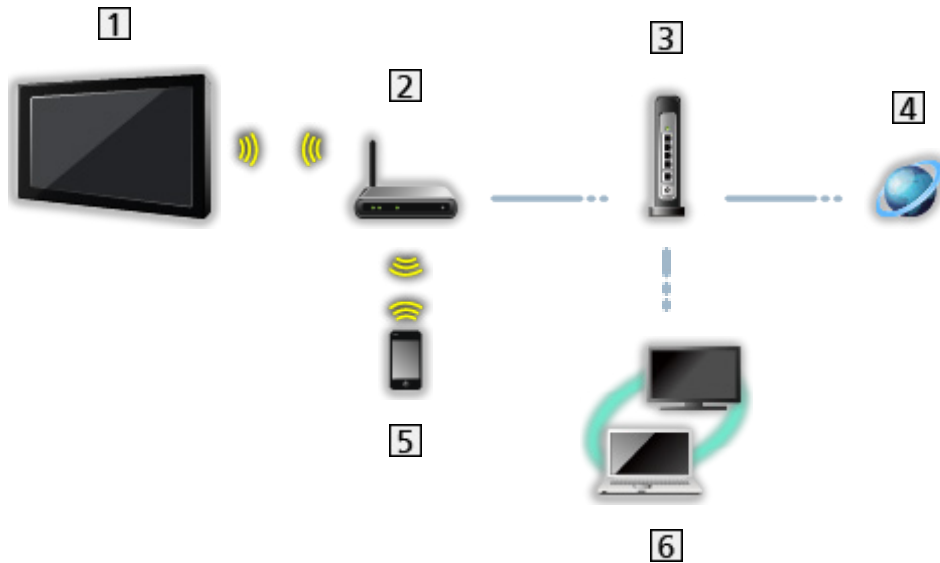

- 1 Built-in wireless LAN (Rear of the TV)
- 2 Access point
- 3 Hub / Router
- 4 Internet environment
- 5 Smartphone, etc.
- 6 DLNA Certified media server (PC, etc.)

## ■ Wired connection (For DLNA and internet service)

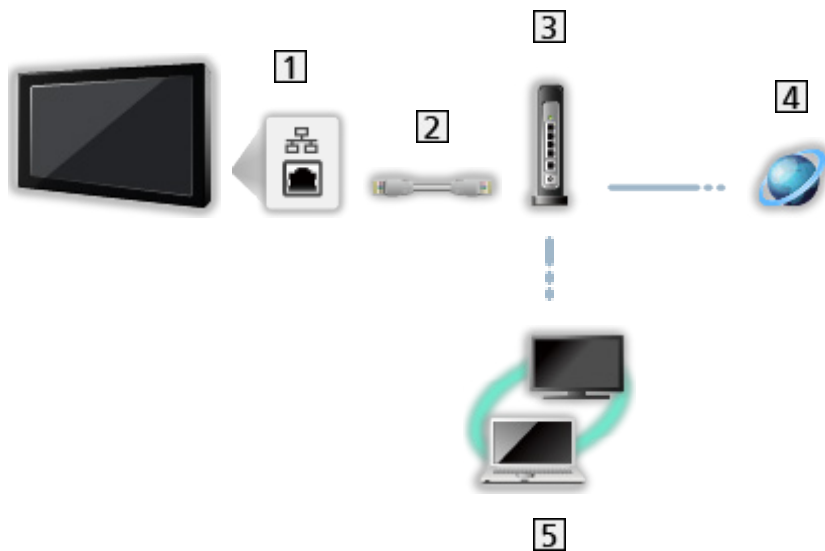

1 ETHERNET terminal

2 LAN cable (Shielded)


- Use Shielded Twist Pair (STP) LAN cable.

3 Hub / Router

4 Internet environment

5 DLNA Certified media server (PC, etc.)

## ■ Wireless connection (For DLNA)

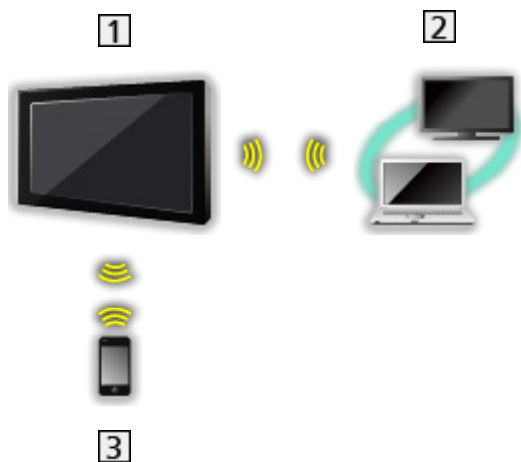

1 TV

- To use the TV as a wireless access point

 → Network > Network settings > Custom - Wireless Access Point

2 DLNA Certified media server (PC, etc.)

3 Smartphone, etc.

## Note

---

- Ensure to use a LAN straight cable.
- Set up and connect equipment required for the network environment. You cannot make such settings on this TV. Read the manual of the equipment.
- If your modem has no broadband router functions, use a broadband router.
- If your modem has broadband router functions but there are no vacant ports, use a hub.
- Ensure that the broadband routers and hubs are compatible with 10BASE-T / 100BASE-TX.
- If you use the equipment compatible only with 100BASE-TX, category 5 or later LAN cables are required.
- Contact your Internet Service Provider (ISP) or telecommunications company for further assistance regarding the network equipment.
- Confirm the terms and conditions of the contracts with your Internet Service Provider (ISP) or telecommunications company. Depending on the contracts, additional fees may be charged or multiple connections to the internet may be impossible.
- Turn the TV off with Mains Power On / Off switch, and then on again when changing or making the network connection again.
- Depending on the network condition, the content may not be played back properly.

# Network settings


## Network Connection

---

Ensure the connections are completed before starting network setup.

 → Network > Network connections

### ■ Quick setup - Wireless

1. Display the menu with **MENU**.
2. Select **Network** > **Network Connection** and press **OK** to access.
  - Confirm the encryption key, settings and position of your access point before starting setup. For details, read the manual of the access point.
3. Select **Quick setup** and press **OK** to access.
  - When the LAN cable is connected, wired setup will be done automatically.
4. Select your desired access point and press **OK** to access.
  - Available Wireless Networks are displayed automatically.
    -  : Encrypted access point
  - For WPS(Push button)
    - 1) Select **Easy setup with Push button** and press **OK** to access.
    - 2) Press the WPS button on the access point until the light flashes.
    - 3) Connect the TV with the access point with **OK**.
      - WPS: Wi-Fi Protected Setup™
      - If the connection fails, check the settings and positions of your access point. And then, follow the on-screen instructions.
  - It is recommended to select the encrypted access point.
5. Enter the encryption key of the access point and press **OK** to set.
  - You can set characters using **Numeric buttons**.



- Press **BACK/RETURN** to store.
6. Automatically setup is done and **Network Status** is displayed.

 → Network > Network settings > Network Status

7. Select **Exit** and press **OK** to set.

- To set manually

 → Network > Network settings > Custom - Wireless


## ■ Quick setup - Wired

1. Display the menu with **MENU**.
2. Select **Network** > **Network Connection** and press **OK** to access.
3. Select **Quick setup** and press **OK** to access.
4. Automatically setup is done and **Network Status** is displayed.

 → **Network** > **Network settings** > **Network Status**

5. Select **Exit** and press **OK** to set.

- To set manually

 → **Network** > **Network settings** > **Custom - Wired**

= Note =







- To deactivate wireless, set **Easy Mirroring** to **Off** and confirm the network connection type is set to **Wired**.

## Custom - Wireless

---

Ensure the connections are completed before starting network setup.

 → Network > Network connections

1. Display the menu with **MENU**.
2. Select **Network > Network Connection > Custom > Wireless** and press **OK** to access.
  - Confirm the encryption key, settings and position of your access point before starting setup. For details, read the manual of the access point.
3. Select your desired access point and press **OK** to access.
  - Available Wireless Networks are displayed automatically.
    -  : Encrypted access point
  - For **WPS(Push button)**
    - 1) Press  (red).
    - 2) Press the WPS button on the access point until the light flashes.
    - 3) Connect the TV with the access point with **OK**.
      - WPS: Wi-Fi Protected Setup™
      - If the connection fails, check the settings and positions of your access point. And then, follow the on-screen instructions.
  - For **WPS(PIN)**
    - 1) Press  (green).
    - 2) Enter the PIN code to the access point.
    - 3) Connect the TV with the access point with **OK**.
  - For **Manual**
    - 1) Press  (yellow).
    - 2) You can set up SSID, security settings and encryption key manually.
    - 3) Follow the on-screen instructions and set manually.
  - To search access points again  
 (blue)
  - To display / hide information of the highlighted access point  

  - It is recommended to select the encrypted access point.

4. Enter the encryption key of the access point and press **OK** to set.

- You can set characters using **Numeric buttons**.



- Press **BACK/RETURN** to store.

5. **IP/DNS Settings** is displayed.

---

### Acquire IP Address / Acquire DNS Address

- **Auto** is recommended.
  - Available settings are displayed automatically.
  - To set manually, select and set **IP Address** / **Subnet Mask** / **Default Gateway** / **DNS Address**.
- 

 
### Proxy Settings

- It is not required for normal household use.
- Some internet services may not be available depending on the proxy setting.

#### Proxy:

This is the address of the relay server which is connected between the browser and the target server to send data to the browser.

- 1) Select **Proxy** and press **OK** to access.
- 2) Enter the address with **Cursor buttons** or **Numeric buttons**, and press **OK** to set.



- 3) Press **BACK/RETURN** to store.

#### Proxy Port:

This number is also specified by the provider with the proxy address.


- 1) Select **Proxy Port**.
- 2) Enter the number with **Numeric buttons**.



- 3) Press **BACK/RETURN** to store.
-



6. Select **Network Status** and press **OK** to access.

 → **Network > Network settings > Network Status**

7. Select **Exit** and press **OK** to set.

## Custom - Wired

---

Ensure the connections are completed before starting network setup.

 → Network > Network connections

1. Display the menu with **MENU**.
  2. Select **Network** > **Network Connection** > **Custom** > **Wired** and press **OK** to access.
  3. **IP/DNS Settings** is displayed.
- 

### Acquire IP Address / Acquire DNS Address

- **Auto** is recommended.
  - Available settings are displayed automatically.
  - To set manually, select and set **IP Address** / **Subnet Mask** / **Default Gateway** / **DNS Address**.
- 

 
### Proxy Settings

- It is not required for normal household use.
- Some internet services may not be available depending on the proxy setting.

#### Proxy:

This is the address of the relay server which is connected between the browser and the target server to send data to the browser.

- 1) Select **Proxy** and press **OK** to access.
- 2) Enter the address with **Cursor buttons** or **Numeric buttons**, and press **OK** to set.



- 3) Press **BACK/RETURN** to store.

#### Proxy Port:

This number is also specified by the provider with the proxy address.

- 1) Select **Proxy Port**.
- 2) Enter the number with **Numeric buttons**.



- 3) Press **BACK/RETURN** to store.
-

4. Select **Network Status** and press **OK** to access.

 → **Network > Network settings > Network Status**

5. Select **Exit** and press **OK** to set.

= Note =

- To deactivate wireless, set **Easy Mirroring** to **Off** and confirm the network connection type is set to **Wired**.

## Custom - Wireless Access Point

---

You can use the TV as a wireless access point and connect the network equipment without an access point.

- Confirm the PIN code, network settings of the equipment before starting setup. For details, read the manual of the equipment.
1. Display the menu with **MENU**.
  2. Select [Network](#) > [Network Connection](#) > [Custom](#) > [Wireless Access Point](#) and press **OK** to access.
  3. Select [Connect to device in WPS](#) and press **OK** to access.
    - To set manually, select [Change settings](#) (see below).
  4. Select and set [WPS\(Push button\)](#) / [WPS\(PIN\)](#) and press **OK** to access.

### [WPS\(Push button\)](#):

Set up the equipment for [WPS\(Push button\)](#). For details, read the manual of the equipment.

### [WPS\(PIN\)](#):

Enter the PIN code of the equipment.

- If the connection fails, check the settings and positions of the equipment. And then, follow the on-screen instructions.


## ■ Change settings

You can set up [Network Name\(SSID\)](#), [Encryption key](#), [Wireless type](#) and [Channel setting method](#) manually.

Follow the on-screen instructions and set manually.

- Set [Reset settings](#) to reset the items for [Change settings](#).

= Note =

- You cannot connect the internet service while the TV is set to [Wireless Access Point](#).
- You can connect up to 7 devices. But the transfer rate varies according to communication environment or the numbers of connected equipment.
- To confirm the current network settings  
 → [Network](#) > [Network settings](#) > [Network Status](#)
- Ensure the equipment to connect supports WPS for this setup.
- WPS: Wi-Fi Protected Setup™

## Network Status

---

Displays and checks the network status (MAC Address, current network settings, etc.).

1. Display the menu with **MENU**.
2. Select **Network** > **Network Status** and press **OK** to access.
3. Automatically testing is done and **Network Status** is displayed.

### Try Again:

Performs automatic testing of the network connection for the TV and displays the current status again.

### Status Details:

Displays the detailed network status (SSID, security settings, etc.).

- For information about the network connection, select **Help**.

# my Home Cloud Settings

---

Sets for an account to enjoy the cloud services.

1. Display the menu with **MENU**.
  2. Select **Network** > **my Home Cloud Settings** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
[Setup new account](#) / [Edit account](#) / [Remove account](#) / [Notices](#)
  4. Follow the on-screen instructions.
- 

## Setup new account

Set up an account for this TV.

---

## Edit account

Displays and edits the account status.

---

## Remove account

Deletes an account from this TV.

---

## Notices

Displays the terms of service.

---

- A broadband network environment is required to fully use this function. Ensure the network connections and network settings are completed.

 → [Network > Network connections](#)

 → [Network > Network settings](#)

## VIERA Name

---

Sets your favourite name for this TV.

1. Display the menu with **MENU**.
2. Select **Network** > **VIERA Name** and press **OK** to access.
3. Enter characters and press **OK** to set.
  - This name is used as the name of this TV on the screen of the other network equipment.
  - When you use two or more TVs in your network environment, set the names of the TVs for each.

# TV Remote App Settings

---

Sets to control the TV with the equipment (smartphone, etc.) connected to your network.

1. Display the menu with **MENU**.
2. Select **Network > TV Remote App Settings** and press **OK** to access.
3. Select one of the following items and press **OK** to access.

**TV Remote / Device to upload contents**

4. Set the item and press **OK** to store.
- 

## TV Remote

(On / Off)

Enables controlling the TV from the network equipment (smartphone, etc.).

---

## Device to upload contents

Selects device to upload content from the network equipment (smartphone, etc.).

---

= Note =

- This function is not available when the TV is turned off with Mains Power On / Off switch.
- You need to install the application for controlling VIERA on your smartphone.

 → [Support > FAQs > Detailed information](#)

For the operations, refer to the support information of the application.

- Depending on the network condition, this function may not be available.
- Depending on the area, this function may not be available. For details, consult your local Panasonic dealer.



# Network Link Settings

---

Sets to control the TV with devices connected to the network.

1. Display the menu with **MENU**.
  2. Select **Network** > **Network Link Settings** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
[DLNA Server](#) / [Registration Type](#) / [Remote Device List](#)
  4. Set the item and press **OK** to store.
- 

## DLNA Server

(On / Off)

Enables sharing the content of this TV with the network equipment (DLNA Certified VIERA, etc.).

- To use this function with another VIERA, select the name of this TV from the DLNA server list of another VIERA, and then select the content to share. Also read the manual of another VIERA.
- To use this function with your smartphone, you need to install the application for controlling VIERA on your smartphone.

 → [Support](#) > [FAQs](#) > [Detailed information](#)

For the operations, refer to the support information of the application.

---

## Registration Type

(Auto / Manual)

Selects the type to restrict the access to this TV for each piece of equipment on the home network.

### Auto:

All available equipment on the home network is accessible (maximum 16 pieces of equipment).

### Manual:

Sets the restrictions for each piece of equipment in [Remote Device List](#).

---

## Remote Device List

Lists the equipment accessible to this TV on the home network.

---

= Note =

- Depending on the area, this function may not be available. For details, consult your local Panasonic dealer.

# File Sharing Settings

---

## Network Device List

Lists the accessible network devices to play back the content in Media Player.

 → [Media Player > Using Media Player > Network device](#)

# Mirroring Settings

---

Settings for the mirroring function

 → [Functions](#) > [Mirroring](#) > [Mirroring Settings](#)

## Software Update

---

Accesses the specific website to update the TV's software if any updates are available.

1. Display the menu with **MENU**.
2. Select **Network** > **Software Update** and press **OK** to access.
3. Follow the on-screen instructions.
  - A broadband network environment is required to use this function.

## New Software Message

---

Selects whether to give a notification message when new software is found via network or not.

1. Display the menu with **MENU**.
2. Select **Network** > **New Software Message** and press **OK** to access.
3. Select **On / Off** and press **OK** to set.

# Photos

## Selecting file

---

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > In-House streaming

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** and press **OK** to access.
3. Select one of the media servers and press **OK** to access.
  - For the operations to access another TV, select the name of another TV from the displayed media server list.
  - To display / hide information of the highlighted media server
4. Select the file and press **OK** to access.
  - Depending on the condition of media server, you may need to select the folder before selecting the file.
  - To display / hide information of the highlighted file



= Note =

- Non-playable files are also listed but cannot be selected.

## Viewing photo

---



### ■ Playback

- To operate Single view
  - ◀ : To the previous photo
  - ▶ : To the next photo
  - ▽ : Stop (return to list)
  - OK : Slideshow
- To display / hide the operation guide
  - i
- To rotate 90°
  - (blue)
- To return to list
  - BACK/RETURN

## Using Slideshow

---

Slideshow ends when all photos within the list are viewed.

1. Select the file from the thumbnail of photos for the first view.
2. Start Slideshow with  (red) and **OK**.
  - To display / hide the operation guide  

  - To pause (return to Single view)  
**OK**
  - To return to list  
**BACK/RETURN**

### ■ Slideshow Settings

Set up the settings for photo file operations on this TV.

1. Display the option menu with **OPTION**.
  2. Select [Slideshow Settings](#) and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
[Transition Effect](#) / [Auto Makeup](#) / [Interval](#) / [Repeat](#) / [Back Ground Music](#)
  4. Set the item and press **OK** to store.
- 

#### [Transition Effect](#)

([Off](#) / [Fade](#) / [Dissolve](#) / [Motion](#) / [Random](#))

Selects the transition effect for switching photos during the slideshow.

##### [Fade](#):

The next photo fades in gradually.

##### [Dissolve](#):

Each photo is dissolved when switching to the next photo.

##### [Motion](#):

Each photo is displayed with an effect of enlarging, reducing, moving up or moving down.

##### [Random](#):

The transition effect is selected at random.

---



### Auto Makeup

(On / Off)

Automatically detects the face in the photo and improves luminance and contrast.

---

### Interval

(Long / Normal / Short)

Selects slideshow interval.

- Not valid when **Transition Effect** is set to **Motion**
- 

### Repeat

(On / Off)

Slideshow repeat

---

### Back Ground Music

(Off / Type1 / Type2 / Type3 / Type4 / Type5)

Selects the background music during Photo mode.

# Videos

## Selecting file

---

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > In-House streaming

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** and press **OK** to access.
3. Select one of the media servers and press **OK** to access.
  - For the operations to access another TV, select the name of another TV from the displayed media server list.
  - To display / hide information of the highlighted media server
4. Select the file and press **OK** to access.
  - Depending on the condition of media server, you may need to select the folder before selecting the file.
  - To display / hide information of the highlighted file



= Note =

- Non-playable files are also listed but cannot be selected.

# Watching video

---

## ■ Playback

If you have stopped the last playback halfway, a confirmation screen may be displayed to select whether to start from where you stopped last time or from the beginning.


- To operate playback

 : Manual skip (if available)

– Press to skip forward approx. 30 seconds.


 : Rewind

 : Fast forward

 : Stop

 : Pause (displays the time seek bar / slow playback) / Playback



- To jump to the specified time point

1) Display the time seek bar with .

2) While the time seek bar is displayed

Press  /  :

Search approx. 10 seconds

Press and hold  /  :

Search rapidly

3) Jump to the specified time point with .

- To play back slowly

1) Press and hold  for 5 seconds.

Press  /  :

Search slowly

2) Return to the normal playback with .

- To display / hide the operation guide and information banner



- To the previous content

 (red)

- To the next content

 (green)

- To change aspect
  - 1) Display **Aspect Selection** with **ASPECT**.
  - 2) Select the mode and press **OK** to set.
    - Aspect1:**

Displays the content enlarged without distortion.
    - Aspect2:**

Displays the content full-screen.
    - Original:**

Displays the content original size.
- You can also change the mode pressing **ASPECT**. (Press repeatedly until you reach the desired mode.)
- Aspect cannot be changed depending on the content.
- To return to list  
**BACK/RETURN**

## Video Setup

---

Set up the settings for video file operations on this TV.

1. Display the option menu with **OPTION**.
  2. Select **Video Setup** and press **OK** to access.
  3. Select one of the following items and press **OK** to access.  
**Video Preview / Multi Audio / Monaural Audio / Dual Mono Audio / Repeat / Subtitle Settings**
    - Menu items and selectable options vary depending on the content.
  4. Set the item and press **OK** to store.
- 

### Video Preview

(On / Off)

Sets to start the preview of the title or scene in the thumbnail view.

- Images may not be displayed for an instant in the thumbnail view. Set the preview **Off** to solve this.
- 

### Multi Audio, Monaural Audio, Dual Mono Audio

Selects for selectable sound tracks (if available).

- It may take several seconds to change the sound.
  - This function is available during playback.
- 

### Repeat

(On / Off)

Playback repeat within the selected file

---

## Subtitle Settings

Sets the subtitle setting.

- This function is available during playback.

### Subtitle:

Display / hide subtitles (if available).

### Subtitle Text:

Selects the font type to display subtitles correctly (if available).

### Subtitle Text Size:

Selects the font size of subtitles.

### Subtitle Text Colour:

Selects the colour of subtitles.

### Subtitle Text Position:

Adjusts the position of subtitles on the screen.

### Subtitle Text Delay:

Adjusts the delay time for the subtitles.

## Audio output settings

---

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status

 → Network > Videos > Video Setup

1. Display the menu with **MENU**.
  2. Select **Sound** > **SPDIF Selection** and press **OK** to access.
  3. Select **Auto** / **PCM** and press **OK** to set.
- 

### SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

#### Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM.

#### PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

= Note =

- During the operation, audio signal is output from DIGITAL AUDIO and HDMI2 (ARC function) terminals. But no video signals are output. To use HDMI2 with ARC function, connect an amplifier that has ARC function and set to use theatre speakers.

 → Functions > VIERA Link "HDAVI Control™"

# Music

## Selecting file

---

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > In-House streaming

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** and press **OK** to access.
3. Select one of the media servers and press **OK** to access.
  - For the operations to access another TV, select the name of another TV from the displayed media server list.
  - To display / hide information of the highlighted media server
4. Select the file and press **OK** to access.
  - Depending on the condition of media server, you may need to select the folder before selecting the file.
  - To display / hide information of the highlighted file



= Note =

- Non-playable files are also listed but cannot be selected.



# Playing music


---

## ■ Playback

- To operate playback


 : Rewind

 : Fast forward

 : Stop

 : Pause (displays the time seek bar) / Playback



- To jump to the specified time point

1) Display the time seek bar with .

2) While the time seek bar is displayed

Press  /  :

Search approx. 10 seconds

Press and hold  /  :

Search rapidly

3) Jump to the specified time point with .

- To display / hide the operation guide



- To the previous track

 (red)

- To the next track

 (green)

- To return to list



## Music Setup

---

Set up the settings for music file operations on this TV.

1. Display the option menu with **OPTION**.
2. Select **Music Setup** > **Repeat** with **OK**.
3. Select **Off** / **Folder** / **One** and press **OK** to set.

### Folder:

Playback repeat within the selected folder

### One:

Playback repeat of the selected one file

# DIGA Recorder

## Controlling DIGA Recorder

---

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > In-House streaming

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** and press **OK** to access.
3. Select **DIGA** and press **OK** to access.
4. The screen of the DIGA Recorder is displayed. You can control the functions of the DIGA Recorder with this TV's remote control according to the operation guide.

(Example)



- For details, read the manual of the DIGA Recorder.

# Technical information

## Photo format

---

### ■ Supported Photo formats

---

- JPEG (.jpg, .jpeg)

Sub-sampling:

4:4:4, 4:2:2, 4:2:0

Image resolution (pixel):

8 × 8 to 30 719 × 17 279

- DCF and EXIF standards
  - Progressive JPEG is not supported.
- 

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

# Video format

---

## ■ Supported Video formats

---

- AVI (.avi)

Video codec:

H.264, MPEG1, MPEG2, MPEG4, VC-1, WMV9

Audio codec:

AAC, ADPCM, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3, WMA, WMA Pro

---

- MP4 (.f4v, .m4v, .mp4)

Video codec:

H.264, MPEG1, MPEG2, MPEG4

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MP3

- This TV supports this container recorded with Panasonic products. For details, read the manual of the products.
- 

- MKV (.mkv)

Video codec:

H.264, MPEG1, MPEG2, MPEG4

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MP3, Vorbis

---

- ASF (.asf, .wmv)

Video codec:

MPEG4, VC-1, WMV9

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3, WMA, WMA Pro

- Copy-protected files cannot be played back.
-

- FLV (.flv)

Video codec:

H.264

Audio codec:

AAC, MP3

---

- 3GPP (.3gp, .3g2)

Video codec:

H.264, MPEG4

Audio codec:

AAC, HE-AAC

---

- PS (.mod, .mpg, .mpeg, .vob, .vro)

Video codec:

MPEG1, MPEG2

Audio codec:

Dolby Digital, LPCM

---

- TS (.mts, .m2ts, .tp, .trp, .ts, .tts)

Video codec:

H.264, MPEG1, MPEG2

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC

## ■ Supported Subtitles formats

---

- MicroDVD, SubRip, TMLPlayer (.srt, .sub, .txt)
    - The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
    - If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt”, “.sub”, “.txt”.
- 

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Some subtitles or chapter functions may not be available.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.
- Supported formats are different in Media Player and media server.

# Music format

---

## ■ Supported Music formats

---

- MP3 (.mp3)

---

- AAC (.m4a)

- Copy-protected files cannot be played back.
- 

- FLAC (.flac)

---

- WMA / WMA Pro (.wma)

- Copy-protected files cannot be played back.
- 

- LPCM (.wav)

---

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.



# Functions

## Mirroring

### How to use

---

You can watch and display images of other devices (smartphone, etc.) on the TV screen using a mirroring function.



1 Smartphone, etc.

2 TV


1. Display APPS List with **APPS**.
2. Select **Mirroring** and press **OK**.
3. Follow the on-screen instructions.
  - Pairing information of the device (smartphone, etc.) is registered once you use this function.

### ■ Easy Mirroring

You can also start the mirroring function from the other devices (smartphone, etc.) when **Easy Mirroring** is set to **On**.

 → **Functions > Mirroring > Mirroring Settings**

- You cannot use Easy Mirroring function while the TV is set to **Wireless Access Point**.

 → **Network > Network settings > Network Status**

= Note =

- This function is available with the other devices (smartphone, etc.) supporting the mirroring function. For details, refer to the operating instructions of the devices.

## Mirroring Settings

---

You can set items for the mirroring function.

1. Display the menu with **MENU**.
  2. Select **Network** > **Mirroring Settings** and press **OK**.
  3. Select one of the following items and press **OK** to access.  
**Easy Mirroring / Delete All Pairings**
  4. Set the item and press **OK** to store.
- 

### Easy Mirroring

(On / Off)

Enables starting the mirroring function from the other devices (smartphone, etc.) without operating the TV.

- To deactivate wireless, set **Easy Mirroring** to **Off** and confirm the network connection type is set to **Wired**.

 → **Network** > **Network settings** > **Network Status**

- Not valid when the TV is set to **Wireless Access Point**
- 

### Delete All Pairings

Delete the pairing information for all paired devices.

# VIERA Link “HDAVI Control™”

## Summary of VIERA Link

---

Enjoy additional HDMI Inter-Operability with Panasonic products which have “HDAVI Control™” function.

VIERA Link (HDAVI Control) connects the TV and the equipment with VIERA Link function, and enables easy control, playback, energy saving, creating home theatre, etc. without complicated settings. Connections to the equipment (DVD Recorder, HD Video Camera, Player theatre, Amplifier, etc.) with HDMI and SCART cables allow you to interface them automatically. These features are limited to models incorporating “HDAVI Control” and “VIERA Link”.


- This TV supports “HDAVI Control 5” function.
- Some functions are not available depending on the equipment’s version of HDAVI Control. Confirm the connected equipment’s version of HDAVI Control.
- VIERA Link “HDAVI Control” is a unique function that we have developed and added based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control). As such, its operation with other manufacturers’ product that supports HDMI CEC cannot be guaranteed.
- VIERA Link features may be available even with other manufacturers’ equipment supporting HDMI CEC.
- Please refer to individual manuals for other manufacturers’ product supporting VIERA Link function.
- For information about applicable Panasonic equipment, consult your local Panasonic dealer or refer to the following website.

[www.panasonic.co.uk](http://www.panasonic.co.uk)

## ■ VIERA Link (HDMI connection)

- Use a fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI terminal via an HDMI cable.

About HDMI cable for connecting Panasonic HD Video Camera or LUMIX Camera, read the manual of the equipment.

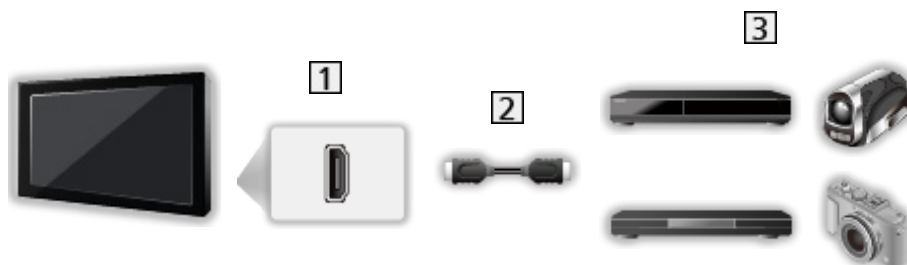

1 HDMI terminal

2 HDMI cable

3 Equipment with VIERA Link function (DVD Recorder / DVD Player / Blu-ray Disc Player / HD Video Camera / LUMIX Camera)

## ■ Available features (HDMI connection)

---

### DVD Recorder / DVD Player / Blu-ray Disc Player

- Easy playback
  - Power on Link
  - Power off Link
  - Standby Power Save\*<sup>2</sup>
  - Intelligent Auto Standby\*<sup>2</sup>
  - VIERA Link Control\*<sup>1</sup>
- 

### HD Video Camera / LUMIX Camera


- Easy playback
  - Power on Link
  - Power off Link
  - VIERA Link Control\*<sup>1</sup>
- 

\*<sup>1</sup> : For equipment which has "HDAVI Control 2 or later" function.

\*<sup>2</sup> : For equipment which has "HDAVI Control 4 or later" function.

## ■ VIERA Link (HDMI and Audio out connections)

- Use a fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI terminal via an HDMI cable.
- Use a fully wired SCART cable.
- Use the optical digital audio cable for audio output from the TV.

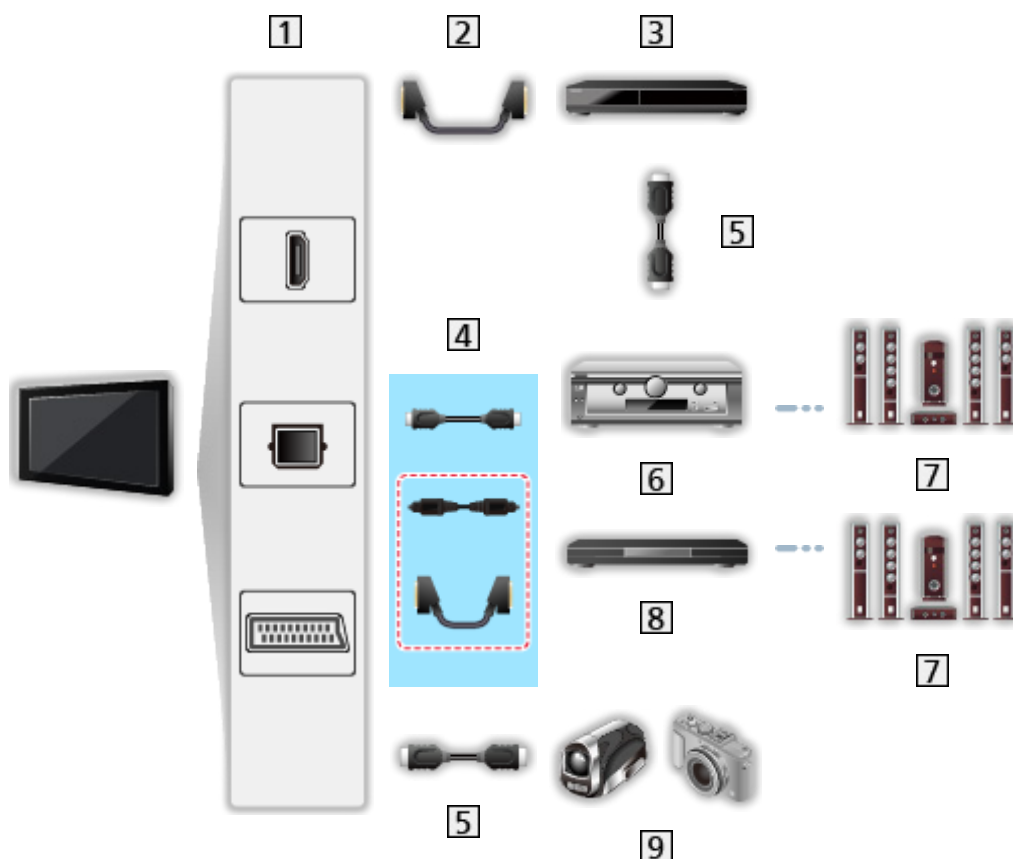

1 HDMI terminal / DIGITAL AUDIO / AV1 (SCART) terminal

2 SCART cable

3 DVD Recorder with VIERA Link function

4 HDMI cable (Optical digital audio cable\* / SCART cable\*)

5 HDMI cable

6 Amplifier with VIERA Link function

7 Speaker system

8 Player theatre / Blu-ray Disc theatre with VIERA Link function

9 HD Video Camera / LUMIX Camera with VIERA Link function

\*: If the connected equipment has "HDAVI Control 5" function, you do not have to use this audio cable (Optical digital audio cable / SCART cable). In this case, connect the equipment to the TV's HDMI2 terminal via an HDMI cable.

## ■ Available features (HDMI and Audio out connections)

---

### Player theatre

- Easy playback\*<sup>3</sup>
  - Power on Link
  - Power off Link
  - Intelligent Auto Standby\*<sup>2\*4</sup>
  - VIERA Link Control\*<sup>1</sup>
  - Speaker Selection
- 

### Blu-ray Disc theatre

- Easy playback\*<sup>3</sup>
  - Power on Link
  - Power off Link
  - Standby Power Save\*<sup>2</sup>
  - Intelligent Auto Standby\*<sup>2\*4</sup>
  - VIERA Link Control\*<sup>1</sup>
  - Speaker Selection
- 

### Amplifier

- Power off Link
  - Intelligent Auto Standby\*<sup>2</sup>
  - Speaker Selection
- 

\*1 : For equipment which has “HDAVI Control 2 or later” function.

\*2 : For equipment which has “HDAVI Control 4 or later” function.

\*3 : While playing a disc

\*4 : Except for watching a disc

## ■ VIERA Link Control of compatible equipment

The following is the maximum number of compatible equipment that can be controlled by VIERA Link Control. This includes connections to equipment already connected to the TV.



For example, DVD Player connected to Amplifier which is connected to the TV via an HDMI cable.

 → [Functions > VIERA Link "HDAVI Control™" > VIERA Link Control](#)

- Recorder:  
Maximum 3
- Player:  
Maximum 3 (DVD Player, Blu-ray Disc Player, HD Video Camera, LUMIX Camera, Digital Camera, Player theatre, Blu-ray Disc theatre, etc.)
- Audio system:  
Maximum 1 (Player theatre, Blu-ray Disc theatre, Amplifier, etc.)
- Tuner:  
Maximum 4 (Set top box, etc.)

## Preparations

---

- Connect the equipment supporting VIERA Link.
- For details of VIERA Link connections  
 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)
- Use a fully wired HDMI compliant cable.
- Use a fully wired SCART cable.
- Set up the connected equipment. Read the manual of the equipment.
- Set [VIERA Link](#) to [On](#) in the Setup Menu.
- Set up the TV. After connection, turn the equipment on and then switch the TV on. Select the HDMI input from [Input Selection](#) with  and make sure that an image is displayed correctly. (This setup should be done each time the following conditions occur.)
  - First time operation
  - Adding or reconnecting equipment
  - Changing setup



## Easy playback

---

Automatic input switching - When the connected equipment is operated, the input mode is switched automatically.

## Power on Link

---

Set [Power on Link](#) to [On](#) in [VIERA Link Settings](#) to use this function.

When the connected equipment is operated, the TV is automatically turned on. (Only when the TV is in Standby mode.)

## Power off Link

---

Set [Power off Link](#) to [On](#) in [VIERA Link Settings](#) to use this function.

When the TV is set to Standby mode, the connected equipment is also automatically set to Standby.

- This function will work even if the TV enters Standby mode automatically by auto power standby function.

## Standby Power Save

---

Set [Standby Power Save](#) to [On](#) in [VIERA Link Settings](#) to use this function.

The power consumption of the connected equipment in Standby mode is controlled higher or lower in synchronisation with the TV on / off state to reduce the consumption.

When the TV is set to Standby mode, the connected equipment is automatically set to Standby and the power consumption of the connected equipment is automatically minimised.

When the TV is turned on, the connected equipment is still in Standby mode, but the power consumption is increased to quickly start the connected equipment.

- This function is effective if the connected equipment can change the power consumption in Standby mode and is set to higher consumption.
- This function works when [Power off Link](#) is set to [On](#).

## Intelligent Auto Standby

---

Set **Intelligent Auto Standby** to **On** in **VIERA Link Settings** to use this function.

When the TV is on, non-used connected equipment goes into Standby mode automatically to reduce the power consumption. For example, when the input mode is switched from HDMI or when **Speaker Selection** is changed to **TV** (except for watching a disc).

- This function may not work properly depending on the connected equipment. In this case, set to **Off**.

## VIERA Link Control

---

You can control some functions of the connected equipment with this TV's remote control by pointing at the TV's signal receiver.

1. Display APPS List with **APPS**.
2. Select **VIERA Link** and press **OK** to access.
3. Select **VIERA Link Control** and press **OK** to access.
4. Select one of the following items and press **OK** to access.

**Recorder / Player / Home Cinema / Video Camera / LUMIX / Digital Camera / Other**

(The menu of the accessed equipment is displayed. The input mode is changed automatically.)

- The displayed item may vary depending on the connected equipment.
  - **Home Cinema** means Player theatre, Blu-ray Disc theatre or Recorder theatre.
  - **Other** means Tuner set top box.
5. Follow the on-screen instructions to operate the menu of the equipment.

- Confirm the remote control code is "73".



→ **Watching > External equipment > Operating with TV's remote control**

- To display the operation guide

**OPTION**

(If other manufacturers' product is accessed, Setup / Contents Selection menu may be displayed.)

- Available TV's remote control buttons depend on the connected equipment.

### ■ If multiple recorders or players are connected

Each recorder / player is numbered. The number is given from the TV's lower number of HDMI terminal connected to the same type of equipment. For example, when two recorders are connected to HDMI1 and HDMI2, the recorder connected to HDMI1 is displayed as **Recorder1**, and the recorder connected to HDMI2 is displayed as **Recorder2**.

### ■ If you access non-VIERA Link equipment

The type of the connected equipment is displayed. Although you can access the connected equipment, you cannot operate it. Use the remote control of the connected equipment.

= Note =

- If you cannot operate the equipment, check the settings and the equipment.



→ [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Some operations may not be available depending on the equipment. In this case, use the remote control of the connected equipment.
- For details of the operations for the connected equipment, read the manual of the equipment.

## Speaker Selection

---

You can control the theatre speaker with this TV's remote control by pointing at the TV's signal receiver.

1. Display APPS List with **APPS**.
2. Select **VIERA Link** and press **OK** to access.
3. Select **Speaker Selection** and press **OK** to access.
4. Select **TV / Home Cinema** and press **OK** to set.

**TV:**

TV speakers are active.

**Home Cinema:**

The sound is delivered from theatre speakers. Player theatre, Blu-ray Disc theatre or Amplifier will be automatically turned on if it is in Standby mode.

- The sound of TV speakers is mute. When the equipment is turned off, TV speakers will be activated.
- You can use **Volume Up / Down** and **MUTE**.



### ■ Multi-channel sound

If you want to enjoy the multi-channel sound (e.g. Dolby Digital 5.1ch) via an Amplifier, connect it with an HDMI cable and Optical digital audio cable, and then select **Home Cinema**. If your Amplifier has the "HDAVI Control 5" function, you only need to connect it with an HDMI cable to the TV's HDMI2 terminal.

To enjoy multi-channel sound from DIGA Recorder, connect an HDMI cable from the DIGA Recorder to the Amplifier.

= Note =

- If you cannot operate the equipment, check the settings and the equipment.

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Some operations may not be available depending on the equipment.



## Note

---

- These functions may not work properly depending on the connected equipment.
- Image or sound may not be delivered for the first few seconds when the input mode is switched.
- “HDAVI Control 5” is the newest standard for HDAVI Control compatible equipment. This standard is compatible with conventional HDAVI equipment.
- To confirm the HDAVI Control version of this TV

 → [Support > Help menu > Using Help menu](#)

# Child Lock





## Using Child Lock

---

You can lock specific channels / AV input terminals to restrict access to them. When the locked channel / input is selected, a message appears. Enter the PIN number to watch.

1. Display the menu with **MENU**.
2. Select **Setup** > **Child Lock** and press **OK** to access.
3. Enter the PIN number (4 digits) with **Numeric buttons**.



- Enter the PIN number twice at first setting.
  - Make a note of the PIN number in case you forget it.
4. Select **Child Lock List** and press **OK** to access.
  5. Select the channel / input and press **OK** to lock.
    -  appears when the channel / input is locked.
    - To cancel
      - 1) Select the locked channel / input.
      - 2) Press **OK**.
    - To lock all
      -  (green)
    - To cancel all locks
      -  (yellow)
    - To jump to the head of the next channel / input group
      -  (blue)

### ■ Player PIN Control

Applies access control for some Digital TV streaming services.

= Note =

- For DVB (UK only)

## PIN number

---

You can change the PIN number.

1. Select [Change PIN](#) and press **OK** to access.
2. Enter a new PIN number twice with **Numeric buttons**.



= Note =

- Setting [Shipping Condition](#) erases the PIN number and all settings.

## Parental Rating

---

To watch the DVB programme that has rating information on the selected age, enter the PIN number (depending on the broadcaster).

1. Select **Parental Rating** and press **OK** to access.
2. Select an age for the restriction of programmes and press **OK** to set.

= Note =

- Setting **Shipping Condition** erases the PIN number and all settings.
- Ireland only

# Common Interface


## Caution

---

If the encrypted message is displayed on the screen, the correct Common Interface (CI) Module and smart card that are required for this service are not inserted.

### ■ How to insert CI module and smart card

- Turn the TV off with Mains Power On / Off switch whenever inserting or removing the CI module.
- If a smart card and a CI module come as a set, first insert the CI module, then insert the smart card into the CI module.
- Insert or remove the CI module completely in the correct direction as shown.

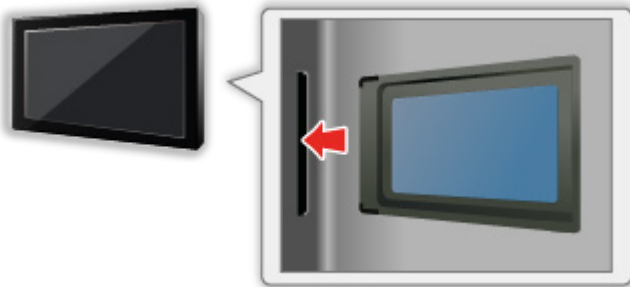

- Remove the CI module from the TV when placing the TV facing upward. This may cause damages to the CI module and CI slot.

= Note =

- There might be some CI modules in the market with older firmware versions that do not work fully interoperable with this new CI+ v1.3 TV. In this case, please contact your content provider.

## Using Common Interface

---

The Common Interface Module menu provides access to software contained in Common Interface (CI) Modules.

- Video and audio signals may not be output depending on the broadcast or service.

### ■ Insert the CI module (optional)

- Follow the instructions that came with the viewing card to tune in the encrypted channels. If encrypted channels do not appear, perform the below to verify the card is recognised by the TV.
  - For details, read the manual of the CI module, or check with the content provider.
1. Select **DVB** with **TV**.
  2. Display the menu with **MENU**.
  3. Select **Setup** > **System Menu** > **Common Interface** and press **OK** to access.
  4. Press **OK** and follow the on-screen instructions.
    - On-screen instructions may not correspond to the remote control buttons.

# Shipping Condition

## Shipping Condition

---

Resets the TV to its original condition (i.e. no channels tuned in).

All settings are reset (channels, picture, sound settings, etc.).

1. Display the menu with **MENU**.
2. Select **Setup** > **System Menu** > **Shipping Condition** and press **OK** to access.
3. When a confirmation screen is displayed, select **Yes** and press **OK** to set.
4. Follow the on-screen instructions.
  - **Auto Setup** automatically starts.

= Note =

- To retune TV channels only (e.g. after moving house), set **Auto Setup**.

 → **Watching > Tuning and editing channels > Auto Setup**

# Updating the TV Software

## Information

---

A new version of software may be released for download to enhance the performance or operations of the TV.

In DVB, a notification banner will appear when one of the BBC channels is turned to if a new available software is found.

- To install new software, select **Standby / Now** and press **OK** to set.

### Standby:

Installs new software in standby condition.

### Now:

Installs new software now.



## Auto update

---

You can update new software automatically.

1. Display the menu with **MENU**.
2. Select [Setup](#) > [System Menu](#) > [System Update](#) > [Auto Update Search in Standby](#) and press **OK** to access.
3. Select [On](#) and press **OK** to set.
  - If any software updates are available, a notification message will appear. To install new software, select [Standby / Now](#) and press **OK** to set.

### [Standby:](#)

Installs new software in standby condition.

### [Now:](#)

Installs new software now.

- If System Update is performed, the software will be updated (TV functions may be changed). If you do not want to do so, set [Auto Update Search in Standby](#) to [Off](#).
- The automatic updating cannot be performed in the following conditions:
  - TV turned off with Mains Power On / Off switch

= Note =

- Download may take a few hours.
- During software download and update, DO NOT perform any operations on the TV or switch Off the TV.

## Manual update

---

You can update new software manually.

1. Display the menu with **MENU**.
2. Select **Setup > System Menu > System Update > System Update Search Now** and press **OK** to access.
3. Searches for an update (for several minutes) and displays a corresponding message if any.
4. Download with **OK**.

= Note =

- Download may take a few hours.
- During software download and update, DO NOT perform any operations on the TV or switch Off the TV.

# Setting characters

## Using Numeric buttons

---

You can enter characters for free input items using **Numeric buttons**.

Press **Numeric buttons** repeatedly until you reach the desired character.

**1** : . @ / 1 ! : # + - \* \_ ( ) " ' % & ? , ; = \$ [ ] ~ < > { } | ` ^ \

**2** : a b c 2 A B C

**3** : d e f 3 D E F

**4** : g h i 4 G H I

**5** : j k l 5 J K L

**6** : m n o 6 M N O

**7** : p q r s 7 P Q R S

**8** : t u v 8 T U V

**9** : w x y z 9 W X Y Z

**0** : Space 0

- The character is set automatically if you leave for 1 second.
- You can also set the character pressing **OK** or other **Numeric buttons** less than 1 second.
- The characters may vary depending on the input item.

# Keyboard

## Keyboard

---

- Keyboards requiring the drivers are not supported.
- To change the language type, set [USB Keyboard Layout](#).
  - 1) Display the menu with **MENU**.
  - 2) Select [Setup](#) > [System Menu](#) > [USB Keyboard Layout](#) and press **OK** to access.
  - 3) Select the language and press **OK** to set.
- Characters may not be displayed correctly on the TV screen depending on the connected keyboard or the keyboard layout setting.
- Some of the keys of keyboards may correspond to the operation of the remote control.

Keyboard	Remote Control
↑ / ↓ / ← / →	△ / ▽ / ◀ / ▶
Enter	OK
Backspace	BACK/RETURN
Esc	EXIT
0 - 9 / Character	Numeric buttons
F1	HOME
F2	APPS
F3	MENU
F4	AV
F5 / F6	Channel Down / Up
F7 / F8	Volume Down / Up
F9 / F10 / F11 / F12	Coloured buttons


# Settings

## Setting menu

### How to use

---

Various menus allow you to make settings for the picture, sound, and other functions.

1. Display the menu with **MENU**.
    - Displayed items vary depending on the input signal.
  2. Select the menu and press **OK** to access.
  3. Select the items and press **OK** to access.
    - Only available items can be selected.
    - You can also access from **eHELP** pressing  (red) at each item (if available).
- You can select from among alternatives with  $\triangle / \nabla$  and press **OK** to set.
  - You can adjust using the slide bar with  $\triangleleft / \triangleright$  and press **OK** to set.
  - You can go to the next screen with **OK**.
  - You can enter names or numbers freely for some items.
    - 1) Enter characters one by one with **Cursor buttons** and press **OK** to set.



- You can set characters using **Numeric buttons**.



 → [Functions > Setting characters > Using Numeric buttons](#)

- 2) Press **BACK/RETURN** to store.

- To reset the settings
  - To initialise picture or sound settings only, select [Reset to Defaults](#) in the Picture Menu or Sound Menu.
  - To initialise all settings, select [Shipping Condition](#).

 → [Functions > Shipping Condition](#)

- To exit the menu screen

**EXIT**

- To return to the previous screen

**BACK/RETURN**

- To change the colour type of on-screen displays, set [OSD Colour](#).

 → [Home Screen](#) > [my Home Screen](#) > [OSD Colour](#)

 
= Note =

- Menu items and selectable options vary depending on the mode (TV mode, Media Player, Network services, etc.).
- If [Demo Settings](#) is displayed in the Setup Menu, the TV is in “Shop” viewing environment. To return to “Home” viewing environment, initialise all settings by accessing [Shipping Condition](#).

 → [Functions](#) > [Shipping Condition](#)

## ■ Using control panel buttons

1. Press and hold INPUT/OK/HOLD for MENU button for 3 seconds to display the menu.
2. Select and set with following control panel buttons.
  - Move the cursor / select from a range of options / select the menu item / adjust levels



- Access the menu / store settings after adjustments have been made or options have been set with INPUT/OK/HOLD for MENU button

# Picture

## Viewing Mode

---

Selects your favourite picture mode for each input.

([Dynamic](#) / [Normal](#) / [Cinema](#) / [True Cinema](#) / [Custom](#))

 → [Watching](#) > [For best picture](#) > [Viewing Mode](#)

## Basic settings

---

[Backlight](#), [Contrast](#), [Brightness](#), [Colour](#), [Tint](#), [Sharpness](#)

Adjusts the levels of these options according to your personal preference.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

---

### Colour Temperature

Sets the overall colour tone of the picture (bluer - redder).

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

---

### Vivid Colour

(On / Off)

Automatically adjusts colours to vivid ones.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

---

### Adaptive Backlight Control

Automatically controls the level of backlight according to the images.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)



# Ambient Sensor

---

Automatic Brightness Control function

Adjusts picture settings automatically depending on ambient lighting condition.

(On / Off)

 → Watching > For best picture > Ambient Sensor

## Noise reduction settings

---

### Noise Reduction

(Auto / Max / Mid / Min / Off)

Reduces unwanted picture noise.

 → Watching > For best picture > Noise reduction settings

- Not valid when **1080p Pixel Direct** is set to **On**
- 

### MPEG Noise Reduction

(Auto / Max / Mid / Min / Off)

Reduces flicker noise in contoured parts of a picture and block noise.

 → Watching > For best picture > Noise reduction settings

- Not valid when **1080p Pixel Direct** is set to **On**

## Advanced Settings

---

You can adjust and set up the detailed picture settings.

 → [Watching](#) > [For best picture](#) > [Advanced Settings](#)

This function is available when [Viewing Mode](#) is set to [Cinema](#), [True Cinema](#) or [Custom](#).

# Option Settings

---

[Some features are not available on all models. Available menu items are displayed on your TV screen.]

## Film Cadence Mode

(On / Off)

Improves vertical resolution for movie images.

 → Watching > For best picture > Option Settings

- This function is available for interlaced signals (except in Network services).
- 

## 1080p Pixel Direct

(On / Off)

Reproduces the original image quality in detail for 1080p (HDMI) input signal.

 → Watching > For best picture > Option Settings

---

## HDMI Content Type

(Graphics / Photos / Auto / Off)

Adjusts the picture settings of each HDMI input according to the selected content type.

 → Watching > For best picture > Option Settings

- For HDMI
- 

## HDMI RGB Range

(Auto / Full / Normal)

Adjusts the black level of the image for each HDMI input.

 → Watching > For best picture > Option Settings

- For HDMI
- 

## 3D-COMB

(On / Off)

Makes still or slow moving pictures more vivid.

 → Watching > For best picture > Option Settings

- For PAL / NTSC signal reception in TV mode or from composite connection

# Screen Settings

---

## 16:9 Overscan

(On / Off)

Selects the screen area displaying the image for 16:9 aspect.

 → [Watching](#) > [For best picture](#) > [Screen Settings](#)

- Not valid for photo content
- 

## H-Size

Switches horizontal picture size.

 → [Watching](#) > [For best picture](#) > [Screen Settings](#)

---

## Zoom Adjustments

Adjusts the vertical position and size when aspect is set to [Zoom](#).

 → [Watching](#) > [For best picture](#) > [Screen Settings](#)

---

## Screen Display

(On / Off)

Turns the screen off when you select [Off](#).

 → [Watching](#) > [For best picture](#) > [Screen Settings](#)

## Copy Adjustment

---

Copies the picture settings of **True Cinema** or **Custom** to those of the other input mode or Viewing Mode.

 → **Watching > For best picture > Copy Adjustment**

## Reset to Defaults

---

Resets the current Picture Viewing Mode to the default settings.


# Sound

## Mode

---

Selects your favourite sound mode for each input.

([Standard](#) / [Music](#) / [Speech](#) / [User](#))

 → [Watching](#) > [For best audio](#) > [Sound mode](#)



# Basic settings

---

## Bass

Adjusts level to enhance or minimise lower, deeper sound output.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

---

## Treble


Adjusts level to enhance or minimise sharper, higher sound output.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

---

## Equaliser


Adjusts the frequency level to suit your favourite sound quality.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

---

## Balance

Adjusts volume level of right and left speakers.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

---

## Surround

(On / Off)

Provides a dynamic enhancer of width to simulate improved spatial effects.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

# Volume settings

---

## Speaker Setting

(TV Speaker / Headphones / Off)

Selects the sound output to adjust volume. Set to **Off** when using the external speakers.

 → [Watching](#) > [For best audio](#) > [Volume settings](#)

---

## Headphone Volume

Adjusts the volume of headphones.

 → [Watching](#) > [For best audio](#) > [Volume settings](#)

---

## Auto Gain Control

(On / Off)

Automatically regulates large sound level differences between channels and inputs.

 → [Watching](#) > [For best audio](#) > [Volume settings](#)

---

## Volume Correction

Adjusts the volume of each individual channel or input mode.

 → [Watching](#) > [For best audio](#) > [Volume settings](#)

---

## Speaker Distance to Wall

(Up to 30cm / Over 30cm)

Compensates for the low frequency sound due to the distance between the speakers and the wall.

 → [Watching](#) > [For best audio](#) > [Volume settings](#)

# Voice Guidance Settings

---

## Voice Guidance

(On / Off)

Set to **On** to enable voice guidance of the basic features (on-screen messages, etc.) for visually impaired users.

 → [Watching > For best audio > Voice Guidance Settings](#)

---

## Speed

(Fast / Normal / Slow)

Selects the readout speed for the voice guidance.

 → [Watching > For best audio > Voice Guidance Settings](#)

---

## Volume

(Max / Mid / Min)

Selects the volume for the voice guidance.

 → [Watching > For best audio > Voice Guidance Settings](#)

---

## User Level

(Beginner / Expert)

Selects the level of verbosity for the voice guidance.

 → [Watching > For best audio > Voice Guidance Settings](#)

---

## Web Browser

(On / Off)

Set to **On** to enable voice guidance of the network content in web browser function.

 → [Watching > For best audio > Voice Guidance Settings](#)

# Audio Description

---

## Preferred Audio Type

([Audio Description](#) / [Standard](#))

Narration settings for visually impaired users

 → [Watching](#) > [For best audio](#) > [Audio Description](#)

- For DVB
- 

## Volume

Adjusts the volume for Audio Description.

 → [Watching](#) > [For best audio](#) > [Audio Description](#)

- For DVB
- 

## Speakers

([Mix](#) / [Standard](#))

Set to [Mix](#) to activate the description sound track from TV speakers.

 → [Watching](#) > [For best audio](#) > [Audio Description](#)

- For DVB
- 

## Headphones

([Mix](#) / [Standard](#))

Set to [Mix](#) to activate the description sound track from headphones.

 → [Watching](#) > [For best audio](#) > [Audio Description](#)

- For DVB

# Advanced settings

---

## NICAM

(On / Off)

Near Instantaneous Companded Audio Multiplex

Reproduces NICAM stereo sound.

 → [Watching > For best audio > Advanced settings](#)

- For Analogue
- 

## Audio Preference

(Multichannel / Stereo / MPEG)

Selects the initial setting for audio tracks.

 → [Watching > For best audio > Advanced settings](#)

- For digital
  - Ireland only
- 

## SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO and HDMI2 (ARC function) terminals.

 → [Watching > For best audio > Advanced settings](#)

- For DVB, video content
- 

## SPDIF Delay

Adjusts the delay time of the sound output from DIGITAL AUDIO and HDMI2 (ARC function) terminals if the sound does not synchronise the image.

 → [Watching > For best audio > Advanced settings](#)

- For digital
  - Ireland only
- 

## HDMI Input

(Digital / Analogue)

Selects to fit the input signal.

 → [Watching > For best audio > Advanced settings](#)

- For HDMI

## Reset to Defaults

---

Resets the current Sound Mode to the default settings.

# Network

## Network Connection

---

Sets the network setting to use this TV in your network environment.

 → [Network](#) > [Network settings](#) > [Network Connection](#)

# Network Status

---

Displays and checks the network status (MAC Address, current network settings, etc.).

 → [Network](#) > [Network settings](#) > [Network Status](#)



# my Home Cloud Settings

---

Sets for an account to enjoy the cloud services.

 → [Network](#) > [Network settings](#) > [my Home Cloud Settings](#)

## VIERA Name

---

Sets your favourite name for this TV.

 → [Network](#) > [Network settings](#) > [VIERA Name](#)

## TV Remote App Settings

---

Sets to control the TV from network equipment (smartphone, etc.).

 → [Network](#) > [Network settings](#) > [TV Remote App Settings](#)

# Network Link Settings

---

Sets to control the TV with devices connected to the network.

 → [Network](#) > [Network settings](#) > [Network Link Settings](#)

# File Sharing Settings

---

## Network Device List

Lists the accessible network devices to play back the content in Media Player.

 → [Media Player > Using Media Player > Network device](#)

# Mirroring Settings

---

Settings for the mirroring function

 → [Functions](#) > [Mirroring](#) > [Mirroring Settings](#)

## Other settings

---

### Software Update

Checks for available software updates from the Panasonic website.

 → Network > Network settings > Software Update

---

### New Software Message

(On / Off)

Selects whether to give a notification message when new software is found via network or not.

 → Network > Network settings > New Software Message

# Timer

## Off Timer

---

Sets the duration of time until the TV automatically goes into Standby mode.

(90 / 75 / 60 / 45 / 30 / 15 / Off (minutes))

 → Watching > Basic > Off Timer



## Time Zone

---

Adjusts the time data.

 → [Watching](#) > [Basic](#) > [Adjusting time](#)

- Ireland only

## Auto Standby

---

Automatically turns the TV to Standby mode for energy saving when no operation is performed for 4 hours.

(On / Off)

 → Watching > Basic > Energy saving functions

## No signal Power off

---

Automatically turns the TV to Standby mode to prevent unnecessary power consumption when no signal is received and no operation is performed for 10 minutes.

(On / Off)

 → Watching > Basic > Energy saving functions

# Setup

## Eco Navigation

---

Automatically sets the TV to the most suitable energy-saving mode.

 → [Watching](#) > [Basic](#) > [Energy saving functions](#)

# TV Guide Settings

---

## TV Guide View

(Normal / Full / Info)

Changes the layout of **TV Guide**.

 → [Watching](#) > [TV Guide](#) > [Using TV Guide](#)

## USB Device Setup

---

Safely removes USB device.

 → [Media Player > Using Media Player > Information](#)

## Child Lock

---

Applies access control for channels or inputs to prevent unwanted access.

 → [Functions](#) > [Child Lock](#) > [Using Child Lock](#)

# Tuning Menu

---

## Favourites Edit

Creates a list of favourite channels.

 → [Watching > Tuning and editing channels > Favourites Edit](#)

- Not valid in Analogue
- 

## Channel List

Skips unwanted channels or edits channels.

 → [Watching > Tuning and editing channels > Channel List](#)

---

## Auto Setup

Automatically searches for receivable channels.

 → [Watching > Tuning and editing channels > Auto Setup](#)

---

## Channel Sorting by Region

Automatically sorts tuned channels according to the available region.

 → [Watching > Tuning and editing channels > Channel Sorting by Region](#)

- For DVB
  - UK only
- 

## Manual Tuning

Searches for channels manually.

 → [Watching > Tuning and editing channels > Manual Tuning](#)

---

## Update Channel List

Updates the channel list while keeping your settings.

 → [Watching > Tuning and editing channels > Update Channel List](#)

- For DVB
-



## New Channel Message

(On / Off)

Selects whether to give a notification message when a new channel is found or not.

 → Watching > Tuning and editing channels > New Channel Message

- For DVB
- 

## Signal Condition

Checks the signal condition.

 → Watching > Tuning and editing channels > Signal Condition

- Not valid in Analogue
- 

## Add TV Signal

Adds the TV mode.

 → Watching > Tuning and editing channels > Other settings

---

= Note =

- The settings in [Tuning Menu](#) are applicable only for the selected TV mode. The menu name varies depending on the TV mode. ([DVB Tuning Menu](#) / [Analogue Tuning Menu](#))

# Language

---

## Preferred Multi Audio

Selects the preferred language for digital channel multi audio (depending on the broadcaster).

 → Watching > Basic > Language

- UK only
- 

## Preferred Audio 1 / 2

Selects the first and second preferred language for digital channel multi audio (depending on the broadcaster).

 → Watching > Basic > Language

- Ireland only
- 

## Preferred Subtitles 1 / 2

Selects the first and second preferred language for digital channel subtitles (depending on the broadcaster).

 → Watching > Basic > Language

- Ireland only
- 

## Preferred Subtitles

Selects the preferred language for digital channel subtitles (depending on the broadcaster).

 → Watching > Basic > Language

- UK only
- 

## Preferred Teletext

Selects the preferred language for digital channel teletext service (depending on the broadcaster).

 → Watching > Basic > Language

- Ireland only

# Display Settings

---

## OSD Colour

(Jet black / Pale grey / Organic brown / Sand beige)

Selects the preferred colour type of on-screen displays.

 → Home Screen > my Home Screen > OSD Colour

---

## Preferred Subtitle Type

(Standard / Hard of Hearing)

Selects the preferred subtitle type.

 → Watching > Basic > Subtitle

- Ireland only
- 

## Teletext

(FASTEXT / List)

Selects analogue teletext display mode.

 → Watching > Teletext > Teletext mode

---

## Teletext Character Set

(West / East1 / East2)

Selects teletext language font.

 → Watching > Teletext > Teletext Character Set

- Ireland only
- 

## Input Labels

Accessing the input labels list allows you to change the input name or skip the input if unconnected, improving identification and selection in the [Input Selection](#) banner.

 → Watching > External equipment > Watching external input

---

## Banner Display Timeout

(10 / 9 / 8 / 7 / 6 / 5 / 4 / 3 / 2 / 1 / 0 (No display) (seconds))

Sets how long the information banner stays on screen.

 → Watching > Basic > Information banner

---

## Smart Banner

(On / Off)

Displays the introduction banner for the internet service.

 → Watching > Basic > Information banner

---

## Radio Mode

(20 / 15 / 10 / 5 / Off (seconds))

Sets the timer for turning off the screen automatically when a radio channel is selected.

 → Watching > Basic > Energy saving functions

---

## Banner & TV Guide Selection

(Freetime / Panasonic)

Selects the type of the information banner and TV Guide.

 → Watching > TV Guide > Using TV Guide

- For DVB (UK only)

# VIERA Link Settings

---

## VIERA Link

(On / Off)

Sets to use VIERA Link functions.

 → [Functions > VIERA Link "HDAVI Control™" > Preparations](#)

---

## Power on Link

(On / Off)

Sets to use Power on Link functions.

 → [Functions > VIERA Link "HDAVI Control™" > Power on Link](#)

---

## Power off Link

(On / Off)

Sets to use Power off Link functions.

 → [Functions > VIERA Link "HDAVI Control™" > Power off Link](#)

---

## Standby Power Save

(On / Off)

Controls the connected equipment to reduce power consumption in Standby.

 → [Functions > VIERA Link "HDAVI Control™" > Standby Power Save](#)

- This function is available when [VIERA Link](#) is set to [On](#) and [Power off Link](#) is set to [On](#).
- 

## Intelligent Auto Standby

(On / Off)

Makes non-watched or non-used connected equipment go into Standby mode to reduce the power consumption.

 → [Functions > VIERA Link "HDAVI Control™" > Intelligent Auto Standby](#)

- This function is available when [VIERA Link](#) is set to [On](#).

# System Menu

---

## USB Keyboard Layout

Selects the language that your USB Keyboard supports.

 → [Functions](#) > [Keyboard](#) > [Keyboard](#)

---

## Shipping Condition

Resets all settings to the original condition.

 → [Functions](#) > [Shipping Condition](#) > [Shipping Condition](#)

---

## Common Interface

Sets to watch encrypted channels, etc.

 → [Functions](#) > [Common Interface](#) > [Using Common Interface](#)

---

## System Update

Downloads new software to this TV.

 → [Functions](#) > [Updating the TV Software](#) > [Auto update](#)

---

## Licence Menu

Displays the software licence information.

## Other Settings

---

### Power on Channel List

(All Channel List / Last)

Automatically selects all channels or favourites list in the information banner when the TV is turned on.

 → Watching > Basic > Selecting channel

- Not valid in Analogue
- 

### Power Save

(On / Off)

Reduces brightness of the picture to economise on power consumption.

# Support

## Help menu

### Using Help menu

---

1. Display the menu with **MENU**.
  2. Select **Help** and press **OK** to access.
  3. Select **TV Self Test / System Information / Device Information** and press **OK** to access.
- 

#### TV Self Test

Makes a diagnosis of picture or sound problems.

Follow the on-screen instructions.

---

#### System Information

Displays the system information of this TV.

---

#### Device Information

Displays the device information of this TV.




# FAQs

## Picture

---

Before requesting service or assistance, please follow these simple guides to solve the problem. Also makes a diagnosis of picture problem in [TV Self Test](#).

 → [Support > Help menu > Using Help menu](#)

If the problem still persists, please contact your local Panasonic dealer for assistance.

---

### Auto aspect

---

- Auto aspect is designed to provide you with the best ratio to fill the screen.

 → [Watching > For best picture > Aspect Control Signal](#)

- Press **ASPECT** if you want to change the aspect ratio manually.

 → [Watching > For best picture > Aspect](#)

---

### Black and white picture

---

- Check that the output of the external equipment matches the input of the TV. When connecting with SCART, ensure the output setting of the external equipment is not S-Video.
- 

### Chaotic image, noisy

---



- Set [Noise Reduction](#) and [MPEG Noise Reduction](#) in the Picture Menu to remove noise.

 → [Watching > For best picture > Noise reduction settings](#)

- Check nearby electrical equipment (car, motorcycle, fluorescent lamp).
-

## No image is displayed

---

- Check the correct input mode is selected.
  - Check the setting of **AV2 (COMPONENT / VIDEO)** in **Input Selection** to match the signal being output by the external equipment.  
 → **Watching > External equipment**
  - Is **Backlight**, **Contrast**, **Brightness** or **Colour** in the Picture Menu set to the minimum?  
 → **Watching > For best picture > Basic settings**
  - Check all required cables and connections are firmly in place.
- 

## Blurry or distorted image (no sound or low volume)

---

- Reset channels.  
 → **Watching > Tuning and editing channels > Auto Setup**
- 

## There may be red, blue, green and black spots on the screen

---

- This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panel is built with very high precision technology giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of red, green, blue or black. Please note this does not affect the performance of the panel.

## Digital TV

---

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

---

Block noise, frozen or disappearing image occurs / Some channels cannot be tuned

---

- Check the position, direction and connection of the aerial.
- Check [Signal Condition](#). If the level of [Signal Quality](#) is low, the DVB signal is weak. Connecting the aerial to the TV directly may improve signal quality than connecting the aerial through the equipment (Set top box, DVD, etc.).



→ [Watching > Tuning and editing channels > Signal Condition](#)



→ [Watching > Basic > Basic connection](#)

- Weather conditions affect signal reception (heavy rain, snow, etc.), in particular in poor reception areas. Even during good weather, the high pressure can cause poor reception of some channels.
  - Due to the digital reception technologies involved, quality of the digital signals may be relatively low in some cases, despite good reception of analogue channels.
  - Turn the TV off with Mains Power On / Off switch, then turn it on again.
- 



No programmes shown on [TV Guide](#)

---

- Check the aerial connection to the Television set and if there are any current signalling issues in your area.
  - Contact Panasonic Customer Support by visiting [www.panasonic.co.uk/freeview](http://www.panasonic.co.uk/freeview)
  - Contact the digital services provider to check for any local transmission issues by visiting [www.freeview.co.uk](http://www.freeview.co.uk)
  - Consult an aerial engineer to check the alignment of your aerial.
-

## Cannot find a channel you have previously watched

---

- The channel may broadcast for part of the day.
- Check the channel in the TV Guide.  
 → [Watching > TV Guide](#)
- Channel position numbers may be changed by broadcasters.
- Reset channels.  
 → [Watching > Tuning and editing channels > Auto Setup](#)

## Analogue TV

---

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

---

White spots or shadow image (ghosting) occurs / Some channels cannot be tuned

---

- Check the position, direction and connection of the aerial.
- Weather conditions affect signal reception (heavy rain, snow, etc.), in particular in poor reception areas. Even during good weather, the high pressure can cause poor reception of some channels.
- Turn the TV off with Mains Power On / Off switch, and then on again.
- If the problem persists, consult your local dealer or service provider for the availability of services.

# Sound

---

Before requesting service or assistance, please follow these simple guides to solve the problem. Also makes a diagnosis of sound problem in [TV Self Test](#).

 → [Support](#) > [Help menu](#) > [Using Help menu](#)

If the problem still persists, please contact your local Panasonic dealer for assistance.

---

## No sound is produced

---

- Is “Sound mute” active? Press **MUTE** to switch sound mute on or off.
- Is the volume set to the minimum?
- Check connections and setting of external equipment.

 → [Watching](#) > [External equipment](#)

- Ensure that [Speaker Selection](#) is set to [TV](#).

 → [Functions](#) > [VIERA Link “HDAVI Control™”](#) > [Speaker Selection](#)

- Ensure that [Speaker Setting](#) is set to [TV Speaker](#).

 → [Watching](#) > [For best audio](#) > [Volume settings](#)

---

## Sound level is low or sound is distorted

---

- Sound signal reception may be poor.
- Set [NICAM](#) in the Sound Menu to [Off](#). (Analogue)

 → [Watching](#) > [For best audio](#) > [Advanced settings](#)

# HDMI

---



Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

---



## Sound is unusual

---

- Set the sound setting of the connected equipment to “2ch L.PCM”.
  - Check the [HDMI Input](#) setting in the Sound Menu.  
 → [Watching > For best audio > Advanced settings](#)
  - If digital sound connection has a problem, select analogue sound connection.  
 → [Watching > External equipment > HDMI features](#)
- 

## Pictures from external equipment are unusual when the equipment is connected via HDMI

---

- Check the HDMI cable is connected properly.  
 → [Watching > External equipment > External connection](#)
- Turn the TV and equipment off, then turn them on again.
- Check an input signal from the equipment.  
 → [Watching > External equipment > Valid input signals](#)
- Use equipment compliant with EIA/CEA-861/861D.

# Network

---






Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

---




## Cannot connect to the network

---

- Check the LAN cable or wireless LAN is connected properly.  
 → [Network > Network connections](#)
  - Check the connections and settings.  
 → [Network > Network connections](#)  
 → [Network > Network settings](#)
  - Check the network equipment and network environment.
  - The router may not be set to issue IP address automatically. If the network administrator prefers to allocate an IP address, set an IP address manually.  
 → [Network > Network settings](#)
  - The router may be using MAC address filtering (security setting). Confirm the MAC Address of this TV and set the router to use it.  
 → [Network > Network settings > Network Status](#)
  - If the problem persists, consult your Internet Service Provider or telecommunications company.
- 

## Cannot select the file during DLNA operations



---

- Is media server of the connected equipment prepared?  
 → [Network > DLNA > In-House streaming](#)
  - Check applicable data format.  
 → [Network > Technical information](#)
  - Check the settings of [Network Link Settings](#).  
 → [Network > Network settings > Network Link Settings](#)
-



## Cannot operate internet content

---

- Check the connections and settings.
  -  → Network > Network connections > Internet connection
  -  → Network > Network settings
- The server or connected line may be busy now.

## Other

---

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

---

### VIERA Link function does not work and an error message appears

---

- Check the connections.



→ [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Turn the connected equipment on and then switch the TV on.



→ [Functions > VIERA Link "HDAVI Control™"](#)

---

### Parts of the TV become hot

---

- Parts of the TV may become hot. These temperature rises do not pose any problems in terms of performance or quality.
- 

### Overcurrent error message appears

---

- The connected USB device may cause this error. Remove the device and turn the TV off with Mains Power On / Off switch, then turn it on again.
  - Check foreign objects are not inside the USB port.
- 

### An error message appears

---

- Follow the message's instructions.
  - If the problem persists, contact your local Panasonic dealer or the authorised service centre.
- 

When pushed with a finger, the display panel moves slightly and makes a noise

---

- There is a little gap around the panel to prevent damage to the panel. This is not a malfunction.

## Detailed information

---

Support information about the application, optional devices, operation, etc. may be found on the following website.

<http://panasonic.net/viera/support> (English only)

# Maintenance

## Care and Cleaning

---

First, remove the mains plug from the mains socket.

### ■ Display panel, Cabinet, Pedestal

Regular care:

Gently wipe the surface of the display panel, cabinet, or pedestal by using a soft cloth to remove dirt or fingerprints.

For stubborn dirt:

- (1) First clean the dust from the surface.
- (2) Dampen a soft cloth with clean water or diluted neutral detergent (1 part detergent to 100 parts water).
- (3) Wring out the cloth firmly. (Please note, do not let liquid enter the TV inside as it may lead to product failure.)
- (4) Carefully wipe moisten and wipe away the stubborn dirt.
- (5) Finally, wipe away all the moisture.

= Caution =

- Do not use a hard cloth or rub the surface too hard, otherwise this may cause scratches on the surface.
- Take care not to subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
- The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch the surface with your fingernail or other hard objects.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time. This may degrade surface quality.

### ■ Mains plug

- Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.

# Licence

## Licence

---

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

---

DVB and the DVB logos are trademarks of the DVB Project.

---

DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

---

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries.

---

HDAVI Control™ is a trademark of Panasonic Corporation.

---

Manufactured under license from Dolby Laboratories.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

---

Text-To-Speech Powered by Dragon

2002-2016 Nuance Communications, Inc. All rights reserved.

---

“PlayReady” is a trademark registered by Microsoft. Please be aware of the following.

(a) This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

(b) Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device’s ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies.

Content owners may require you to upgrade PlayReady to access their content.

If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product incorporates the following software:

- (1) the software developed independently by or for Panasonic Corporation,
- (2) the software owned by third party and licensed to Panasonic Corporation,
- (3) the software licensed under the GNU LESSER GENERAL PUBLIC LICENSE Version 2.1 (LGPL V2.1) and/or,
- (4) open sourced software other than the software licensed under the LGPL V2.1.

The software categorized as (3) and (4) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refer to the detailed terms and conditions thereof shown in the "Software License" menu on this product.

At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under LGPL V2.1 or the other licenses with the obligation to do so, as well as the respective copyright notice thereof.

Contact Information: [cdrequest@unipf.jp](mailto:cdrequest@unipf.jp)

The source code and the copyright notice are also available for free in our website below.

<http://www.unipf.jp/dl/EUIDTV16/>

