


5FT POOL AND AIR HOCKEY TABLE ASSEMBLY INSTRUCTION

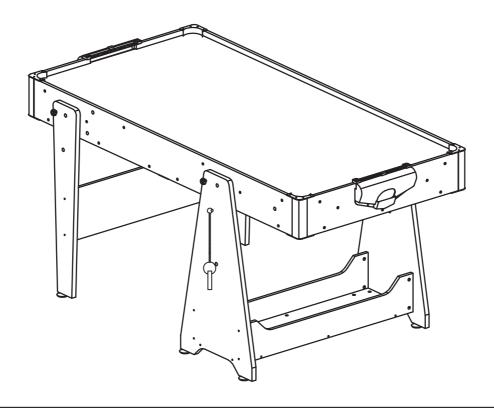

\j\

WARNING: Choking Hazard--Toy contains small balls and/or small parts. Not for children under 3 years.


- -Caution! Adult assembly required.
- -Sharp point on screws; unpack and assemble with care. Keep small parts and polybag away from children during & after assembly. You need a wrench and screwdriver (not included) to assemble.

IMPORTANT!

Please Keep Your Instructions. Before attempting assembly, please read through this instruction book to familiarize yourself with all the parts and assembly steps. We recommend that two adults assemble this game.

Please refer to the Parts List below and be sure that all parts have been included.


Item: HP04434

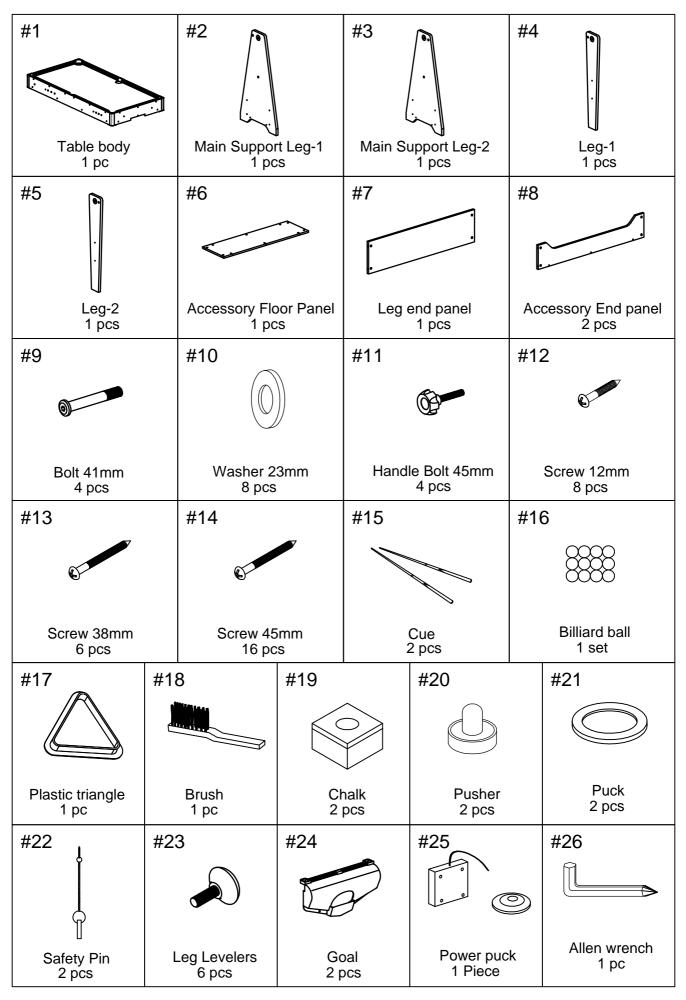

STEP 1:

Using at least two people carefully place the table body (#1) onto a soft, non staining surface .


Using screw (#12) attach the goals (#24) to the table body (#1)

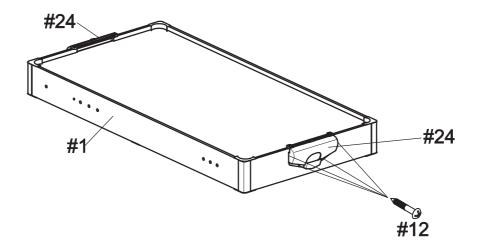

STEP 2:

Attach main support leg(#2 & #3) along with leg (#4 & #5) to the table body (#1) using bolt and handle bolt (#9 & #11) and washer (#10).


Insert bolt(#9) into the pre-drilled holes that are marked with a blue circle on the side panel. #2

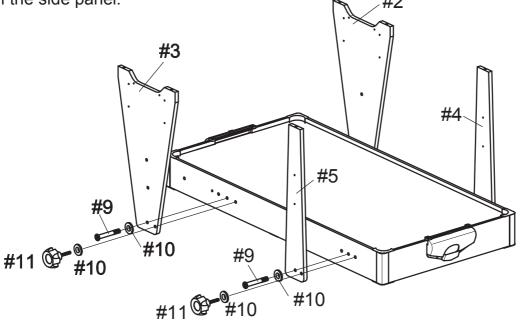

To ensure that the table is assembled correctly, please ensure that the table legs are secured to the side of the table body with a matching part number.


STEP 3:

To assemble the accessory tray secure the accessory end panel (#8) to the accessory floor panel (#6) using screw (#13)

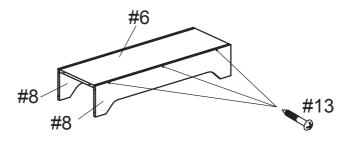


STEP 4:

Once done secure the completed accessory tray to the main support legs using screw (#14)

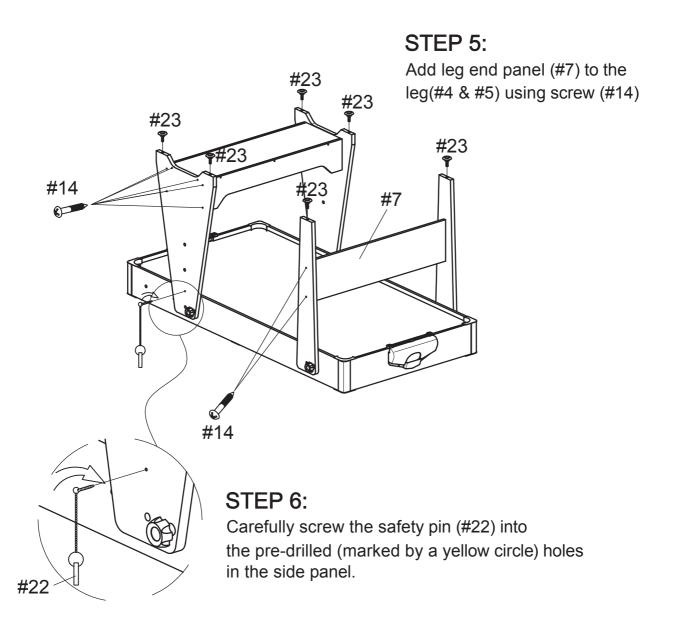


STEP 7:

Using at least two adults carefully turn the table the right way up. To fold the table, please remove all accessories from the playing surface and remove handle bolt (#11) completely

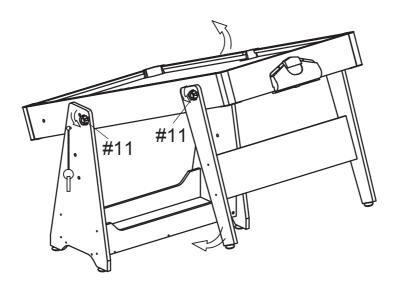

STEP 8:

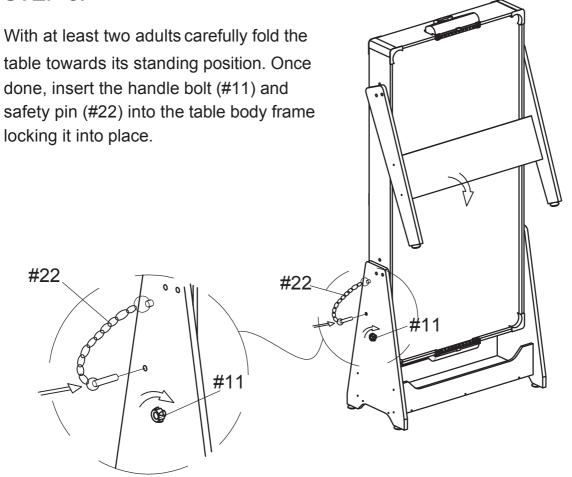


STEP 9:

To rotate the table, remove handle bolt (#11) and safety pin (#22). With at least two adults carefully rotate the table body (#1) and rotate the legs over the table.

Once done, insert handle bolt (#11) into the main support leg and leg(#2 #3 #4 #5)

STEP 10:

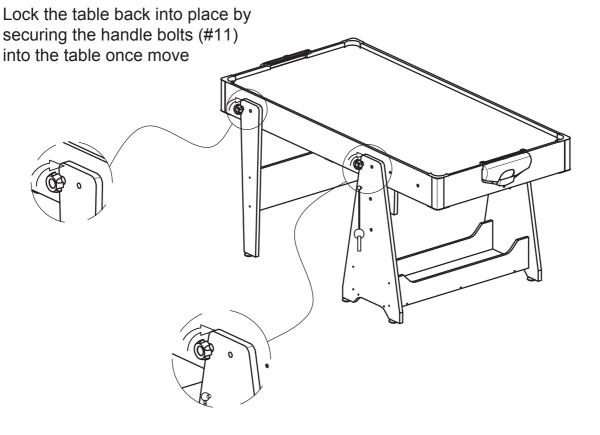



Directions for use of the Power Puck

- 1. Carefully remove the battery compartment cover using a screw driver.
- 2. Insert batteries, ensuring correct polarity.
- 3. Replace and secure cover by tightening the screw.







To charge the Power puck, connect with the battery box. Normal charging time is around 30-40min. Please ensure you charge the Power Puck for a minimum of 1 hour for the first initial charge.

To play the Power Puck, please switch on the button under the puck.



Battery warning:

- 1. Should not connect to more than the recommended number of battery
- 2. Non-rechargeable batteries are not to be recharged
- 3. Rechargeable batteries are only to be charged under adult supervision
- 4. Rechargeable batteries are to be removed from the toy before being charged
- 5. Different types of batteries or new and used batteries are not to be mixed
- 6. Batteries are to be inserted with the correct polarity
- 7. Exhausted batteries are to be removed from the toy
- 8. The supply terminals are not to be short-circuited.