

CORDLESS CONVENIENCE FOR QUICK EVERYDAY CLEAN UPS

LET'S GET STARTED.

H85-GA-B10 H85-GA-B15 H85-GA-P18



Let's talk safety



Basic safety precautions

This handheld is intended for household use only and NOT for commercial or industrial use.

- This handheld is for indoor use only.
- For dry debris use, not to be used on wet surfaces.
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the handheld.

- Only Vax recommend charger, tools and accessories should be used with this handheld.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



Don'ts

- Don't charge the handheld outdoors
- Don't use this handheld if it has been dropped, damaged, immersed in water or left outdoors.
- Don't run over the charger cord or use handheld if the Charger cord or plug is damaged. Please contact our Customer Care Line on: 0844 4128 455 (Mon-Fri 8.30am to 6.30pm, Sat 9.00am to 5.00pm).
- Don't handle the plug or use the handheld with wet hands.
- Don't throw the handheld into fire or expose to high temperatures, as the handheld contains a rechargeable nickel cadmium battery which may cause damage or burst.

- Don't pull or carry this handheld by the charger cord. Don't use the charger cord as a handle, pull the charger cord around corners or sharp edges or close a door over the charger cord. Don't unplug handheld by pulling on the charger cord.
- Don't attempt to remove blockages with sharp objects as this may cause damage to your handheld.
- Don't use the handheld charger with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.
- Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).



Do's

- Always make sure filter and dirt container are fitted correctly before using your handheld.
- Always turn off the Gator handheld vacuum and disconnect the charger before carrying out any maintenance.
- Turn off all controls on the handheld before disconnecting or connecting the charger.
- Take extra care when cleaning on the stairs.
- Always replace the fuse in the plug with a 13amp fuse.

- Always protect the charger cable from heated surfaces or near open flames.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Always carry the handheld by the handle.
- Store your handheld in a cool, dry area.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

Thank you for buying this Gator.

Taking care of small cleaning tasks

The Gator range is designed to make cleaning as quick and convenient as possible and this user guide will help you get the most out of your machine.

The Gator range is perfect for small cleaning tasks on surfaces and upholstery.

Taking care of your Gator

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you need to tackle those small jobs.

Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:



(UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

Alternatively, you can write to us at:

 $\label{thm:local_problem} \mbox{Vax Ltd., Plot 302, Stonebridge Cross Business Park, Hampton Lovett, Droitwich, Worcestershire, WR9 0LW, UK}$

This user guide can be found online at: vax.co.uk/support



Let us know what you think @VaxUK

Vax



Gator 10.8V & 15.6V

Included with your machine



Filter



Charger

Gator 18V



Motorised Tool

Technical Specification

Name	Gator 10.8V	Gator 15.6V	Gator 18V
Weight	1.24kg	1.8kg	1.8kg
Capacity	0.3L	0.3L	0.3L
Cleaning Time	15 mins	18 mins	20 min
Charging Time	12 hrs	12 hrs	12 hrs


Accessories & Consumables*

Gator 10.8V	Gator 15.6V
Charger	Charger
1-5-131865-00	1-5-132794-00
Pre-motor	Pre-motor
Filter (Type 67)	Filter (Type 67
1-7-131574-00	1-7-131574-00


6V Gator 18v Charger 34-00 1-5-132794-00 or Pre-motor be 67) Filter (Type 67 4-00 1-7-131574-00 Motorised Turbohead

PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE

NOTE: The power switch must be in the off position to charge the battery.

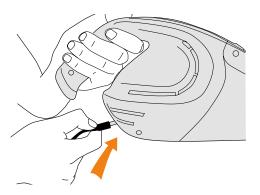

Plug charger into the mains and insert lead into back of machine. Initial charging time is 24 hours.

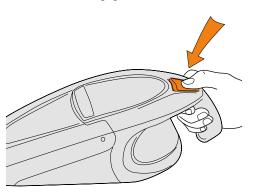


0 Off I On


On/off switch:



Push the crevice tool to retract.

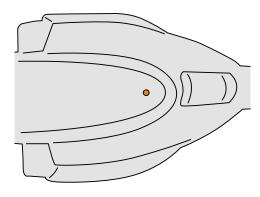

The charging light will illuminate continuously whilst the charger is connected.

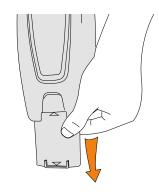


Failure to initially charge the battery for 24 hours, may result in poor


battery performance.

CAUTION


Gently pull the crevice tool.

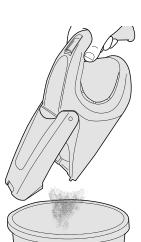

Empty dirt and debris over a bin.

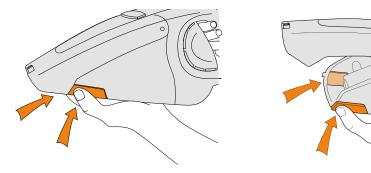

To empty the dirt container, press both buttons either side of the dirt container to release lid.

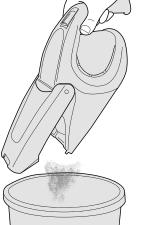

We recommend to empty the dirt container after each use.

Taking care of your machine

Filter

Press the filter removal button and pull dirt container from machine.




Shake any excess dirt or debris from the dirt container.



Whilst holding the dirt container over a bin, grasp the filter gently and pull out.



Tap filter against bin.

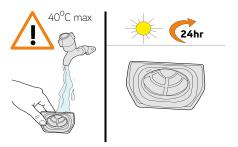


Wash the filter under running water and leave to fully dry for a least 24 hours before replacing.




Taking care of your machine




Gently push filter back into the dirt container.

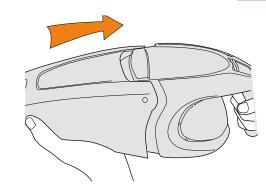

To re-attach the dirt container, align bottom of the dirt container and push until it locks into place.

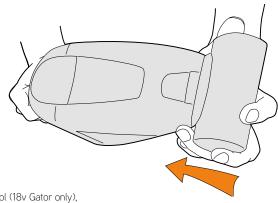

To attach the Motorised Tool (18v Gator only), align with dirt container and push until it locks in place.

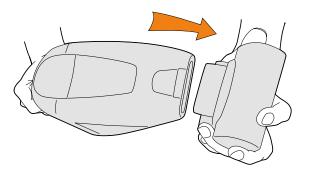

To remove the Motorised Tool (18v Gator only) for cleaning or when not in use, gently twist down and pull to detach.

Always unplug the charging lead from the machine before carrying out any maintenance.



What to do if it goes wrong

Problem

Why does my handheld have no power?

Solution


 Battery may not be fully charged. If using the handheld for the first time the initial charge should be 24 hours.
The charging light will illuminate continuously when charger is connected.

Why won't the handheld pick up?

 The nozzle or crevice tool may be blocked, check and clear any blockage. The filter may be clogged, clean the filter.
Go to 'Taking care of your machine' page*. The battery is getting weak, let the battery run until it stops and recharge.
The dirt container may be full, empty the dirt container.
Go to 'Using your machine'.

Why won't the battery recharge?

 The charger may not be inserted correctly. Check the fuse in the plug, if this needs replacing always replace with a 13amp fuse.

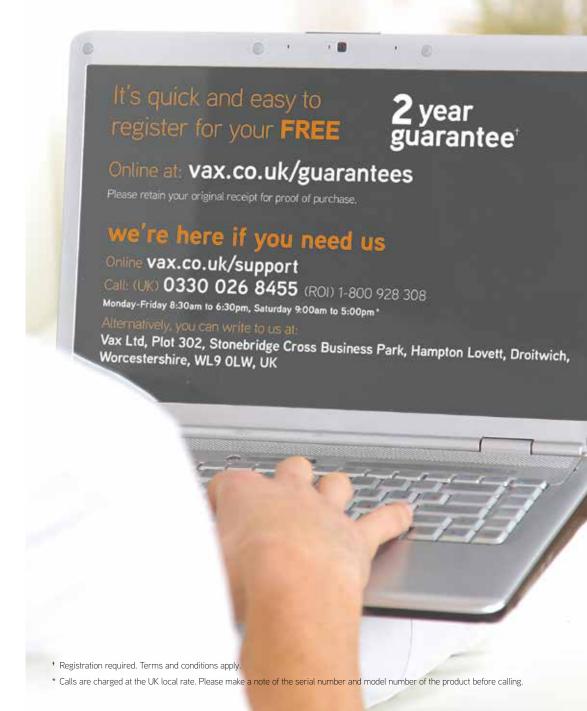

GET IN TOUCH

EEC Statement of Compliance: Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the H85-GA-B10/B15/P18 is manufactured in compliance with the following Directives: **Safety**: 2006/95/EC Low Voltage Directive.

EMC: 2004/108/EC Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

© 2015 All rights reserved. VAX®, are trade marks or registered trade marks of Techtronic Floor Care Technology Ltd.

