


FREEZER

FREEZER	 1 ~ 2	GB	
FREEZER	 3 ~ 4	DA	
REEZER	 5 ~ 8	CZ	
REEZER	 9 ~ 11	DU	
FREEZER	 12 ~ 17	RU	
FREEZER	 18~22		
FREEZER	 23~26	NO	D
REEZER	27 ~ 29	SW	

SINGLE DOOR FREEZER


Wait at least two hours before switching the appliance on, in order to ensure that the refrigerant circuit is fully efficient.

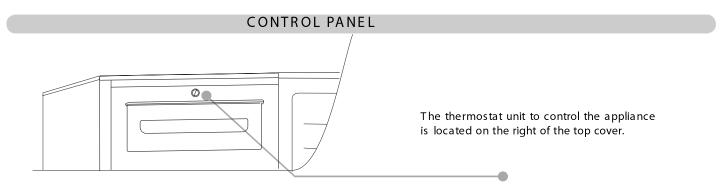

DEFROSTING and FREEZING

The rating plate states the maximum quantity of foods that can be frozen, (see "gure 2). Freezing is guaranteed with any knob setting.

(Figure 2)

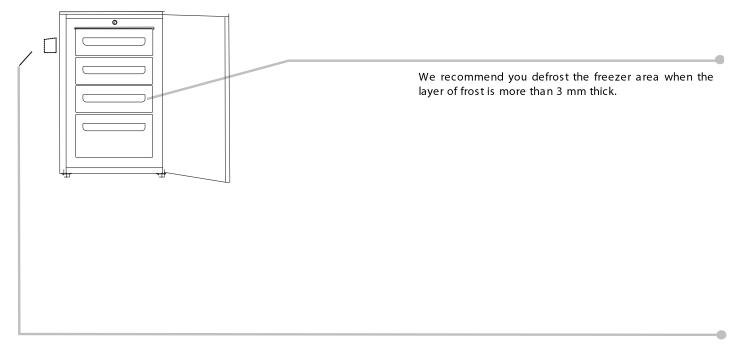



NB. This is the rating plate. If you need to contact our Service Department in the event of faults, remember to give them the information on the plate.


Important: If the room temperature is very warm, the appliance may work continuously and a layer of frost will deposit on the surface of the evaporator tubes and wires. In this case, turn the knob to lower settings (MIN).

REVERSING THE OPENING OF THE DOORS

   
In order to reverse the opening of the doors, follow the indications in relation to the insert and hinge type your product is made up of.









Remove the caps (A) and (B), loosen the screws and partially remove the panel.

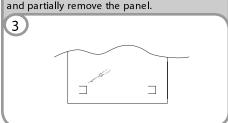


Unscrew the right hinge

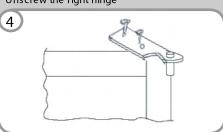

 Before reassemble the hinge to the left side, reverse the direction of the hinge.



 Remove the plug on the left-hand side and insert it on the right hand-side of the door.



Reassemble the hinges and doors working from bottom to top, 1

