



ALBA

19" LED TV with DVD Player Instruction manual

VL19HDLED-D



You'll soon be up and running

Looking forward to your new Alba television? Great.

Then let's get you started.

Just follow this simple step-by-step guide and you'll be good to go.

Help and Guidance

We're here to help you get the most from your television. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**.

Contents

1 Safety information

| | |
|--------------------|---|
| Safety information | 6 |
|--------------------|---|

2 Getting to know your TV

| | |
|--------------------------------------|----|
| Ready? Let's begin... | 12 |
| Accessories | 12 |
| Installing / Removing the Base Stand | 13 |
| Viewing remote control | 14 |
| Viewing control panel | 15 |
| Aerial connection | 17 |
| Remote control - Inserting batteries | 17 |
| Switching the TV On and Off | 17 |
| Operation using TV control buttons | 18 |
| Operation using remote control | 18 |
| How to watch a DVD | 19 |
| Notes on DVD playback | 19 |
| DVD Controls | 20 |
| Initial setup | 21 |
| General operation | 21 |

3 Connections

| | |
|-----------------------------------|----|
| Left side connections explained | 24 |
| Left bottom connections explained | 25 |
| HDMI Connections | 26 |
| SCART Connections | 26 |
| VGA Connections | 26 |

4 Basic Feature

| | |
|---|----|
| How to navigate menus - Selecting source | 30 |
| Electronic programme guide (EPG) (DTV mode) | 30 |
| Teletext (ATV mode) | 31 |
| Digital Teletext (DTV mode) | 32 |

| | |
|---|----|
| Recording DTV Programme onto a USB Storage Device | 32 |
| Timer Programming | 33 |
| Play Recorded Programme | 34 |
| Sound management | 35 |
| Channel management (ATV / DTV Mode) | 36 |

5 Using the DVD Features

| | |
|-------------------------------|----|
| Using the Built-in DVD Player | 50 |
| Basic DVD Playback Functions | 51 |
| Playing Multimedia Discs | 52 |
| DVD SYSTEM MENU | 52 |
| Go To General Setup Page | 52 |
| Go To Audio Setup Page | 53 |
| Go To Preference Setup Page | 53 |

6 Other information

| | |
|--|----|
| Specifications | 58 |
| Digital reception | 58 |
| Plug replacement - UK and Ireland only | 59 |
| Energy label | 59 |
| DTS TruSurround | 59 |

7 Product support

| | |
|------------------------|----|
| Trouble shooting | 62 |
| Definition of terms | 63 |
| Supported file formats | 64 |
| Help and assistance | 65 |
| Disposal | 66 |
| Guarantee | 67 |

Safety information 1





Safety information

Important - Please read these instructions fully before installing or operating

Power source

The TV should be operated only from a 220-240 V AC, 50 Hz outlet.

- **Warning: Do not** leave your TV in standby or operating mode when you leave your house.

Positioning the TV

For ventilation, please leave a clear space of at least 10cm all around the TV.(Fig 1)

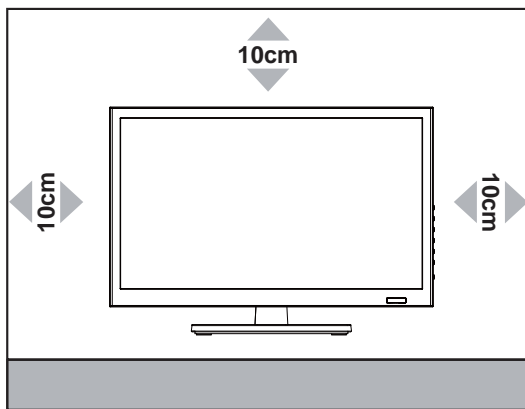


Fig 1.

- **Do not** block the ventilation openings.
- **Do not** place the TV on sloping or unstable surfaces, the TV may tip over.
- To prevent damage to the TV, do not place any objects on top of the TV.
- Only use the TV in moderate climates.

Power cord and plug

- The power cord plug should be easily accessible. In case of storms and lightning, when going on holiday, or when the TV is not used for a long period of time disconnect the power cord from the mains power socket.
- Do not place the TV, furniture, etc. on the power cord or pinch the cord.

- Handle the power cord by the plug, do not unplug the TV by pulling the power cord.
- Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock.
- Never make a knot in the power cord or tie it with other cords.
- Power cords should be placed in such a way that they are not likely to be stepped on or driven over.
- A damaged power cord/plug can cause fire or give you an electric shock. When damaged it must be replaced, this should only be done by qualified personnel.

Moisture and water

- **Do not** use this TV in a humid or damp place (avoid bathrooms, the sink in the kitchen, and near the washing machine).
- **Do not** expose this TV to rain or water, as this may be dangerous.
- **Do not** place objects filled with liquids, such as flower vases, on top of the TV. Avoid from dripping or splashing.
- If any solid object or liquid falls into the cabinet, unplug the TV and have it checked by qualified personnel before operating it any further.

Ventilation

- The slots and openings on the TV set are intended for ventilation and to ensure reliable operation.
- To prevent overheating, these openings must not be blocked or covered in anyway.

Heat sources and flames

- **Do not** expose the TV to direct sunlight or other heat sources.
- The TV should not be placed near to open flames and sources of intense heat such as an electric heater.
- Ensure that no open flame sources, such as lighted candles, are placed on top of the TV.

Safety information

Important - Please read these instructions fully before installing or operating



- To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



- The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock of persons.

Headphone volume

Excessive sound pressure from earphones and headphones can cause hearing loss, please take care.

Wall mounting (optional)

To prevent injury, this TV must be securely attached to the wall in accordance with the installation instructions (if the option is available).

LCD Screen

- The LCD screen is a very high technology product with about a million thin film transistors, giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green or red point. Please note that this does not affect the performance of your product.
- Take care not to scratch the screen with fingernails or other hard objects.

Cleaning

- Before cleaning, unplug the TV from the wall socket.
- **Do not** use liquid or aerosol cleaners. Only use a soft, dry cloth.

Batteries

Warning: Incorrect installation of batteries may cause battery leakage and corrosion, resulting in damage to the remote control.

Do not mix old and new batteries, or batteries of different types.

Do not dispose of batteries in a fire.

Do not dispose of batteries with normal household waste, take to a local recycling centre.



Replacement parts

When replacement parts are required, make sure that the service technician has used replacement parts, which are specified by the manufacture or have the same specifications as the original one. Unauthorised substitutions may result in fire, electrical shock or other hazards.

Handling discs


- To keep the disc clean, only handle the disc by its edge.
- Do not** touch the surface.



- **Do not** stick paper or tape on the disc.
- If the disc is contaminated with any substance like glue, remove before using it.
- **Do not** expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature can rise quickly and damage the disc.
- After playing, store the disc in its case.

Cleaning discs

- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the centre out.

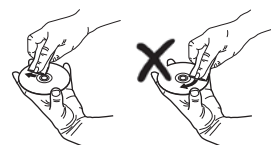



Safety information

Important - Please read these instructions fully before installing or operating

- **Do not** use solvents such as benzine, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.

Servicing

- **Warning:** Risk of exposure to radiation from class 1/class 3b visible and invisible laser beams. **Do not** open the TV and stare directly into beam.
- **Warning:** Risk of electric shock, **do not** attempt to repair, service or modify this TV yourself. Contact the manufacturer, their approved service agent or the **Customer Helpline: 0345 604 0105**.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

- **Warning:** To prevent the spread of fire, keep candles or other open flames away from this product at all times.



or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105.

Getting to know your TV 2



Getting to know your TV


You'll be up and running in no time

Ready? Let's begin...


Please read these instructions carefully. They contain important information which will help you get the best from your TV and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.


Accessories

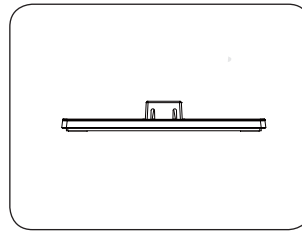


Stand Base

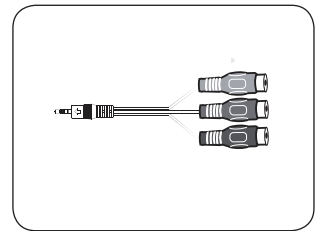


MINI YPBPR Cable

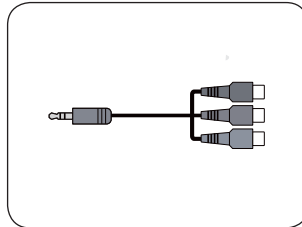


MINI AV Cable

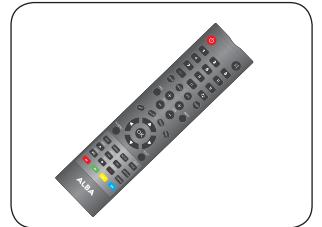

Remote Control

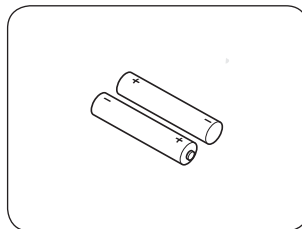

Batteries: 2 x AAA

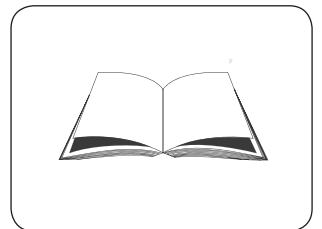

Instruction Book

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.


Getting to know your TV

You'll be up and running in no time

Installing / Removing the Base Stand


Base Stand Assembly Instruction

1. Place the TV with the display side down on a flat surface. Use a cloth to protect. Locate the bottom at the stand.
2. Push the TV stand into the stand column until it snaps into place.

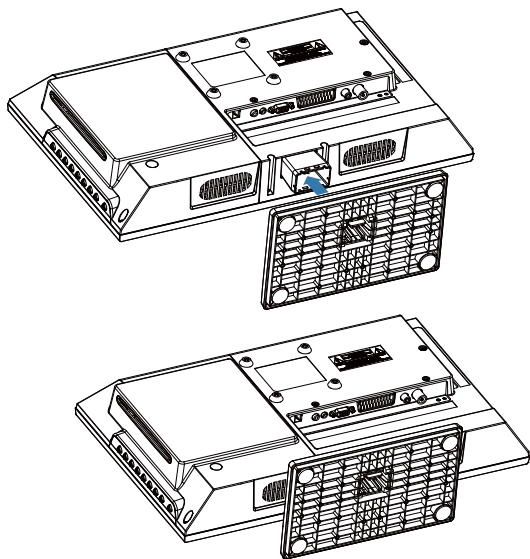

WALL MOUNTING INSTALLATION GUIDELINES

1. Place the LED LCD Television onto a solid surface. Please place some soft material over the front of the screen to protect it from any damage.
2. Remove the stand .
3. Remove the two screws that secure the stand column to the TV screen.
4. Remove the stand column.

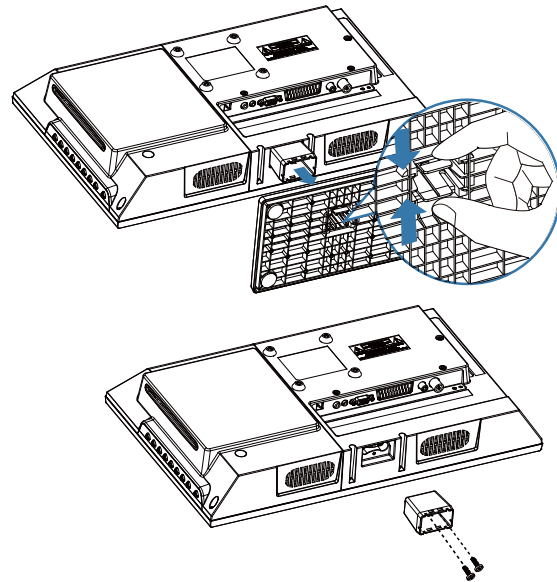

INSTALLATION NOTES


This TV can be connected to an AC 100-240 Volts,50/60 Hz power supply. Never connect straight to a DC power supply.

Locate the TV in a room where light does not strike the screen directly. Total darkness or a reflection on the screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing.

Allow enough space between the TV and the wall to permit ventilation.

Avoid excessively warm locations to prevent possible damage to the cabinet or premature component failure.

5. Use the four screws provided to fix the TV onto a wall mounting bracket (not included) via the four VESA standard holes on the back of the television.

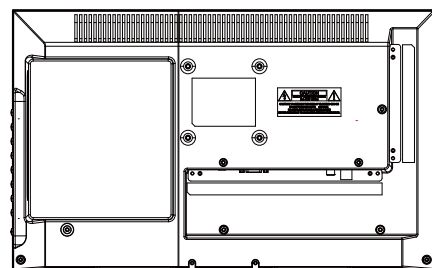


75 x 75mm VESA mount

Getting to know your TV

You'll be up and running in no time

Viewing remote control

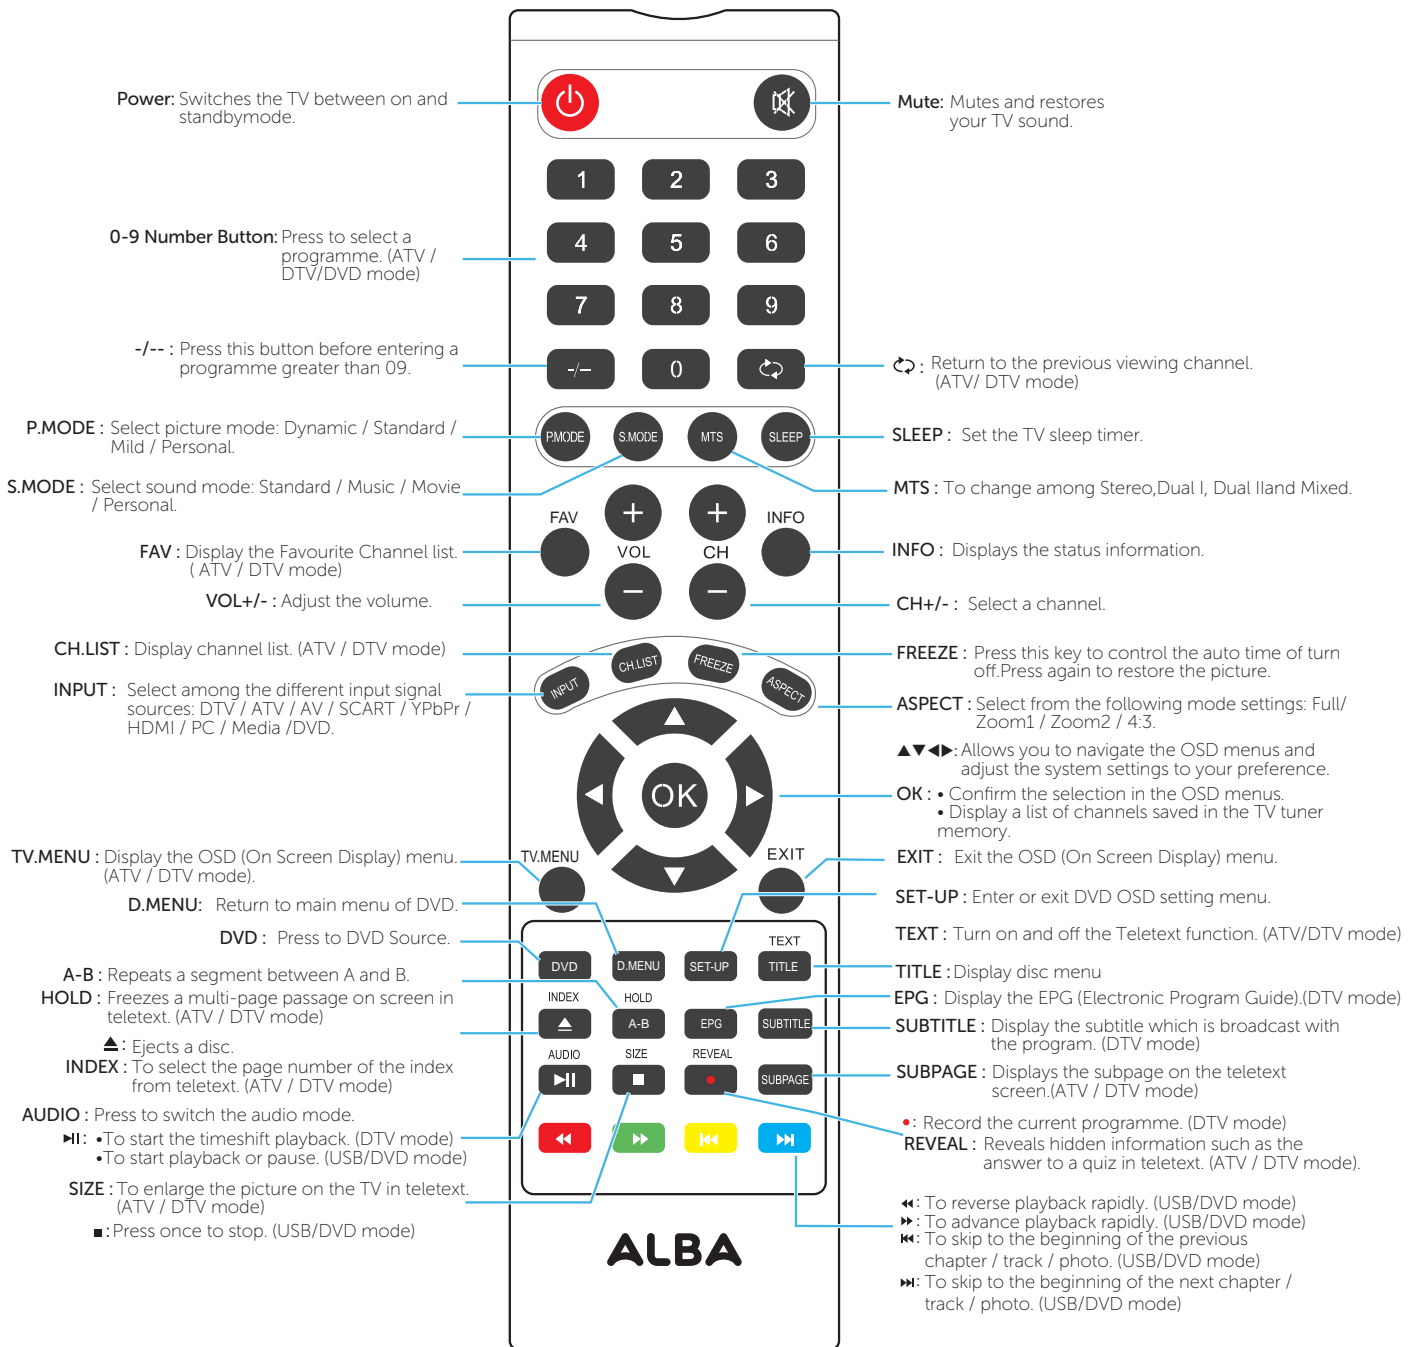


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Getting to know your TV

You'll be up and running in no time

Viewing control panel

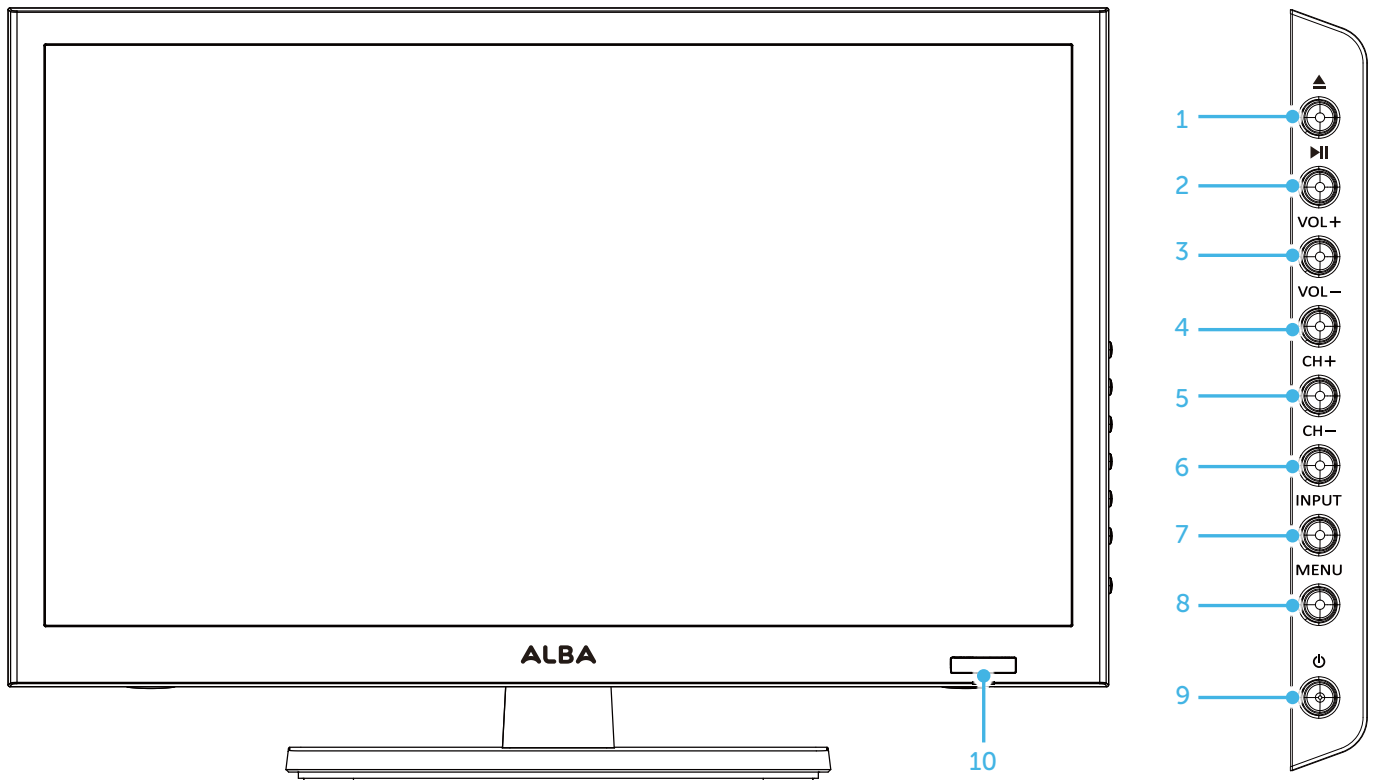


1. Press to eject disc. (DVD mode)
2. Press to start playback or pause.(DVD mode)
3. VOL+ Increase the volume
4. VOL- Decrease the volume
5. CH+ Selects the next channel up
6. CH- Selects the next channel down
7. INPUT Accesses the Source menu
8. MENU Accesses the TV menus
9. POWER Turns the TV on and into standby
10. Standby LED/Remote Control Sensor

Getting to know your TV

You'll be up and running in no time

Viewing control panel

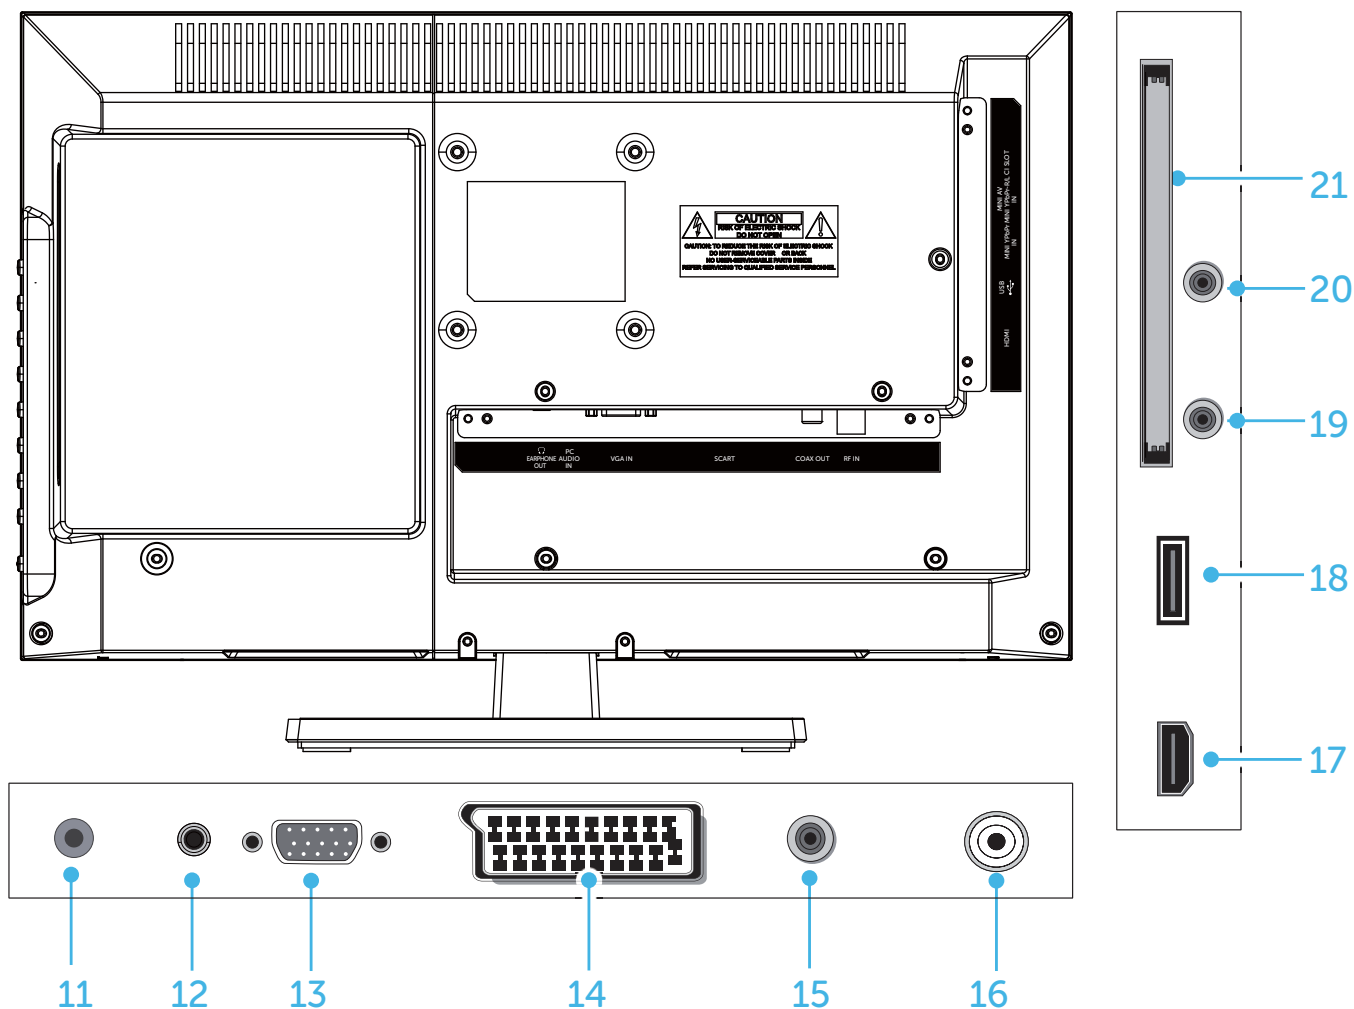

- | | | |
|---|---|-----------------------|
| 11. Headphone jack | 15. COAXIAL Out | 19. MINI YPbPr |
| 12. Audio in jack PC Monitor connection | 16. RF Input (ANT.) | 20. MINI AV/YPbPr-R/L |
| 13. VGA Socket PC Monitor connection | 17. HDMI Socket High Definition lead connection | 21. CI Slot |
| 14. SCART Socket SCART lead connection | 18. USB Socket USB connection (optional) | |


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Getting to know your TV


You'll be up and running in no time

Aerial connection

Connect a coaxial cable (not provided) to the ANT/CABLE IN jack on the back of your TV and to the antenna or cable TV wall jack.

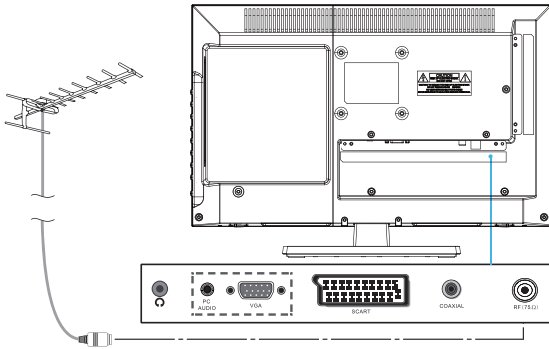


Connect the incoming cable from the cable wall jack to the cable-in jack on the cable or satellite box. Connect a coaxial cable (not provided) to the ANT/CABLE IN jack on the side of your TV and to the coaxial out jack on the cable or satellite box.

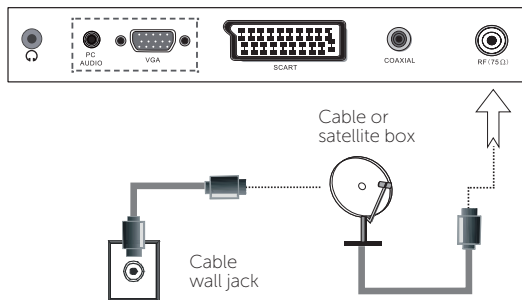

Power connection

Connect the power cord plug to the mains power socket.

Please note: After unpacking, allow the TV to reach ambient room temperature before connecting the TV to the mains power socket.

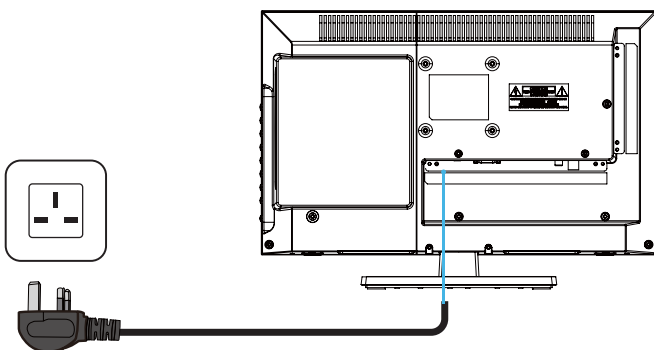


or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105.

Remote control - Inserting batteries

Remove the battery cover on the back of the remote control, gently push down and pull backwards at the same time as shown.

Insert two AAA/R3 or equivalent type batteries. Ensure the batteries are inserted the correct way and replace the battery cover.

Note: When the remote control is not going to be used for long periods of time, the batteries should be removed. Otherwise the remote control may be damaged, caused by battery leakage and corrosion.

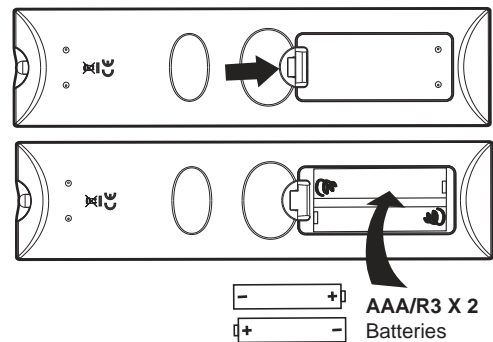

Switching the TV On and Off

Switching the TV On

With power cord plug connected to the mains power socket and TV in 'Standby' mode.

To switch the TV on from standby mode, either:

a: The Remote control; Press the "⏻" button.

b: The TV; Press the "⏻" button on the right of the TV.

Switching the TV Off

Either press the "⏻" button on the remote control or press the "⏻" button on the right of the TV, the TV will then switch to standby mode.

Getting to know your TV

You'll be up and running in no time

Operation using TV control buttons


The **VOL+/VOL-** buttons will function as volume up/down as default. Even if you set other functions for these buttons, the **VOL+/VOL-** buttons will return to volume control after a short while.

Volume Setting

Press **VOL+/VOL-** buttons to increase or decrease volume.

Programme Selection

Press **CH+/CH-** buttons to select the next or previous programme.

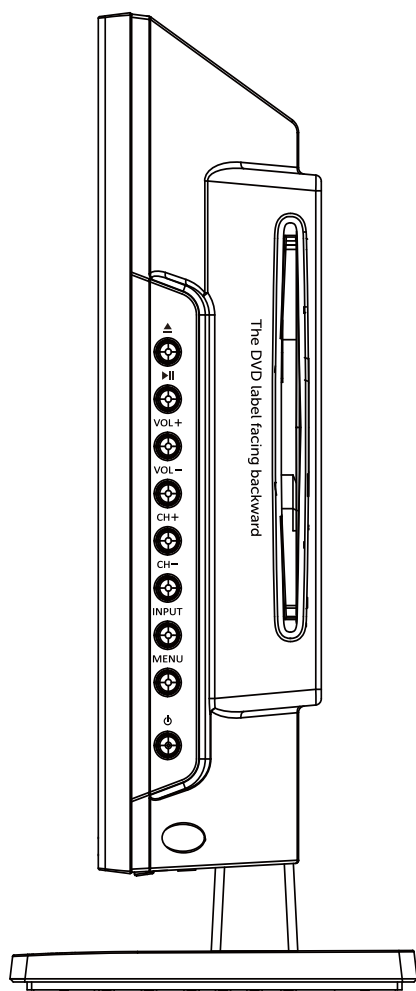

Operation using remote control

The remote control is designed to control all the functions of the model you selected.

Volume Setting

Press **VOL+** button to increase the volume.

Press **VOL-** button to decrease the volume. A volume level scale (slider) will be displayed on the screen.


Programme Selection (Previous or Next Programme)

Press **CH-** button to select the previous programme.

Press **CH+** button to select the next programme.

Programme Selection (Direct Access)

Press number buttons on the remote control to select programmes between 0 and 9. The TV will switch to the selected programme.

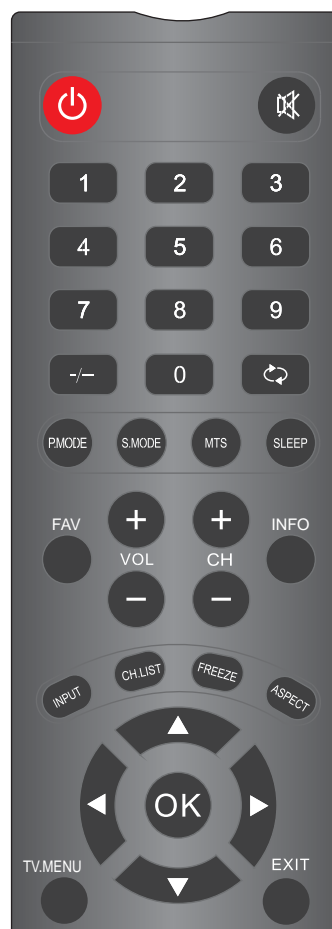

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.


Getting to know your TV

You'll be up and running in no time

How to watch a DVD

1. Press the "⏻" button on the TV or remote control.
2. Switch to DVD source using the "INPUT" button on the remote control.
3. Insert a disc into the loader.

The no label side of the disc **MUST** be facing you when looking at the TV screen.

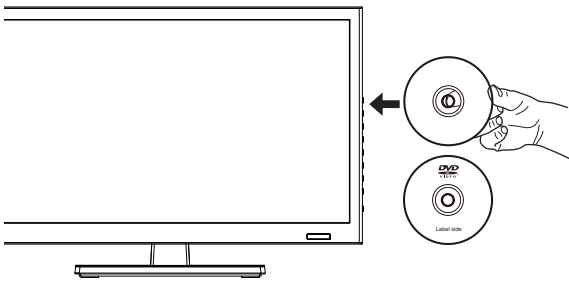

Label side

If play does not start automatically, press the "▶||" button on the remote control, or the "▶||" button at the right of the TV.

A menu may appear on the TV screen after a few moments or the film may start immediately after the Film/TV Company introduction. This will depend on the disc content and may differ on each disc.



Steps 4 and 5 are only available when a menu is recorded on the disc.

4. Press the navigation buttons "▲▼◀▶" or the number buttons to select the required title.
5. Press the **OK** button. The selected item starts to play.

Notes on DVD playback

- No sound will be heard during Rapid advance or Rapid reverse.
- No sound will be heard during Slow motion play.
- Reverse Slow motion play is not available.
- In some cases, the subtitle language will not be changed immediately to the selected one.
- When the preferred language will not select, even after pressing the button several times, it means the language is not available on the disc.
- When the DVD player is restarted or the disc is changed, the subtitle selection is automatically changed back to the initial settings.
- If a language is selected that is not supported by the disc, the subtitle language will automatically be set to the disc's priority (default) language.
- Usually a 'circulation' will happen while switching to another language, this means you can cancel the subtitle by pressing the same button a number of times until "Subtitle Off" appears on the screen.
- When the power is turned on or the disc is removed, the language heard will be the one selected at the initial settings.
- Some DVDs may not contain root and/or title menus.
- Reverse stepping is not available.
- For reference: If you attempt to enter a number greater than the total time of the current title, the time search box disappears and "Input Invalid ⓧ" message appears on top-left corner of screen.
- The slide show is disabled when the ZOOM mode is on.

Getting to know your TV

You'll be up and running in no time

DVD Controls

You can operate DVD, movie CD, music or picture CD's content by using the correct buttons on your remote control. Below are main functions of commonly used remote control buttons.

| Buttons on Remote Control | DVD Playback | Movie Playback | Picture Playback | Music Playback |
|---------------------------|---|---|--|--|
| ▶/AUDIO | Play/Pause | Play/Pause | Play/Pause | Play/Pause |
| ■/SIZE | Stop | Stop | Return to the picture list | Stop |
| ▲/INDEX | Open or close the discs tray | Open or close the discs tray | Open or close the discs tray | Open or close the discs tray |
| SET-UP | Displays the DVD OSD menu | Displays the DVD OSD menu | Displays the DVD OSD menu | Displays the DVD OSD menu |
| ◀◀ | Skip backward | Skip backward | Skip backward | Skip backward |
| ◀◀ | Rapid reverse | Rapid reverse | X | Rapid reverse |
| TITLE/TEXT | Display disc menu (if available) | Display disc menu (if available) | X | X |
| SUBTITLE | Subtitle on-off. Press repeatedly to switch between subtitle option | Subtitle on-off. Press repeatedly to switch between subtitle option | X | X |
| ▶▶ | Skip forward | Skip forward | Skip forward | Skip forward |
| ▶▶ | Rapid advance | Rapid advance | X | Rapid advance |
| D.MENU | Return to the main menu of a loaded DVD (if available) | Return to the main menu of a loaded DVD (if available) | Return to the main menu of a loaded DVD (if available) | Return to the main menu of a loaded DVD (if available) |
| A-B/ HOLD | Repeat a selected section | Repeat a selected section | X | Repeat a selected section |


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Getting to know your TV

You'll be up and running in no time

Initial setup

1. Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the RF (75Ω) socket at the bottom of your TV.
2. Connect the mains cable to the mains socket after you have completed all the connections.
3. With power cord plug connected to the mains power socket and TV in 'Standby' mode. At this stage, the TV switches to standby mode. The red LED indicator will illuminate on the front panel of the TV.
4. In standby mode, press the "⏻" button on the right of the TV or the "⏻" button on the remote control to turn the TV on. The red LED indicator will turn blue.
5. The first time you turn the TV on, it will go straight into First Time Setup menu. Press the ▲▼◀▶ buttons to navigate the menu and change the settings.

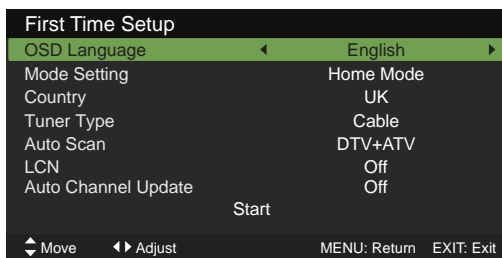

OSD Language

Selects your desired language to be displayed on the menu. The default on-screen menu language is set as English.

Mode Setting

Selects your desired mode setting.

- Home Mode: Viewing at home.
- Store Mode: For store demo, the brightness is higher than home mode.

Country

Selects the country where you will operate the TV. The default country is set as UK.

Tuner Type

Select Tuner Type: Cable / Antenna.

Auto Scan

Selects the auto scan type: DTV+ATV / DTV /ATV.

LCN


Select LCN Type On or Off.

Auto Channel Update

Select Auto Channel Update Type On or Off.

Start

Press the OK button to start auto tuning. Auto Scan will commence. The display will show the progress of the tuning and the number of channels found.

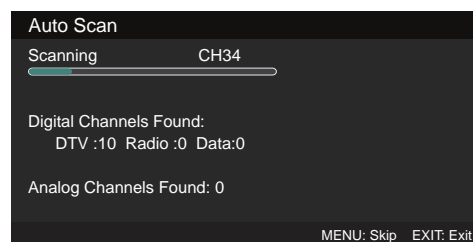

6. If you want to skip the DTV tuning, press the **TV.MENU** button to interrupt the tuning half way. You will then go straight to ATV tuning. You may repeat the above step if you also want to skip the ATV tuning.

General operation

Press the **INPUT** button on the remote control and select DTV to switch the TV to Digital Terrestrial Television Broadcasting.

Information Banner

Whenever you change channel using the **CH+/CH-** buttons or the number buttons, the TV displays the broadcast picture along with an information banner on the top left of the screen (available only in DTV/ATV mode).

The information banner can be displayed a any time while watching TV by pressing the **INFO** button on the remote control.

Connections 3



Connections

Bringing it all together

Left side connections explained

1. HDMI Input

Connects a device that has an HDMI socket. The TV can display High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Player. These devices must be connected via the HDMI sockets or Component Socket. No sound connection is needed for an HDMI to HDMI connection.

2. USB Input

To connect devices to the TV, providing fast data exchange. USB will have function in USB/DTV mode.

3. MINI YPbPr


YPbPr Input socket is just suitable for YPbPr Mini Cable. Connect to a DVD player, Digital Set-Top-Box, or other AV devices with component (YPbPr) video output sockets. Note: Pls. use "MINI AV/YPbPr-R/L" socket, when you want to connect to YPbPr audio.

4. MINI AV/YPbPr-R/L

Connect to the composite VIDEO and AUDIO (R/L) output sockets on external video devices..

5. CI Slot

Used to insert a CI card. A CI card allows you to view all the channels that you subscribe to. For more information, see "Conditional Access" section.

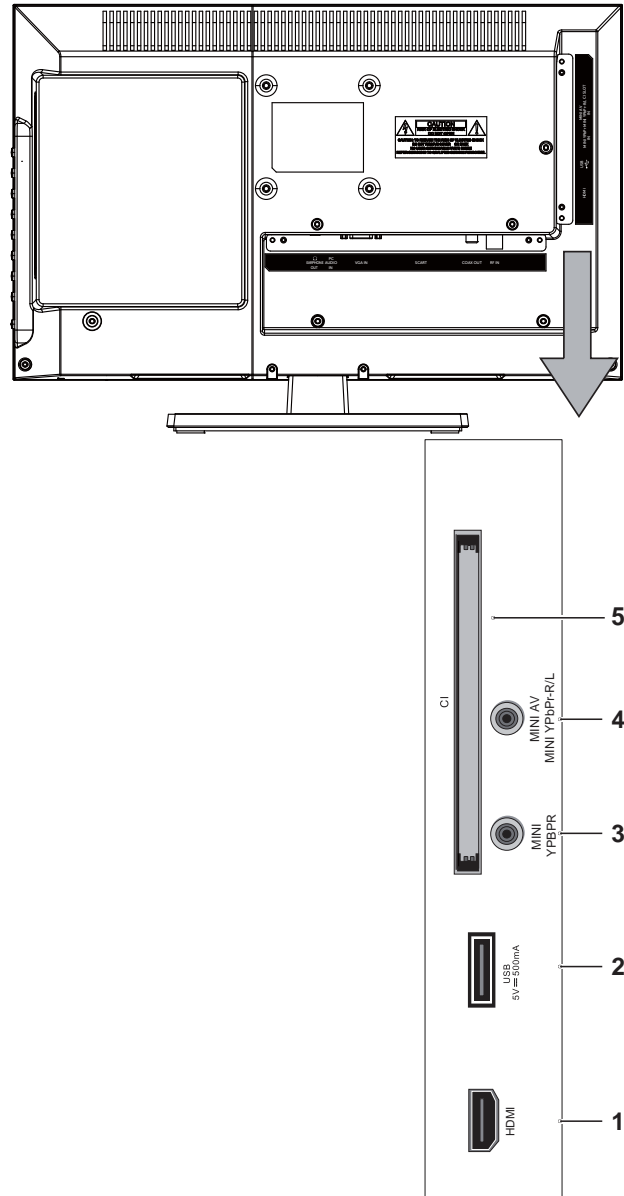

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Connections

Bringing it all together

Left bottom connections explained

6. Headphone jack

To connect an external headphone to the TV. Connect to the HEADPHONE jack to listen to the TV from headphones.

Note: Headphone volume can be changed using "VOL+" or "VOL-" buttons.

7. PC Input (VGA) / PC AUDIO

Connects a personal computer to the TV. Connect the PC cable between the PC INPUT on the TV and the PC output on the PC.

Note: If you connect a device to the TV via the PC cable, you should also use an audio cable to connect your device to the PC AUDIO INPUT to enable audio.

8. SCART socket

Inputs or outputs for external devices. Connect the SCART cable between the SCART socket on the TV and the SCART socket on the external device (decoder, VCR or DVD player).



Note: If an external device is connected via the SCART socket, the TV will automatically switch to SCART mode.

9. COAXIAL

To connect to the audio socket on the digital/ standard 5.1 audio system.

10.RF Input (ANT.)

Connects to aerial (antenna) or cable TV. If you use a decoder or a media recorder, you should connect the aerial cable through the device to the TV with an appropriate aerial cable.

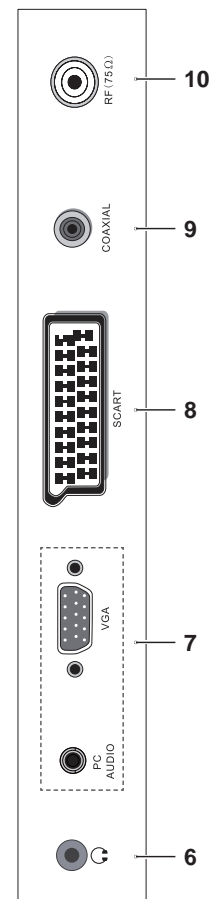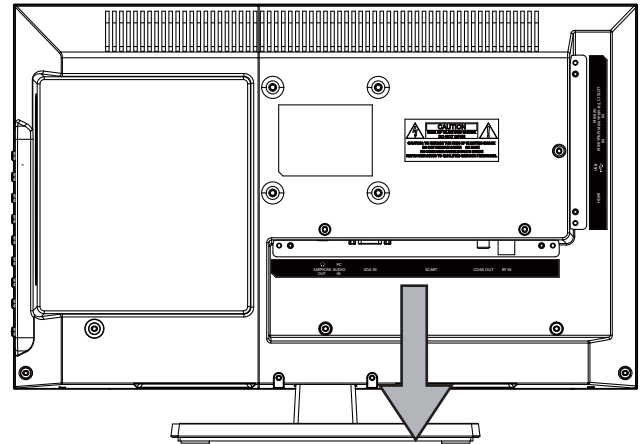

Connections

Bringing it all together


HDMI Connections

HDMI lets you enjoy high definition digital images and high quality sound by connecting the TV to external devices such as DVD players, set top boxes or gaming equipment. Power off both the TV and the device before making any connections.

For more information, refer to your device's own instruction book.

When connecting, switch "INPUT" to "HDMI". See, "Input Selection" section.

Note: HDMI cable is not supplied.

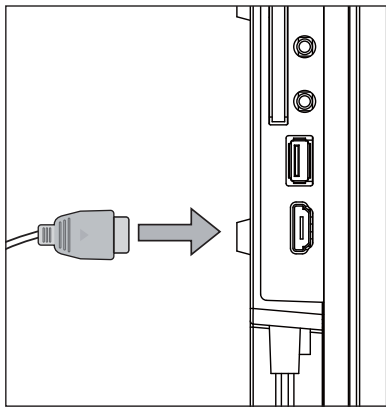

VGA Connections

You can connect a computer (PC) to the TV to display your computer's screen image on the TV.

Power off both computer and TV before making any connections.


Use a 15-pin D-sub display cable to connect a PC to the TV. Use an audio cable between PC AUDIO inputs on the left side of the TV and audio output on your PC to enable sound connection.

When the connection is made, switch "INPUT" to "PC". See "Input selection" section.

Set the resolution that suits your viewing requirements.

Resolution information can be found in the "Appendix parts".

Note: The VGA cable is not supplied.

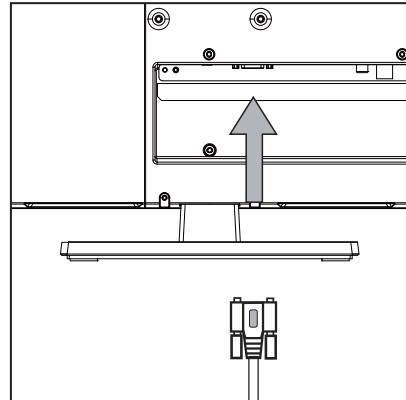


SCART Connections

Most devices support SCART connection. You can connect a DVD recorder, VCR or decoder to the TV using the SCART socket.

Power off both the TV and the device before making any connections.

For more information, refer to your device's own instruction book.

Note: The Scart cable is not supplied.

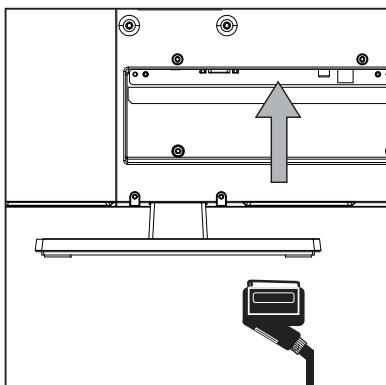

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105.

Basic Feature 4




Basic Feature

Simple everyday use

How to navigate menus - Selecting source

1. Press the **INPUT** button on the top of the TV or the **INPUT** button on the remote control to display the Input source list.
2. Press the **▲▼** buttons to select the input source that you want: DTV / ATV / AV / SCART / YPbPr / HDMI / PC / MEDIA / DVD.
3. Press **OK** button to confirm your selection.

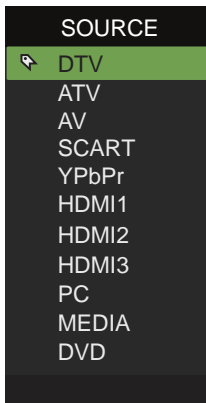


Electronic programme guide (EPG) (DTV mode)

This system has an Electronic Programme Guide (EPG) to help you navigate through all the possible viewing options. The EPG supplies information such as programme listings, start and end times for all available services. In addition, detailed information about the programme is often available in the EPG (the availability and amount of programme information will vary, depending on the particular broadcaster).

This function can be used only when the EPG information is broadcast by broadcasting companies.

The EPG displays the programme details for the next 7 days.

1. Press the **EPG** button to switch on **EPG**.

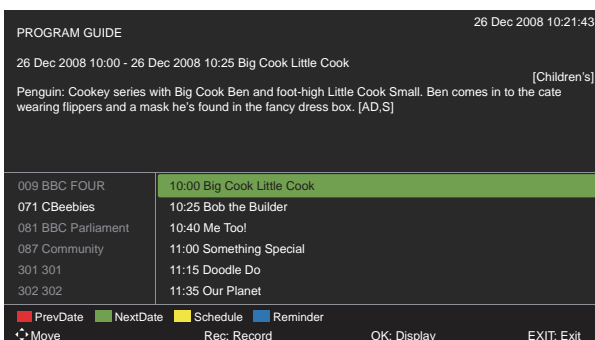

2. Press **EPG** button or **EXIT** button again to switch off EPG and return to normal TV viewing.

Info bar commands:

RED (Prev. Date)

Press the **RED** button to view the schedule of the previous day.

GREEN (Next Date)

Press the **GREEN** button to view the schedule of the next day.

YELLOW (Schedule)

Press the **YELLOW** button to view the preset reminders in the schedule list. Press the **YELLOW** button to return to the EPG.

BLUE (Reminder)

Press the **BLUE** button while on the selected programme, the Reminder setting menu will be displayed. Press the **▲▼◀▶** buttons to adjust the settings and then press the Save button to confirm the settings. After confirmation, the **EPG** Schedule List will then be displayed with your preset reminders shown. Press the **YELLOW** button to return to the EPG. The TV will automatically tune to the selected programme when it starts.

REC

Timer Programming.

OK

Press to display detailed information of the selected programme (if available).

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Basic Feature

Simple everyday use

Teletext (ATV mode)

Teletext is a free service broadcast by some TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics. Using the Teletext control buttons you can view pages of information that are listed in the teletext **INDEX**.

To Turn on Teletext Function



Make sure the TV channel you are watching transmits teletext. "No Teletext" sign will show on the screen if teletext is not available.

In ATV mode, press the **TEXT** button to enter Teletext mode. Press the **INDEX** button to display the **INDEX** page. Press the **TEXT** button once to exit and the TV will return to the channel you were watching.

To select a page of text

Find the number of the page in the **INDEX** and enter it using the **0-9** buttons. The number of the page will appear on the top left corner of the screen.

The page counter will search for your page. When it finds it, the page will be displayed. To move to the next page of text, press the **▲** button.

To move to the previous page, press the **▼** button.

To return to the **INDEX** page, enter the "**100**" by using the **0-9** buttons or press the **INDEX** button.

Mix

To view a page of text while watching a TV programme, press the **TEXT** button twice.

The text will be superimposed over the TV programme.

Double height text If you have difficulty reading the text on the TV you can double the height of the text.

Press the **SIZE** button. The top half of the page will be displayed in double height text.

Press the **SIZE** button again. The bottom half of the page will be displayed in double height text.

Press the **SIZE** button again to return to the full page.

Page HOLD

If the page of text you have selected contains subpages, these subpages will automatically be displayed in order with a delay to allow you to have enough time to read the page. To stop the movie to the next sub page, press the **HOLD** button.

To continue moving through the sub pages, press the **HOLD** button again.

Alternative: Press the **SUBPAGE** button, and then use the **0-9** buttons to enter a 4-digit page number.

To Reveal Information

Press the **REVEAL** button to reveal concealed information (quiz answers etc.).

Press the **REVEAL** button again to conceal the information again.

Fasttext

At the bottom of the teletext screen is a row of subject headings in red, green, yellow and blue.

The remote control has a row of colour buttons corresponding to the row of coloured subjects on the screen.

Pressing one of the colour buttons will take you directly to the page corresponding to the subject heading.


Basic Feature

Simple everyday use

Digital Teletext (DTV mode)

Digital teletext can access special digital teletext services and specific services which broadcast digital teletext. You will need to turn off Subtitle Function before using teletext.

1. In DTV mode, press the **TEXT** button to display the teletext page.

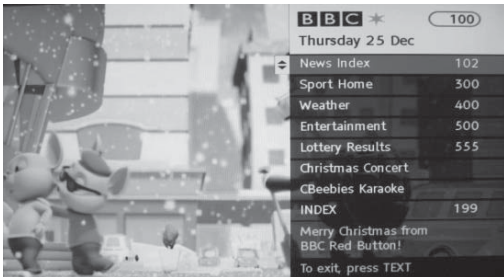

2. Press the **0-9** buttons to select a page number.

3. Follow the instructions on digital teletext and move onto the next step by pressing **OK**, **◀▶**, **RED**, **GREEN**, **YELLOW**, **BLUE** or **0-9** buttons etc.

4. To change digital teletext service, select a different service by pressing the **0-9** buttons or the **▲▼** buttons.
Alternative: You may press the **RED** button to the **TEXT** button to display the teletext information when you see a **●** red logo displayed on the screen (e.g. BBC).

5. Press the **TEXT** button to exit

Recording DTV Programme onto a USB Storage Device

Use this function to record the DTV programme you are watching on the main screen and save it for future viewing. The recording from timer programme or direct recording may have a little bit of delay when it starts to record the broadcast programme.

Please make sure the USB device is inserted. If not, a warning message will pop up.

1. Press the **● REC** button to record the programme that you are currently watching.



To display the recording information, press the **● REC** button.



2. Press the **Stop** button to stop recording.



- If a hard disk is used, make sure its mains adapter is connected to the mains supply.
- If a USB hub is used, make sure its mains adapter is connected to the mains supply as the total current consumption may exceed 500mA.
- The maximum supported storage space of the hard disk is 1 TB.
- The file system only supports FAT32 format.
- If you want to store the video streaming of a DTV programme, the transfer rate of the USB storage device must not be less than 5MB/s, otherwise the picture and sound of the programme will be affected and a warning statement will be shown on the screen. If this happens, please upgrade your USB storage device.
- The TV screen will be blank temporarily as it will take time to start up and stabilise the connected hard disk. This is normal and the starting time may vary depending on the brand and the memory size of the connected hard disk.
- Disconnect the USB storage device if it is not in use.

Basic Feature


Simple everyday use

Timer Programming


This function is used for scheduled recording. The recording from timer programme or direct recording may have a little bit of delay when it starts to record the broadcast programme.

Please make sure the USB device is inserted. If not, a warning message will pop up.

1. Press the **EPG** button on the remote control. The **EPG** menu will appear.

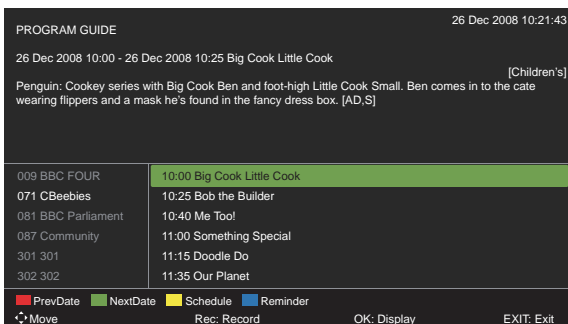

2. Press the **REC** button on the remote control while on the selected programme, the **Scheduled Record** menu will be displayed. Press the **▲▼◀▶** buttons to select the settings in the **RECORD** menu for the Frequency, Channel, Start time, and End time.

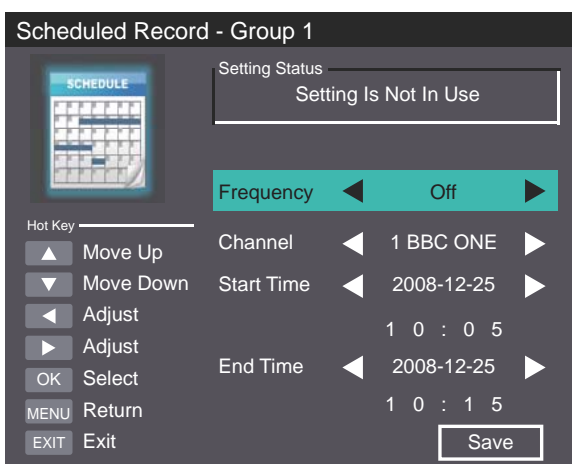

Frequency

Press the **◀▶** buttons to select the frequency (Off/Once / Daily / Weekly).

Channel

Press the **OK** button and then press the **▲▼** buttons to select the channel that you want to record.

Start time (for Mode Once, Daily, Weekly)

Press the **▲▼◀▶** buttons to adjust the start time.

End time (for Mode Once, Daily, Weekly)

Press the **▲▼◀▶** buttons to adjust the end time.

3. After finishing all the recorder adjustments, press the **Save** button to confirm your settings.

4. The **Scheduled Record** Setting List will then be displayed with your preset reminders shown.



5. Press the **EXIT** button to exit EPG.



- When the preset time is reached, the TV will start recording automatically.
- If a programme recording starts when the TV is in standby mode, the LED indicator will alternatively flash red and blue.

Basic Feature


Simple everyday use

Play Recorded Programme


You can play a recorded programme from the recorded programme list or from a USB Storage Device.

1. Press the **INPUT** button on the top of the **TV** or the **INPUT** button on the remote control then press the **▲▼** buttons to select the Media mode and then press the **OK** button.


2. Press the **◀▶** buttons to select **MOVIE** and then press the **OK** button.

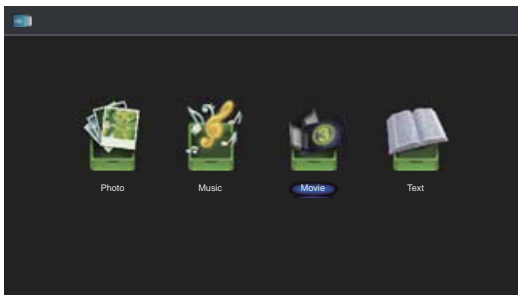


3. Press the **▲▼** buttons to select your storage device and then press the **OK** button.

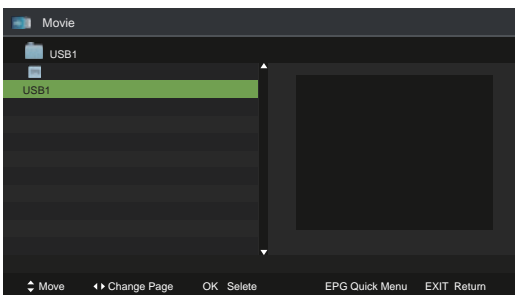

4. Press the **▲▼** buttons to select the "usbrecord" folder and then press the **OK** button.

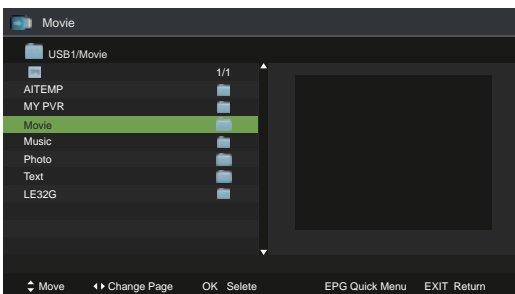

5. Press the **▲▼** buttons to select your recorded programme and then press the **▶||** button to view.

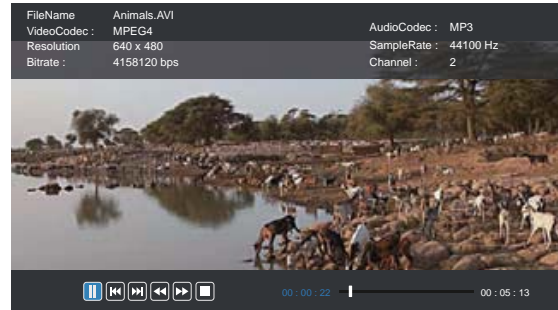

6. Press the **OK** button or the **INFO** button to display the function bar. Press the **◀▶** buttons and then press the **OK** button to select the function: Pause / Prev. / Next / FB / FF / Stop / Quick Menu (Repeat / Encode Type).

7. Press the **EXIT** button to return to the previous menu.

Picture management (ATV / DTV Mode)

1. Press the **TV.MENU** button to display the main menu. Press the **▲▼** buttons to select **Picture** in the main menu, then press the **▼** or **OK** button, it will highlight the first option.

2. Press the **◀▶** buttons to select the option you want to adjust in Picture menu.

3. Press the **▲▼◀▶** buttons to change the following settings.

TIPS:

- You can change the value of brightness, contrast, sharpness and saturation when the picture is in Personal mode.
- You can press **P.MODE** button on the remote control to change the Picture Mode directly.



Basic Feature

Simple everyday use

Picture Mode

Allows the selection of a picture-enhancement technical from among the following options: Dynamic / Standard / Mild / Personal.

Brightness

This item can adjust the optical fiber output of the entire picture; it will affect the dark region of the picture.

Contrast

This item can adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

Sharpness

This item can adjust the peaking in the detail of the picture.

Saturation

This item can adjust the saturation of the colour based on your own like.

Hue

This item may use in compensating colour changed with the transmission in the NTSC code.

Colour Temp

This item can increase or reduce warm colour of the picture personally (red), and the cold colour (blue) according to your like. The choice of Cold, that means it will increase the blue tone for the white. But choosing the Warm, it will increase the red colour for the white.

Aspect Ratio

Allows you to watch the screen in various picture formats: Auto / 4:3 / Full / Zoom1 / Zoom2.

Screen Mode

Select the HDMI signal screen mode: Auto / Video / PC. Advanced Settings

- NR(Noise Reduction): Reduces the noise level of the connected device (Medium / Strong / Off / Weak).
- Dynamic Contrast: Adjusts the dynamic contrast (Medium / Strong / Off / Weak).

4. Press the **EXIT** button to exit menu.

Sound management


1. Press the **TV.MENU** button to display the main menu. Press the **◀▶** buttons to select Sound in the main menu, then press the **▼** or **OK** button, it will highlight the first option.

2. Press the **▲▼** buttons to select the option you want to adjust in Sound menu.

3. Press the **▲▼◀▶** buttons to change the following settings.

TIPS:

- You can change the value of treble and bass when the sound is in Personal mode.
- You can press the **S.MODE** button on the remote control to change the Sound Mode directly.

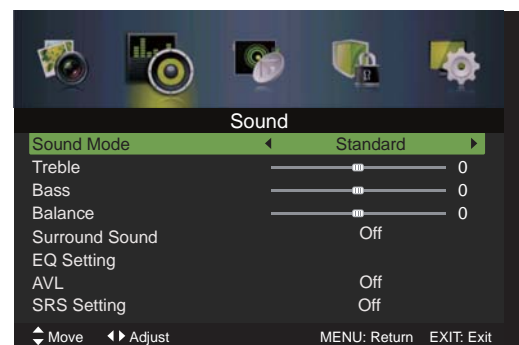

Sound Mode:

Allows the selection of an audio-enhancement technical from among the following options: Standard, Music, Movie and Personal. You can change the value of Treble and Bass when the sound is in Personal mode.

Treble

Controls the relative intensity of higher-pitched sounds.

Bass

Controls the relative intensity of lower-pitched sounds.

Balance

Adjusts the relative volume of the speakers in a multiple speaker system.

Surround Sound

This creates a feeling fitted to your TV when switched on and SRS Setting is off.

EQ Setting

Allows the selection of an equalizer mode: Off / Rock / Pop / Jazz / User. You can change the EQ value under User mode.

Basic Feature

Simple everyday use

AVL

Selects to turn On/Off Audio Volume Leveler.

SRS Setting

Selects to turn On/Off SRS default setting.

SPDIF

Select the digital audio output mode: Auto / Off / PCM.

Audio Description

Selects to turn On/Off Audio Description.

Sound Type

When a programme is selected, press the **MTS** button to select Stereo, Dual I, Dual II and Mixed.

Language selection for dual language broadcast

If a programme can be received in two languages (dual language), you can switch to DUAL I, DUAL II or Mixed by pressing the **MTS** button repeatedly.

| | |
|---------|---|
| DAUL I | Sends the primary broadcast language to the loudspeakers |
| DAUL II | Sends the secondary broadcast language to the loudspeakers |
| Mixed | Sends the primary and secondary broadcast languages to the loudspeakers |




Channel management (ATV / DTV Mode)

Tuner Type

1. Press the **TV.MENU** button to display the main menu. Press the **◀▶** buttons to select **Channel** in the main menu, then press the **▼** or the **OK** button, it will highlight the first option.

2. Press the **▲▼** buttons to select **Tuner Type** and then press the **◀▶** buttons to select **Cable** or **Antenna**.

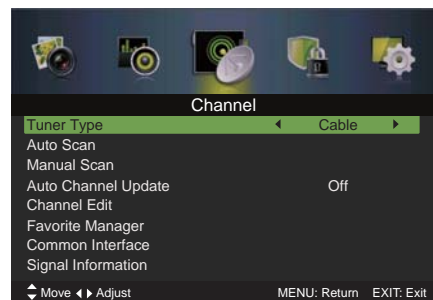


3. Press the **EXIT** button to exit the menu.


Auto Scan

Use this to automatically find and store all available channels. This is normally recommended if some channels have been added or removed by the broadcaster or you have moved house.

1. Press the **TV.MENU** button to display the main menu. Press the **◀▶** buttons to select **Channel** in the main menu, then press the **▼** or **OK** button, it will highlight the first option.

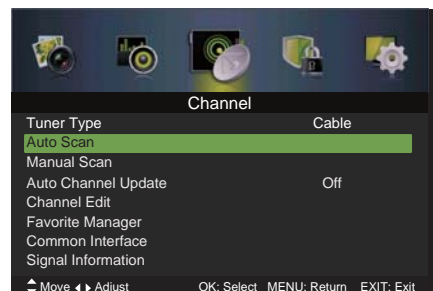

2. Press the **▲▼** buttons to select **Auto Scan** and then press the **OK** button to enter submenu.

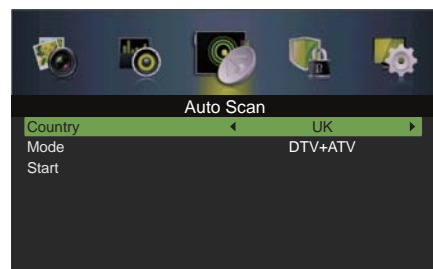

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Basic Feature

Simple everyday use

3. Press the ▲▼◀▶ buttons to navigate the menu and change the settings.

Country


Selects the country where you will operate the TV.

Mode

Selects the auto scan mode: DTV+ATV/DTV/ ATV. (DTV mode)

Start


Press the OK button to start auto tuning.

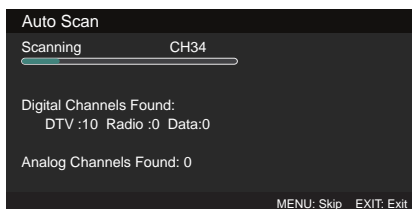

Manual Scan (DTV Mode)


Allows you to make manual fine tuning adjustments to the channel under DTV mode.

1. Press the TV.MENU button to display the main menu. Press the ◀▶ buttons to select **Channel** in the main menu, then press the ▼ or OK button, it will highlight the first option.

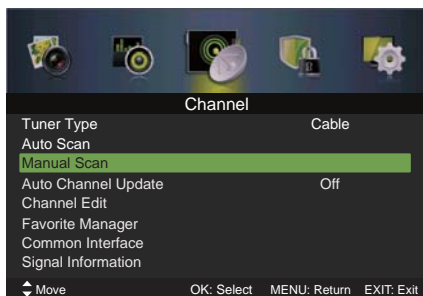

2. Press the ▲▼ buttons to select **Manual Scan** and then press the OK button. On the submenu, select Digital Manual Scan and then press the OK button.

Tuner type is Antenna

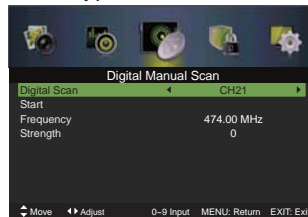

Tuner type is Cable



Tuner type is Antenna.

Digital Scan

Press the ◀▶ buttons to select the desired channel.

Start

Press the ▲▼ buttons to select Start and then press the OK button to start tuning.

Tuner type is Cable.

Network ID

Press the ◀▶ buttons to select Network ID: Auto or nter digital numbers.

Symbol Rate

Press the ◀▶ buttons to select Symbol Rate: Auto or nter digital numbers.

Modulation

Press the ◀▶ buttons to select Modulation:Auto,16QAM,32 QAM,64QAM,128QAM,256QAM.

Start

Press the ▲▼ buttons to select Start and then press the OK button to start tuning.


Manual Scan (ATV Mode)

Allows you to make manual fine tuning adjustments if the channel reception is poor under ATV mode.


1. Press the TV.MENU button to display the main menu. Press the ◀▶ buttons to select **Channel** in the main menu, then press the ▼ or OK button, it will highlight the first option.

Basic Feature

Simple everyday use

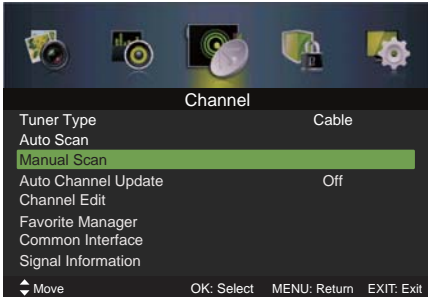

2. Press the ▲▼ buttons to select **Manual Scan** and then press the **OK** button. On the submenu, select **Analog Manual Scan** and then press the **OK** button.

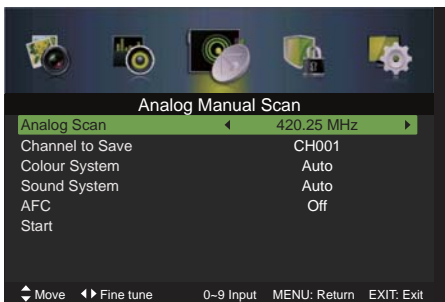

Analog Scan

Displays the current frequency, press the ◀▶ buttons to change the frequency.

Channel to Save

Press the ▲▼ buttons to select Channel to Save, press the ◀▶ buttons to select channel number you want to store.

Colour System

Press the ▲▼ buttons to select Colour System, press the ◀▶ buttons to select: Auto / PAL/ SECAM.

Sound System

Press the ▲▼ buttons to select Sound System, press the ◀▶ buttons to select: DK/I / BG.

AFC

Press the ▲▼ buttons to select AFC, press the ◀▶ buttons to select On or Off.


Start

Press the ▲▼ buttons to select Start, press the ◀▶ buttons to start tuning.

Auto Channel Update

1. Press the **TV.MENU** button to display the main menu. Press the ◀▶ buttons to select **Channel** in the main menu, then press the ▼ or **OK** button, it will highlight the first option.

2. Press the ▲▼ buttons to select **Auto Channel Update** and then press the ◀▶ button to On or Off.

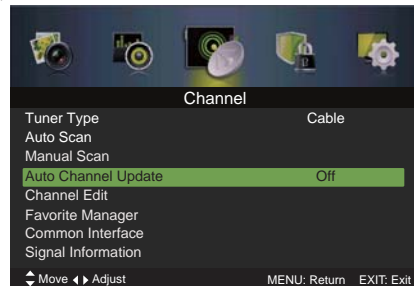

3. Press the **EXIT** button to exit the menu.

Channel Edit (DTV mode)

1. Press the **TV.MENU** button to display the main menu. Press the ◀▶ buttons to select **Channel** in the main menu, then press the ▼ or **OK** button, it will highlight the first option.



2. Press the ▲▼ buttons to select **Channel Edit** and then press the **OK** button to enter submenu.



Delete

Press the **RED** button to delete the selected channel.

Skip

Press the **GREEN** button to select the channels that you want to skip when you are selecting channels. Press the **GREEN** button again to undo it.

Basic Feature

Simple everyday use

Move


Press the **BLUE** button and then press the **▲▼** buttons to move to the selected channel. Press the **BLUE** to confirm.

Channel Edit (ATV mode)

1. Press the **TV.MENU** button to display the main menu. Press the **◀▶** buttons to select **Channel** in the main menu, then press the **▼** or **OK** button, it will highlight the first option.



2. Press the **▲▼** buttons to select **Channel Edit** and then press the **OK** button to enter submenu.

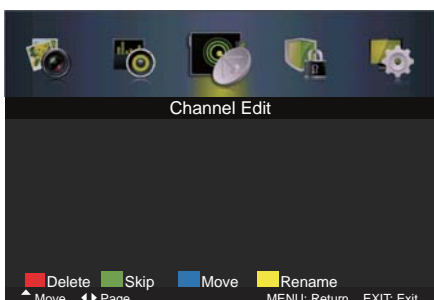

Delete

Press the **RED** button to delete the selected channel.

Skip

Press the **GREEN** button to select the channels that you want to skip when you are selecting channels. Press the **GREEN** button again to undo it.

Move

Press the **BLUE** button and then press the **▲▼** buttons to move to the selected channel. Press the **BLUE** to confirm. Press the **◀▶** buttons to select: Auto / PAL.


Rename

Press the **YELLOW** button to rename the selected channel. Press the **▲▼** buttons to select the characters to represent the station name. Press the **◀▶** buttons to move to the next character and then press the **OK** button again to confirm the new name.


or online at www.args-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105.

Favorite Manager

1. Press the **TV.MENU** button to display the main menu. Press the **◀▶** buttons to select **Channel** in the main menu, then press the **▼** or **OK** button, it will highlight the first option.

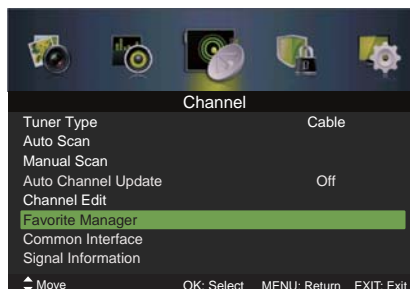

2. Press the **▲▼** buttons to select **Favorite Manager** and then press the **OK** button to enter submenu.

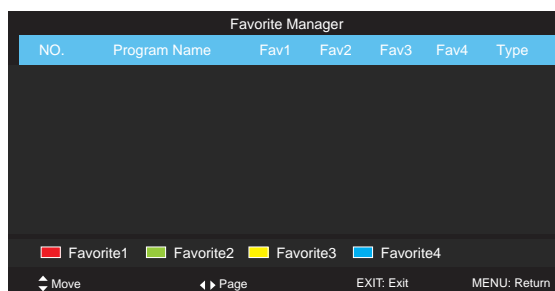

Press the **RED, GREEN, YELLOW, BLUE** button to set the channel that you are currently watching as set the Favorite1, Favorite2, Favorite3, Favorite4 programmes.

TIPS:


- Press the **FAV** button to set the Favorite List.

Common Interface (DTV mode)

To view the module information.

1. Press the **TV.MENU** button to display the main menu. Press the **◀▶** buttons to select **Channel** in the main menu, then press the **▼** or **OK** button.


2. Press the **▲▼** buttons to select **Common Interface** and then press the **OK** button.

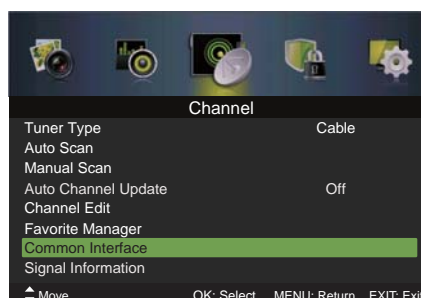

Basic Feature

Simple everyday use

3. A Common Interface main menu will pop up. Press the ▲▼ buttons to select the items and press the **OK** button to confirm.

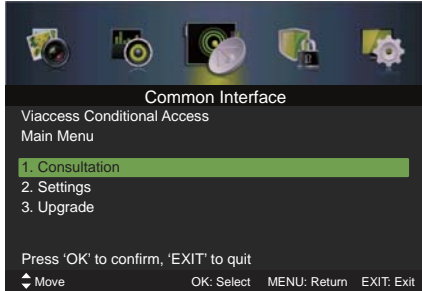

4. Press the **EXIT** button to exit the menu.


The common interface allows the use of a Common Access Module to enable you to view scrambled (pay to view) services. These services are provided by TopUp TV (UK only) and others. The Common Access Module and viewing card can be obtained from the service provider.



This feature is not available in all country.



CI (Common Interface)
Allows the Common Access Module to be inserted and access the content that has been encrypted.

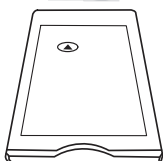

Common Access Module

To insert the Common Access Module

1. Before you insert the Common Access Module, ensure that the TV is switched off and the viewing card is inserted in accordance with the Service Provider's instructions.

2. Insert the Common Access Module into the slot. Flip the Common Access Module to another side and try again if you feel resistance.

3. Switch the TV on.

To remove the Common Access Module

1. Before you remove the Common Access Module, ensure that the TV is switched off.


2. Pull the Common Access Module from the slot.

3. Switch the TV on.

Signal Information (DTV mode)

1. Press the **TV.MENU** button to display the main menu. Press the ◀▶ buttons to select **Channel** in the main menu, then press the ▼ or **OK** button.

2. Press the ▲▼ buttons to select **Signal Information** and then press the **OK** button to view the Signal Information.

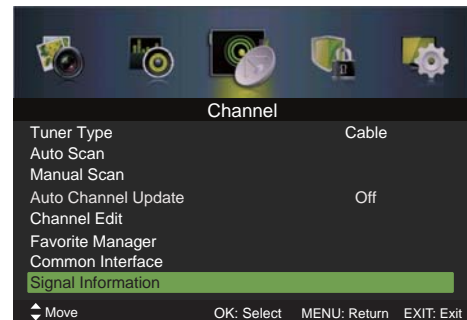

3. Press the **EXIT** button to exit the menu.

Lock System management

1. Press the **TV.MENU** button to display the main menu. Press the ◀▶ buttons to select **Lock System** in the main menu, then press the ▼ or **OK** button, it will highlight the first option.


2. Use the **0-9** buttons to input a 4-digit password to enter the Lock System menu.

3. Press the ▲▼ buttons to select the option you want to adjust in Lock System menu.

4. Press the ▲▼◀▶ buttons to change the following settings.

Basic Feature

Simple everyday use

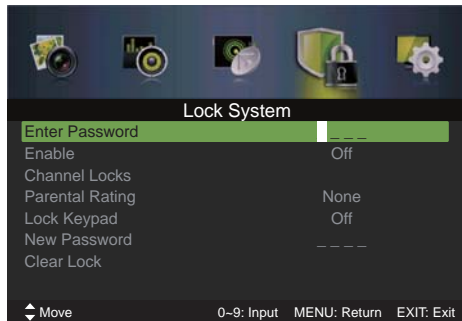

Enter Password

To access the Lock System menu, you must enter the password. Enter the default password "0000" for the first time use.

Enable

The lock system is designed to prevent accidental returning of the TV/losing channels and prevent children watching unsuitable programme.

The Lock System must be set to On for this function to operate. If the Lock System is set to On, a valid password must be entered when you access Auto Scan / Manual Scan / Channel Edit /First Time Setup.

Channel Locks

Channel Locks is designed to prevent children watching unsuitable programmes. When a channel is blocked, a valid password must be entered.

Parental Rating

This function allows you to set up blocking schemes to block specific channels and ratings. Press the buttons to select an age rating: None, 4-18.

Lock Keypad

Key Lock is designed to prevent children from pressing the buttons on the TV. The Lock System must be set On for this function to operate.

New Password

Use the 0-9 buttons to input the old password and then input the new 4-digit password. Re-enter new password for confirmation.

Clear Lock

Reset all the lock settings to the factory defaults.


5. Press the **EXIT** button to exit the menu.

Setup management

OSD Language

1. Press the **TV.MENU** button to display the main menu. Press the **◀ ▶** buttons to select **Setup** in the main menu, then press the **▼** or **OK** button, it will highlight the first option.

2. Press the **▲ ▼** buttons to select OSD Language and then press the **◀ ▶** buttons to select your desired on-screen display language.

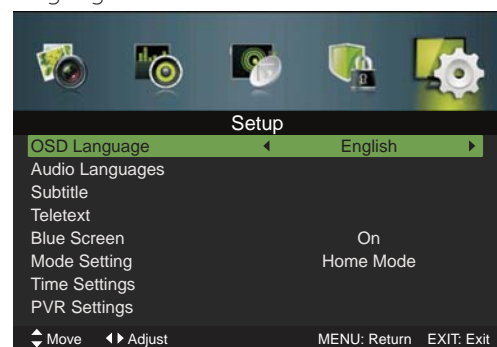


3. Press the **EXIT** button to exit the menu.

Audio Languages (DTV Mode)

1. Press the **MENU** button to display the main menu. Press the **◀ ▶** buttons to select **Setup** in the main menu, then press the **▼** or **OK** button, it will highlight the first option.

2. Press the **▲ ▼** buttons to select Audio Languages and then press the **OK** button.

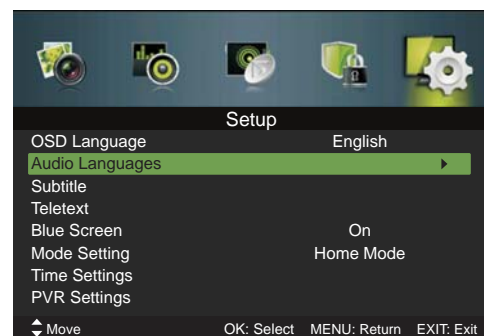


3. Press the **◀ ▶** buttons to select your desired Audio Primary Language. Press the **▼** button and then press

Basic Feature

Simple everyday use

the ◀ ▶ buttons to select your desired Audio Secondary Language.

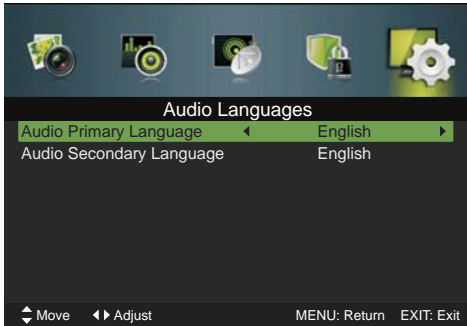


4. Press the EXIT button to exit the menu.

Subtitle (DTV Mode)

1. Press the TV.MENU button to display the main menu. Press the ◀ ▶ buttons to select **Setup** in the main menu, then press the ▼ or OK button, it will highlight the first option.

2. Press the ▲ ▼ buttons to select **Subtitle** and then press the OK button to enter sub-menu.

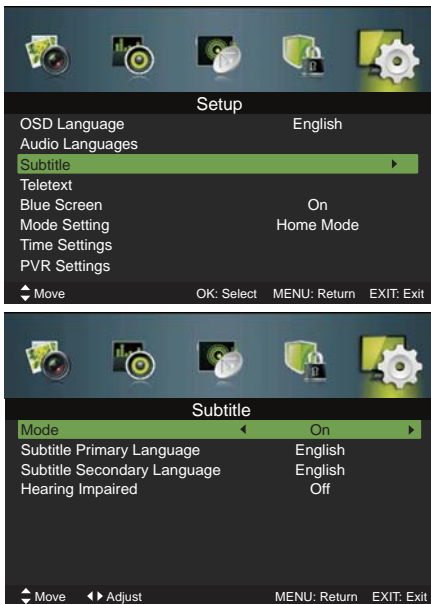

Mode:

Selects to turn On/Off subtitle language.

Subtitle Primary Language

Press the ◀ ▶ buttons to select your desired subtitle primary language.

Subtitle Secondary Language

Press the ◀ ▶ buttons to select your desired subtitle secondary language.

Hearing Impaired

Press the ◀ ▶ buttons to turn On/Off hearing impaired.


3. Press the EXIT button to exit the menu.

Teletext

1. Press the TV.MENU button to display the main menu. Press the ◀ ▶ buttons to select **Setup** in the main menu, then press the ▼ or OK button, it will highlight the first option.

2. Press the ▲ ▼ buttons to select **Teletext** and then press the OK button.

3. Press the ◀ ▶ buttons to select your desired Digital Teletext Language. Press the ▼ button and then press the ◀ ▶ buttons to select your desired Decoding Page Language.

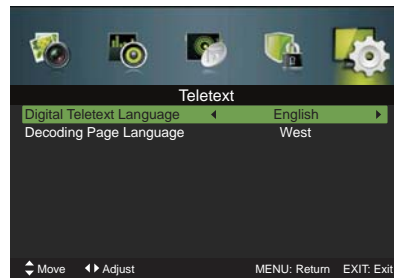


4. Press the EXIT button to exit the menu.

Blue Screen

1. Press the TV.MENU button to display the main menu. Press the ◀ ▶ buttons to select Setup in the main menu, then press the ▼ or OK button, it will highlight the first option.

2. Press the ▲ ▼ buttons to select **Blue Screen** and then press the ◀ ▶ button to select On / Off.

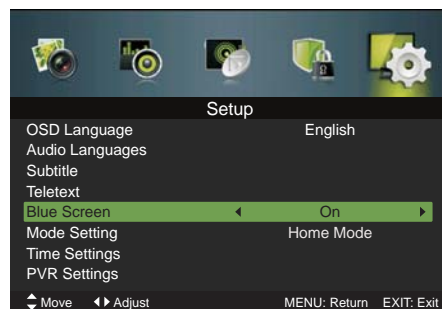

3. Press the EXIT button to exit the menu.


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Basic Feature

Simple everyday use

Mode Setting


1. Press the **TV.MENU** button to display the main menu. Press the **◀ ▶** buttons to select **Setup** in the main menu, then press the **▼** or **OK** button, it will highlight the first option.
2. Press the **▲ ▼** buttons to select Mode Setting and then press the **◀ ▶** buttons to select your desired mode: Home Mode/Store Mode.
 - Home Mode: Viewing at home.
 - Store Mode: For store demo, the brightness is higher than home mode.

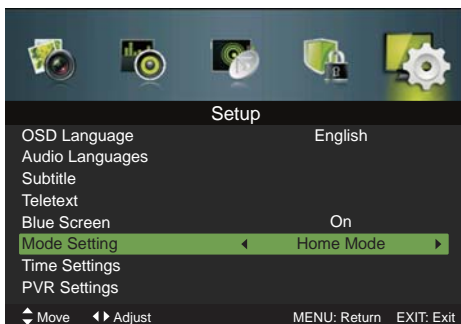

3. Press the **EXIT** button to exit the menu.

Time Settings

1. Press the **TV.MENU** button to display the main menu. Press the **◀ ▶** buttons to select **Setup** in the main menu, then press the **▼** or **OK** button, it will highlight the first option.
2. Press the **▲ ▼** buttons to select Time Settings and then press the **OK** button.

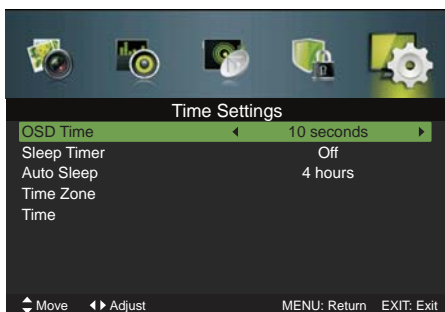

OSD Time

Displays time of the on-screen menu: 10s/20s/30s/60s/Off.

Sleep Timer


Press the **◀ ▶** buttons to select a period of time after which the TV automatically switches to standby mode: Off/5/15/.../120/240mins.

Auto Sleep

The unit will automatically switch to standby mode 3/4/5 hours after the last time the remote control was used. If you want to operate the TV for a long period of time, turn off the auto standby function.


Time Zone

Selects your desired Time Zone city.

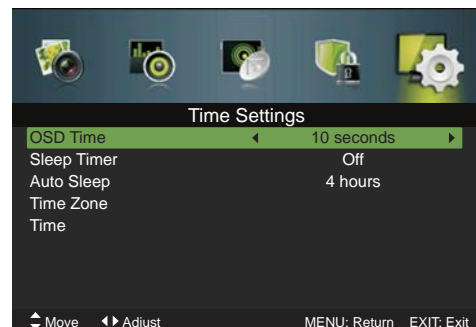

Time

The clock is set automatically when receiving a digital signal or you can set it manually.

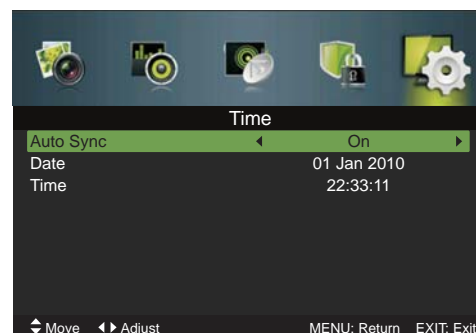

3. Press the **EXIT** button to exit the menu.

PVR Settings

1. Press the **TV.MENU** button to display the main menu. Press the **◀ ▶** buttons to select **Setup** in the main menu, then press the **▼** or **OK** button, it will highlight the first option.
2. Press the **▲ ▼** buttons to select **PVR Settings** and then press the **OK** button.




3. Press the **◀ ▶** buttons to select the following PVR File System options and then press the **OK** button.

Basic Feature

Simple everyday use


File Manager

Select File Manager to display the recorded programme list, press the ▲▼ buttons to select the recorded programme and then press the OK or ► button to view.

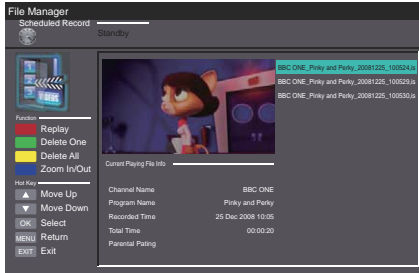


Device List

Select Device List to check the information of the connected USB storage device for PVR. Press the RED button to format the selected USB device.

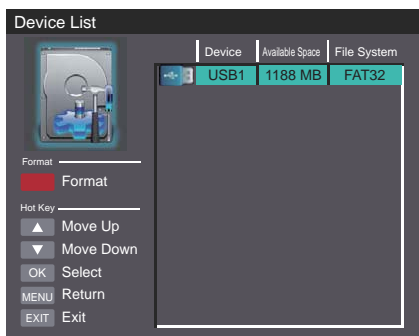

Scheduled Record

Select Scheduled Record to view the scheduled recordings list.

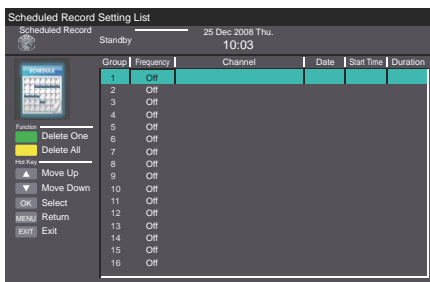


4. Press the EXIT button to exit the menu.

First Time Setup

1. Press the TV.MENU button to display the main menu. Press the ◀▶ buttons to select **Setup** in the main menu, then press the ▼ or OK button, it will highlight the first option.

2. Press the ▲▼ buttons to select **First Time Setup** and then press the OK button.

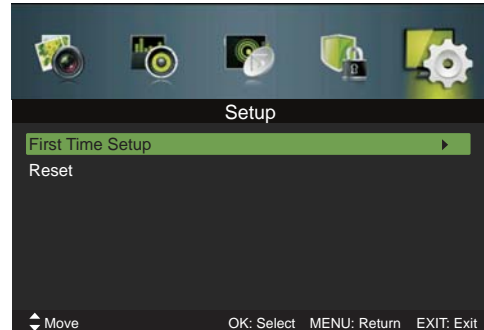


3. Press the ▲▼◀▶ buttons to navigate the menu and change the settings. Then it will search automatically

4. Press the EXIT button to exit the menu.


Reset

1. Press the TV.MENU button to display the main menu. Press the ◀▶ buttons to select **Setup** in the main menu, then press the ▼ or OK button, it will highlight the first option.

2. Press the ▲▼ buttons to select **Reset** and then press the OK button.

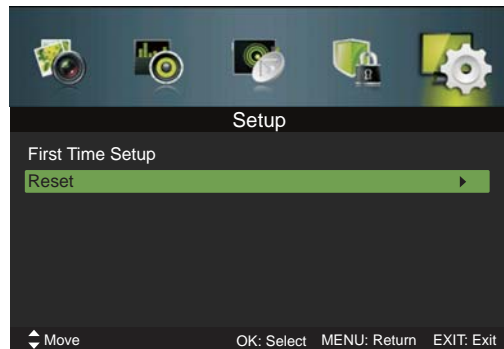

3. Press the ◀▶ buttons to select Yes or No on the screen. All settings will be reset to factory defaults and the Setup menu will disappear.

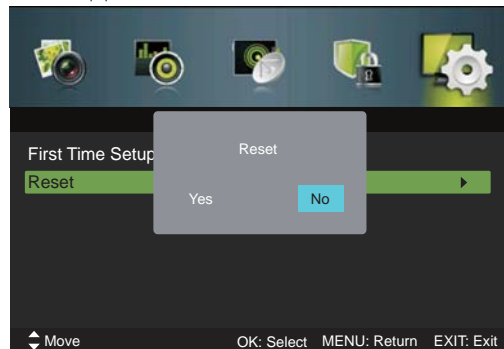

Basic Feature

Simple everyday use

Entertainment

Using the Features via USB Port

1. Switch off the TV before connecting any USB storage device.
2. Connect your USB storage device to the USB port of your TV.
3. Press the **Power** button on the top of the TV or the button on the remote control to turn on your TV and your USB storage device.
4. Press the **INPUT** button on the top of the TV or the **INPUT** button on the remote control to display the Source List. Use the **▲▼** buttons to select **MEDIA** and then press the **OK** button to confirm.

Attention:


Some versions of portable hard disk may require more power than the TV USB socket can provide. To ensure correct operation please use power adapter for that device.

- If a USB hub is used make sure its mains adapter is connected to the mains supply as the total current consumption exceed 500mA.
- The maximum supported storage space of the hard disk is 1 TB.
- The file system only support FAT32 format.
- If you want to store the video streaming of a DTV programme, the transfer rate of the USB storage device must not be less than 5MB/s, otherwise the picture and sound of the programme will be affected and a warning statement will be shown on the screen. If this happens, please upgrade your USB storage device.
- The TV screen will be blank temporarily as it will take time to start up and stabilize the connected hard disk. This is normal and the starting time may vary depending on the brand and the memory size of the connected hard disk.
- Disconnect the USB storage device if it is not in use.


Viewing Photo

1. Press the **INPUT** button on the top of the TV or the **INPUT** button on the remote control then press the **▲▼** buttons to **MEDIA** and then press the **OK** button.


2. Press the **◀▶** buttons to select **Photo** and then press the **OK** button.

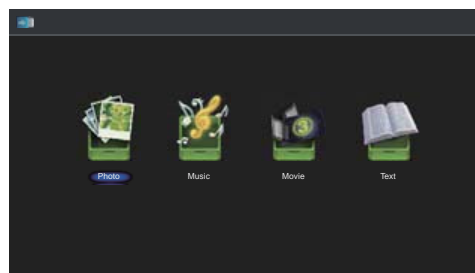


3. Press the **◀▶** buttons to select your storage device and then press the **OK** button.

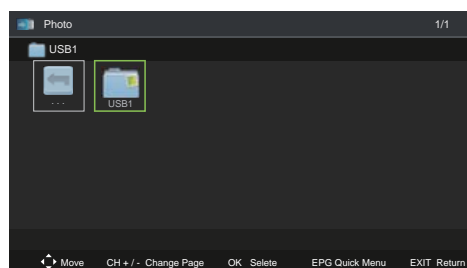

4. Press the **▲▼◀▶** buttons to navigate in the picture folder and then press the **OK** button. If you want to select the specified photos, press the **▲▼◀▶** buttons to select the picture file and then press the **OK** button.

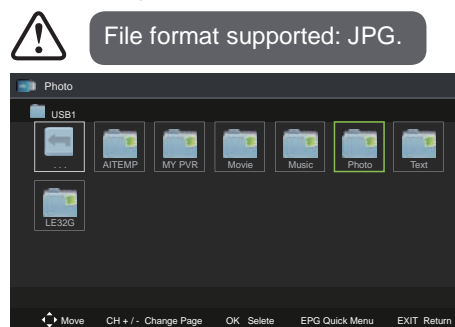

5. Press the **OK** button to view.

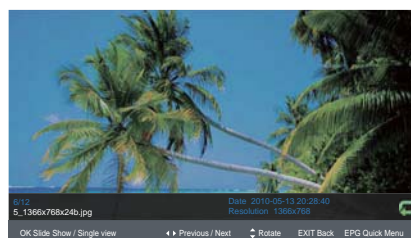

Basic Feature

Simple everyday use

6. Press the **OK** button or the **INFO** button to display the function bar: Slide Show / Single view / Previous / Next / Rotate / Quick Menu (Interval Time / Repeat / Slideshow Effect / Background Music).




If this folder also contains music files, you can select a music track to play at the same time you view your photos.

7. Press the **EXIT** button to return to the previous menu.


Listening to Music

1. Press the **INPUT** button on the top of the TV or the **INPUT** button on the remote control then press the **▲▼** buttons to **MEDIA** and then press the **OK** button.


2. Press the **◀▶** buttons to select **Music** and then press the **OK** button.

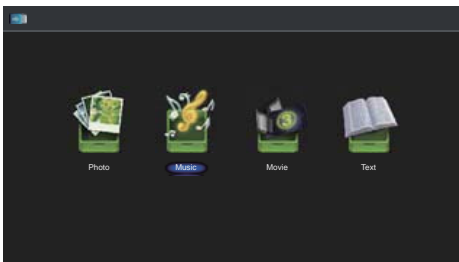

3. Press the **▲▼** buttons to select your storage device and then press the **OK** button.

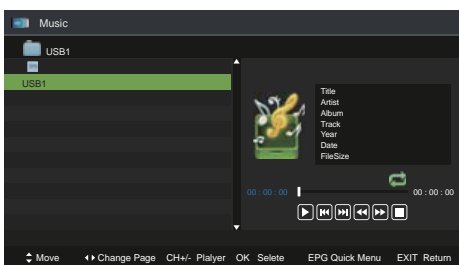


4. Press the **▲▼** buttons to navigate in the music folder and then press the **OK** button. If you want to select the specified music, press the **▲▼** buttons to select the music file and then press the **OK** button.

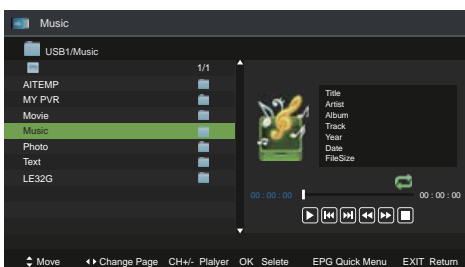

Some audio file formats will not be supported. Supported File format: MP3.

5. Press the **▶||** or **OK** button to start to play.

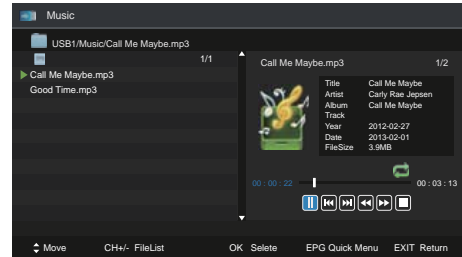


6. Press the **◀▶** buttons and then press the **OK** button to select the function: Play / Previous / Next / FB / FF / Stop / Quick Menu (Repeat).

7. Press the **EXIT** button to return to the previous menu.


Viewing Movies

1. Press the **INPUT** button on the top of the TV or the **INPUT** button on the remote control then press the **▲▼** buttons to **MEDIA** and then press the **OK** button.

2. Press the **◀▶** buttons to select **Movie** and then press the **OK** button.

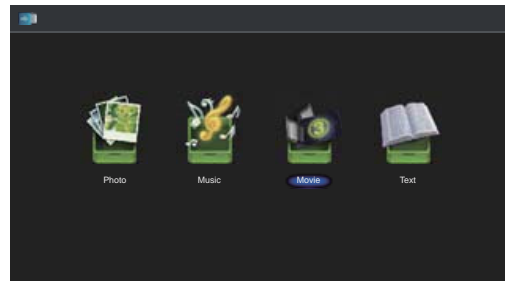

3. Press the **▲▼** buttons to select your storage device and then press the **OK** button.

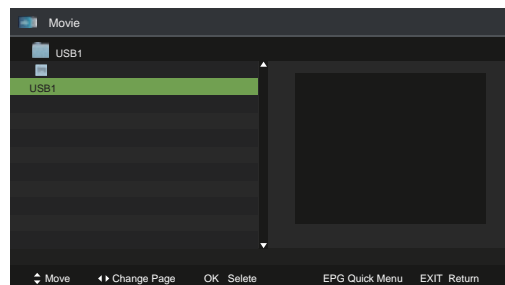

4. Press the **▲▼** buttons to navigate in the movie folder and then press the **OK** button. If you want to select the specified movie, press the **▲▼** buttons to select the movie file and then press the **OK** button.




Some audio file formats will not be supported. Supported File format: MPEG 1/2.


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Basic Feature

Simple everyday use

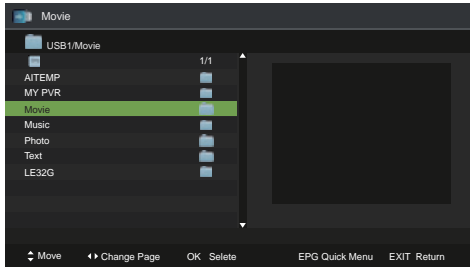


5. Press the ►|| or OK button to view.

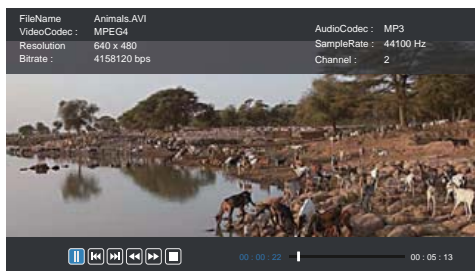


6. Press the **OK** button or the **INFO** button to display the function bar. Press the ◀▶ buttons and then press the **OK** button to select the function: Pause / Previous / Next / FB / FF / Stop / Quick Menu (Repeat / Encode Type).
7. Press the **EXIT** button to return to the previous menu.

My Text



1. Press the **INPUT** button on the top of the TV or the **INPUT** button on the remote control then press the ▲▼ buttons to **MEDIA** and then press the **OK** button.
2. Press the ◀▶ buttons to select **Text** and then press the **OK** button.

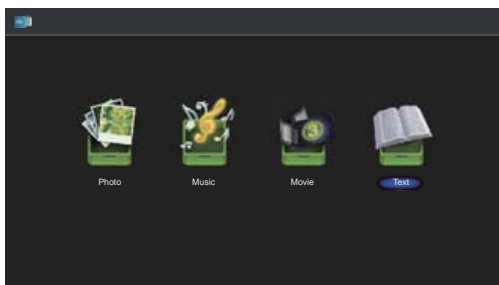


3. Press the ▲▼ buttons to select your storage device and then press the **OK** button.

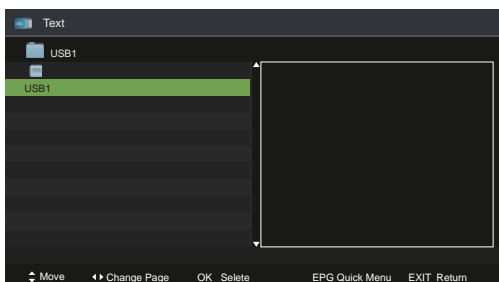

4. Press the ▲▼ buttons to navigate in the text folder and then press the **OK** button. If you want to select the specified text file, press the ▲▼ buttons to select the text file and then press the **OK** button.

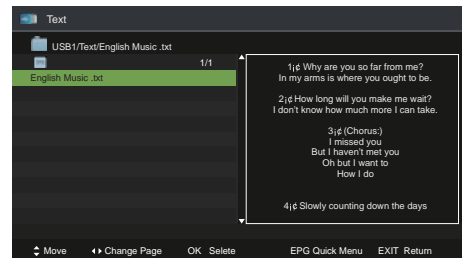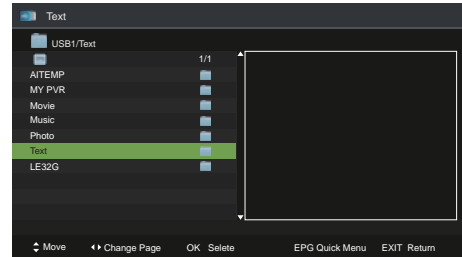

5. Press the ►|| or **OK** button to view.

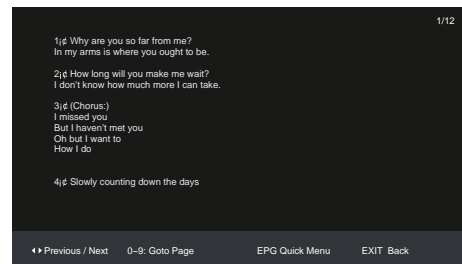

6. Press the **OK** button or the **INFO** button to display the function bar. Press the ◀▶ buttons and then press the **OK** button to select the function: Previous / Next / Goto Page / Quick Menu (Repeat / Background Music / Encode Type).



If this folder also contains music files, you can select a music track to play at the same time you view your texts.

7. Press the **EXIT** button to return to the previous menu.

Using the DVD Features 5




Using the DVD Features

Let's get started

Using the Bulit-in DVD Player

1. Press the "D" button on the TV or remote control. Switch to DVD source using the "INPUT" button on the remote control.

2. Insert a disc with the label side facing towards you. (CD-R, CD-RW, DVD-R, DVD-RW, CD, DVD+R, or DVD+RW) Allow 10 seconds for the player to load the disc.

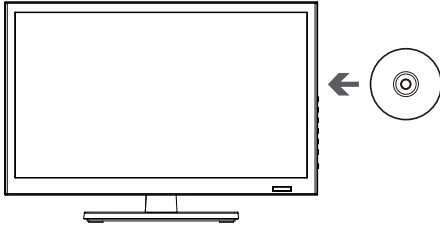

3. After the disc is inserted, the TV will show the content of the disc automatically.

4. If the DVD player does not play the disc, press the **INPUT** button on the top of the TV or the **INPUT** button on the remote control to display the Source List. Use the **▼▲** buttons to select **DVD** and then press the **OK** button to confirm. Press the **▶||** button on the unit or the **▶||** button on the remote control to start playing.



5. Press the **▲** button if you want to remove the disc.

Using the Bulit-in DVD Player

| Disc Types | Disc Logo | Record Content |
|--|-----------|------------------|
| DVD-VIDEO(Digital Versatile Disc) | | AUDIO+VIDEO |
| DVD±RW(Audio/Video format or JPEG files) | | AUDIO+VIDEO+JPEG |
| DVD±R(DVD Recordable -Audio/Video format or JPEG files) | | AUDIO+VIDEO+JPEG |
| CD-R(CD-Recordable -Audio/Video format or JPEG files) | | AUDIO+VIDEO+JPEG |
| CD-RW(CD-Rewritable- Audio/Video format or JPEG files) | | AUDIO+VIDEO+JPEG |
| AUDIO-CD(Compact Disc Digital Audio) | | AUDIO |

Supported Formats

JPEG

- The file extensions has to be .jpg and not .jpeg.
- Pictures encoding must comply with JPEG/ ISO format.
- This DVD player can only display DCFstandard still pictures or JPEG pictures such as TIFF.

Region Code

Both the DVD player and the discs are coded by region. These regional codes must match in order to play the disc. If the codes do not match, the disc will not play.

The Region Number for this DVD player is described on the rear panel of the TV.

| Disc Types | DVD-VIDEO |
|-------------|-----------|
| Region code | |

Using the DVD Features

Let's get started

Basic DVD Playback Functions

Playing the DVD

Depending on the disc, a menu may appear on the TV screen once the disc has loaded. When playing the disc, you may use the ►|| button to toggle between Play and Pause mode. This product also supports Menu / Title / Sequential / Programme Playback.

Menu Playback (for DVD)

- For DVD discs, the screen will display the DVD Disc Menu (Root Menu).
- Press the ►|| button or the OK button to start from the highlighted content.
- Press the D.MENU button to return to the Root Menu when playing the disc.
- For some DVD discs you may need to press the D.MENU button or the TITLE button to display the Disc Menu.

Stopping Playback

- Press the ■ button once to stop. Press the ►|| button to resume from where you stopped.
- Press the ■ button twice to stop. Press the ►|| button to start from the beginning.
- In order to protect the disc, press the ■ button twice and then press the ▲ button to eject the disc. When the disc is ejected, hold the disc edge slightly and remove it from the disc slot.
- When not using the DVD function (in standby- mode or using others modes for a long period of time), please take out the disc to protect the DVD loader and the disc.

Previous / Next (for DVD / CD / Multimedia discs)

- Press the ◀◀ button to play the last Title / Chapter / Track.
- Press the ▶▶ button to play the next Title / Chapter / Track.

If the current track is the first one, pressing the ◀◀ button will restart the disc from the beginning.
If the current track is the last one, pressing the ▶▶ button will stop the playback.

- For DVD discs, the above functions may vary due to different DVD disc's structure.

Forward / Backward (for DVD / CD / Multimedia discs)

- There are 4 speeds for forward. Press ▶▶ the button to toggle between the different forward options in sequence. (FORWARD x 2 / FORWARD x 4 / FORWARD x 8 / FORWARD x 16 / FORWARD x 32 / Play).

- Press the ►|| button to return to normal speed playback.
- For DVD discs, when selecting backward to first title / chapter, the disc will start from the beginning.



There will be no sound during forward or backward.

Pause (for DVD / CD / Multimedia discs)

- For CD / JPEG discs, press the ►|| button to pause; press the ►|| button again to resume playback.
- For DVD discs, press the ►|| button to pause; press the ►|| button again to resume playback.

Aspect

Allows you to select the video size of programme stream.

- Press the Aspect button to select the size you want.

Audio (for DVD / CD)

Press the AUDIO button to toggle between different audio modes in sequence.

- For CD discs: Mono Left/Mono Right/Mix- Mono/Stereo.



Some discs may contain multiple languages which can be selected by pressing the AUDIO button.

Audio (for DVD / CD)


When playing DVD, CD disc, press the A-B button to repeat certain content. Press the A-B button on the start point (A) and the end point (B) to select the repeat part. Press the A-B button a third time to cancel the A-B button function and return to normal playback.

Using the DVD Features

Let's get started

Playing Multimedia Discs



After loading the multimedia disc, the disc contents will automatically be displayed and sorted.

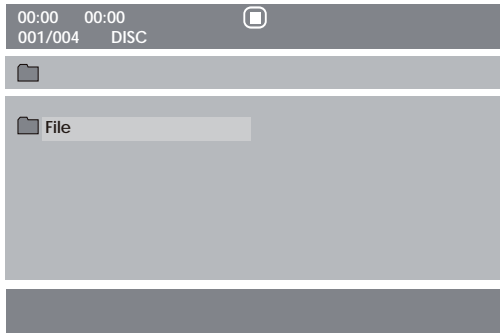

1. Press the ◀▶▲▼ buttons to navigate through the folders and files.
2. Press the 0-9 buttons to select the contents directly
3. When playing or pausing with picture playback, you may use the ◀▶▲▼ buttons to flip / rotate the picture.

DVD SYSTEM MENU

 
In the DVD mode, press the **SET-UP** button on the remote control to activate the DVD player OSD menu. Press the ◀▶ buttons to select **General/Audio/Preference**, and then press the ▲▼ buttons or **OK** button to enter the highlighted sub-menu. Press the **SET-UP** button to exit the menu.

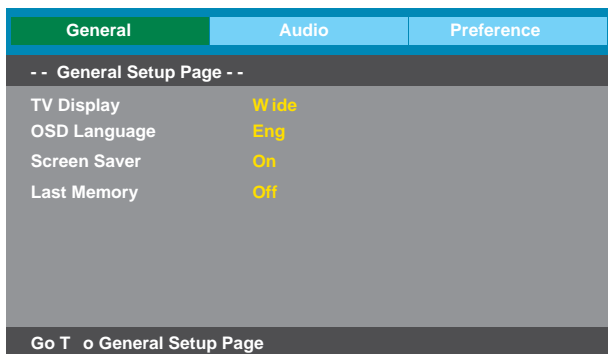

Go To General Setup Page

In the DVD mode, press the **SET-UP** button on the remote control to activate the DVD player OSD menu. Press the ◀▶ buttons to select **General**, and then press the ▲▼ buttons or **OK** button to enter the highlighted sub-menu. Press the **SET-UP** button to exit the menu.

TV Display

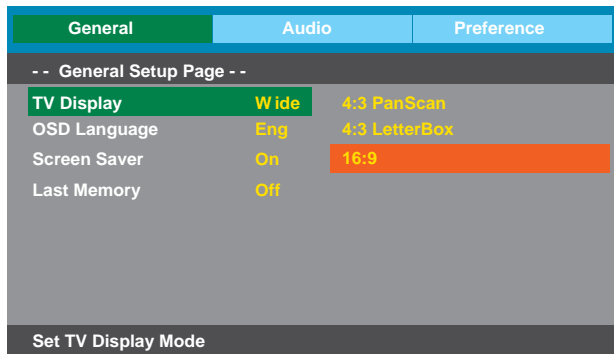


- **4:3 Pan Scan:** Choosing this setting if your DVD player is connected to a normal ratio TV. You can fill the movie to the entire screen of your TV. This might mean that parts of the picture (the left and right edges) won't be seen.
- **4:3 Letter Box:** Choosing this setting if your DVD player is connected to a normal ratio TV. You'll see the movies in their original aspect ratio (height-to-width ratio). You'll see the entire frame of the movie, but it will take up a smaller portion of the screen vertically. The movie might appear with black bars at the top and bottom of the screen.
- **16: 9:** Choose this setting if your DVD player is connected to a wide screen TV. If you choose this setting and you don't have a wide screen TV, the images on the screen may appear distorted due to vertical compression.



Using the DVD Features


Let's get started

OSD Language

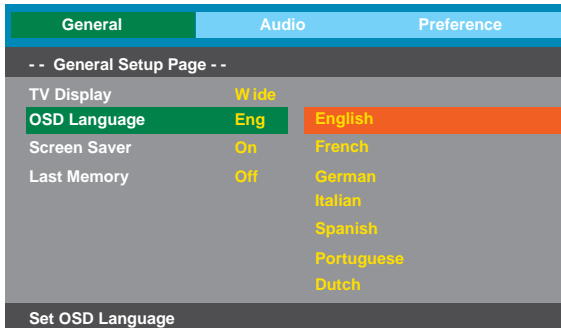

Set the OSD language to your language of choice.


Screen Saver

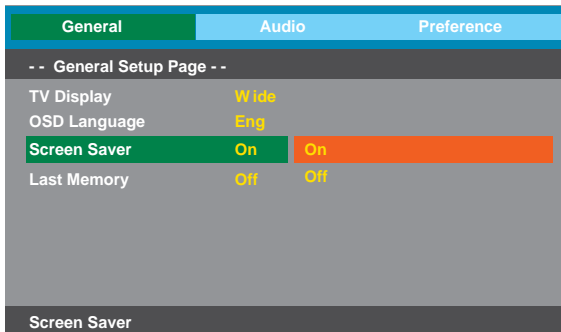

When the player stops or the picture becomes motionless for a couple of minutes, there will a screen saver to prevent damage to the display screen.

- **On:** To activate screen saver.
- **Off:** To disable screen saver.

Last Memory

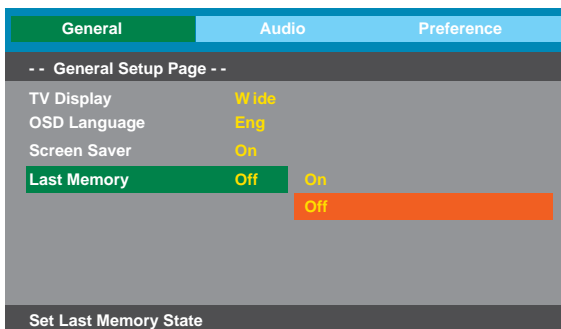


- **On:** Continue playing from last stop every time.
- **Off:** Close the memory function and play from DVD start every time.

Go To Audio Setup Page

In the DVD mode, press the **SET-UP** button on the remote control to activate the DVD player OSD menu. Press the ◀▶ buttons to select **Audio**, and then press the ▲▼ buttons or **OK** button to enter the highlighted sub-menu. Press the **SET-UP** button to exit the menu.

Downmix

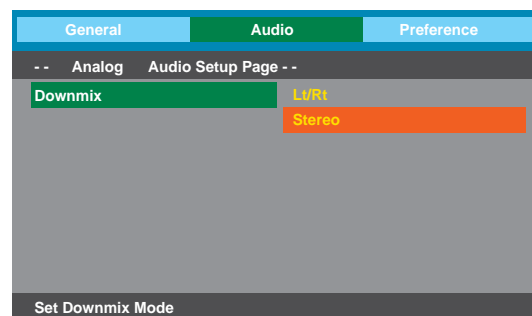


- **Lo/Ro:** Mixed stereo surround output.
- **Lt/Rt:** Mixed stereo Lt/Rt output.

Go To Preference Setup Page

In the DVD mode, press the **SET-UP** button on the remote control to activate the DVD player OSD menu. Press the ◀▶ buttons to select **Preference**, and then press the ▲▼ buttons or **OK** button to enter the highlighted sub-menu. Press the **SET-UP** button to exit the menu.

TV Type

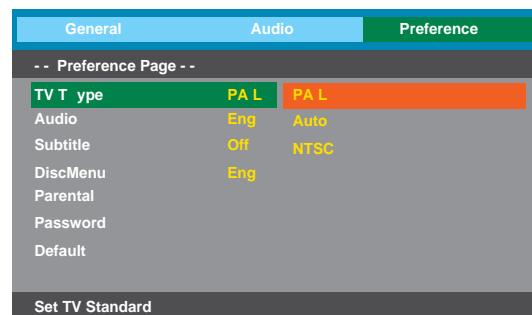


In order for the disc to play, the colour system of the DVD player, disc and TV should match.

- **PAL:** This is the format used in UK.
- **Auto:** This format can be used if your TV / DVD is capable of both PAL and NTSC formats and this is the default setting.
- **NTSC:** This format is used by some other countries, e.g. USA.

Using the DVD Features

Let's get started


Audio

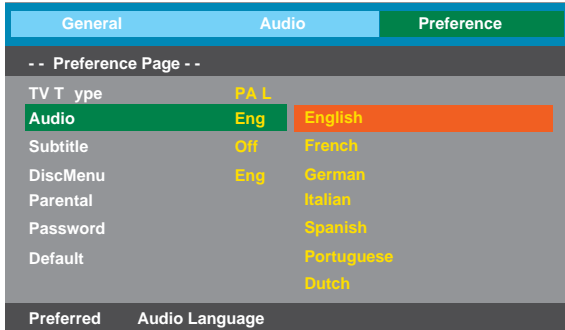

Not all DVD discs support multiple audio languages.

Set the Audio language to your language of choice.


Subtitle

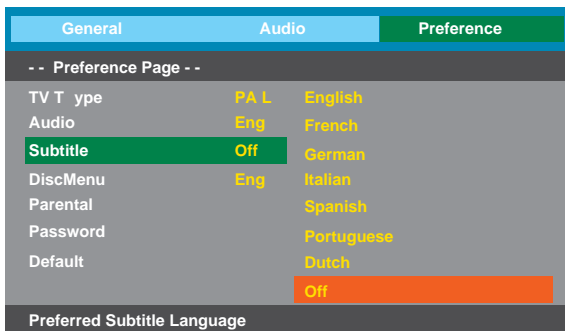

Not all DVD discs support multiple audio languages.


Select the Subtitle language.

Disc menu

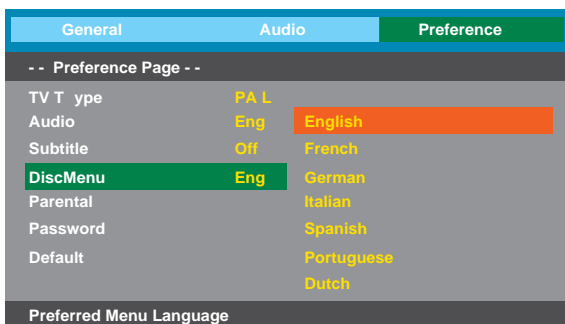

Select the Disc Menu language.


Parental

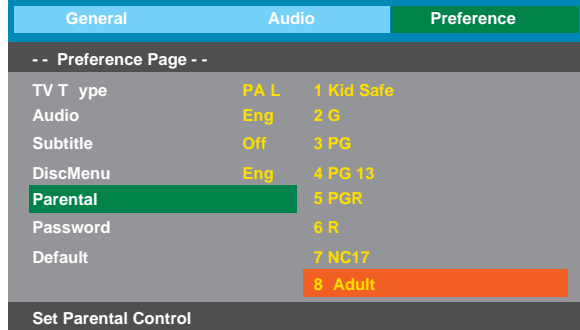

This function is available only when the discs have ratings encoded on them.


Allows the user to set a maximum rating level for a movie that can be played (e.g. PG rating). Movies rated higher than the level set will not be played. The parental lock can only be changed after inputting the correct password.

Password

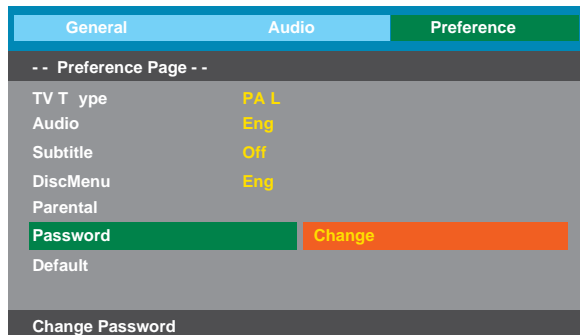

Select Password in the Preference page menu. (Default password is **8888**; Supervisor Password is 8888). You can change the password, press ► button to highlight Change and press **OK**.


You will have to enter previous password, then new password and confirm password again.

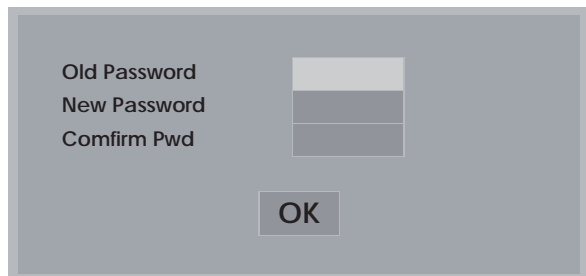

Using the DVD Features

Let's get started

Default

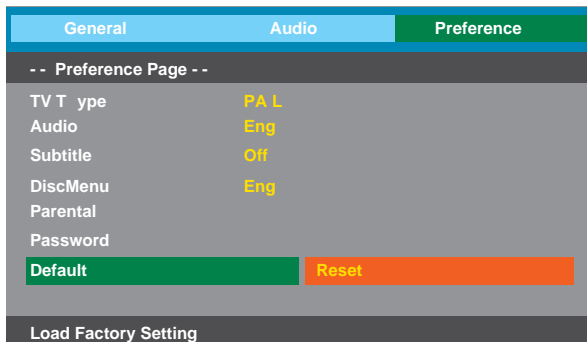

Choose this option to resume all the setup options to default settings.

Other information 6



Other information

Helpful technical information

Specifications

| | |
|---------------------------------------|---|
| TV Broadcasting | PAL, B/G, D/K, I, SECAM, L/L' |
| Receiving Channels | VHF (BAND I/III) - UHF (BAND U) - HYPERBAND |
| Number of Preset Channels | 100 |
| Channel Indicator | On Screen Display |
| RF Aerial Input | 75 Ohm (unbalanced) |
| Operating Voltage | AC 100-240V~ 50/60Hz |
| Audio | Nicam |
| Audio Output Power (WRMS.) (10% THD) | 2 x 3 W |
| Panel Dimensions DxLxH (with foot) | 134 x 443 x 312 mm |
| Weight (with foot) | 2.6 kg |
| Panel Dimensions DxLxH (without foot) | 74 x 443 x 274 mm |
| Weight (without foot) | 2.45 kg |
| Energy Consumption Data | EEI A |
| On Mode Power Consumption (W) | 30W |
| Standby Mode (W) | 0.5W |
| Maximum Power (W) | 36W |
| Standby Mode | After 4 Hours |

Digital reception

| |
|---|
| MHEG-5 ENGINE compliant with ISO/IEC 13522-5 UK engine Profile 1 - for UK |
| Object carousel support compliant with ISO/IEC 135818-6 and UK DTT profile - for UK |
| Frequency range: 474-850 MHz for UK models |
| 170-862 MHz for EU models |
| Transmission standard: DVB-T. MPEG-2 |
| Demodulation: COFDM with 2K/8K FFT mode |
| FEC: all DVB modes |
| Video: MP@ML, PAL, 4:3/16:9 |
| Audio: MPEG Layer I&II 32/44.148kHz. |

We apologise for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Other information

Helpful technical information

Plug replacement - UK and Ireland only

Should you need to replace the plug; the wires in the power cable are coloured in the following way:

Blue – Neutral 'N'


Brown – Live 'L'

As the colours of the wires in the power cable may not correspond with the coloured markings identifying the terminals in your plug, and proceed as follows:

The blue wire must be connected to the terminal that is marked with the letter N.

The brown wire must be connected to the terminal that is marked with the letter L.

If the power lead is damaged, it must be replaced by a qualified electrician.

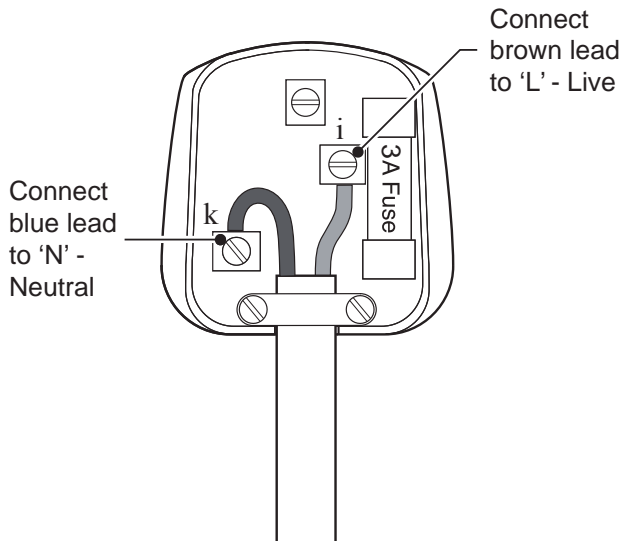

DTS TruSurround

For DTS Patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks and DTS TruSurround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



Energy label

This is called the product Fiche – the information needs to be presented in the following order, also this maybe in the form of a copy of the label, in colour or black and white – the label however must display all the information below:

- Supplier's name or trade mark
- Supplier's model product model no.
- The energy efficiency class of the model.
- The visible screen diagonal in centimetres and in inches
- The on-mode power consumption
- The annual energy consumption
- The screen resolution in physical horizontal and vertical pixel count

Product support 7



Product support

Help is always at hand

Trouble shooting

Image persistence - ghosting

Please note that ghosting may occur while displaying a persistent image (still or paused image). LCD TVs' image persistence may disappear after a short time. Try turning off the TV for a while. To avoid this, do not leave the screen in still picture mode for extended periods.

No power

If your TV has no power, please check the power cord plug is connect to the mains power socket.

Poor picture

1. Have you selected the correct TV system?
2. Is your TV or house aerial located too close to a non-earthed audio equipment or neon lights, etc.?
3. Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial. Is the picture or teletext unrecognisable?
4. Check if you have entered the correct frequency.
5. Please retune the channels.
6. The picture quality may degrade when two devices are connected to the TV at the same time. In such a case, disconnect one of the devices.

No picture

1. No Picture means that your TV is not receiving a transmission. Have you selected the correct button on the remote control? Try once more. Also make sure the correct input source has been selected.
2. Is the aerial connected properly?
3. Are the plugs connected tightly to the aerial socket?
4. Is the aerial cable damaged?
5. Are suitable plugs used to connect the aerial?
6. If you are in doubt, consult your dealer.

No sound

1. Has the TV been set to mute? To cancel mute, press the " " button, or increase the volume level.
2. Sound is coming from only one speaker. Is the balance set to one extreme?

Remote control - does not operate

Your TV no longer responds to the remote control. The batteries may be exhausted, if so you can still use the control buttons on the left side of the TV.

Input sources - can not be selected

1. If you cannot select an input source, it is possible that no device is connected.
2. Check the AV cables and connections if you have tried to connect a device.

The DVD picture quality is poor

 
1. Make sure the DVD disc surface is not damaged (no scratches, fingerprint etc.).
2. Clean the DVD disc and try again. See instructions in "Cleaning Discs" to clean your disc properly page 00.
3. Ensure that the DVD disc is in the loader with the label facing you when looking at the TV screen.
4. A damp DVD disc or condensation may effect the equipment. Wait for 1 to 2 hours in Stand-by mode to dry the equipment.

The Disc does not play

1. No disc in the machine - Place a disc into the loader.
2. Disc is incorrectly loaded - Ensure that the DVD disc is in the loader with the label facing you when looking at the TV screen.
3. Wrong type of disc. The DVD player cannot play CD-ROMS etc..
4. The region code of the DVD disc must match the player.

Wrong OSD language

1. Select the language in the setup menu.
2. The language for the sound or subtitles on a DVD disc cannot be changed.
3. Multilingual sound and/or subtitles are not recorded on the DVD disc.
4. Try to change the sound or subtitles using DVD's title menu. Some DVD's do not allow the user to change these settings without using the disc's menu.



If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Product support

Help is always at hand

Definition of terms

Angle

Recorded onto some DVD discs are scenes, which have been simultaneously shot from a number of different angles (the same scene is shot from the front, from the left side, from the right side, etc.). With such discs, the ANGLE button can be used to view the scene from different angles.

Chapter Number

These numbers are recorded on DVD discs. A title is subdivided into many sections, each of which are numbered, and specific parts of video presentations can be searched quickly using these numbers.

Chapter Number

This refers to a high-density optical disc on which high-quality pictures and sound have been recorded by means of digital signals. Incorporating a new video compression technology (MPEG II) and high-density recording technology, DVD discs enable aesthetically pleasing full-motion video to be recorded over long periods of time (for instance, a whole movie can be recorded).

DVD discs have a structure consisting of two 0.6mm thin discs, which are adhered to each other. Since the thinner the disc, the higher the density at which the information can be recorded, a DVD disc has a greater capacity than a single 1.2mm thick disc. Since the two thin discs are adhered to each other, there is the potential to achieve double-sided play sometime in the future for even longer duration play.

Subtitles

These are lines of text appearing at the bottom of the screen, which translate or transcribe the dialogue. They are recorded on the DVD discs.

Time Number

This indicates the playtime, which has elapsed from the start of a disc or a title. It can be used to find a specific feature to be used. Availability is determined by the disc's manufacturer.)

Title Number

These numbers are recorded on DVD discs. When a disc contains two or more movies, these movies are numbered as title 1, title 2, etc.

Track Number

These numbers are assigned to the tracks, which are recorded on Audio CDs. They enable specific tracks to be located quickly.

LPCM

LPCM stands for Pulse Code Modulation and is digital audio.

MPEG

Short for Moving Picture Experts Group. This is an international standard for compression of moving images. On some DVDs digital audio has been compressed and recorded in this format.

Product support

Help is always at hand

Supported file formats

| Media | File Extension | Format | | Supported (Maximum resolution/Bit rate etc.) |
|-------|----------------|------------------|---------------------------|--|
| | | Video | Audio | |
| Movie | .mpg/.dat/.vob | MPEG1 | MPEG Layer 1/2/3 | |
| | | MPEG2M | PEG2 | |
| Music | - | - | PMC | Sample Rate: 8K ~ 48KHz |
| | .mp3 | - | MPEG 1/2 Layer 1/2/3 MP3) | Sample Rate: 8K ~ 48KHz, Bit Rate: 64K ~ 320Kbps |
| Photo | .jpg | Baseline JPEG | | W x H = 8192 x 8192 up to 77 Mega-pixel Support format: 444/ 440/ 422/ 420/ Grayscale |
| | | Progressive JPEG | | Up to 4 Mega-pixel Support format: 444/ 440/ 422/ 420/ Grayscale |

Disposal information

Instructions for waste disposal:

Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.

The cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury; please follow the local laws or regulations for disposal.

Information for Users on Disposal of old Equipment and Batteries (European Union only)

These symbols indicate that equipment with these symbols should not be disposed of as general household waste. If you want to dispose of the product or battery, please consider the collection systems or facilities for appropriate recycling.

Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead.

Information for Users in European Union Countries

This symbol on the product or on its packaging means that your electrical and electronic device should be disposed of at the end of its service life separately from your household wastes. There are separate collection systems for recycling in EU.

For more information, please contact the local authority or the dealer where you purchased the product.



Products



Battery



If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your television is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105***. To help give us give you a fast and efficient service please have the following information ready:

| | | |
|-------------------------|----------------------|---|
| Model Ref. | <input type="text"/> | You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product |
| Serial number | <input type="text"/> | |
| Date of purchase | <input type="text"/> | |

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on **0345 604 0105**.

Product support

Help is always at hand

Disposal



- Ria sere nitempo rescien imiliae rsperumquos volorio blam, oditate corehent destibus aut est, si.
- dolestest am, que excestiis dio et, solore parita dolorem ea dolectiam diam quibus min pedi
- omniatenim aut qui tem quis et pelitistium et audae. Equo ea idendes cimagna temperchic te nonseque nonecate est ommoluptatem doluptatur anis sint latior serum volorec epelest omnihicate etus ilita
- delest, arion corem volupta tiuntis pratis doluptatet volorro videmped essequid essimpos di te volorum que sequides moditatem veliti test, cum solorum
- fugiasit ma nam idunt opta sapidic iendigenit vendio dolupti num volorem fugiani maximagnieni dolum audit dolore aborum fuga. Ga. Ficidelit facimin.

If you are creating instructions, you may find the following links helpful:

www.environmentlaw.org.uk

www.hse.gov.uk/waste/waste-electrical

Product support

Help is always at hand



Your Alba Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Alba disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

ALBA



Contact:

www.argos-support.co.uk
Helpline: 0345 604 0105

