REMINGTON®

Keratin Radiance Dryer



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.

Remove all packaging before use.



IMPORTANT SAFEGUARDS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- 3 Never operate this appliance with a damaged power cord or plug, or if it is not working properly.
- 4 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 5 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 6 Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- 7 When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off
- 8 Warning for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice.
- 9 For UK household use Only. Currently the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 10 Do not plug or unplug the appliance with wet hands.
- 11 Do not use if the cord is damaged.
- 12 Do not allow any part of the appliance touch the face, neck or scalp.
- 13 Keep direct airflow away from eyes or other sensitive areas.
- 14 Ensure the inlet grille is free from obstructions such as fluff, loose hair etc.
- 15 Do not leave the appliance unattended while plugged in.

- 16 Do not set the appliance down while still on.
- 17 Do not place the appliance on any soft furnishings.
- 18 Do not use attachments other than those we supply.
- 19 Do not use the diffuser on the highest heat setting.
- 20 Let the attachments cool before removing.
- 21 This appliance is not intended for commercial or salon use.



KEY FEATURES

- 1 Advanced ceramic grill infused with Keratin and Macadamia
- 2 3 heat settings
- 3 2 speed settings
- 4 Cold shot
- 5 7mm concentrator
- 6 11mm concentrator
- 7 Diffuser
- 8 Removable easy clean rear grille
- 9 Hang up loop
- 10 Cord

PRODUCT FEATURES

- 1800 2200 watts.
- Ion generator for smooth frizz-free styling.
- AC long life motor.
- Advanced ceramic grill infused with Keratin and Macadamia for smooth, radiant, healthy looking hair.

INSTRUCTIONS FOR USE

- · Wash and condition your hair as normal.
- Squeeze out excess moisture with a towel and comb through.
- ★ Hairsprays contain flammable material do not use while using this product.
- · Plug the product into the mains power supply.
- For fast drying and to remove excess moisture from the hair use the dryer on high heat/high speed with the 11mm concentrator.
- Select the desired temperature and speed setting using the switch on the handle.
- To create smooth styles use the 7mm concentrator and a round hair brush (not included) whilst drying.
- To enhance natural curls and waves, attach the diffuser to the dryer. Turn
 your head upside down and gently place your hair into the diffuser bowl
 slightly rotating the dryer as you style.
- To create extra volume at the roots of the hair, keep your head upright and
 place the diffuser against the top of the head. Gently rotate the hairdryer
 allowing the diffuser fingers to gently massage the scalp being careful not to
 burn the scalp. Dry gently on a low heat / low speed setting.
- To set your style, press the cold shot button whilst styling then release it to reactivate the heat.
- After use, turn the appliance off and unplug.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.

★ To remove the rear grille for cleaning

 Hold the dryer handle in one hand, then with the other place your thumb and index finger on the indents either side of the rear grille. Pull the rear grille away from the dryer.

★ To replace the rear grill

 Hold in place with thumb and index finger again and click back onto the dryer.

A ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



⇒ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

⇒ SERVICE CENTRE

United Kingdom

Tel 0800 212 438 (free call mainland UK)

+44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.reminaton.co.uk

Ireland

Tel 142 951 40

Remington Consumer Products, Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12. www.remington.co.uk

𝔔 REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery. Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. AC8006

16/UK/ AC8006 T22-0004300 Version 04 /16

Remington* is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries. Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2016 Spectrum Brands, Inc.