

A stylized graphic of a starburst or sunburst composed of overlapping grey triangles of various sizes, with small white dots scattered throughout. The word "ALBA" is written in a white, rounded, sans-serif font across the center of this graphic.

**ALBA**

**SR-30**  
Instruction manual



# Contents

Help and Guidance.....	1
Important Safety Instructions .....	2
Safety .....	2
Warning .....	3
Identifying the Parts .....	4
Main Unit .....	4
Remote Control .....	5
Prepare the Remote Control .....	5
Battery replacement for the remote control.....	5
Connections .....	6
Use the AUX Socket .....	6
Use the MP3 Link Socket .....	6
Connect Power .....	7
Basic Operation .....	7
Standby/ON.....	7
Select Modes.....	7
Adjust the Volume .....	7
Select a Preset Sound Effect .....	7
Aux/Mp3 Link Operation .....	7
Plug replacement-UKand Ireland only .....	8
Troubles hooting .....	9
Standard Accessories .....	9

You'll soon be up and running

Looking forward to your new Alba sound bar, Great.  
Then let's get you started.

Just follow this simple step-by-step guide and you'll be good to go.

This product is intended for use within the UK.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

## Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>



## Help and Guidance

We're here to help you get the most from your sound bar. Should you require any guidance, a simple solution can often be found online at:

[www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on 0345 604 0105.

# Important Safety Instructions

	<b>WARNING</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>	
<b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b>		




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance

## Safety


1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water  
– The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Attention should be drawn to the environmental aspects of battery disposal.
12. The use of apparatus in moderate climates.
13.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
14. Unplug the apparatus during lightning storms or when unused for long periods of time.

15. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
16.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
17. To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

#### Caution:

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug is used as the disconnect device, the disconnect device must remain readily operable.

#### Warning

- The battery (battery or batteries or battery pack) must not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc. Make sure there is at least 20 cm of space above and at least 5cm of space on each side of the unit.
- Do not place this unit close to strong magnetic fields.
- Do not place the unit on the amplifier or receiver.
- Do not place this unit close to damp areas as the moisture will affect the life of the laser head.
- Should any solid object or liquid fall into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
-  Correct Disposal Of This Product. This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re-use of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased as they can take this product for environmental safe recycling. The marking label is pasted on the bottom of the equipment.

#### DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



 
# Identifying the Parts

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.—The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable

Danger of explosion if battery is incorrectly replaced— Replace only with the same or equivalent type  
The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING

## Main Unit



### 1. Speaker

### 2. Remote Control Sensor

### 3. LED Indicators

### 4. POWER:

In STANDBY mode: Light up red.

### 5. AUX:

In AUX mode: Light turn on.

### 6. MP3:

In MP3 LINK mode: Light flash.

### 7. BLUETOOTH:

Bluetooth available: Light turn on.

Bluetooth pairing available: Light flash.

### 8. MOVIE/SOURROUND:

In MOVIE mode: Light turn on.

In SURROUND mode: Light flash.

### 9. MP3 LINK Socket

Connect to an external audio device.

### 10. /SOURCE

Press this button to turn ON or press and hold to Standby mode.

Select the play function.

 
 
 
### 11. VOL+ /VOL-

Increase/decrease the volume level.

### 12. AUX (L/R) Socket

Connect to an external audio device.

### 13. AC~ Power Cord

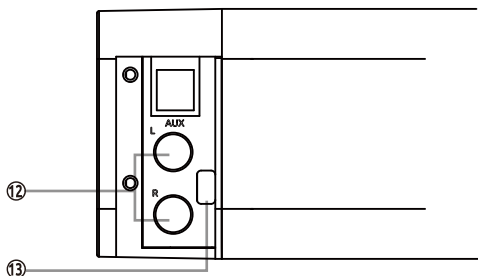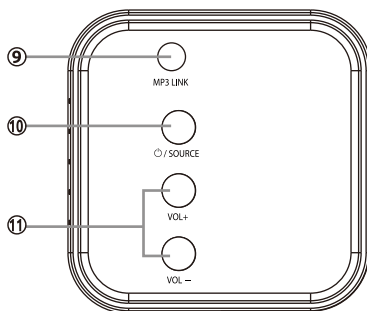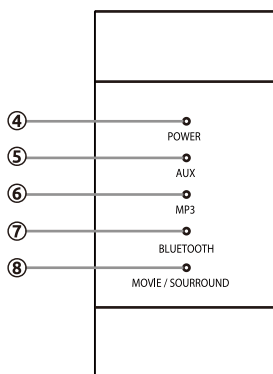

# Remote Control

 
1. Switch the unit between ON and STANDBY mode.
2. MUTE Mute or resume the sound.
3. : Play/Pause(Bluetooth modes)
4. / : Previous track/next track (Bluetooth modes)
5. VOL+/VOL- Adjust the volume.
6. AUX, Switches the modes.
7. MP3, Switches the modes.
8. BLUETOOTH Switches the modes.
9. Music,Movie,Surround Select a preset sound effect

## Prepare the Remote Control

The provided Remote Control allows the unit to be operated from a distance.

•Even if the Remote Control is operated within the effective range (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.

•If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

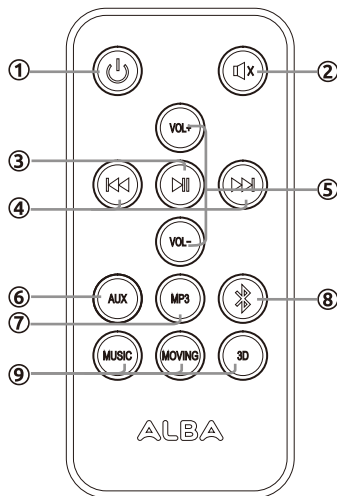

## battery replacement for the remote control

Press down on the compartment cover, and slide the cover off to open the compartment. Place the CR2025 battery in the remote control according to polarity markings( "+" and "-" ) inside the compartment and on the battery.

Place the cover into the compartment, press down lightly, and push it inside until it snaps on



### Handling the Battery

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual
- Do not dispose of the used battery as domestic waste. Dispose of it in accordance with local regulations.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.

 
# Connections

**Tip:**

If there is no sound come out of the soundbar and the indicator light flash fast. Make sure the audio setting of your source player.

**Use the AUX Socket**

- Use a RCA stereo audio cable (not included) to connect the TV's audio output sockets to the AUX (R/L) socket on the unit.
- Use a 3.5mm to RCA audio cable (included) to connect the TV's headphone socket to the AUX (R/L) Socket on the unit.

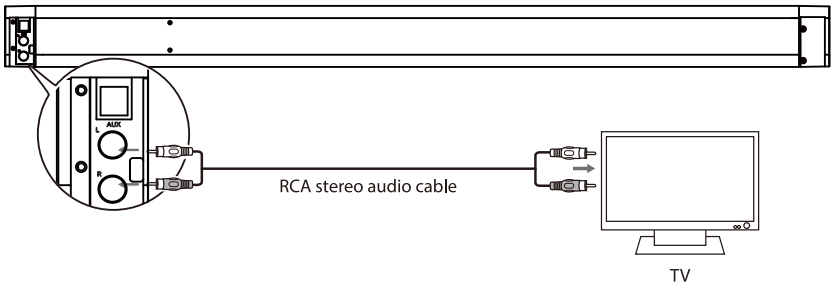

**Use the MP3 Link Socket**

- Use a 3.5mm to 3.5mm audio cable (included) to connect the external audio device headphone socket to the MP3 LINK socket on the unit.

 




## Connect power

Risk of product damage!

- Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Before connecting the AC power cord, ensure you have completed all other connections.
- Connect the mains plug of the main unit to a mains socket.
- Be sure to unplug the power cord from the outlet when the system is not in use for an extended period of time.

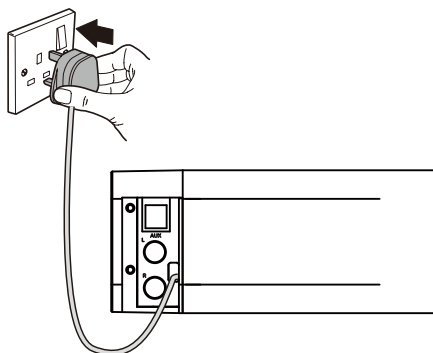

## Basic Operation

### Standby/ON

When you first connect the unit to the mains socket, the unit will be in STANDBY mode.

- Press **POWER** to switch the unit ON.
- Press **POWER** again to switch the unit back to STANDBY mode. The POWER indicator will light up red.
- Disconnect the mains plug from the mains socket if you want to switch the unit OFF completely.

### Select Modes

Press the SOURCE button repeatedly on the unit or on the remote control to switch between AUX, MP3 LINK, Bluetooth modes.

### Note:

- If there is no signal under the AUX, MP3 LINK, Bluetooth, the unit will automatically switch off about 30 minutes.

### Adjust the Volume

- Press the VOL +/VOL- button on the unit or on the remote control to adjust the volume.
- If you wish to turn the sound off, press the MUTE button on the remote control. Press the MUTE again or press the VOL+/VOL- button to resume normal listening.

### Select a Preset Sound Effect

While playing, press the EQ button on the remote control to select between preset equalisers: Movie (recommended for viewing movies), Music (recommended for listening to music) and default setting (EQ mode off).

### Aux/Mp3 Link/Bluetooth Operation

- 1 Ensure that the unit is connected to the TV or audio device.
- 2 While in ON mode, press the SOURCE button repeatedly on the unit or on the remote control to select AUX or MP3 LINK or Bluetooth Mode.
- 3 Operate your audio device directly for playback features.
- 4 Press the VOL +/- button to adjust the volume to your desired level.

# Plug replacement- UK and Ireland only

 
Should you need to replace the plug;the wires in the power cable are coloured in the following way:  
Blue- Neutral"l"  
Brown- Live"L"

As the colours of the wires in the power cable may not correspond with the coloured markings identifying the terminals in your plug, and proceed as follows:

The blue wire must be connected to the terminal that is marked with the letter N.

The brown wire must be connected to the terminal that is marked with the letter L.

If the power lead is damaged, it must be replaced by a qualified electrician.

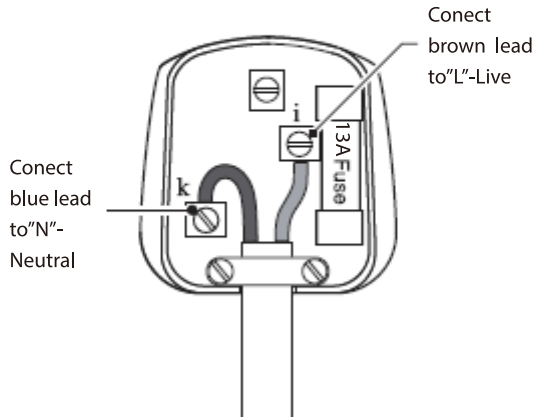

# Troubleshooting

## General

Problem	Solution
No power.	<ul style="list-style-type: none"> <li>• Ensure that the AC cord of the apparatus is properly connected .</li> <li>• Ensure that there is power at the AC outlet.</li> <li>• Press standby button to turn the unit on.</li> </ul>
The remote control is not functioning.	<ul style="list-style-type: none"> <li>• Before you press any SOURCE button, first select the correct source.</li> <li>• Reduce the distance between the remote control and the unit.</li> <li>• Insert the battery with its polarities (+/-) aligned as indicated.</li> <li>• Replace the battery.</li> <li>• Aim the remote control directly at the sensor on the front of the unit.</li> </ul>
No sound from the unit.	<ul style="list-style-type: none"> <li>• Disconnect and reconnect the AC power plug, then turn the unit on again.</li> </ul>

## Specifications

### General

Power requirements .....	AC100-240V~ 50/60Hz
Power consumption .....	50W
Output power RMS .....	25W
Total harmonic distortion .....	0.3%(1kHz, 1W)
Audio input sensitivity .....	500mV
Frequency response .....	65Hz - 20KHz
Main unit(W x H x D) .....	810 x 62 x 60 mm

### Speakers

Total impedance .....	8 Ω
-----------------------	-----

### Remote Control

Distance .....	6m
Angle .....	30°

### Standard Accessories

Remote Control .....	x 1
Instruction Manual.....	x 1
3.5mm - RCA audio cable Cable .....	x 1

Design and specifications are subject to change without notice.

# ALBA



**Contact:**

[www.argos-support.co.uk](http://www.argos-support.co.uk)

Helpline: 0345 604 0105