


# BUSH

## Instruction manual

Compact Digital Radio WO280





You'll soon be enjoying your new Compact Digital Radio.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.



## Help and Guidance

We're here to help you get the most from your Compact Digital Radio. Should you require any guidance, a simple solution can often be found online at:

**[www.argos-support.co.uk](http://www.argos-support.co.uk)**

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



# Contents

## 1 Safety information

Safety information	7
--------------------	---

## 2 Getting to know your Compact Digital Radio

Charging the battery	14
Adjusting the volume	14
Time and date	15
Change the mode	16
Using headphones	16

## 3 Using your Compact Digital Radio

DAB Radio mode	20
Telescopic aerial	20
Changing DAB stations	20
Scanning for DAB stations	20
Prune DAB stations	21
Storing a DAB station preset	21
Tune to a DAB preset station	22
DAB display information	22
Dynamic range control (DRC)	24
FM Radio mode	24
Telescopic aerial	25
Tuning to an FM station	25
Changing the Scan setting	25
Audio mode	26
Storing an FM station preset	26
Tune to an FM preset station	27



section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) if you still require further assistance, call one of our experts on 0545 600 3021



# Contents



FM display information	27
Sleep timer	28
Display backlight timeout	28
Display language	29
Software version	30
Factory reset	30
<b>4 Other information</b>	
Technical specification	34
<b>5 Product support</b>	
Troubleshooting	38
Help and assistance	39
Disposal	40
Guarantee	42



If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



This page is left intentionally blank





 
This page is left intentionally blank





# Safety information

1

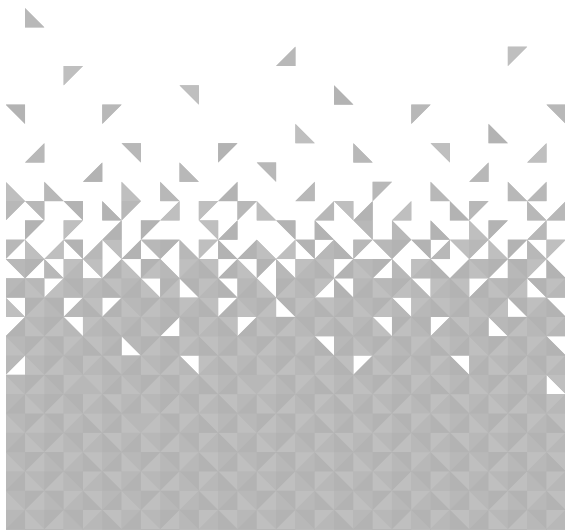



## Safety information

**Important** - Please read these instructions fully before installing or operating

### Power source

- Only use the USB cable that came with the product. Using an unauthorised cable will invalidate your guarantee and may irreversibly damage the product.
- This product has an integral rechargeable battery and should not be disposed of in the normal household waste but taken to an appropriate recycling facility, where and when these are available
- Never throw batteries in a fire or attempt to open the outer casing.

### Moisture and water

- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

### Heat sources and flames

- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.

### Ventilation

- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**







## Safety information

**Important** - Please read these instructions fully before installing or operating

### General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do not use your Radio near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.



### Caution

To avoid possible hearing damage, do not listen to this radio at high volume levels for long periods of time. Always keep the volume within reasonable limits.



 


This page is left intentionally blank



Getting to know your Compact  
Digital Radio

2

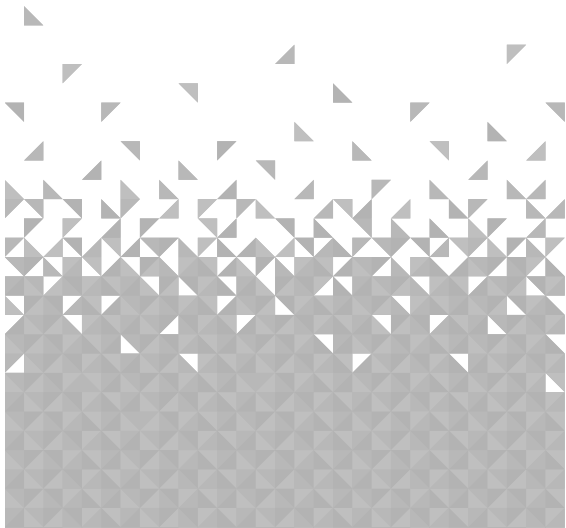



## Getting to know your Compact Digital Radio

You'll be up and running in no time

### Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.



If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



## Getting to know your Compact Digital Radio

You'll be up and running in no time

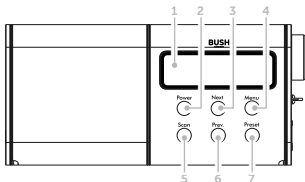 


Fig 1.

 


Fig 2.

 


Fig 3.

1. Dot matrix display
2. Press to Power on. Press and release to change the Mode (DAB/FM), Press and hold to Power off
3. Next station/Menu option
4. Menu
5. Scan
6. Previous station/Menu option
7. Preset
8. Micro USB charging socket
9. Headphone socket
10. Telescopic aerial (at rear)
11. Rotary volume control/Press to select
12. Lanyard holder
13. Lock switch

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) if you still require further assistance, call one of our experts on 0545 600 3021



## Getting to know your Compact Digital Radio

You'll be up and running in no time

### Charging the battery

1. Your Compact Digital Radio has an integral rechargeable battery. Before you use your radio for the first time, you need to charge the battery, which will take approximately 5 hours. From a full charge you will be able to listen to your radio continuously for approximately 18 hours.
2. Connect the micro USB end of the charging cable to the Micro USB socket on the left hand side of the Compact radio.
3. Plug the standard end of the charging cable into a computer or other USB charging device. The radio display will switch on, 'Welcome to Digital Radio' will be displayed and then your radio will go to Standby mode.
4. Extend the telescopic aerial, this will ensure that the maximum signal strength is available when the radio begins to scan for stations.
5. Press and release the Power button to switch on your radio and begin an automatic scan for DAB Radio stations. When the scan is complete, press and release the Menu button until the battery charge status is displayed e.g. 'Battery 25'.

---

**Note:** If the battery is completely exhausted, you will need to wait a short while after it has been on charge, before the radio will power on and you are able to check the battery status information.

---

6. When the Compact Radio battery is fully charged, 'Battery 100' will be displayed.

### Adjusting the volume

Turn the rotary volume control on the right hand side of the radio, clockwise to increase the volume and anti-clockwise to decrease the volume.

Check the display, which will confirm the volume setting.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





# Getting to know your Compact Digital Radio

You'll be up and running in no time

## Time and date

The first time you listen to DAB radio, the time and date of your product will be synchronised automatically to that broadcast by the DAB service in 24 hour mode; which is in line with daylight saving, so there is no need to set the time and date manually.

If you do wish to set the time and date manually, turn on the radio and follow the steps below:

1. Press and hold the Menu button to enter the Menu options.
2. Use the Next or Prev button to display <System>. Press and release the Volume control to select.
3. Use the Next or Prev button to display <Time>. Press and release the Volume control to select. <Set Time/Date> is displayed. Press and release the Volume control to select.
4. Set time is displayed and the hour digits will flash. Use the Next or Prev button to display the correct hour. Press and release the Volume control to select.
5. The minutes will now flash. Use the Next or Prev button to display the correct minutes. Press and release the Volume control to select.
6. Set date is displayed and the day will flash. Use the Prev and Next buttons together with the Volume control to display and select the day, month and year, using the same method as you used to set the time.

When you confirm the correct date. 'Time Saved' is displayed and the display returns to <Set Time/Date>.

You can now use the Prev and Next buttons together with the Volume control to display and then press to select, using the same method as you did to set the time and date, to change the settings for:

12/24 hour clock display. The date format, DD-MM-YYYY or MM-DD-YYYY and to auto update the time from the DAB signal, FM signal, DAB or FM signal or no update.





## Getting to know your Compact Digital Radio

You'll be up and running in no time

### Change the mode

Press and release the Power button to change between DAB and FM. Please check the display, which will confirm the mode.

### Using headphones

You can connect headphones with a 3.5mm plug (not included) to your radio. The stereo headphone socket can be found on the left hand side of the radio underneath the Micro USB charging socket. When you have headphones connected the radio speaker is switched off and all sound is via the headphones.

---

**Note:** Always keep the volume within reasonable limits.

---



If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**







This page is left intentionally blank



section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) if you still require further assistance, call one of our experts on **0345 600 3021**



 


This page is left intentionally blank



Using your Compact  
Digital Radio

3

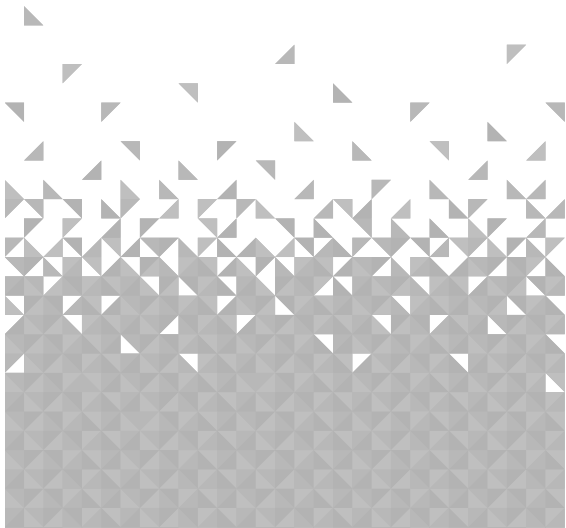



## Using your Compact Digital Radio

Let's get started

### DAB Radio mode

Check that your radio is in DAB mode. If you are not already in DAB mode, press and release the Power button to go to DAB mode (check the display).

The first time you use the radio or if the station list is empty, your radio will automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

If you were listening to a DAB station when you switched the radio off then this station will be automatically selected when you switch the radio back on.

### Telescopic aerial

Please make sure that the aerial is fully extended before you attempt to tune to a DAB station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the radio begins to scan. Extending the aerial also ensures the best possible sound quality.

### Changing DAB stations

In DAB mode:

1. Press and release the Prev or Next button to move through the available station list.
2. When the station that you would like to listen to is displayed press and release the rotary Volume control to Select. There will be a short delay whilst your radio tunes to your selected station.

### Scanning for DAB stations

With DAB radio, additional stations and services regularly become available so it's a good idea to carry out a manual scan every now and then to make sure that you have the most up to date station listing stored within the memory of your radio. If you have moved your radio to another location e.g.: if you go on holiday, then it's also a good idea to carry out a manual scan.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





# Using your Compact Digital Radio

Let's get started

If you are not already in DAB mode, press and release the Power button to go to DAB mode.

1. Press and release the Scan button to begin a search for stations. The display will change to 'Scanning...'. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

## Prune DAB stations

You can remove the DAB stations in the station list that cannot be received in your area. These are listed with a '?' prefix.

In DAB mode:

1. Press and hold the Menu button until 'DAB <Full scan>' is displayed. Use the Prev or Next button to display '<Prune>'. Press and release the rotary Volume control to Select.
2. 'Prune ? <No> Yes' is displayed. Use the Prev or Next button to move to '<Yes>'. Press the rotary Volume control to select and prune the station list. Stations with a '?' prefix will now no longer be displayed. Press and release the Menu button to return to the station display.

## Storing a DAB station preset

Your radio can store up to 10 DAB stations in its preset memories for instant access to your favourite stations.

---

**Note:** When you store DAB radio station presets, these do not overwrite your FM station presets.

---

1. Tune your radio to the station that you wish to preset (see changing DAB stations on page 20).
2. Press and hold the Preset button. 'Preset Store <1: (Empty) >' is displayed if no previous station has been stored.

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0545 600 3021





## Using your Compact Digital Radio

Let's get started

3. Use the Prev or Next button to display the Preset location that you would like to store the radio station to (1-10).
4. Press and release the rotary Volume control to select, the display will confirm 'Preset X stored', where 'X' is the number of the preset (1-10).

---

**Note:** If there is already an existing DAB station stored under a preset, it will be overwritten when you store the new station.

---

### Tune to a DAB preset station

In DAB mode:

1. Press and release the Preset button. 'Preset Recall <1: >' is displayed and the name or frequency of the station stored there, or 'Empty' if no previous station has been stored.
2. Use the Prev or Next button to display the Preset location and station that you would like to listen to (1-10). Press and release the rotary Volume control to Select. The radio will instantly tune to that station and begin to play.

---

**Note:** If no DAB station has been stored under the preset button, 'Preset Empty' will be displayed and the radio will revert to the previously selected radio station.

---

### DAB display information

When listening to a DAB station you can change the information that will appear on the second line of the display. There are several different types of information that are sent by the broadcaster.

- Dynamic Label Segment (DLS)

This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





## Using your Compact Digital Radio

Let's get started

- Signal Strength  
An empty  will appear on the second line of the display to indicate the minimum signal strength for acceptable listening. The row of solid rectangles indicate the actual signal strength that you are receiving. The stronger the signal, the further to the right the row of solid rectangles will be.
  - Program Type (PTY) - such as 'Rock', 'Pop', 'Talk' or 'News'
  - Multiplex Name - displays the broadcasting area and collection of radio stations on this frequency e.g.: BBC National DAB, Digital 1 Network.
  - Channel and Frequency  
e.g.: 12B 225.648 MHz
  - Signal error  
This is displayed as a number between 0-99. It would not be possible to satisfactorily listen to a radio station with a signal error rate of 30 or above. Try adjusting the aerial or relocating your radio to improve reception.
  - Signal information  
The data rate at which the signal is being transmitted.
  - Rechargeable battery status information  
Battery 100 indicates a full charge
  - Time and date  
Supplied by the broadcaster.
1. Repeatedly press and release the Menu button to cycle through the different information options.

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) if you still require further assistance, call one of our experts on 0545 600 3021





## Using your Compact Digital Radio

Let's get started

### Dynamic range control (DRC)

In DAB mode:

The dynamic range for each radio programme is set by the broadcaster for each radio station and may be different for the types of programme broadcast, such as pop or classical music or a chat show. The dynamic range control signal is transmitted in parallel with the audio signal for each programme and with your radio you can use this control signal to expand or compress the dynamic range (the difference between the loudest and quietest sounds) of the reproduced audio signal. Changing the dynamic range can affect the 'loudness' and/or 'quality of sound' of the programme that you hear so that it will be more suited to your listening conditions and your own personal listening requirements. e.g. in a noisy environment, where quiet sounds might be swamped, setting the compression to maximum will 'boost' the quiet sounds, whilst keeping the loudest sounds at their original level.

There are 3 levels of compression:

- DRC Off: no compression. This is the default setting.
  - DRC Low: medium compression.
  - DRC High: maximum compression.
1. Press and hold the Menu button to enter the menu options.
  2. Use the Prev or Next button to display 'DRC' and Press and release the rotary Volume control to Select. The current DRC setting will have an '\*' in the top right of the display.
  3. Use the Prev or Next button to move through the 3 compression level options available and Press and release the rotary Volume control to Select. Press and release the Menu button to return to the station display.

### FM Radio mode

If you are not already in FM mode, briefly press and release the Power button to go to FM mode (check the display). If you were listening to an FM station when you switched the Radio off then this station will be automatically selected when you switch the Radio back on.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**







# Using your Compact Digital Radio

Let's get started

## Telescopic aerial

Please make sure that the aerial is fully extended before you attempt to tune to an FM station. This will ensure that the maximum signal strength is available when the radio begins to scan. Extending the aerial also ensures the best possible sound quality.

## Tuning to an FM station

Press and release the Scan button to scan up the frequency band. Press and hold the Scan button to scan down the frequency band. Use the Prev and Next buttons to fine tune each frequency in 0.05MHz steps.

---

**Note:** If reception is still poor adjust the position of the aerial or try moving the radio to another location.

---

## Changing the Scan setting

In FM mode:

1. Press and hold the Menu button until 'FM <Scan setting>' is displayed. Press the rotary Volume control to select. The current Scan setting will have an '+' in the top right of the display.

There are two different options to choose from:

- Strong stations

The scan will only stop when a strong signal strength is received which should also result in a better audio quality. It is possible that the station you are scanning for may be missed using this option.

- All stations

The scan will stop for every station it receives, even if the signal strength is poor.

2. Use the Prev or Next button to choose from the two options available and Press and release the rotary Volume control to Select. Press and release the Menu button to return to the station display.

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) if you still require further assistance, call one of our experts on 0545 600 3021





## Using your Compact Digital Radio

Let's get started

### Audio mode

The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Stereo' and 'Mono'.

---

**Note:** You may wish to select 'Stereo' if you are listening to your radio using headphones.

---

1. Press and hold the Menu button on the front of the radio until 'FM <Scan setting>' is displayed.
2. Use the Prev or Next button to display <Audio setting>. Press and release the rotary Volume control to Select.

There are now two different options of 'Forced mono' and 'Stereo allowed' and the current setting will have an '\*' next to it.

3. Use the Prev or Next button to choose from the two options available. Press the rotary Volume control on the radio to select.
4. Press and release the Menu button to return to the station display.

### Storing an FM station preset

Your radio can store up to 10 FM stations in its preset memories for instant access to your favourite stations.

---

**Note:** When you store FM radio station presets, these do not overwrite your DAB station presets.

---

1. Tune your radio to the station that you wish to preset (see Tuning to an FM station on page 25).
2. Press and hold the Preset button. 'Preset Store <1: (Empty) >' is displayed if no previous station has been stored.
3. Use the Prev or Next button to display the Preset location that you would like to store the radio station to (1-10).

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





## Using your Compact Digital Radio

Let's get started

4. Press and release the rotary Volume control to select, the display will confirm 'Preset X stored', where 'X' is the number of the preset (1-10).

---

**Note:** If there is already an existing FM station stored under a preset, it will be overwritten when you store the new station.

---

### Tune to an FM preset station

In FM mode:

1. Press and release the Preset button. 'Preset Recall <1: >' is displayed and the name or frequency of the station stored there, or '(Empty)' if no previous station has been stored.
2. Use the Prev or Next button to display the Preset location and station that you would like to listen to (1-10). Press and release the rotary Volume control to Select. The radio will tune to that station and begin to play.

---

**Note:** If no FM station has been stored under the preset button, 'Preset Empty' will be displayed and the radio will revert to the previously selected radio station.

---

### FM display information

When listening to an FM station you can change the information that will appear on the second line of the display.

- Radiotext (RT)  
This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.
- Program Type (PTY)  
Such as 'Rock', 'Pop', 'Talk' or 'News'
- Station name or frequency  
Such as BBC R4 or 93.30MHz

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) if you still require further assistance, call one of our experts on 0545 600 3021





## Using your Compact Digital Radio

Let's get started

- Audio mode  
Stereo or Mono
  - Rechargeable battery status information  
Battery 100 indicates a full charge
  - Time and date  
Supplied by the broadcaster.
1. Repeatedly press and release the Menu button to cycle through the different information options.

### Sleep timer

You can set your radio to turn off automatically using the sleep timer. You can choose from Sleep off, 15, 30, 45, 60 and 90 minutes.

In DAB or FM mode:

1. Press and release the rotary Volume control to enter the Sleep timer options.
2. Use the Prev or Next button to move through the available options. Stop when the sleep time you would like is displayed and Press and release the rotary Volume control to Select.
3. The sleep time minutes that you have selected will be displayed on the top right of the display e.g. S15, and will countdown until the radio switches off.

---

**Note:** To cancel the sleep time, follow the steps to set the sleep time but stop when 'Sleep off' is displayed.

---

### Display backlight timeout

You can adjust the display backlight timeout. Options of permanently On, 10, 20, 30, 45, 60, 90, 120, and 180 seconds are available.

---

**Note:** An '\*' will be displayed next to the current setting.

---

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





# Using your Compact Digital Radio

Let's get started

In DAB or FM mode:

1. Press and hold the Menu button to enter the menu options.
2. Use the Prev or Next button to display '<System>'. Press and release the rotary Volume control to Select.
3. Use the Prev or Next button to display '<Backlight>'. Press and release the rotary Volume control to Select.
4. '<Timeout>' is displayed. Press and release the rotary Volume control to Select. Use the Prev or Next button to move through the available backlight timeout options of On, 10, 20, 30, 45, 60, 90, 120 or 180 seconds. Press and release the rotary Volume control to select.
5. Press and release the Menu button to return to the station display.

## Display language

You can change the display language of your radio, there are 4 options available; English, French, German and Italian.

---

**Note:** An '\*' will be displayed next to the current setting.

---

In DAB or FM mode:

1. Press and hold the Menu button to enter the menu options
2. Use the Prev or Next button to display '<System>'. Press and release the rotary Volume control to Select.
3. Use the Prev or Next button to display '<Language>'. Press and release the rotary Volume control to Select.
4. Use the Prev or Next button to move to the language you would like. Press and release the rotary Volume control to Select.
5. Press and release the Menu button to return to the station display.

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) if you still require further assistance, call one of our experts on 0545 600 3021





## Using your Compact Digital Radio

Let's get started

### Software version

You can check the software version of your radio.

In DAB or FM mode:

1. Press and hold the Menu button to enter the menu options
2. Use the Prev or Next button to display '<System>'. Press and release the rotary Volume control to Select.
3. Use the Prev or Next button to display '<SW Version>'. Press and release the rotary Volume control to Select.

The software version will be displayed and you may wish to make a note of it here:

.....

4. Press and release the Menu button to return to the station display.

### Factory reset

You can reset your radio and restore all of the original factory settings.

---

**Note:** If you reset your radio all of your stored station presets will be deleted.

---

In DAB or FM mode:

1. Press and hold the Menu button to enter the menu options
2. Use the Prev or Next button to display '<System>'. Press and release the rotary Volume control to Select.
3. Use the Prev or Next button to display '<Factory reset>'. Press and release the rotary Volume control to Select.
4. 'Factory Reset? <No> Yes' will be displayed. Use the Prev or Next button to move to '<Yes>'. Press and release the rotary Volume control to Select.
5. 'Restarting...' is displayed, followed by 'Welcome to Digital Radio'.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





This page is left intentionally blank



section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) if you still require further assistance, call one of our experts on **0345 600 3021**





This page is left intentionally blank

 






**Other information**

4

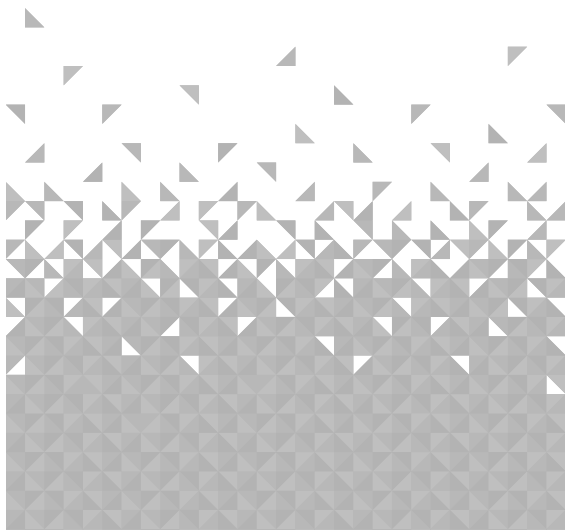



## Other information

Helpful technical information

### Technical specification

Micro USB charging socket:	Input DC 5 V 1 A
Headphone socket:	3.5mm
Audio output:	1 x 3W RMS
Frequency range:	DAB: Band III, 174 MHz to 240 MHz FM: 87.5 MHz to 108 MHz
Rechargeable Lithium battery:	3.7V 1800 mAh



If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



This page is left intentionally blank



 


This page is left intentionally blank



**Product support**

5

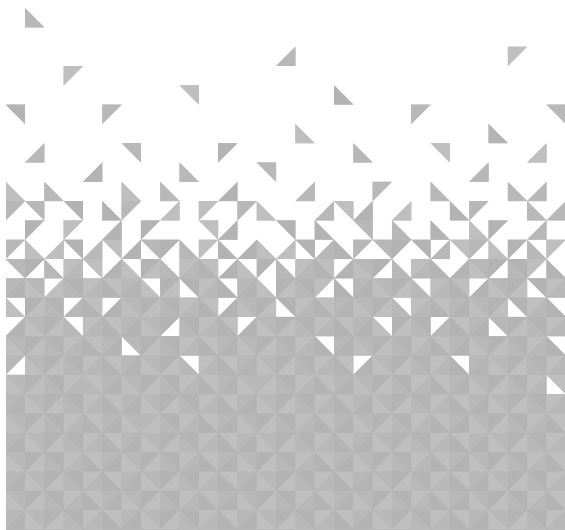



## Product support

Help is always at hand

### Troubleshooting

If you are experiencing problems with your radio, there are some quick and easy checks that you can do, which may help to solve the problem.

#### No sound / power:

Adjust the volume using the rotary control on your radio.

You may have headphones connected. Either use the headphones to listen to your radio or unplug the headphones.

The rechargeable battery may be exhausted, please recharge the battery, see page 14.

#### Radio reception is poor:

Fully extend the aerial to get the best reception and sound quality.

Retune for radio stations, see pages 20 and 25.

Try moving your radio to another location to see if reception improves.

Check that you do not have other electrical equipment too close to your Radio, causing interference.

The rechargeable battery may be exhausted, please recharge the battery, see page 14.

Visit [www.digitalradionow.com](http://www.digitalradionow.com) for information about DAB reception in your area.

#### The function buttons do not respond:

The rechargeable battery may be exhausted, please recharge the battery, see page 14.

Try a reset to factory defaults. See page 30.

---

**Note:** All of your settings, including the radio station list and any presets will be deleted when you reset the Radio.

---

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





## Product support

Help is always at hand

### Help and assistance

If you require any technical guidance or find that your Compact Digital Radio is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 600 3021\***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Serial number

Date of purchase

This will be shown on your receipt

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and  
10am-4pm Sunday.

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on **0345 600 3021**





## Product support

Help is always at hand

### Disposal



- This product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk)
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing



If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**







This page is left intentionally blank



section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) if you still require further assistance, call one of our experts on **0345 600 3021**





## Product support

Help is always at hand

# BUSH

### Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

[www.bushregistration.co.uk](http://www.bushregistration.co.uk)

FREEPHONE\*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

### Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

#### The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

### Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Awebury Blvd - Milton Keynes - MK9 2NW

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





This page is left intentionally blank



# BUSH

Contact:

[www.argos-support.co.uk](http://www.argos-support.co.uk)

Helpline: 0345 600 3021

 DAB Digital  
**Radio**