

BUSH

Instruction manual DAB-623





You'll soon be enjoying your new BUSH DAB Radio Boombox.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your DAB Radio Boombox. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Contents

1 Safety information

safety information	6
--------------------	---

2 Getting to know your DAB Radio Boombox

Ready?Let's begin	10
Accessories	10
Connection	12
Power supply	13
System setting	14
Headphone Jack	15
Auxiliary Input	15

3 Using your DAB Radio Boombox

Listen to music CD Disc	18
Repeat 1 / Repeat all	19
Random playback setting	19
To program specific tracks	19
To repeat programmed tracks	20
Listen to the FM radio	21
Listen to the DAB radio	22
Storing FM or DAB station	23
Selecting pre-set FM or DAB stations	24
General munal setting	25
Care for CDs	26

Contents

4 Other information

Technical specification 24

5 Product support

Troubleshooting 26

Help and assistance 27


Disposal 28

Guarantee 29

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Safety information

 1

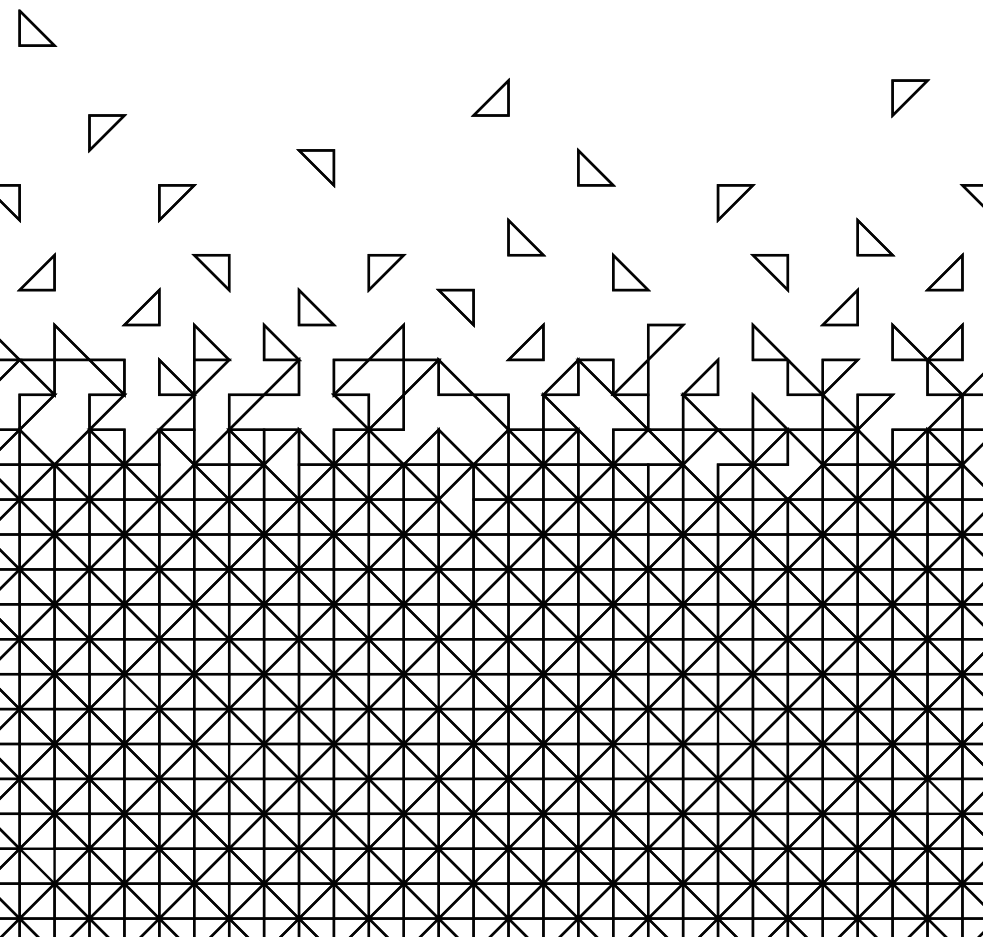



Safety information

Important - Please read these instructions fully before installing or operating

Your unit should be treated with care. The information below has been provided in the interest of safety and will help you to enjoy this product and the benefits it brings for many years.

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry
- Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- Do NOT block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product
- Do NOT store in dusty or dirty areas.
- Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do NOT use your unit near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

- If the unit will not be used for a long period of time, make sure that all of the batteries are removed from the battery compartment.
- Do NOT use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.

WARNING:



To prevent possible hearing damage, do not listen to this unit at high volume levels for long periods of time.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Please read these instructions fully before installing or operating




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of "uninsulated dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons



If any items are missing or damaged, contact your nearest Argos store for a replacement. Have your receipt ready when you call. Retain the packaging. If you dispose of it, do so having regards to any recycling regulations in your area.

Getting to know your DAB Radio Boombox

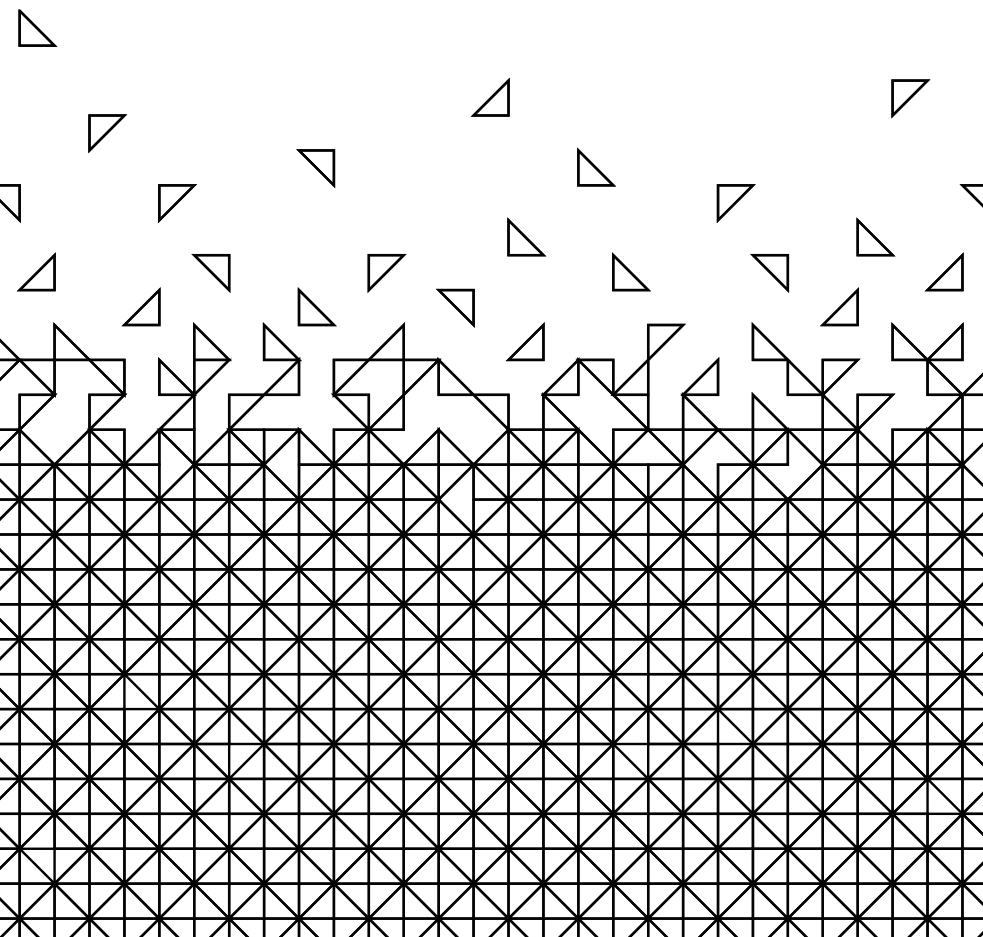

Getting to know your DAB Radio Boombox

You'll be up and running in no time

 
Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.


If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Accessories

1. AC power cord
2. Instruction manual

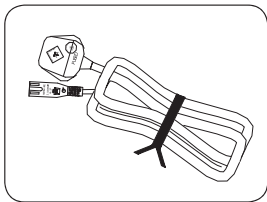

Accessory

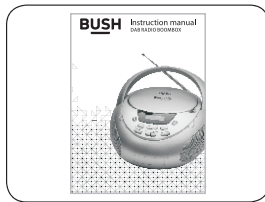 

Accessory

Fig 1.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your DAB Radio Boombox

You'll be up and running in no time

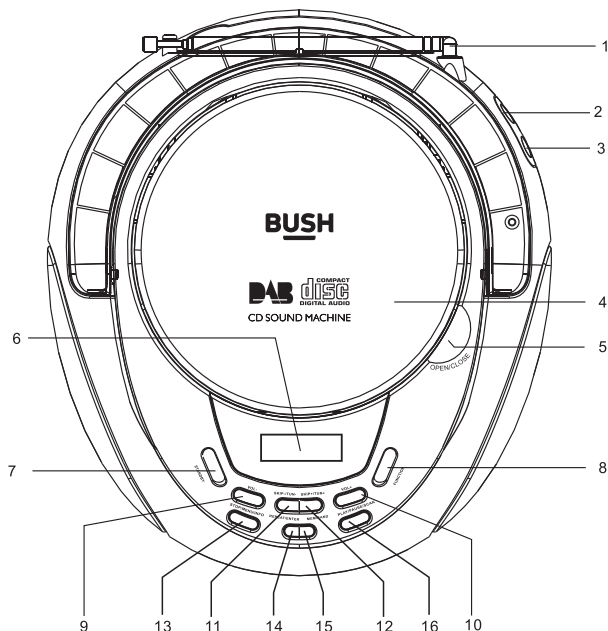 


Fig 2.

Controls:

- | | |
|---------------------------------------|----------------------------|
| 1. FM Antenna | 9. VOL- Button |
| 2. Earphone Jack | 10. VOL+ Button |
| 3. AUX-IN Jack | 11. SKIP-/TUN- Button |
| 4. CD Compartment | 12. SKIP+/TUN+ Button |
| 5. CD Open /Close | 13. STOP/MENU/INFO Button |
| 6. LCD Display | 14. REPEAT/ENTER Button |
| 7. STANDBY Button | 15. MEM/RAND Button |
| 8. FUNCTION Switch
(CD/AUX/DAB/FM) | 16. PLAY/PAUSE/SCAN Button |

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your DAB Radio Boombox

You'll be up and running in no time

Connection

Please consider carefully where your boombox will be situated and make sure that it is:

- on a flat and stable surface
- within a power socket
- where you can fully extend the wire radio aerial
- at least 1 metre away from other electrical appliances to avoid interference.

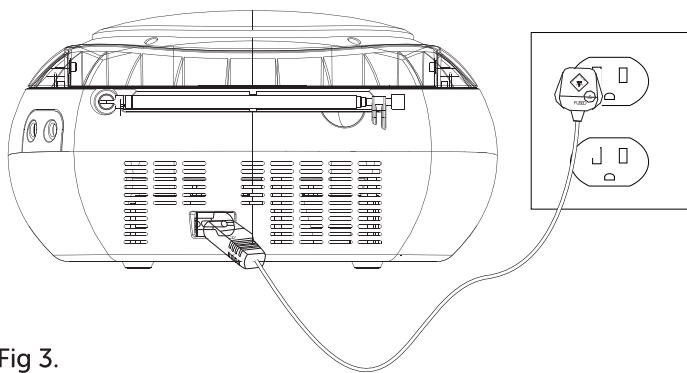


Fig 3.

1. Unwind the power cable from the back of the boombox.
2. Extend the wire radio aerial. A vertical position is recommended for maximum signal strength.
3. Plug the mains power plug into the mains power wall socket and switch on (Fig3) .

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your DAB Radio Boombox

You'll be up and running in no time

POWER SUPPLY

USING AC

Before use, check that the rated voltage of your unit matches your local voltage.

Note: Plug is used as the disconnect device.

The disconnect device shall remain readily operable.

USING BATTERIES

Disconnect the AC power cord from the AC inlet of the unit. Battery power is cut automatically by the cord while it is connected.

When the volume decrease, or the sound distorts, replace all of the batteries with new ones.

Insert 6 x 1.5V (R14/UM2/C) batteries.

Attention should be drawn to be the environmental aspects of battery disposal. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION! The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

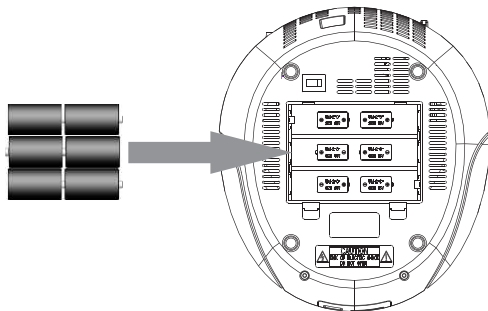 


Fig 4.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your DAB Radio Boombox

You'll be up and running in no time

System setting when FM/DAB/AUX mode:

1. Press and hold MENU button, you can press SKP-/ + buttons to select Scan setting / Audio setting / System.
2. Press SKP-/ + buttons and press ENTER button to select System setting.
3. Press SKP-/ + buttons and press ENTER button to select Equaliser setting (from Rock / Speech / My EQ / Normal / Classic / Pop / Jazz), press ENTER button to confirm current operation.
4. Press SKP-/ + buttons and press ENTER button to select Backlight setting (from Timeout / On level / Dim level), press ENTER button to confirm current operation.
5. Press SKP-/ + buttons and press ENTER button to select Language setting (from English / Francais / Deutsch / Italiano), press ENTER button to confirm current operation.
6. Press SKP-/ + buttons and press ENTER button to select Factory Reset setting (YES or NO), press ENTER button to confirm current operation.
7. Press SKP-/ + buttons and press ENTER button to select Software Upgrade setting (YES or NO), press ENTER button to confirm current operation.
8. Press SKP-/ + buttons and press ENTER button to select SW version to show version name.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your DAB Radio Boombox

You'll be up and running in no time

Listen to music / radio through headphones or earphones

There is a headphone jack next to the AUX jack. Insert the headphone/earphone plug of headphone or earphone into this jack and enjoy music or the radio in private.

Play other audio devices through our set


You can enjoy the music of a digital MP3 player, computer or any other external audio device (with a 3.5mm stereo jack) through the set.

1. Insert an audio cable (not included) with 3.5mm plug on each end into the HEADPHONES jack or LINE OUT jack of your MP3 player or computer, and the other end into the AUX-IN jack of the set. This cable is available in any electronic store.
2. Connect the supplied AC power cord or batteries.
3. Press the FUNCTION switch to select AUX (Auxiliary Input) mode.
4. Turn on your MP3 player or computer, adjust the VOLUME control of the MP3 player/computer and the set to the desired level.
5. Press STANDBY button to standby mode.



Using your DAB Radio Boombox

3

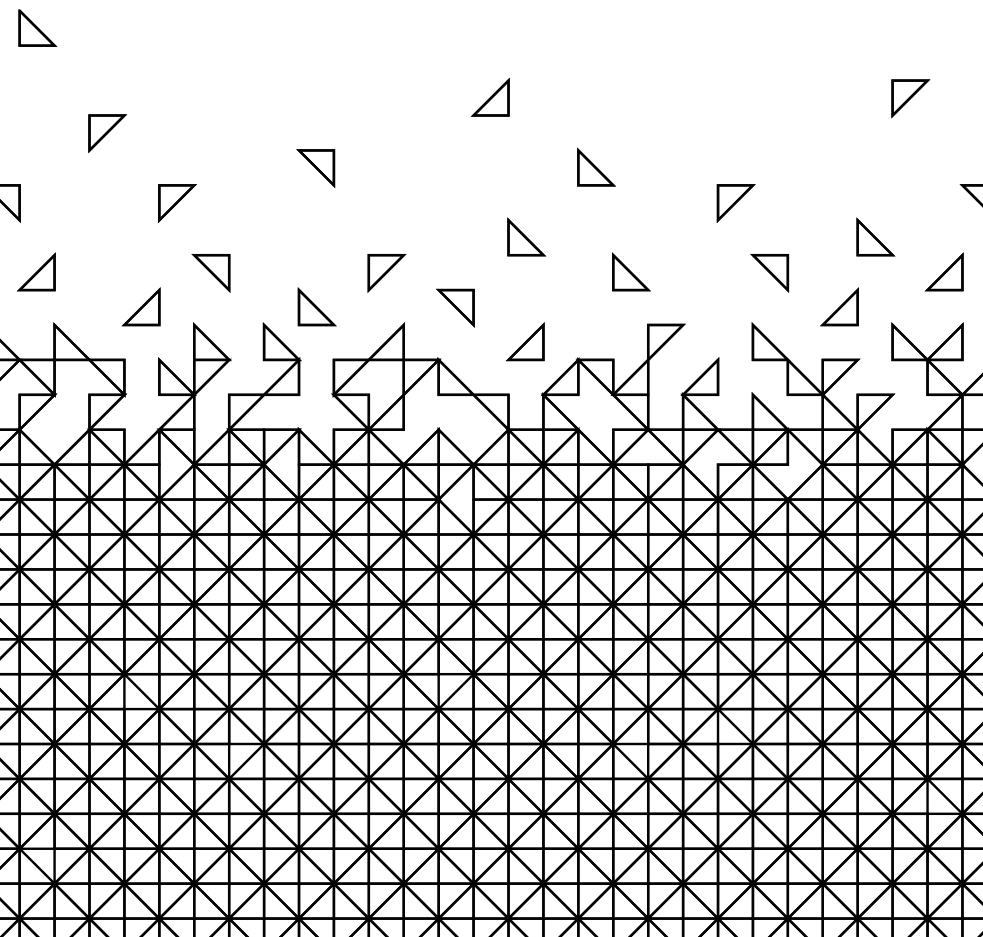

Using your DAB Radio Boombox

Let's get started

OPERATION

Listening to Music CD Disc

1. Insert the main plug into a main supply power outlet.
2. Press Function switch to CD mode, "CD" will show on the LCD display.
3. To open the CD door by lifting the Open/Close area near the CD door. Insert disc into the disc compartment with the title side upwards.
4. The total playing track number will show on the LCD display, press the PLAY/PAUSE button to play the CD disc.
5. Press SKIP+ button or SKIP- button to jump to next or previous track.
6. Press and hold SKIP+ button or SKIP- button to search rapidly within a track to locate a specific passage.
7. During CD play, press the PLAY/PAUSE button to pause CD playing and press again to resume.
8. Press the STOP button to stop the CD playing, and total number of track will show on the LCD display.
9. After all tracks have been played, the CD player will stop automatically, and total number of track will also show on the LCD display.

NOTES:

Do not open the CD compartment while the disc is playing or rotating.

This unit can play Music CD Disc format.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your DAB Radio Boombox

Let's get started

REPEAT 1/ REPEAT ALL

1. During CD playback, press SKIP FORWARD button / SKIP BACKWARD button to select a track you wish to repeat.
2. Press the REPEAT button a first time, you can see "REPEAT ONE" showed on the display for a short time, unit will play the desired track repeatedly.
3. To cancel the setting, press the REPEAT button until the "REPEAT OFF" appear on the LCD display.
4. During CD playback, press REPEAT button continuously until the "REPEAT ALL" appear on the LCD display. The unit will play all the tracks on the disc **repeatedly**.
5. To cancel the setting, press the REPEAT button continuously until the "REPEAT OFF" appear on the LCD display.

Random Playback setting

1. Press RAND button until "Random On" appear on the display, Press the RAND button again to play CD music in randomly.
2. Press RAND button until "Random Off" appear on the display, Press the RAND button again to **cancel** playing CD music in randomly.

To Program Specific Tracks (up to 20 Tracks)

1. Load the CD you wish to program.
2. Press STOP button to make sure the CD is in stop mode.
3. Press the MEM button once, "P01" will show on the LCD display.
4. Press the SKIP- button / SKIP+ button until the desired track number is reached.
5. Press the MEM button to store the selection.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105.

Using your DAB Radio Boombox

Let's get started

6. Press the MEM button again, to browse the programmed tracks. Press the MEM button once time to choose **program** position and you can revised the programmed track or **program** new track.
7. Repeat (4) & (5) steps until you have entered all the tracks.
8. After all memory tracks have been played, the CD player will stop automatically.

To Repeat Programmed tracks

1. During program play, press REPEAT button once will repeat the specifically programmed track.
2. Press REPEAT button again will repeat all the programmed tracks, "REPEAT ALL" show on the display.
3. Press REPEAT button until "REPEAT OFF" show on the LCD display, it will cancel repeat play on programmed tracks.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your DAB Radio Boombox

Let's get started

Listening to the FM Radio

1. Insert the main plug into a main supply power outlet.
2. Press the Function switch to select FM radio position, "FM" will show on the LCD display.
3. Press the TUN-/+ buttons to change the frequency in 0.05MHz steps. Press and hold the TUN- button to scan forward FM frequency, press and hold the TUN+ button to scan backward FM frequency.
4. Press SCAN button to start the channel search. The radio stops if a station signal is received.
5. Press the VOL- or VOL+ button to the desire volume sound.
6. Press INFO button to change the type of information show on the display (frequency/audio status/time/date).
7. Press STANDBY button to turn off radio mode and unit in STANDBY mode.

To obtain the best FM reception, fully extend the FM antenna. Avoid close proximity to the speakers and other electrical appliance.

Using your DAB Radio Boombox

Let's get started

Listening to the DAB Radio

1. Insert the main plug into a main supply power outlet. And fully extend the telescopic antenna.
2. Short press the STANDBY button to Function selection.
3. Press the Function switch to select DAB radio position, "DAB" will show on the LCD display. When the radio is switched on for the first time, it will automatically do a full scan of DAB station.
4. Press the TUN-/+ buttons in DAB mode to navigate available DAB stations.
5. In order to make new DAB station, Press SCAN button to start a full scan of DAB channels to search for available stations.
6. Press the VOL- or VOL+ button to the desire volume sound.
7. Press INFO button to change the type of information show on the display (frequency /date).
8. Press STANDBY button to turn off radio mode and unit in STANDBY mode.

Noe: If there is no DAB reception at any time, change the position of the unit or adjust the antenna. Press SCAN button to start a new search.

Using your DAB Radio Boombox

Let's get started

Storing FM or DAB stations

You can store up to 10 pre-set FM stations or DAB stations.

1. Select a FM or DAB station.
2. Press and hold the MEM button, "Preset Store" will show on the LCD display.
3. Press SKIP-/+ buttons to select the preset position, then press ENTER button to save the station to the desired preset.
4. Repeat steps 1-3 to store more FM or DAB station.

NOTE: This unit can store 10 stations for FM and 10 stations for DAB.

Selecting pre-set FM or DAB stations

1. When unit in FM or DAB mode, press MEM button, "Preset Recall" will appear on the LCD display.
2. Press the SKIP-/+ buttons to navigate through the preset FM or DAB stations, and press ENTER button to recall the current preset station.

Using your DAB Radio Boombox

Let's get started

GENERAL MANUAL SETTING

FM mode:

1. Press and hold MENU button, you can press SKP-/ + buttons to select Scan setting / Audio setting / System.
2. Press SKP-/ + buttons and press ENTER button to select Scan setting from All stations or Strong stations only and press ENTER to confirm setting.
3. Press SKP-/ + buttons and press ENTER button to select Audio setting from Stereo allowed or Force mono and press ENTER to confirm setting.

DAB mode:

1. Press and hold MENU button, you can press SKP-/ + buttons to select Full scan / Manual tune / DRC / Prune / System setting.
2. Press SKP-/ + buttons and press ENTER button to select Full scan setting.
3. Press SKP-/ + buttons and press ENTER button to select Manual tune the DAB station.
4. Press SKP-/ + buttons and press ENTER button to select DRC (Dynamic range compression) , Press SKP-/ + buttons and press ENTER button to select high or low or off status. This function reduces the difference between the loudest and quietest audio being broadcast. Effectively, this makes quiet sounds comparatively louder, and loud sounds comparatively quieter.
NOTE: DRC only works if it is enabled by the broadcaster for a specific station.
5. Press SKP-/ + buttons and press ENTER button to select whether Prune station (yes or no).

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105.

Using your DAB Radio Boombox

Let's get started

Remove a CD

- (1) Lift up the lid of the CD player on the front edge, where is a scooped recess.
- (2) Put your thumb on the central spindle and put your fingers under the outside edge of the CD and lift off and remove the CD from the compartment.
- (3) Close the lid of the CD player.

Using your DAB Radio Boombox

Let's get started


Caring for CDs

- (1) Do NOT touch the playback side of the CD.
- (2) Do NOT attach paper or tape or any other material to the disc.
- (3) Fingerprints and dust on the disc will cause sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.
- (4) If dust or marks cannot be removed with a soft cloth, wipe the disc lightly with a slightly damp soft cloth and then wipe with a soft dry cloth.
- (5) Do NOT use any type of solvent, commercially available cleaners or antistatic spray for vinyl as it may damage the disc.
- (6) Do NOT store discs in places subject to direct sunlight or near a heat source.
- (7) Do NOT store discs in a place subject to moisture or dust, such as a bathroom or near a humidifier.
- (8) Always store discs vertically in a case, stacking or placing objects on discs may cause warping.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Other information

4

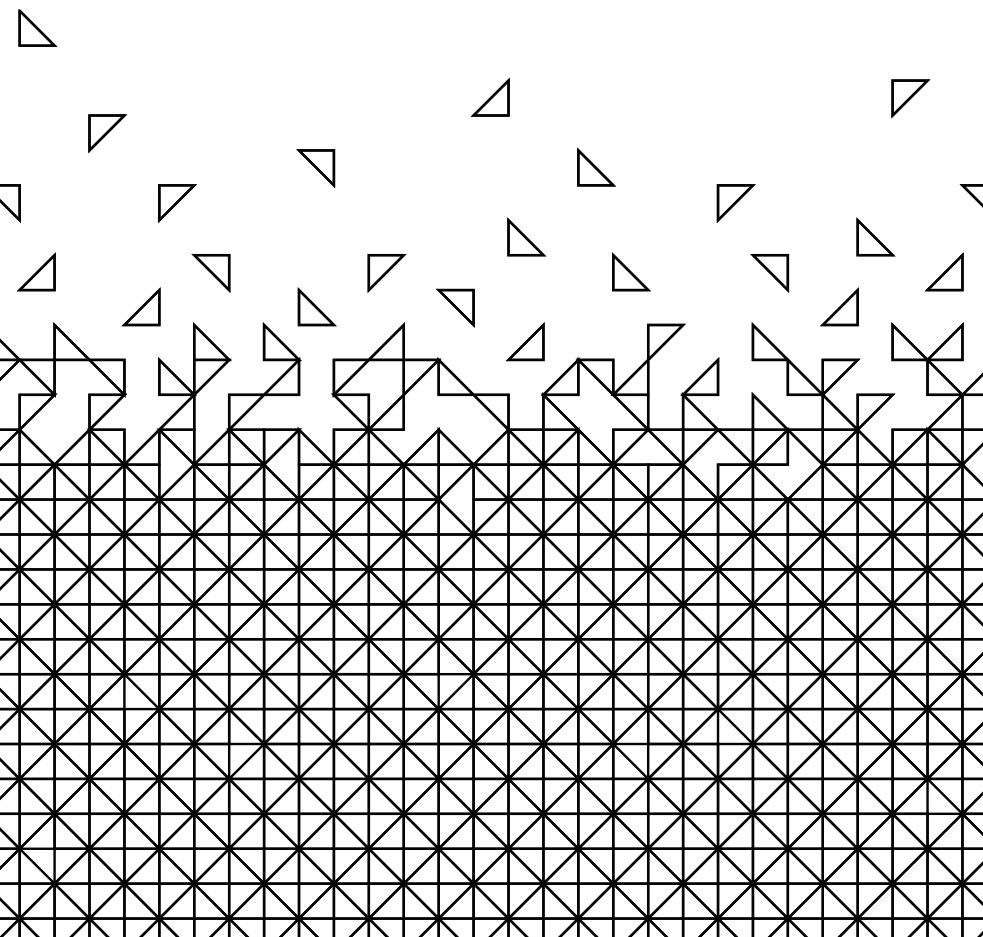

Other information

Helpful technical information

Specification

DAB: 174.928- 239.2MHz

FM: 88–108MHz

 
Power source: AC 230V~ 50Hz, DC: 9V

Dimensions: 23.8x21.5x11 CM

Weight: 1.09 KGS

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support 5

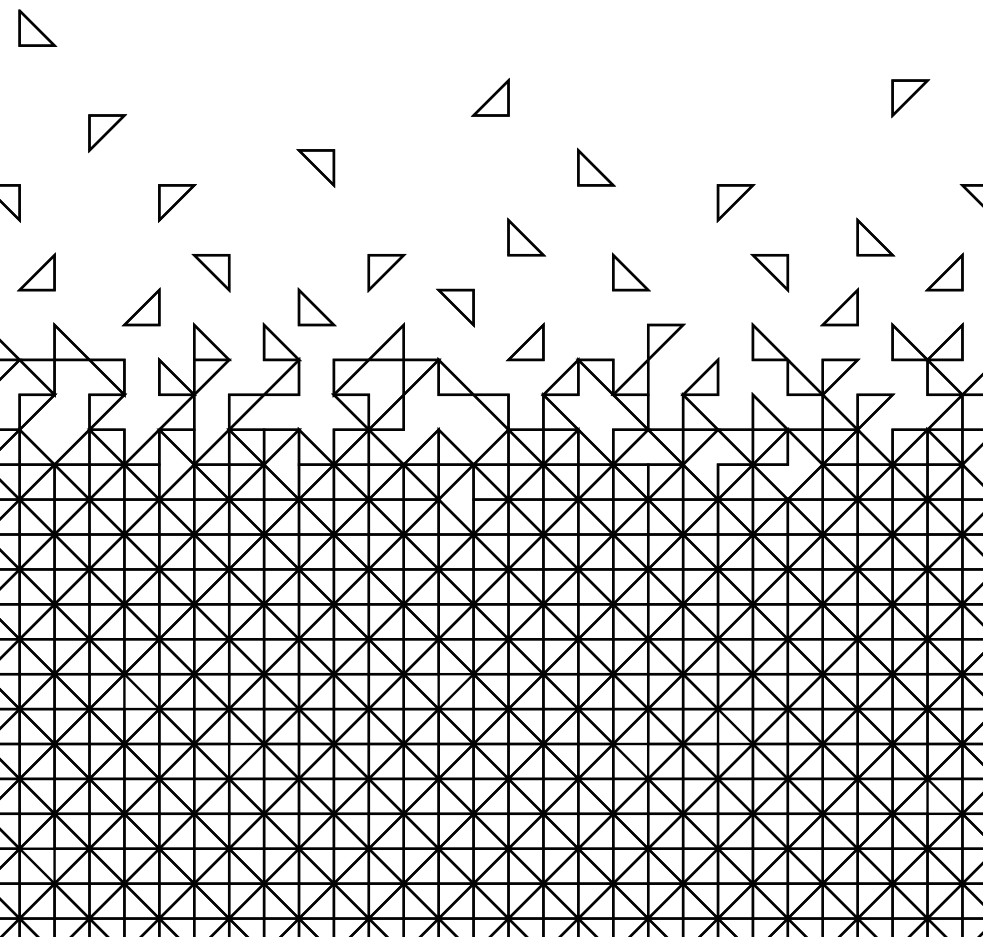

Product support

Help is always at hand

Troubleshooting

CD does not play

- (1) Check that you are in CD mode. If you are not already in CD mode, press STANDBY button to function select status, then press the FUNCTION button to select CD mode.
- (2) When unit in CD mode, you can see the total number of the tracks, please press PLAY/PAUSE button to play the CD disc.
- (3) Take out the CD and check that it is not marked or scatched. Damaged CDs cannot be played in the CD boombox or may skip or not roate correctly in the CD compartment.
- (4) Please check that you are using an original audio CD and not a copy. Often copied CDs will not play.

The function buttons do not respond.

- (1) Check that mains power wall socket is switched on.
- (2) Check that power cord plug inserted into the AC socket of the unit fully.
- (3) Check that you are trying to use the function buttons for the mode that you are in.
- (4) If you are using batteries, they may be exhausted and need to be replaced.
- (5) If you are using mains power, unplug the mains unplug the mains power. Leave the boombox for 3 minutes and then reconnect the power.

Product support

Help is always at hand

Troubleshooting

Radio reception is poor.

- (1) Check that you have extended the wire radio aerial in a vertical position.
- (2) Press SCAN button or TUN+/- button to tune radio station.
- (3) Check there are no other electrical appliances within 1 metre of your boombox, which may be causing interference.
- (4) Try moving your boombox to another location.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Bluetooth CD Boombox is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105** . To help give you a fast and efficient service please have the following information ready:

Model Ref.

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Serial number

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Product support

Help is always at hand

Disposal

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.





Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year.

*Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.

- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House
17 Leicester Street, Bedworth, Warwickshire, CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW
section of these instructions, or online at www.argos-support.co.uk
If you still require further assistance, call one of our experts on **0345 604 0105**.

BUSH



Contact:

www.argos-support.co.uk

Helpline: 0345 604 0105