

BUSH

Instruction Manual

NE-6451



You'll soon be enjoying your new DAB/ FM/ Internet Radio.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your DAB/ FM/ Internet Radio. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH

Contents

1 Safety information

Safety information	6
--------------------	---

2 Getting to know your DAB/ FM/ Internet Radio

Ready? Let's begin	10
Product Overview	10
Connecting to the Mains Supply	12
Battery Replacement for the Remote Control	12
Remote Control Operation Range	13
Network Connection	13

3 Using your DAB/ FM/ Internet Radio

GETTING STARTED	16
System Settings	17
Internet Radio	20
Music Player Operation	22
USB Operation	23
DAB Operation	24
FM Operation	25
Bluetooth® Operation	26
AUX operation	27
Sleep Setting	27
Setting the Alarm	28
Headphone Jack	29

 
4 Other information

Specifications	32
----------------	----

5 Product support

Troubleshooting	35
Help and assistance	37
Disposal	38
Guarantee	39

Safety information 1

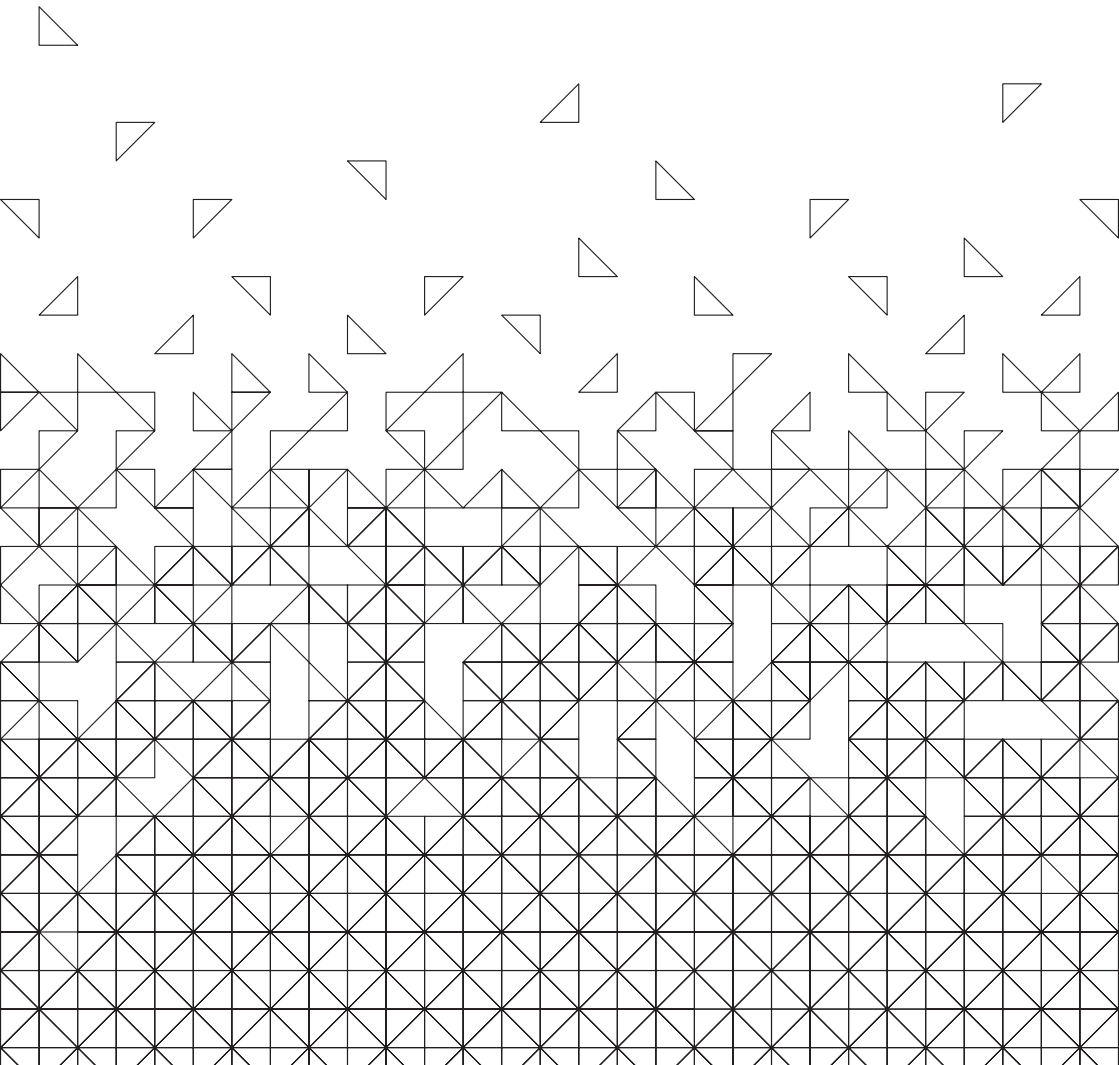



Safety information

Important - Please read these instructions fully before installing or operating

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference. Check that the voltage marked on the rating label matches your mains voltage.
- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires. Avoid exposure to direct sunlight and other sources of heat.
- Never place any type of candle or naked flame on the top of or near the unit.
- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.
- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure that a minimum of 10cm should be kept around the unit for ventilation.

Safety

- Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.
- This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.



Safety information

Important - Please read these instructions fully before installing or operating

Mains Adapter

Make sure the unit is not resting on top of the mains cable, as the weight of the unit may damage the cable and create a safety hazard.

If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Interference

Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted sound.

Supervision

Children should be supervised to ensure that they do not play with the unit.

Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Service/Maintenance

To reduce the risk of electric shock, do not remove screws. The unit does not contain any user serviceable parts. Please leave all maintenance work to qualified personnel.

Do not open any fixed covers as this may expose dangerous voltages.

Ensure to unplug the unit from the mains socket before cleaning.

Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.

Do not use liquids to clean the unit.



 
To prevent possible hearing damage, do not listen at high volume levels for long periods.

Fully understand user manual before use.

Ensure your player at low volume levels or power off before you leaving.

Getting to know your DAB/ FM/ Internet Radio

2

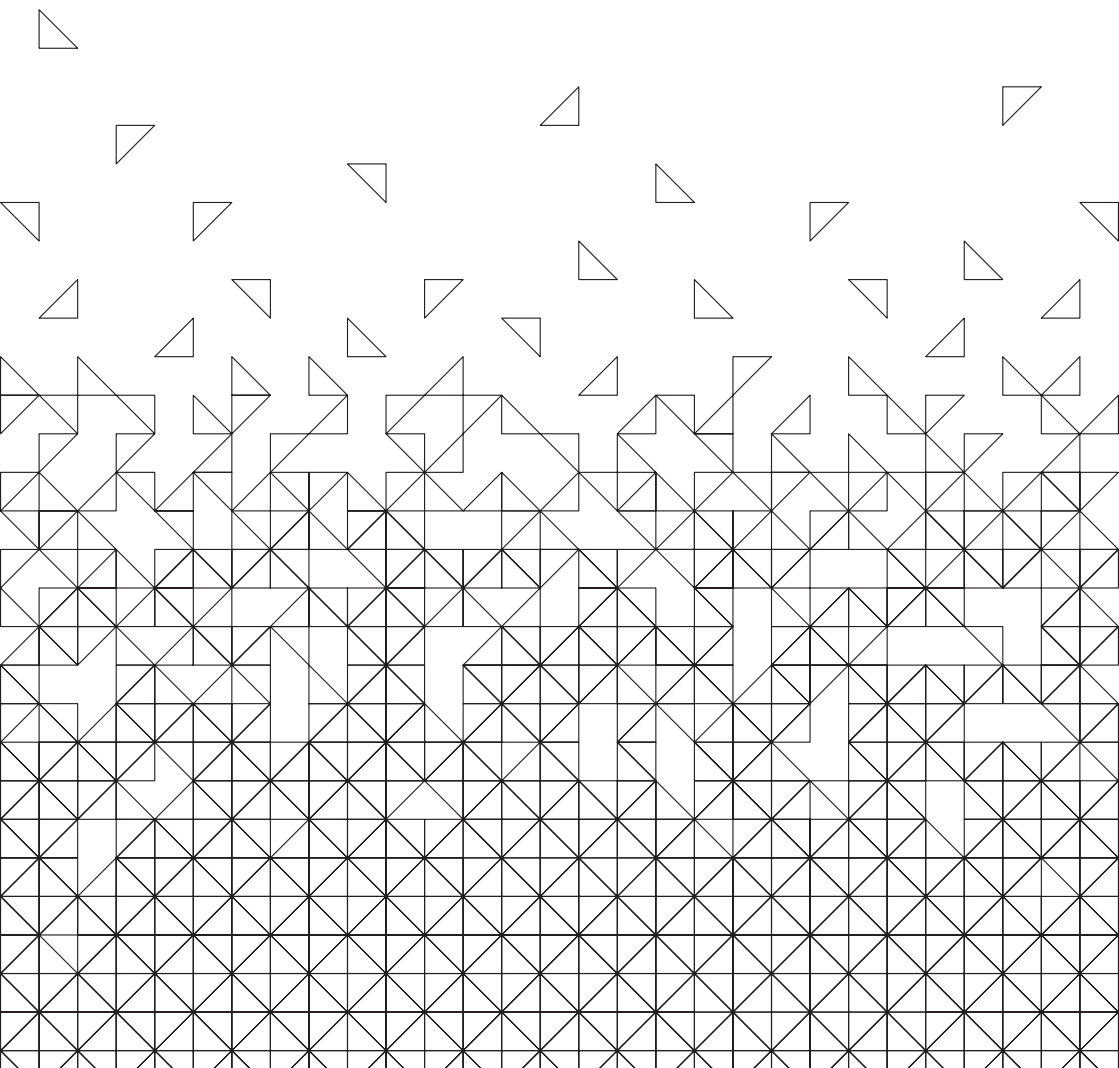

Getting to know your DAB/ FM/ Internet Radio

 
You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation. If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Product Overview

front view

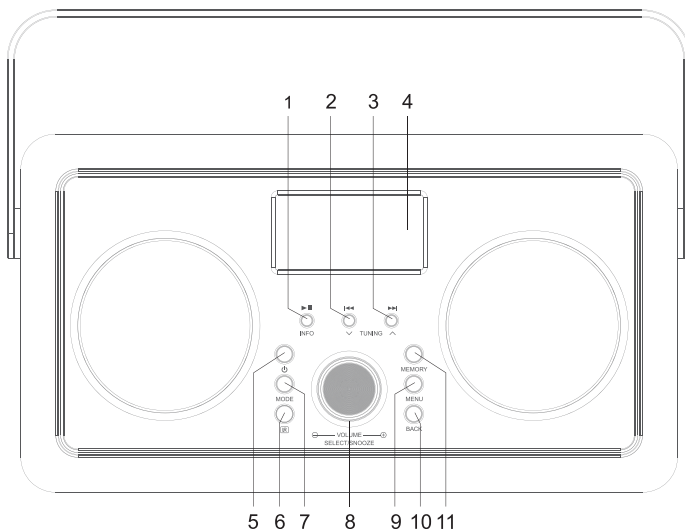


- | | |
|--------------------------------|--|
| 1. INFO / ► Button | 7. MODE Button |
| 2. TUNING ∨ / ◀◀ Button | 8. VOLUME +/- Dial/ SELECT/SNOOZE Button |
| 3. TUNING ∧ / ▶▶ Button | 9. MENU Button |
| 4. Display | 10. BACK Button |
| 5. STANDBY ⏻ Button | 11. MEMORY Button |
| 6. Remote Control Sensor | |

Getting to know your DAB/ FM/ Internet Radio

You'll be up and running in no time

 
rear view

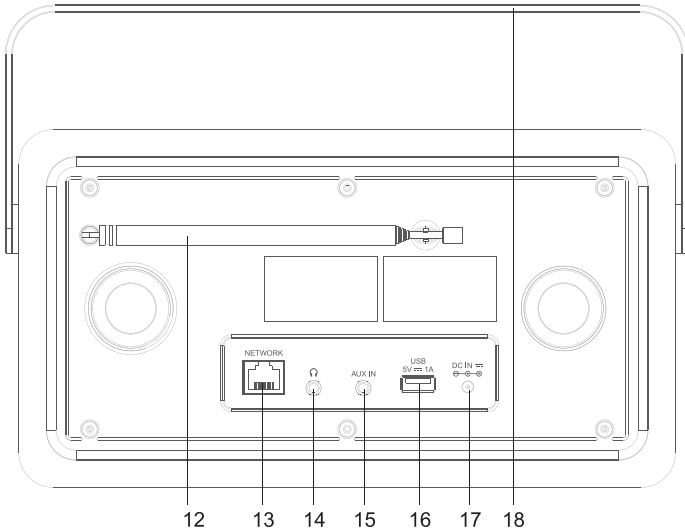

12. Antenna 13. NETWORK port 14. Headphone Jack 15. AUDIO IN Socket
16. USB 5V 1A Charging Port 17. DC Input Jack 18. HANDLE

remote control

- | | |
|---------------------|---------------------|
| 1. STANDBY Button | 13. SLEEP Button |
| 2. INFO Button | 14. MODE Button |
| 3. MENU Button | 15. MEMORY Button |
| 4. ▲ Button | 16. BACK Button |
| 5. ◀ Button | 17. ▶ Button |
| 6. SELECT Button | 18. VOLUME + Button |
| 7. VOLUME - Button | 19. TUNING ^ Button |
| 8. ▼ Button | 20. Button |
| 9. TUNING v Button | 21. MUTE Button |
| 10. Button | 22. EQ Button |
| 11. Button | 23. SNOOZE Button |
| 12. MONO/ST. Button | 24. ALARM Button |

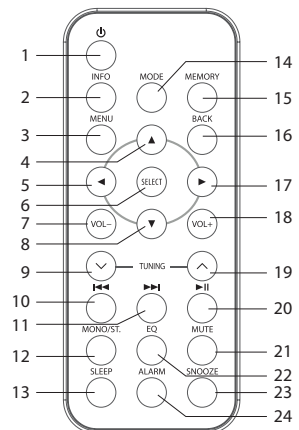 


Getting to know your DAB/ FM/ Internet Radio

You'll be up and running in no time

Connecting to the Mains Supply

 Before using, connect the supplied power cable to the mains cable socket at the rear of the unit and to the mains socket.

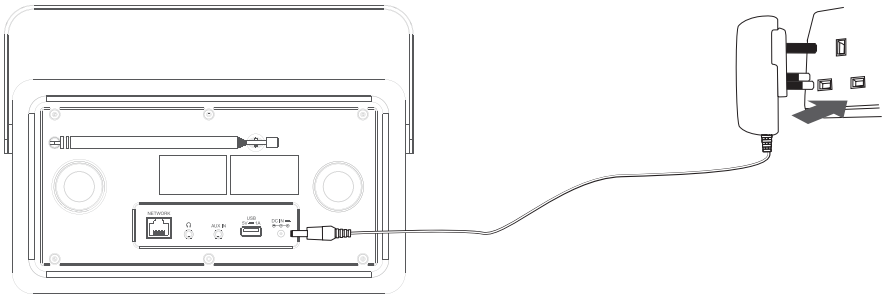


Remarks: If the adapter voltage is more than 6v, it can cause damage to the unit.

battery replacement for the remote control

Move in to position and then the battery compartment will be able to be pulled down, and slide the cover off to open the compartment. Place the CR2025 battery in the remote control according to polarity markings ("+" and "-") inside the compartment and on the battery.

 Place the cover into the compartment, press down lightly, and push it inside until it snaps on.

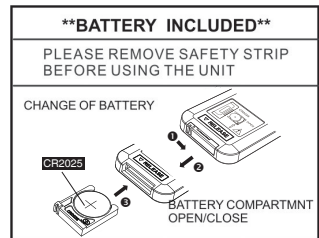

Handling the Battery

 
- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- Do not dispose of the used battery as domestic waste. Dispose of it in accordance with local regulations.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.

Getting to know your DAB/ FM/ Internet Radio

You'll be up and running in no time

remote control operation range

- The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 4 metres away and within a maximum of 60° arc.
- Please note that the operating distance may vary depending on the brightness of the room.

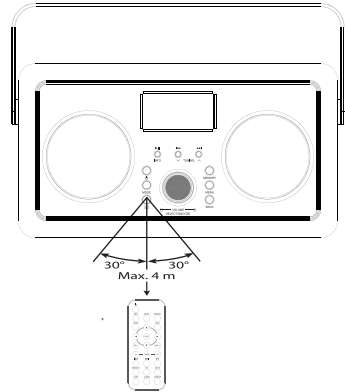

Network Connection

Wired network

1. Check first of all whether the status lights (LINK/ACT) of your LAN connection or your router light up.
2. Connect the **NETWORK** socket on the unit to the corresponding port on your Router using a commercially available Ethernet cable.
3. Proceed with the operations described in the below "**GETTING STARTED**". It is not necessary to run through the setup wizard.
4. Using a wired network provides a better performance than a wireless connection because the attached devices connect directly to the network and are not subject to radio frequency interference.

Wireless network

 
1. Check first of all whether the status lights (LINK/ACT) of your LAN connection or your router light up.
2. Proceed with the operations described in the below "**GETTING STARTED**". It is highly recommended to run through the setup wizard in the System Settings section.



This unit cannot be connected to a standalone modem directly. A router or a modem incorporated with a router has to be used. Since there are various connection configurations, please follow the specifications and instructions of your telecommunication carrier, Internet service provider, and router setting guidebook.

Using your DAB/ FM/ Internet Radio

3

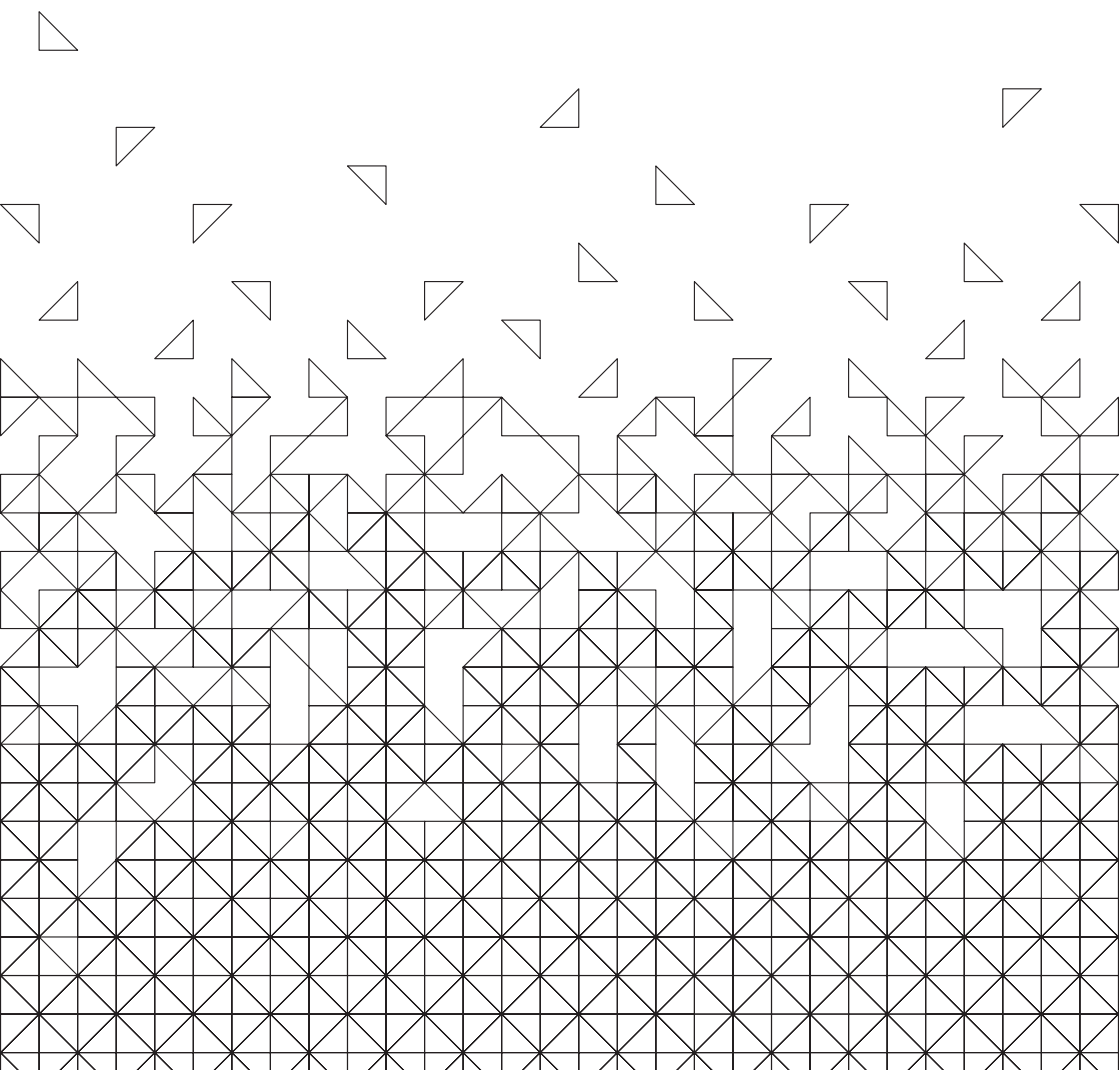



Using your DAB/ FM/ Internet Radio

Let's get started

GETTING STARTED

Powering ON/OFF

When you first connect the unit to the mains socket, the unit will be in **STANDBY** mode after showing "Welcome to Internet Radio STARTING..." (F.1)(F.2)

1. Press the **Standby**  button on the unit or remote control to switch the unit on.
2. Press the **Standby**  button on the unit or remote control to switch the unit back to standby on mode.

(F.1)



(F.2)



Selecting Modes

Press the **MODE** button repeatedly on the unit or remote control to switch between Music player, DAB radio, FM radio, Bluetooth Audio, AUX in and Internet radio modes.



When the unit is idle for approximately 15 minutes, it will automatically switch to standby. To switch the unit off completely, remove the mains plug from the main socket. Please turn the unit off completely to save energy when not in use.

Adjusting the Volume

- Turn the **VOLUME +/-** dial on the unit or press the **VOL +/-** buttons on the remote control to adjust the volume.
- If you wish to turn the sound off, press the **MUTE** button on the remote control. Press the **MUTE** button again or press the **VOL +/-** buttons on the remote control or turn the **VOLUME +/-** dial to resume normal listening.

Navigating the Menu

1. Press the **MENU** button on the unit or press the **MENU** button on the remote control to access the menu.
2. Turn the **Volume +/-** dial on the unit or press the **▲ / ▼** buttons on the remote to select your choice.
3. Press the **SELECT/SNOOZE** button on the unit or press the **SELECT** button on the remote control to confirm your selection.



This instruction manual explains the basic instruction for operating this unit. Unless otherwise stated, all operations described are based on remote control use.

Using your DAB/ FM/ Internet Radio

Let's get started

System Settings

Press the **MENU** button to display the menu, press the **▲ / ▼** buttons to select **Main menu** and then press the **SELECT** button to confirm. Press the **▲ / ▼** buttons to select **System settings** and then press the **SELECT** button to confirm.

Equaliser

This system supports a variety of equalizers and sound effects.

- Press the **EQ** button to access Equaliser menu

Alternatively,

- During System settings mode, press the **▲ / ▼** buttons to select **Equaliser** and then press the **SELECT** button to confirm.

1. The display will show : **FLAT > CLASSIC > ROCK > POP > JAZZ**
2. Press the **▲ / ▼** buttons to select and then press the **SELECT** button to confirm.

Network

1. During **System Settings** mode, press the **▲ / ▼** buttons to select **Network** and press the **SELECT** button to confirm.
2. Press the **▲ / ▼** buttons to select from the following settings, and then press the **SELECT** button to confirm.

Network wizard	SSID – select the desire wireless network. Rescan – Scan for available networks. Wired – select wired network. Manual config – select wired/wireless network with DHCP enable/disable.
PBC Wlan setup	Select PBC on the unit and press the PBC button on the modem device that you wish to connect with. Press the ENTER button to continue.
View settings	Display the setting on the unit.
Wlan region	Select a country of your choice.
Manual settings	Select wired/wireless network with DHCP enable/disable.
Network profile	View the connected network.
Clear network settings	To delete the connected network memory in Network profile.

3. Press the **BACK** button on the unit or on the remote control to cancel the setting and return back to the previous menu.

Time/Date

Using your DAB/ FM/ Internet Radio

Let's get started

The Time/Date can be automatically set once it has been connected to the Internet, DAB+ or FM radio station with time/date information. You may also adjust the Time/Date manually

- During **System settings** mode, press the **▲ / ▼** buttons to select **Time/Date** and press the **SELECT** button to confirm. Press the **▲ / ▼** buttons to select **Set Time/Date** and press the **SELECT** button to confirm.

1. The date digits will flash on the display.
2. Press the **▲ / ▼** buttons to adjust the day and then press the **SELECT** button to confirm.
3. Repeat above Step (2) to set the Month/Year/Hour/Minute.
4. The date and time settings are now complete.

For the other settings under Time/Date, press the **▲ / ▼** buttons to select from the following options and then press the **SELECT** button to confirm.

Auto update	Update from DAB / FM / Network.
Set format	12 / 24 hour format.
Set timezone	Select a time zone. (Only available when Auto update from Network is on.)
Daylight savings	Select daylight savings. (Only available when Auto update from Network is on.)



The default auto time update setting is "Update from Network". If you would like to manually set the time, it is recommended to turn the Auto update function off.

Inactive Standby

Use the Inactive Standby to turn off the unit after a certain time in play mode.

1. Whilst in the System Settings Menu, press the **▲ / ▼** buttons to select **Inactive Standby** and then press the **SELECT** button to confirm.
2. The display will show : **Off > 2 hours > 4 hours > 5 hours > 6 hours**
3. Press the **▲ / ▼** buttons to select.
4. press the **SELECT** button to confirm.

Language

1. Whilst in the System Settings Menu, press the **▲ / ▼** buttons to select **Language** and then press the **SELECT** button to confirm.
2. Press the **▲ / ▼** buttons to change the display language of your choice.
3. Press the **SELECT** button to confirm.

Factory Reset

There may be times when you need to reset your unit back to the factory settings especially when

Using your DAB/ FM/ Internet Radio

Let's get started

you have moved house. If you experience reception problems you may want to reset and try again. If you move to another part of the country and pick up the local and national DAB+ stations in that area, your previously tuned channels may no longer be available.

1. During System settings mode, press the ▲ / ▼ buttons to select "**Factory reset**", and press the **SELECT** button to confirm.
2. Press the ▲ / ▼ buttons to select **Yes**, and press the **SELECT** button to confirm or select **No** to cancel.



After the system reset, all the tuned stations, DAB & FM preset stations will be erased.

Software update

1. During **System settings** mode, press the ▲ / ▼ buttons to select **Software update** and then press the **SELECT** button to confirm.
2. Press the ▲ / ▼ buttons to select **Auto-check setting** or **Check now**, and then press the **SELECT** button to confirm.



Before downloading software, ensure that the radio is plugged into a stable mains power connection. Interrupting the mains supply during software download can lead to functional disturbances and/or damage to the unit!

Software upgrade

A new update is released from time to time for the radio. If the radio is connected to the internet you will automatically receive notification that a new update is available for installation. If you have deactivated automatic updates. You can also use this menu item to check manually for updates. To this end select the entry. Check (System settings>Software Upgrade). The radio then checks the update server for a new update. If an update server is available, the radio requests confirmation that it should install the update.



It is recommended to leave the 'Auto-check setting' setting activated as an update often contains improvements and bugs fixes that are necessary for the smooth operation of the radio. In addition, the functionality of the radio is often extended, which can further improve the convenience of using the radio.

Setup wizard

The setup wizard is available in the system settings section; you can run through this to configure settings for date/time and network. Once this has finished, your radio is ready to use.



It is not necessary to run through the setup wizard if a wired network is being used.

Using your DAB/ FM/ Internet Radio

Let's get started

Info

1. During **System settings** mode, press the ▲ / ▼ buttons to select **Info** and then press the **SELECT** button to confirm.
2. The software version and Radio ID will show on the display.

Backlight

1. During **System settings** mode, press the ▲ / ▼ buttons to select **Backlight** and then press the **SELECT** button to confirm.
2. For the other settings under **Backlight**, press the ▲ / ▼ buttons to select the following options and then press the **SELECT** button to confirm.

Timeout	On / 10 sec / 20 sec / 30 sec / 45 sec / 60 sec / 90 sec / 120 sec / 180 sec
On level	High / Medium / Low

Internet Radio

This radio can play thousands of radio stations and podcasts from all over the world via a broadband internet connection. When Internet Radio mode is selected, the radio connects with the Frontier Silicon Internet radio portal to download a list of stations. Once a station is selected, the radio will connect directly to that station.

Press the **MODE** button repeatedly to select internet radio mode. (F.3)
During Internet Radio mode, press the **MENU** button on the remote control to access the menu. You can choose between: **Last listened**, **Station list**, **System settings** and **Main menu**.
Press the ▲ / ▼ buttons to select and press the **SELECT** button to confirm.

(F.3)



Last listened

1. Press the ▲ / ▼ buttons to select the history of stations that you have listened to before.
2. Press the **SELECT** button to confirm.

Station list

Press the ▲ / ▼ buttons to select from the following options, and then press the **SELECT** button to confirm.

Using your DAB/ FM/ Internet Radio

Let's get started

<p>My Favourites</p>	<ul style="list-style-type: none"> • Favourites are stored in the Internet radio portal and are available to all Internet radios that are registered with the same account. You must register the radio in the Internet radio portal before making use of the favourites. • To register your radio with the portal (www.wifiradio-frontier.com). To obtain an account by entering: Access code, Email address, password and Wi-Fi radio model (Radio ID). Access code can be found from "Station list > Help > Get access code". Radio ID can be found from "System settings > Info > Radio ID" • To store a favourite station, press and hold the SELECT button until the display shows "Favourite added". The station will then be saved in the list of favourites.
<p>Local "Country"</p>	<p>You can search specifically for stations from your country. Within this scope, you can further limit your search according to genres, or display all station</p>
<p>Stations</p>	<ul style="list-style-type: none"> • Select stations from various categories in the menu: Location, Genre, Popular Stations, New Stations. • You can also search stations using various keywords. • The name and a description of your selected station will show on the display. • Press the INFO button repeatedly to view further information for the station. Information displayed cycles through name/description, genre/ location, reliability, bitrate/codec/sampling rate, playback buffer and current date.
<p>Podcasts</p>	<ul style="list-style-type: none"> • Select podcasts from the categories in the Podcast menu: Location, Genre. • You can also select a particular episode by entering keywords to search podcasts.
<p>My added stations</p>	<p>Even though the Internet radio portal contains thousands of stations, you may want to listen to stations not listed. You can add your own stations via the portal (www.wifiradio-frontier.com). These added stations are accessible by selecting "Station list > My added stations > [Station]"</p>
<p>Help</p>	<p>Select Get access code to obtain the code in order to register the radio with the portal (www.wifiradio-frontier.com), or to add this radio to an existing account.</p>

Using your DAB/ FM/ Internet Radio

Let's get started

Preset Stations

The preset Internet radio stations are stored in the radio and cannot be accessed from other radios.

1. To store an Internet radio preset, press and hold the **MEMORY** button until the display shows the "Save to Preset".
2. Select one of the 10 presets to store the current station by press the **▲ / ▼** buttons to select the number and press the **SELECT** button to confirm.

Recalling a Stored Station

1. To select a preset, press the **MEMORY** button, and then press the **▲ / ▼** buttons to select one of the listed preset stations.
2. Press the **SELECT** button to confirm the selection.



Operation of Preset and Recall stations are same for **Internet Radio, DAB and FM**.

Music Player Operation



This function is for more advanced users.

The built-in Music Player allows you to play unprotected audio files (AAC, MP3, WMA, FLAC) stored on a networked computer. To play music from the computer, you must setup a shared file or media library on the computer. Press the **MODE** button repeatedly to select **Music Player** mode.

Media Sharing

Please ensure that your computer is available on the network, and that your computer is set up to allow sharing your media folders or files. Check how to setup a folder for sharing from your computer's instruction manual.

1. During **Music Player** mode, press the **▲ / ▼** buttons to select **Shared media** and press the **SELECT** button to scan for all the available shared media folders or files.
2. The display will show all found media folders from the network. Press the **▲ / ▼** buttons to select the computer that you wish to connect to.
3. The unit will search for all shared media from the computer.
4. Press the **▲ / ▼** buttons and select your desire shared media, and then press the **SELECT** button.
5. This unit cannot access your computer, until your computer allows it to.
6. Press the **SELECT** button to start playback of the desired track.

Using your DAB/ FM/ Internet Radio

Let's get started

Button	Function
▶	Press to pause playback or resume normal playback.
◀◀	Press to skip to the previous track. Press and hold to fast rewind the current track.
▶▶	Press to skip to the next track. Press and hold to fast forward the current track.

Repeat Mode

During **Music Player** mode, press the ▲ / ▼ buttons to select **Repeat play** and press the **SELECT** button repeatedly to turn repeat play on/off.

Shuffle Mode

During **Music Player** mode, press the ▲ / ▼ buttons to select **Shuffle play** and press the **SELECT** button repeatedly to turn shuffle play on/off.

Prune servers

1. During **Music Player** mode, press the ▲ / ▼ buttons to select **Prune servers** and press the **SELECT** button to confirm.
2. Press the ▲ / ▼ buttons to select **YES** to remove servers that are no longer available. Press the **SELECT** button to confirm. Or select **NO** to cancel.

USB Operation

 
- When a USB device is connected to the unit, the display shows "USB disk attached – Open folder?" (F.5), and then press the **SELECT** button to confirm **YES**.

Alternatively,

- During **Music Player** mode, press the ▲ / ▼ buttons to select **USB playback** and press the **SELECT** button to confirm.

1. Press the ▲ / ▼ buttons to select and press the **SELECT** button to confirm a MP3/WMA file.

(F.5)

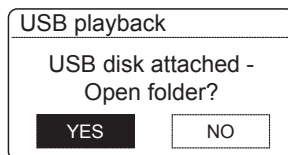

Button	Function
▶	Press to pause playback or resume normal playback
◀◀	Press to skip to the previous track. Press and hold to fast rewind the current track.
▶▶	Press to skip to the next track. Press and hold to fast forward the current track.

Using your DAB/ FM/ Internet Radio

Let's get started



The unit can only play MP3 and WMA file formats in USB operation.
This unit supports USB version 1.1 and 2.0.
The unit can support USB devices with up to 32GB of memory.
The unit may not be compatible with all USB devices; this is not an indication of a problem with the unit.
The unit can support FAT32

Repeat Playback

During **Music Player** mode, press the **▲ / ▼** buttons to select **Repeat play** and press the **SELECT** button repeatedly to turn repeat play on/off.

Charge Your External Device

You can charge your external device through the USB socket on this unit with a USB cable (not supplied).



- The maximum current for USB charging is 1A.
- All devices for USB charging are not guaranteed.
- The USB charging is only active during power **ON** mode, it is not supported when unit is at **STANDBY** mode.

 
DAB Operation

Press the **MODE** button repeatedly to select "**DAB radio**". (F.6) The unit will enter **DAB** mode and perform the auto scan function. During the scan the display will show "**Scanning...**" together with a progress bar that indicates the progress of the scan and the amount of stations that have been found so far. (F.7) Once the scan has finished, the unit will select the first alpha numerically found station. To explore the found stations, press the **▲ / ▼** buttons to select and press the **SELECT** button to confirm.

(F.6)



(F.7)

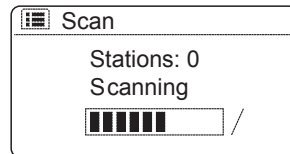

Station List

1. During **DAB** mode, press the **MENU** button to access **DAB** menu.
2. Press the **▲ / ▼** buttons to select "**Station List**" and then press the **SELECT** button to confirm.
3. A list of DAB+ stations will show on the display.

Using your DAB/ FM/ Internet Radio

Let's get started

Auto Scan

- Press the **MENU** button, and then press the **▲ / ▼** buttons to select **Scan**. Press the **SELECT** button to confirm.
- 1. The display will show "**Scanning...**" and a progress slide bar.
- 2. All the stations that have been found will be stored automatically. To explore and listen to the found stations, press the **▲ / ▼** buttons to select and then press the **SELECT** button to confirm.

Manual Tuning

As well as the auto tune function, you can manually tune the receiver. This can help you when aligning your aerial or when adding stations that were missed while auto tuning.

1. Press **MENU** on the remote control to display the menu.
2. Press the **▲ / ▼** buttons to select "**Manual tune**", and press the **SELECT** button to confirm.
3. The display will show the multiplex 5A to 13F.
4. Press the **▲ / ▼** buttons to select the channel, and press the **SELECT** button to confirm.

DAB Display Modes

Every time you press the **INFO** button on the remote control or press and hold the **INFO** button on the unit, the display will show the following display modes: **DLS – Programme Type – Ensemble/ Frequency – Signal error/Strength – Bit rate/Codec/Channels – Date**

Prune Invalid

You may remove all unavailable stations from the list.

1. During **DAB** mode, press the **MENU** button and press the **▲ / ▼** buttons to select **Prune invalid** and then press **SELECT** button to confirm.
2. Press the **▲ / ▼** buttons to select **YES** and press the **SELECT** button to confirm. Or select **NO** to cancel.

DRC (Dynamic Range Compression)

If you are listening to music with high dynamic range in a noisy environment, you may wish to compress the audio dynamic range.

1. During **DAB** mode, press the **MENU** button and press the **▲ / ▼** buttons to select **DRC** and press the **SELECT** button to confirm.
2. Press the **▲ / ▼** buttons to select **DRC high/low/off** and press the **SELECT** button to confirm the setting.

Station Order

You may wish to arrange the station listing order.

1. During **DAB** mode, press the **MENU** button and press the **▲ / ▼** buttons to select **Station Order** and press the **SELECT** button to confirm.
2. Press the **▲ / ▼** buttons to select **Alphanumeric/Ensemble/Valid** order and press the **SELECT** button to confirm the setting.

Using your DAB/ FM/ Internet Radio

Let's get started

FM Operation

Switching from DAB to FM Mode

To switch the unit to **FM** mode, press the **MODE** button repeatedly to switch to **FM** mode.(F.8) The display will show the frequency.

(F.8)



Auto Scan

- Press and hold the **TUNING** \wedge \vee buttons to start searching for a station.



The search may not stop at a station with a very weak signal

Manual Tuning

To search for **FM** stations manually, press the **TUNING** \wedge \vee buttons repeatedly until your desired frequency is reached.



With FM radio, it may be necessary to fine tune each station by pressing the **TUNING** \wedge \vee buttons repeatedly. Each press will adjust the frequency by 0.05 MHz. If reception is still poor, adjust the position of the aerial or try moving the radio to another location.

Scan Setting

1. Press the **MENU** button to access **FM** menu.
2. Press the \blacktriangle / \blacktriangledown buttons to select **Scan setting** and then press the **SELECT** button to confirm.
3. Press the \blacktriangle / \blacktriangledown buttons to select **Yes** to receive **Strong stations** only and then press the **SELECT** button to confirm.

Audio Setting

1. Press the **MONO/ST.** button on the remote control to toggle between the Stereo or Mono selection.

Alternatively,

1. Press the **MENU** button to access the main menu.
2. Press the \blacktriangle / \blacktriangledown buttons to select **Audio setting** and press the **SELECT** button to confirm.
3. Press the \blacktriangle / \blacktriangledown buttons to select **YES** to listen in Mono only or **NO** to let the unit select Stereo or Mono automatically.
4. Press the **SELECT** button to confirm.

Using your DAB/ FM/ Internet Radio

Let's get started

Bluetooth® Operation

The unit has a Bluetooth function that can receive a signal within 8 metres.

Pairing the unit with a Bluetooth device to listen to music:

1. Press **MODE** and select the option **BT**.  is flashing on the display.
2. Activate the Bluetooth® function on the playback device.
3. Pair your playback device with **BT SpeakerN**.
4.  stops flashing, when the devices are connected.
5. Now you can start the playback on the Bluetooth® music device.
6. To disconnect the Bluetooth® function, switch to another function on the unit or disable the bluetooth function from your Bluetooth device.



1. The operational range between the unit and the device is approximately 8 metres.
2. If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.
3. For better signal reception, remove any obstacles between the unit and the Bluetooth device.
4. This unit supports A2DP (Advanced Audio Distribution Profile) and AVRCP (Audio Video remote Control Profile) functions. This can only be paired with one Bluetooth device at one time.
5. Compatibility with all devices and media types is not guaranteed.
6. Some mobile phones with the Bluetooth function may connect and disconnect as you make and end calls. This is not an indication of a problem with your unit.
7. If the unit without connect Bluetooth device, it automatically turns to Standby mode after 15 minutes.

AUX operation

There is an "AUDIO IN" socket located at the front of the unit. Analogue audio sound signals from other sources can be input to the unit through this socket.

1. Connect the audio input to another audio device via an AUX cable (not included) with an "AUDIO IN" socket.
2. Press the **MODE** button repeatedly to select AUX in mode.
3. Turn the **VOLUME +/-** dial on the unit or press the **VOL +/-** buttons on the remote control to adjust the volume control for your desired sound output level.
4. In AUX mode, operate your audio device directly for playback features.



When connecting the external audio device, refer to the owner's manual of the external device.

Using your DAB/ FM/ Internet Radio

Let's get started

Sleep Setting

This function allows you to program the unit to turn to standby mode by itself after a set period of time.

1. To activate the sleep function, press the **SLEEP** button repeatedly. The time will change in the below sequence on every press:

→ Sleep OFF → 15MINS → 30MINS → 45MINS → 60MINS →

2. When your desired sleep time appears in the display, stop pressing the button and the sleep function will be activated in two seconds. "⌚" will show on the display. Also the time remaining until switch off is displayed next to the symbol in the display.
3. When the sleep timer counts down to zero, the unit will turn to standby mode. To turn the sleep function off while the sleep timer is still counting down, press the **SLEEP** button repeatedly to select "SLEEP OFF". "⌚" will disappear from the display.
4. Press the **SLEEP** button once to show the sleep timer status on the display when it is turned on.



Alternatively,

1. Press the **MENU** button on the remote control to display the function main menu. Press the **▲ / ▼** buttons to select Main menu, and then press the **SELECT** button to confirm.
2. Press the **▲ / ▼** buttons to select Sleep mode, and then press the **SELECT** button to confirm.
3. Press the **▲ / ▼** buttons to select sleep timer, and then press the **SELECT** button to confirm.

Setting the Alarm

1. Press the **ALARM** button on the remote control, the display shows "Alarm (1 or 2): Off [hh:mm]".
2. Press the **▲ / ▼** buttons to select the Alarm number (1 or 2) and then press the **SELECT** button to start the setting of the following parameters.

For the following setting, press the **▲ / ▼** buttons to select then press the **SELECT** button to confirm.

Enable	Off/ Daily/ Once/ Weekends/ Weekdays
Time	(Alarm On time)
Mode	Buzzer/ Internet radio/ DAB/ FM
Preset	Last Listened/ (Preset station)
Volume	Muted, 1-31
Save	Save and confirm the alarm setting

Using your DAB/ FM/ Internet Radio

Let's get started

Finally, select "Save" and press the **SELECT** button to save the alarm setting. When the alarm is set, the alarm icon will appear on the display during standby mode.

To turn off the alarm when it sounds, press the **STANDBY**  or **ALARM** button. During Standby mode, press the **ALARM** button repeatedly to turn the saved Alarm on/off.

Cancelling the Alarm

1. Press the **ALARM** button on the remote control, the display shows "Alarm (1 or 2): On [hh:mm]".
2. Press the **▲ / ▼** buttons to select the Alarm number (1 or 2) and then press **SELECT** to start the setting of the timer.
3. Press the **▲ / ▼** buttons to select "Enable" then press the **SELECT** button to confirm.
4. Press the **▲ / ▼** buttons to select "Off" then press the **SELECT** button to confirm.
5. Finally, select "Save" and press the **SELECT** button to save the setting.



If no button is pressed within approx. 15 seconds, the unit exits timer setting mode automatically.

Headphone Jack

A 3.5mm type headphone jack is located at the back of the unit. Connect a set of stereo headphones (not included) to this jack for private listening without disturbing others. The speakers are automatically disconnected when the headphones are in use.



When using headphones always set the volume to a low level before you put the headphones on. Then insert the headphones and gradually increase the volume to a comfortable listening level.



Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using earphones, especially for extended periods of time.

 
ECO-Power Mode

This unit features an ECO-Power/Standby mode. It automatically turns to Standby mode after 15 minutes if the unit is idle in Bluetooth or USB mode or left in AUX in mode and without any user operation for three hours.



- To switch the unit off completely, remove the mains plug from the mains socket.
- To save energy, turn the unit off completely when not in use.

Other information 4

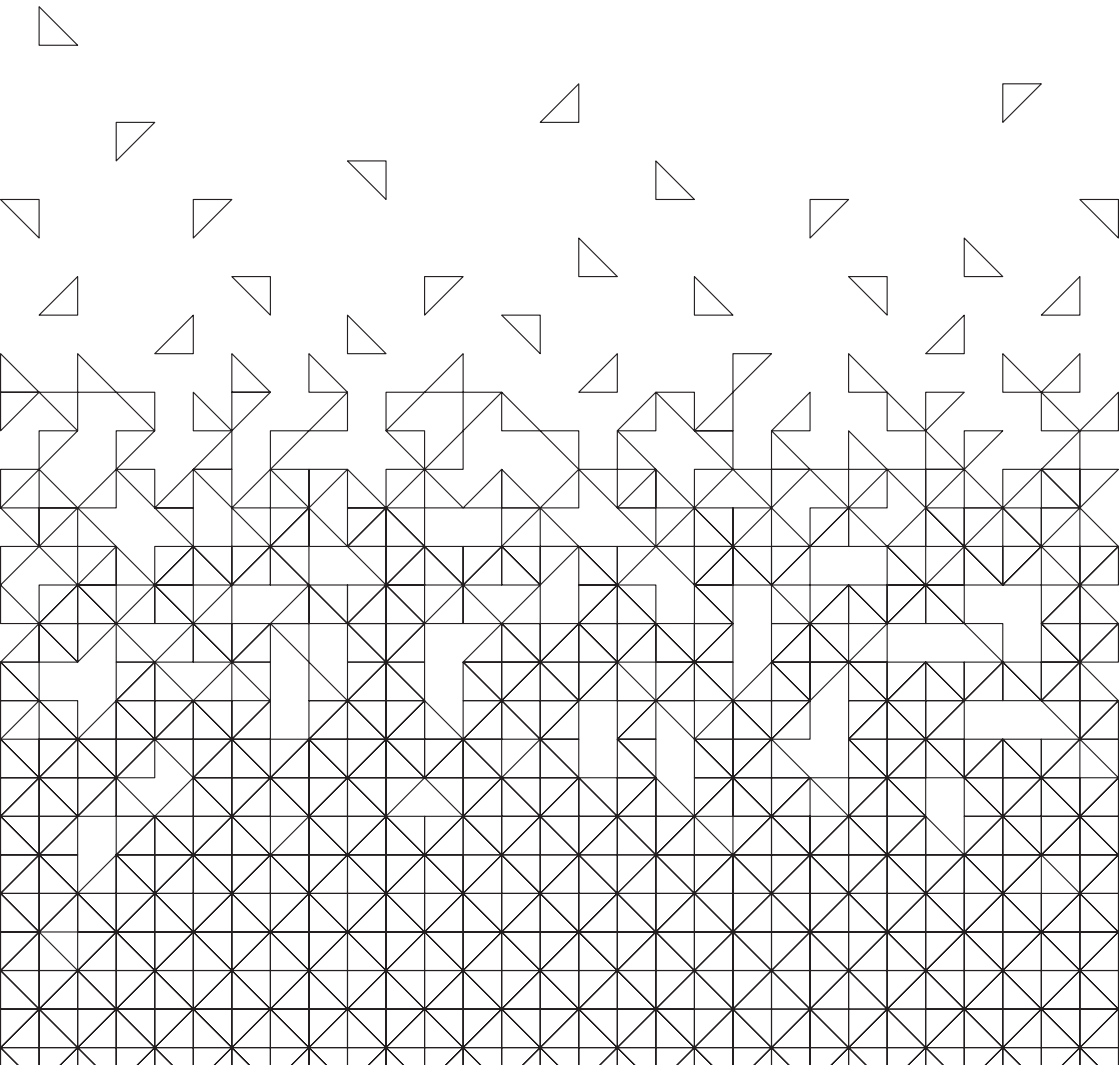


Other information

Helpful technical information

Specifications

Power Supply	AC 100-240V~ 50/60Hz 0.5A
Adaptor output	DC 6V $\overline{\overline{=}}$ 2.0A
Power consumption	12W
Audio output	2 X 2W RMS
USB Power	5V $\overline{\overline{=}}$ 1000mA
Frequency Range	DAB 174 – 240 MHz FM 87.5 – 108 MHz
Unit Dimension	approx. 282 mm (W) x 150 mm (D) x 145 mm (H)
Unit Net Weight	approx. 2.1 kg

 Product support 5

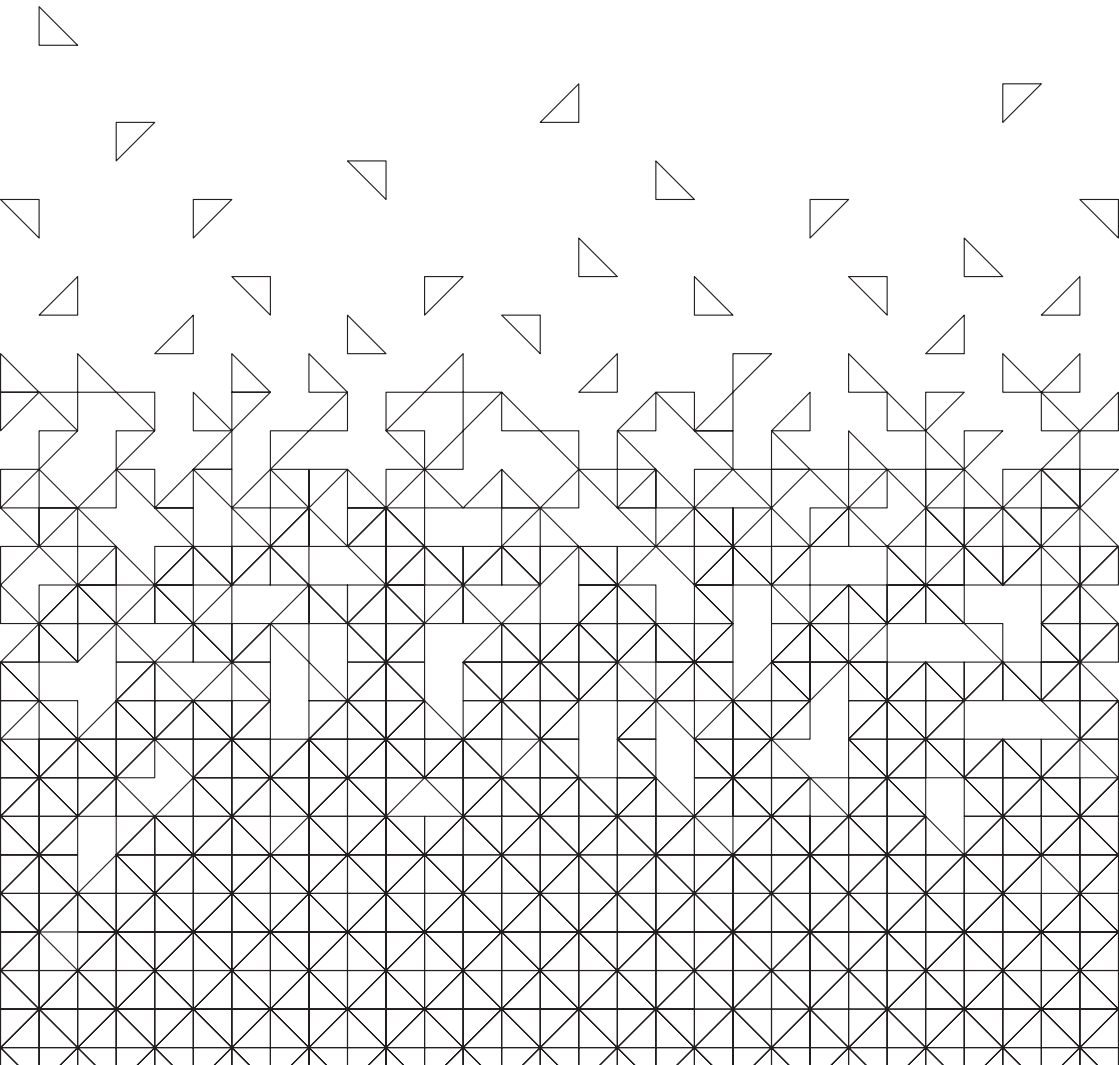

Product support

Help is always at hand

Troubleshooting

General

Problem	Solution
No power.	<ul style="list-style-type: none">• Ensure the mains plug is connected.• Make sure that you select the ON mode.
The remote control is not functioning.	<ul style="list-style-type: none">• Use the remote control near the unit.• Point the remote control at the remote sensor on the unit.• Replace the battery in the remote control with a new one.• Remove any obstacles between the remote control and the unit.
No sound from the unit.	<p>Try one of the solutions below:</p> <ul style="list-style-type: none">• Make sure that the unit is not muted. Press the or the VOL + / – on the remote control, or turn the – VOLUME + dial on the unit to resume normal listening.• Press on the unit or on the remote control to switch the unit to standby mode. Then press the button again to switch the unit on.• Unplug the unit from the mains socket, then plug in again. Switch on the unit.
The unit does not respond when pressing any buttons.	<ul style="list-style-type: none">• The unit may freeze up during use. Switch the unit off and then on again at the mains socket to reset the unit.

Radio

Problem	Solution
Poor radio reception.	<ul style="list-style-type: none">• Electrical interference in your home can cause poor reception. Move the unit away from them (especially those with motors and transformers).
Desired station not found.	<p>FM</p> <ul style="list-style-type: none">• Weak signal. Search manually.• If reception is still poor, adjust the position of the aerial. <p>DAB</p> <ul style="list-style-type: none">• No DAB coverage in your area or poor reception. Adjust the position of the aerial.• Perform a system reset and then a DAB full scan.

Product support

Help is always at hand

Bluetooth®

Problem	Solution
I cannot find "BT SpeakerN" on my Bluetooth® device.	<ul style="list-style-type: none">• Ensure the Bluetooth® function is activated on your Bluetooth® device.• Ensure you have paired your unit with the Bluetooth® device.

This product is intended for use within the UK. This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your DAB/ FM/ Internet Radio is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

Date of purchase

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

This will be shown on your receipt

Local call rates applies*

Line open 8am-7pm Monday to Saturday and 10am-4pm Sunday

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.



Product support

Help is always at hand

Disposal



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment.

To preserve our environment, dispose of used batteries according to your local laws or regulations.

Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

All trademarks are the property of their respective owners and all rights are acknowledged.

This product is intended for use within the UK. This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 2014/30/EC.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EC. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

Product support

Help is always at hand



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*
0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is
 - re-sold or has been damaged by inexpert repair.
 - Specifications are subject to change without notice.
 - Bush disclaim any liability for loss or damage arising from the breakdown of the product.
 - This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

BUSH

Contact:

www.argos-support.co.uk

Helpline: 0345 604 0105



MP3



DAB Digital
Radio