

NIKKOR

AF-S DX NIKKOR 55-200mm f/4-5.6G ED VR II

En User's Manual
Fr Manuel d'utilisation
Sc 使用说明书
Tc 使用说明书
Id Manual bagi Pengguna
Ar دليل المستخدم

NIKON CORPORATION

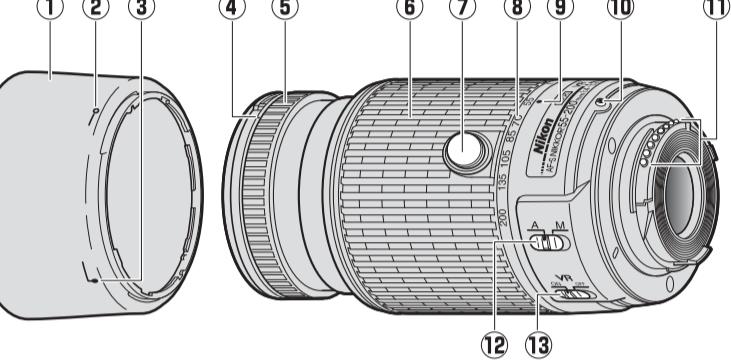
Printed in Thailand
7MA0146C-01

Figure 1/Figure 1/图 1

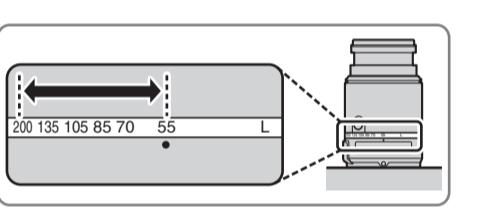


Figure 2/Figure 2/图 2

English

Before using this product, please carefully read both these instructions and the camera manual.
Note: DX lenses are for use with DX format digital single-lens reflex cameras such as the D7100 or D5300. The angle of view of a lens on a DX-format camera is equivalent to that of a lens with a focal length about 1.5x longer mounted on a 35 mm format camera.

For Your Safety

CAUTIONS
• **Do not dismantle.** Touching the internal parts of the camera or lens could result in injury. In the event of a malfunction, the product should be repaired by a qualified technician. Should the product break open as the result of a fall or other accident, remove the camera battery and/or disconnect the AC adapter and then take the product to a Nikon-authorized service center for inspection.

• **Turn the camera off immediately in the event of malfunction.** Should you notice smoke or an unusual smell coming from the equipment, immediately unplug the AC adapter and remove the camera battery, taking care to avoid burns. Continued operation could result in fire or injury. After removing the battery, take the equipment to a Nikon-authorized service center for inspection.

• **Do not use in the presence of flammable gas.** Operating electronic equipment in the presence of flammable gas could result in explosion or fire.

• **Do not look at the sun through the lens or the camera viewfinder.** Viewing the sun or other bright light source through the lens or viewfinder could cause permanent visual impairment.

• **Keep out of reach of children.** Failure to observe this precaution could result in injury.

• **Observe the following precautions when handling the lens and camera:**

- When using vibration reduction, press the shutter-release button halfway and wait for the image in the viewfinder to stabilize before pressing the shutter-release button the rest of the way down.

- When vibration reduction is active, the image in the viewfinder may be blurred after the shutter is released. This does not indicate a malfunction.

- When the camera is panned, vibration reduction applies only to motion that is not part of the pan (if the camera is panned horizontally, for example, vibration reduction will be applied only to vertical shake), making it much easier to pan the camera smoothly in a wide arc.

- Do not turn the camera off or remove the lens while vibration reduction is in effect.

- If the camera is equipped with a built-in flash, vibration reduction will be disabled while the flash charges.

- Select **Off** when the camera is mounted on a tripod unless the tripod head is unseated or the camera is mounted on a monopod, in which case **On** is recommended.

• **Do not carry tripods with a lens or camera attached.** You could trip or accidentally strike others, resulting in injury.

• **Do not leave the product where it will be exposed to extremely high temperatures, such as in an enclosed automobile or in direct sunlight.** Failure to observe this precaution could cause damage or fire.

• **Notice for Customers in Canada**
CAN ICES-3-B/NMB-3-B

• **Parts of the Lens (Figure 1)**
① Lens hood
② Lens hood lock mark
③ Lens hood alignment mark
④ Lens hood mounting mark
⑤ Focus ring
⑥ Zoom ring
⑦ Retractable lens barrel button
⑧ Focal length scale
⑨ Focal length mark
⑩ Lens mounting mark
⑪ CPU contacts
⑫ A-M mode switch
⑬ Vibration reduction ON/OFF switch

* Optional.

• **■ Attaching and Removing the Lens**

Attaching the lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.


■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with the lens mounting mark at the top. Be careful not to press the retractable lens barrel button while attaching or removing the lens.

■ Removing the lens
① Turn the camera off.
② Remove the lens.
To remove the lens, press the lens release button while turning the lens clockwise.

■ Before Use
The lens features a retractable barrel. Before using the camera, unlock and extend the zoom ring. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

■ Attaching and Removing the Lens
① Turn the camera off and remove the camera body cap.
② Remove the rear lens cap.
③ Attach the lens.
Keeping the lens mounting mark aligned with the mounting mark on the camera body, position the lens in the camera's bayonet mount and then rotate the lens counter-clockwise until it clicks into place with

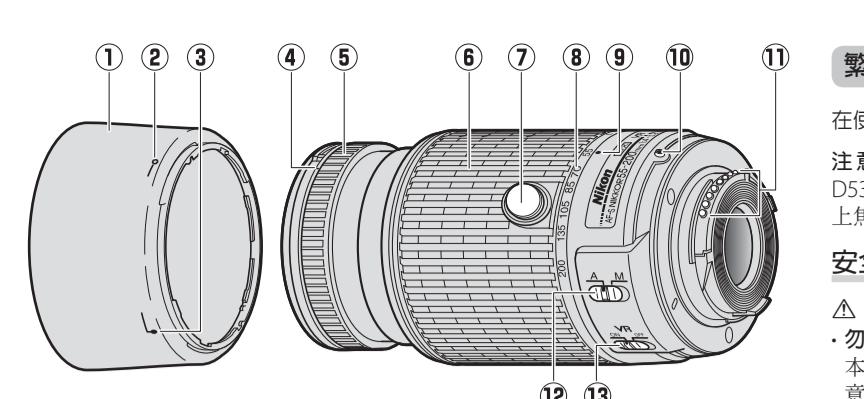

繁體中文

在使用本產品前，請仔細閱讀這些指南和相機說明書。

注意：DX 鏡頭適用於 DX 格式數碼單反光相機（如 D7100 或 D5300）。DX 格式相機上鏡頭的焦角，相當於安裝在 35mm 格式相機上焦距約為該鏡頭的畫角。

安全須知

- △ 警告**
 - 機械拆解、觸碰鏡頭或鏡身的內部零件可能導致受傷。遇到故障時，本產品會成為火災或其其他意外事故或損壞，請取出電池池或斷開 AC 電源器的連接，然後再進行檢修。
 - 發生上述情況時，立刻關閉相機。當您發覺裝置有煙或冒出異味時，請立即將其拔掉，然後透過鏡頭則可安裝或取下遮光罩。
 - 不使用時，可將遮光罩反向並固定在鏡頭上。遮光罩被反轉時，在鏡標記（④）附近將其握住，然後透過鏡頭則可安裝或取下遮光罩。

■ 鏡頭保護

- 當你將遮光罩反向並固定在鏡頭上時，注意避免將其撞倒，並避免太緊。若未正確安裝遮光罩，則可能會產生遺漏。

不使用時，可將遮光罩反向並固定在鏡頭上。遮光罩被反轉時，在鏡標記（④）附近將其握住，然後透過鏡頭則可安裝或取下遮光罩。

■ 鏡頭保養

- 當你將遮光罩反向並固定在鏡頭上時，注意避免將其撞倒，並避免太緊。若未正確安裝遮光罩，則可能會產生遺漏。

不使用時，可將遮光罩反向並固定在鏡頭上。遮光罩被反轉時，在鏡標記（④）附近將其握住，然後透過鏡頭則可安裝或取下遮光罩。

■ 鏡頭拆卸

- 在拆卸鏡頭時，將勿忘火災或觸電。請在取下後，將裝置送到尼康服務中心檢查修理。

• 不在燃氣環境中使用。在易燃氣體環境中使用電子裝置，將可能導致爆炸或火災。

• 不透過鏡頭或相機觀景器觀看太陽。透過鏡頭或觀景器觀看太陽或其他明亮光源，可能會導致永久性的視網損傷。

• 不要在任何時候觸碰相機鏡頭或三腳架。否則，您可能會被夾傷或擦到。

• 不移除鏡頭或相機的三腳架。否則，您可能會被夾傷或擦到。

• 不將本產品放置在極高溫的地方，如封閉的車內或直射陽光下，否則可能導致產品受損或引起火災。

■ 隨附配件

- 鏡頭部件（圖 1）
 - ① 遮光罩
 - ② 遮光罩定標記
 - ③ 遮光罩齊標記
 - ④ 遮光罩接環標記
 - ⑤ 對焦環
 - ⑥ 變焦環
 - ⑦ 可伸縮鏡頭接環
 - ⑧ 焦距
 - ⑨ 鏡頭接環標記
 - ⑩ CPU 接點
 - ⑪ A-M 模式切換器
 - ⑫ 減震 ON/OFF 開關
 - ⑬ 另購

■ 安裝和取下鏡頭

安装鏡頭

- ① 關閉相機並取下相機鏡頭蓋。

② 取下鏡頭蓋。

安装鏡頭

- 將鏡頭接環標記和相機鏡身的接環標記對齊，再將鏡頭插入相機的刺刀式接環中，然後逆時針旋轉鏡頭直至其卡入正確位置發出喀嚓聲，此時將鏡頭接環標記在頂部。

安裝或取下鏡頭時，請小心不要按下可伸縮鏡頭接環。

取下鏡頭

- ① 取下鏡頭。

若要取下鏡頭，請按住鏡頭釋放按鍵並同時順時針旋轉鏡頭。

■ 使用之類

- 本鏡頭配備有一個可伸縮鏡頭筒。使用相機之前，請先解除鎖定並卸下鏡頭蓋；如圖所示按住可伸縮鏡頭接環（①），同時逆轉變焦環（②）。

■ 安裝和取下鏡頭

安装鏡頭

- ① 關閉相機並取下相機鏡頭蓋。

② 取下鏡頭蓋。

安装鏡頭

- 將鏡頭接環標記和相機鏡身的接環標記對齊，再將鏡頭插入相機的刺刀式接環中，然後逆時針旋轉鏡頭直至其卡入正確位置發出喀嚓聲，此時將鏡頭接環標記在頂部。

安裝或取下鏡頭時，請小心不要按下可伸縮鏡頭接環。

取下鏡頭

- ① 取下鏡頭。

若要取下鏡頭，請按住鏡頭釋放按鍵並同時順時針旋轉鏡頭。

■ 使用之類

- 本鏡頭配備有一個可伸縮鏡頭筒。使用相機之前，請先解除鎖定並卸下鏡頭蓋；如圖所示按住可伸縮鏡頭接環（①），同時逆轉變焦環（②）。

■ Memasang dan Melepas Lensa

Memasang Lensa

- ① Matikan kamera dan lepaskan tutup badan kamera.

② Lepaskan tutup lensa belakang.

③ Pasang lensa.

Sejajarkan tanda pemasangan lensa dengan tanda pemasangan pada badan kamera, posisikan lensa dalam dudukan bayonet kamera dan lalu putar lensa berlawanan arah jarum jam hingga klik di tempatnya dengan tanda pemasangan lensa berada di atas.

Hati-hati agar tidak menekan tombol barrel lensa mampu tarik selama memasang atau melepas lensa.

Melepas Lensa

- ① Lepaskan tutup lensa belakang.

Untuk melepas lensa, tekan tombol pelepas lensa sambil memutar lensa searah jarum jam.

■ Sebelum Menggunakan

Lensa ini memiliki titik bantuan yang dapat di lipat. Seluruh menggunakan kamera, buka kunci dan perpanjang cincin zoom. Sambil menjaga penekanan tombol barrel lensa mampu tarik (①), putar cincin seperti petunjuk (②).

自動對焦

- ① 將相機設定為 AF (自動對焦)。

② 將鏡頭 A-M 模式切換器推至 A。

③ 對焦。

半按快門釋放按鍵進行對焦。

手動對焦

- ① 將鏡頭 A-M 模式切換器推至 M。

② 對焦。

使用鏡頭焦環進行手動對焦。

■ 變焦和景深

對焦之前，請逆時針調整焦距並進行構圖。若相機支援景深預覽 (光圈縮小)，請深景深可在觀景器中進行預覽。

使用變焦鏡頭進行拉近或拉遠。僅當焦距位於 55 到 200 mm 之間 (圖 2) 時才可拍攝相片。

注意：光圈縮小時，請勿逆時針調整焦距。

■ 光圈

請使用相機控制調整光圈。

■ 變焦和最大光圈

更改變焦焦距時，請勿逆時針調整光圈。

■ 內置閃光燈元件

當使用配有內置閃光燈元件的相機上的內置閃光燈時，請取下遮光罩以避免產生眩光 (在鏡頭末端遮擋內置閃光燈的位置所產生的眩光)。

■ 減震 (VR)

減震 (VR) 可減少相機震動所引起的模糊，從而使快門速度可比一般情況時慢 4.0 級。因此，該功能僅適用於支持快門速度的相機。

在很多情況下，不使用三腳架並進行手持拍攝時，減震對對焦速度的影響是最大的相機震動抑制產品協會 (CIPA) 標準所測量。測量 FX 格式鏡頭時使用的是 FX 格式數碼相機，測量 DX 格式鏡頭時使用的是 DX 格式相機。焦點鎖定時，減震將在以下進行的測量。

■ 使用減震 ON/OFF 開關

- ① 選擇 ON 啓用減震。減震將在你半按快門釋放按鍵時開始，從而減少相機震動的影響以改善構圖和對焦。

② 選擇 OFF 關閉減震。

■ 使用減震：注意

• 使用減震時，請先半按快門釋放按鍵，然後待觀景器中的影像穩定之後再完全按下快門釋放按鍵。

• 啓用減震時，觀景器中的影像在你釋放快門後可能會變得模糊。這並非故障。

• 當相機進行減震時，減震僅適用於非振動部分的動作 (例如，若相機進行手動對焦時，減震僅將僅適用於垂直方向的運動)，因而在易於以較大角度平移時，移動將更明顯。

• 減震僅適用於有減震時，請勿閉合相機。

• 若相機配備內置閃光燈，閃光燈在減震時將無法使用。

• 相機設定於三腳架時選擇 ON (開啟)，但是三腳架雲台不穩固或相機固定於三腳架時建議選擇 ON (開啟)。

■ Zon dan Kedalaman Bidang

Seluruh menggunakan produk ini, mohon membaca dengan seksama baik petunjuk ini maupun buku petunjuk kamera.

Catatan: Lensa DX adalah untuk menggunakan bersama kamera digital format-DX refleks jenis tunggal seperti D7100 atau D5300. Sudut gambar dari lensa pada kamera DX adalah setara lensa dengan panjang fokal sekitar 1.5 kali panjang yang terpasang pada kamera format 35 mm.

Demi Keselamatan Anda

A HATI-HATI

Jangan mengambil sendiri

Menyentuh bagian internal kamera atau lensa dapat mengakibatkan luka. Apabila terjadi kegagalan fungsi, produk sebaiknya dibawa oleh teknisi berpengalaman. Apabila kamera tidak berfungsi, silakan hubungi layanan pelanggan Nikon.