

BUSH *Classic*

Instruction Manual

PHK-WO251



Contents

Page Contents

Warnings	2
Box contents introduction and features	3
Set up and operating the radio	4
Specifications	4
Guarantee	7

Warnings

Warning

1. No naked flame sources, such as lighted candles, should be placed on or near this equipment.
2. Do not place the product in enclosed bookcases or racks without proper ventilation.
3. The mains adaptor is used as the disconnect device and must be easily reached to unplug.
4. Always use the power adaptor supplied if it needs to be replaced make sure the replacement has the same rating.
5. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
6. Do not expose to dripping or splashed fluids. Objects filled with liquids, such as vases, must not be placed on or near this equipment.
8. The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in a dusty environment.
9. Do not use abrasives, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe with clean soft cloth it and a mild detergent solution.
10. Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.
11. Do not disassemble or modify the radio - there are no user serviceable parts.
12. If the radio is damaged in anyway or malfunctions do not use. Consult a qualified service engineer.
13. Switch off the mains socket the power adaptor is connected to when the radio is not in use.
14. Do not dispose of this product with household waste at the end of its life cycle; hand it over to a collection centre for the recycling of electrical and electronic appliances. By recycling, some of the materials can be reused. You are making an important contribution to protect our environment. Please check with your Local Authority for recycling advice.

Disposal of your old appliance and used batteries:

1. When this crossed out wheelie bin symbol is attached to a product, it means the product is covered by the European Directive.
2. All electrical and electronic products should be disposed of separately from household waste at an appropriate recycling point/centre.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your local authority or the shop where you purchased the product.
5. Please make sure any batteries used with in this product are recycled appropriately. Please check with your Local Authority for recycling advice.




Box contents and features

Box Contents

- 1 x AM/FM radio
- 1 x AC power cord
- 1 x User guide

Introduction

This classic radio combines elegant retro styling with clear easy to use controls and crisp clear sound. Receives a wide range of FM and AM radio stations. Can be mains or battery powered (batteries not included).

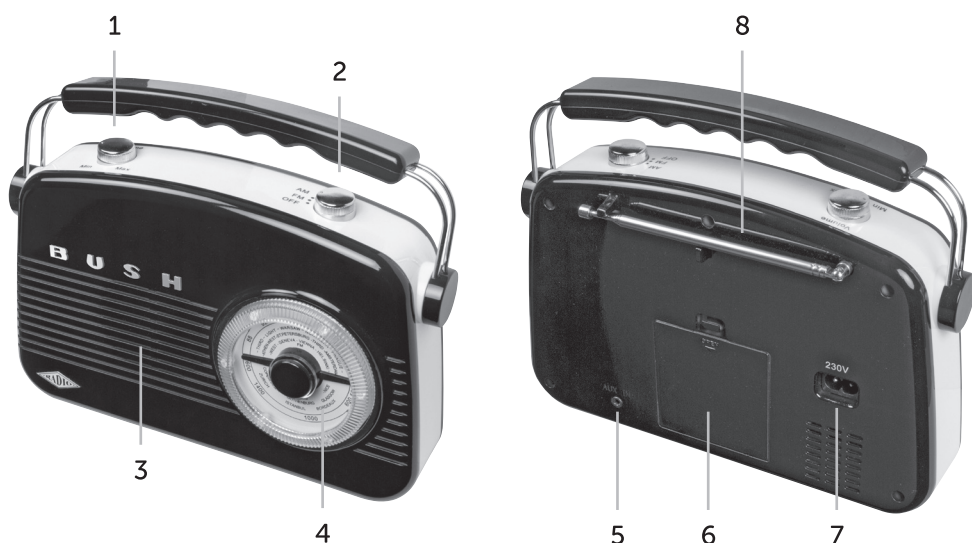

Features

1. Volume Control
2. Power/FM/AM button
3. Speaker
4. Frequency tuning dial
5. AUX IN socket
6. Battery compartment
7. AC power socket
8. Aerial

Set up and operating the retro radio

1. Remove all packaging from the unit.
2. Ensure unit is on a solid level surface, away from sources of heat, sunlight, etc.
3. Plug the cable from the power adaptor into the AC socket on the back of the radio then plug the power adaptor into a three pin mains socket and switch the socket on. Alternatively insert batteries (see below).
4. Turn the Power/FM/AM control knob to FM or AM as required turn up the volume control (turn clockwise) to halfway.
5. Tune into your preferred radio station by turning the frequency tuning dial (4) to the correct frequency for you preferred radio station. Please note the radio stations named on the dial are for decoration only and in most cases no longer exist or have been renamed.
6. Turn the volume control knob clockwise to increase the volume or anti clockwise to reduce the volume.

Inserting/replacing the batteries

You can power the radio player with 4 x AA 1.5V batteries (not included). Slide open the battery compartment lid in the direction indicated to open. Insert the batteries (observing the polarity indicated on the casing), then close the battery compartment lid. Alkaline or rechargeable batteries can be used.

Using AUX IN

You can connect and playback other audio sources such as a smartphone or tablet through the radio using the 3.5mm AUX IN socket (5) on the back of the radio. You will need a suitable audio cable (not supplied) to connect the audio source to the 3.5mm AUX IN socket. Once connected switch on the radio and play the audio from your device. Adjust the volume on both the device and radio to get the best results.

Specifications

Power cord

Input: 100-240V~50/60Hz, 0.3A

Output: 12V= 0.5A

Troubleshooting

Q1 There is no power.

A1 Make sure your audio device is charged.

A2 Ensure the device is switched on correctly.

Q2 There is no sound being emitted.

A1 Adjust volume on your Bluetooth device as well as on the speaker for optimum volume and sound quality.

A2 Make sure that your Bluetooth device is in effective range.

A3 Ensure that the Bluetooth device is paired.

A4 Make sure you have selected the correct audio source.

Q3 No response from the speaker.

A1 Restart the speaker by using the reset function.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your <Classic Retro Radio> is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Serial number

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and
10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on **0345 604 0105**.

Product support

Help is always at hand



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House
17 Leicester Street, Bedworth, Warwickshire
CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on **0345 604 0105**.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

