

Hisense

LED Backlight TV

USER GUIDE

Read the manual carefully and ensure you have fully understood its contents before operating this device for the first time.

English

Deutsch

Español

Italiano

Português

Français

ES-A154835

Hisense

LED Backlight TV

USER GUIDE

Read the manual carefully and ensure you have fully understood its contents before operating this device for the first time.

English

Contents

Welcome	2
Important Notice	3
Safety Instructions	4
1. Shortcuts Instructions	8
1.1.Turning your TV on or off	8
1.2.Selecting the Input Source	8
1.3.Live TV	8
1.4.EPG	9
1.5.PVR/T.Shift	10
2. Menu	11
2.1.How to use the Menu	11
2.2.Using the Picture Menu	11
2.3.Using the Sound Menu	13
2.4.Using the Channel Menu	14
2.5.Using the Network Menu	16
2.6.Using the System Menu	17
2.7.Using the About Menu	19
3. Advanced Features	20
3.1.Getting familiar with the Home screen	20
3.2.LiveTV	21
3.3.Media	22
3.4.Apps	23
3.5.Using Anyview Cast to mirror content from your device to the TV screen ...	24
.....	24
3.6.Software updates for your TV	25
4. Other Information	26
4.1.TroubleShooting	26
4.2.Service Contact	27
4.3. Recycling/Licenses	28

Welcome

Thank you for purchasing a Hisense TV.

This device lives up to the highest standards, innovative technology and high user comfort.

Home

Using apps, surfing and enjoying videos has never been this easy. With this Hisense TV you can do it fast and simple, whilst in the comfort of your living room.

Media Player

Media player — access your music, pictures and videos from your network or USB storage media and play them directly on your TV.

PVR/ T.Shift


Connect a hard disk to your TV and use the PVR function to record your favorite shows and movies. With the T.Shift function, you can watch a live broadcast while recording it, enabling you to pause the viewing at any time, skip commercials and replay important scenes.

Digital Tuner

Everything works with one remote control now. Connect your TV directly to your terrestrial, satellite antenna or cable and enjoy contents in high quality without loss.

Important Notice

This guide only contains detailed information about the menus and the explanation of different settings, how to use the functions of this TV, etc. For detailed instructions on how to install this TV, please refer to the quick setup guide.

Paragraphs beginning with the symbol  indicate important instructions, tips or conditions for the following settings.

 **For your own safety and the optimal performance of your TV, ensure to read the safety instructions before performing any installation.**

Hisense does not guarantee operation and performance of peripheral devices made by other manufacturers. We disclaim any liability or damage that may arise from operation and/or performance from usage of such other maker's peripheral devices.

The recording and playback of content on this or any other device may require permission from the owner of the copyright or other such rights in that content. It is your responsibility to ensure that your use of this or any other device complies with applicable copyright legislation in your country. Please refer to that legislation for more information on the relevant laws and regulations involved or contact the owner of the rights of the content you wish to record or playback.

The Index/Glossary explains certain terms used in this user manual and in the TV menu.

Declaration of Conformity (DoC)

This TV is CE marked and complies with EU directives. The complete declaration of conformity is included in this manual, and can also be downloaded from the Hisense homepage.

Hisense declares that this TV is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EG. It may be operated in all countries in the EU and also Iceland, Norway and Switzerland. In France and Italy it may only be used indoors.

Read these instructions
Follow all instructions
Heed all warnings
Keep these instructions



All rights reserved.



Important Safety Instructions

Safety Instructions

To ensure safe and correct use of this product, always comply with the following precautions to avoid dangerous situations and damage to your unit:

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The intended use and ambient conditions for this TV

This TV is intended for the rendering of video and audio signals, on a table-top or wall-mounted, in a home or office environment. It must not be used in rooms with a high level of humidity or dust concentration. The warranty is only valid if used as intended by the manufacturer.



WARNING

High humidity and dust concentration may lead to current leaks in the device. To reduce the risk of fire or electrical shock:

- Do not expose this unit to rain, moisture, dripping or splashing water, and do not place objects filled with liquids, such as vases, cups, etc. on or over the unit.
- Do not touch the TV with wet hands.
- Do not expose to direct air-conditioning and keep candles or other naked flames away from the TV at all times.

If the TV is moved from a cold environment to a hot environment, leave it switched off for at least an hour to avoid condensation. If used outside, make sure it is protected from moisture.

If you notice anything unusual, immediately turn off the main power supply switch and remove the power plug.

In case of fire, use preferably a CO₂ gas or powder fire extinguisher. If such extinguishers are not accessible, try to isolate the electrical supply before using a water fire extinguisher.

■ Moving/Transportation

Before moving this TV, disconnect all cables and move in the vertical position only. Grasp the device on the upper and lower edges of the frame.

- Do not press or put stress on the front panel of the TV. It may take two or more people to carry larger TVs.

If you have to briefly lay down the TV, place the unit with its entire front surface lying flat on soft material.

The LED screen is made of glass and can break if is not handled properly. Always wear rubber gloves to carry the unit. If the LED screen is damaged, liquid crystal might leak out. In case of skin contact, immediately rinse thoroughly with water.

■ Power Supply

Incorrect voltages can damage the TV. Only connect this unit to a power supply with the correct voltage and frequency noted on the type plate, using the supplied power cable.

The power plug must be easily accessible so that the device can be disconnected at all time. The unit is live, even if in standby mode, as long as the unit is connected to a power outlet.

It is recommended that this unit is placed on a dedicated circuit.

- Do not overload the power outlets by connect too many appliances to the same outlet. Overloaded wall outlets, extension cords, etc. are dangerous and can result in electric shock and fire.

After power off, don't turn it on again in 5 seconds. Frequent switching power supply in a short period of time can cause abnormal TV.

■ Power plug and power cable

- Do not touch the power plug with wet hands.
- Do not place heavy objects on the power cable. Route the cable so that it is not kinked or laid over sharp edges, walked on or exposed to chemicals. A power cable with damaged insulation can cause electric shock and fire.
- Pull the power plug, NOT on the cable when disconnecting. The cable can become damaged and cause a short circuit if pulled on.
- Do not place the power cable near a high temperature object.
- Do not move the TV with the power cable plugged into a socket.
- Do not use a damaged or loose power cable, or a damaged socket outlet.
- Do not use any power cords other than the one supplied with this unit.

■ Set-up

Check that the location is suitable to bear the load of the TV. Place on a level, sturdy and horizontal base. Ensure that the unit does not hang over the edge of the base when placed in or on furniture. If placed on a cart, use caution when moving to avoid the unit from tipping over.

- Place the unit in a normal upright horizontal position. It must never be operated vertically, lying flat or hanging overhead from the ceiling.
- Place the unit where it is not exposed to direct sunlight or other sources of heat

When mounting the TV on a wall, follow the instructions supplied with the wall-mount, make sure not to install the TV by hanging the power and signal cables on the back of the TV.

Important Safety Instructions

 
■ Air ventilation and high temperatures

Install your TV only where there is proper ventilation, and ensure that there is at least 10 cm free space on the sides and 20 cm above the unit for air circulation. Excessive heat and obstruction of ventilation could lead to fire or early failure of some electric components.

- Do not block any ventilation openings with newspapers, tablecloths, curtains, etc.
- Do not dry clothing etc. on top of the unit.
- Take care not to touch the ventilation openings since they may become hot.
- Do not insert foreign objects into the TV through the vents.

■ The Stand

- Do not use any stand other than the one supplied with this unit.
- Do not modify or use the stand if it becomes warped or physically damaged.
- During setup, make sure that all the screws are securely tightened.
- Ensure that the TV does not suffer any impact during the attachment of the stand.
- Ensure that children do not climb onto the stand.
- Attach or remove the stand with at least two people.
- Install the TV following the specific procedure in the Quick Setup Guide.

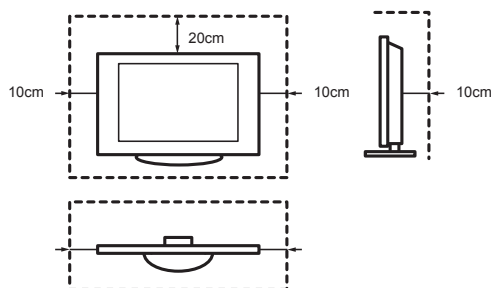

Prevent small items from getting into the interior of the device through the ventilation slots. Such objects may cause short circuits, which may cause fire.

If something should get inside the unit, immediately unplug the power plug of the device and contact service support.

■ The LED screen

Despite thorough care when manufacturing this display, it cannot be 100% guaranteed that no sub-pixel defects will occur due to technical reasons. These cannot be considered as a device defect in terms of the guarantee. They will not affect the performance and reliability of the TV.

To prevent “image burn”, avoid displaying still images for long periods of time, there is a possibility that a copy of the image may remain. If the aspect ratio is set to 4:3 for a long period of time, image burn may occur on the black areas. Image burn is not covered by the warranty.

- Do not apply strong force or impact on the display panel.

Avoid touching the LED screen or touching it for long periods of time. Doing so may produce some temporary distortion effects on the screen.

■ Radio waves

- Do not use the TV in any medical institutions or locations with medical equipment. Radio waves may interfere with medical equipment and cause malfunction.
- Do not use the TV near any automatic control equipment such as automatic doors or fire alarms. Radio waves may interfere with automatic control equipment and cause malfunction.

If you have a cardiac pacemaker, keep a distance of at least 22 cm from the TV. Radio waves may interfere with the operation of a pacemaker.

■ Built-in wireless LAN

- Do not connect to wireless networks that you do not have the usage rights for. Data transmitted and received over radio waves may be intercepted and monitored.

The built-in wireless LAN uses 2.4 GHz and 5 GHz frequency bands. To avoid malfunctions or slow response caused by radio wave interference, keep the TV away from devices such as other wireless LAN devices, microwaves, mobile phones, and other devices that use 2.4 and 5 GHz signals.

Important Safety Instructions

■ Supervision

- Do not let children play unsupervised close to the TV. It could tip over, be pushed off or pulled down from the stand surface and injure someone.
- Do not allow a switched-on TV to run unattended.

■ Volume

Loud music and noises can lead to irreversible damage to your ears. Avoid extreme volume, especially over long periods and when using headphones.

If you hear a drumming noise in your ears, turn down the volume or temporarily stop using headphones.

■ Thunder Storms

Pull out the power plug and all connected antenna cables from the TV during a thunderstorm. Overvoltage caused by lightning strikes can damage the TV via the antenna system, as well as the wall socket.

■ Long periods of absence

As long as the power plug is connected to a live socket outlet, the TV will consume power even in "OFF"-mode. The power plug and all connected antenna cables should be disconnected out during long periods of absence.

■ Cleaning and care

CAUTION:

Unplug the power cord prior to cleaning the TV.

Clean the TV, the screen, and the remote control with a soft, moist, clean and colour-natural cloth only. Do not use any chemicals.

- Do not subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade the surface quality.
- Do not spray water or other liquids directly on the TV. Liquid inside the TV could lead to product failure.
- The surface of the display panel is treated and may be easily damaged. Take care not to scratch it with fingernails or other hard objects.
- Also wipe the power plug with a dry cloth at regular intervals

■ Service/Repair

Never remove the cover/back of the TV; there are no user serviceable parts inside. Refer all service to qualified service personnel.

■ Packaging

Keep the anti-moisture materials and plastic bags out of reach of children.

Plastic bags can cause suffocation and the anti-moisture material is harmful if swallowed. If swallowed by mistake, force the patient to vomit and visit the nearest hospital.

■ Modification

Do not attempt to modify this product in any way. Unauthorized modification could void the warranty of this unit, cause electric shock and fires.

■ Remote Control batteries

- Incorrect installation may cause battery leakage, corrosion and explosion.
- Replace only with the same or equivalent type.
- Do not mix old and new batteries.
- Do not mix different battery types
- Do not use rechargeable batteries
- Do not burn or break up batteries.
- Do not expose batteries to excessive heat
- Be sure to dispose of batteries correctly

■ Outdoor Antenna Grounding

If an outdoor antenna used, be sure the antenna system is protected against voltage surges and built-up static charges.

■ Disposal

Refer to the recycling section of this manual.

Shortcuts Instructions

You can use shortcuts on the remote control for fast operation. Refer to the “ Quick Setup Guide ” for more information.

1.1 Turning your TV on or off

To turn your TV on or off :

1. Plug the AC power cord into a socket outlet of AC power supply.
2. When the TV is powered on, press the [⏻] button on the remote control, it goes into standby mode. Press the [⏻] button again to turn on your TV.

📌 NOTES

- When your TV is in standby mode, it is still consuming power. To completely disconnect power, please remove the mains plug from the mains socket.
- If your TV does not receive an input signal for several minutes, it automatically goes into standby mode.

1.2 Selecting the Input Source

Select the Input Source depending on the video device you have connected to your TV.

To select the input source:

1. Turn on your TV, then press the [INPUT] button on the remote, the list of Source appears.
2. Press the [< / >] buttons to select the input source.
3. Press the [OK] button to confirm your selection.

 
1.3 Live TV

Channel search guide

When switching to Live TV, the TV detects the presence of the channel list information (Channel scan must have been completed). If the scan has not yet been completed, a prompt will appear to begin scanning for channels. Press the **Begin scanning** button to enter the channel search interface.

Launch Live TV

Upon first use, the screen will display Live TV operating tips, including: how to show the channel list, how to start the PVR / T.Shift, how to view channel info and more.

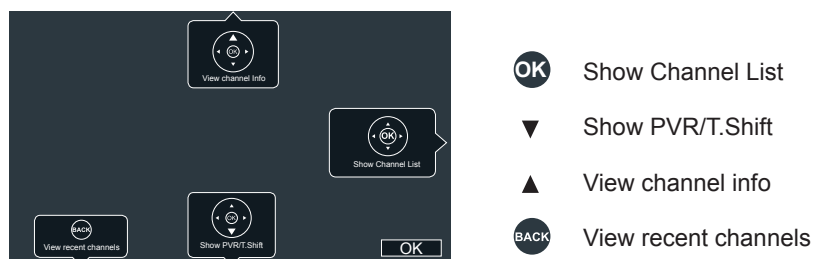

1.4 EPG

It provides convenience to check TV programs that will be available in the next 7 days. The information displayed by the EPG is made available by the commercial television networks for digital channels only. The EPG also provides a simple way to program the recording of your favorite programs and a reminder function which can switch channel automatically at scheduled time so that you do not miss programs of interest. (The availability and amount of programme information will vary, depending on the particular broadcaster).

- Press the [EPG] button on the remote control to display channel information on program guide list.

- **Watch**

When a current program is selected, press the [OK] button to watch it in full screen mode.

- **PVR/Reminder**

Press the [^ / v] buttons to select the channels. Press the [< / >] buttons to select program based on the time schedule.

Press the [OK] button on the remote control to select PVR or Reminder.

Press the [^ / v] buttons to change and set a different options.

- Select and set Start time/Stop time:

Press the [< / >] buttons to move to the position you want to set and then press the [0~9] buttons to input the desired numbers.

- Repeat: You can select from Once, Everyday and Weekly.

NOTES

- Reminder is only available for programmes that haven't been aired yet.
- A storage device must be attached to the television for recording purposes.
- The TV will record the program even in standby mode.

- **Page Up/Down**

Press the [CH+/CH-] buttons to move programme listing page up/down.

- **Schedule**

Press the [RED] button to view a list of scheduled reminders and recordings.

- **Program color**

Press the [GREEN] button on the remote control to choose colours to indicate different genres in the EPG for quick and easy viewing.

- **24+**

Press the [BLUE] button to select the next day programmes.

- **24-**

Press the [YELLOW] button to select the yesterday programmes.

1.5 PVR/T.Shift

PVR

The PVR function allows you to easily record digital television content for later viewing. The function is only available in DTV source only. The format of the storage disk must be either FAT32 or NTFS. The PVR will not function if a data storage device has not been connected.

There are three options for recording, the first option is to use Electronic Program Guide (EPG), the second option is to press the [v] button to select PVR or T.Shift, and the third option is to press the [PVR] button.

Press the [■] button to stop recording and a *.PVR file will be saved. The files can be played back in the Media Player.

T.Shift

This option allows you to pause and rewind live TV. This function operates by recording temporarily to a storage device. Please ensure your storage device is connected and there is enough free disk space (1GB). Otherwise the recording will not commence.

 
Press the [v] button on the remote control to select T.Shift and then the menu will appear, press the [III] button to pause the live broadcast and press the [▶] button to play. Press the [◀◀] button to watch reverse and press the [▶▶] button to watch advance playback rapidly. Press the [■] button to exit the function and watch the current broadcast.

📄 NOTES

- When connecting external hard disk drives please use an external power supply where possible. Exceeding a total current consumption may result in damage. The maximum current consumption of USB3.0 is 1A and The maximum of USB1.1 and USB2.0 are 500mA.
- The USB port supports a voltage of 5V.
- The maximum supported storage space of the hard disk is 1TB.
- If you want to store the video streaming of a DTV program, the transfer rate of the hard disk must not be less than 5MB/s.
- The PVR function is not supported for analogue channels.
- The PVR functions are disabled for channels locked with Channel Lock or scrambled channels (CI module or password needed).

2.1 How to use the Menu

1. Press the [⚙️] button to open the Quick Setup menu.
2. Press the [➤] buttons to view the full menu settings.
3. In each menu, you can:
 - Press the [▲ / ▼] buttons to select an item,
 - Press the [◀ / ▶] buttons to adjust the value,
 - Press the [➤ /OK] buttons to enter the submenu,
 - Press the [BACK] buttons to return to the previous menu.
4. Press the [EXIT] button to exit the menu.

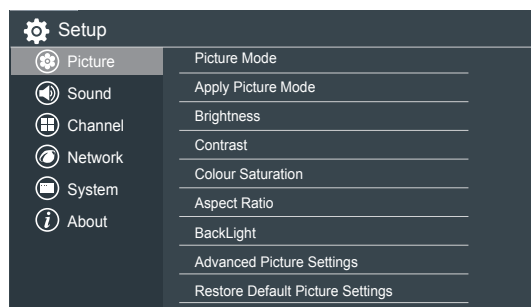


NOTE

- The menus in the user manual may vary slightly from the actual screen.

2.2 Using the Picture Menu

 The picture setting allows the user to optimize the output picture quality of the TV.

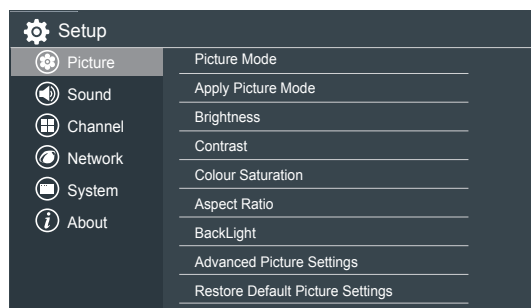

Picture Mode	For setting up the picture mode and improving the TV picture quality. If you'd like to configure the settings for your picture, select the correct picture mode from the following options: Standard, Cinema day, Cinema night, PC/Game, Dynamic.
Apply Picture Mode	Adjust current picture mode apply to all source or just current source.
Brightness	Adjust the Brightness level to generate lighter or darker images.
Contrast	Adjust the Contrast level to increase or decrease how bright images appear.
Colour Saturation	Adjust the colour intensity of the picture for a more vibrant image.
Aspect Ratio	Adjust the Aspect Ratio to stretch or zoom in on your picture.
Backlight	Set the overall brightness of the screen.

Advanced
Picture Settings

 
- **Tint:** Adjust the colours from a green to magenta tint to view the natural skin tones of people.
- **Sharpness:** Adjust how sharp or soft edges of images appear.
- **Adaptive Contrast:** Automatically darken dark areas and lighten light areas of images to see more details.
- **Colour Temperature:** Adjust how warm(red) or cool(blue) the white areas of an image appears.
- **Overscan:** Change the video size settings to slightly crop the edges of the displayed image.
- **Noise Reduction:** Improve how clear the picture appears by reducing noise.
- **Colour Tuner:** Adjust the Colour, Hue, Saturation and Brightness of colour settings.
- **White Balance:** Adjust the intensity of red, green and blue lights to view the true colours of all images in the picture.
- **Display:** Adjust advanced picture settings in the component source.

Restore Default
Picture Settings

Restore all the picture settings in the current picture mode to the factory default values.


2.3 Using the Sound Menu

The sound settings allows the user to optimize the output audio sounds of the TV.

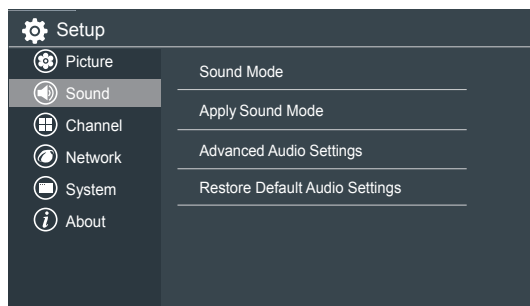

Sound Mode	Select a preset sound mode to suit the type of content you are listening to.
Apply Sound Mode	Adjust current sound mode to apply to all source or just current source.
Advanced Audio Settings	<p>Tune the audio settings and quality of the TV.</p> <ul style="list-style-type: none"> • Headphone Mode: Change the way audio is sent through the type of device that's connected to your TV Audio Out port. • Headphone Volume: Independently adjust the volume of audio out devices. • Digital Audio Out: Select the digital audio output format that best suits the audio device type. For example, choose RAW (which is uncompressed audio in RAW form) if you have 5.1 Channel Surround Sound Speaker set up. Choose PCM if you have an amplifier that does not support Dolby Digital technology. • Digital Audio Delay: Adjust the digital audio output delay time to sync sound from an external speaker with the images on the TV. • Lip Sync: Synchronize the displayed image with the audio output. • Balance: Adjust the left and right speaker strength to optimize audio for a specific location. • Equalizer: Boost the volume at different frequencies. • Audio Type: You can select Normal or Visually Impaired. • Voiceover Out: You can select All, Speaker or Headphone. • Voiceover Volume: Adjust the Voiceover Volume. (Only available when Audio Type is Visually Impaired) • TV Speaker: Disable TV speaker when you are using sound bar, ARC or any other external audio amplifier.
Restore Default Audio Settings	Restore all of the audio settings in current audio mode to the factory default values.

 2.4 Using the Channel Menu

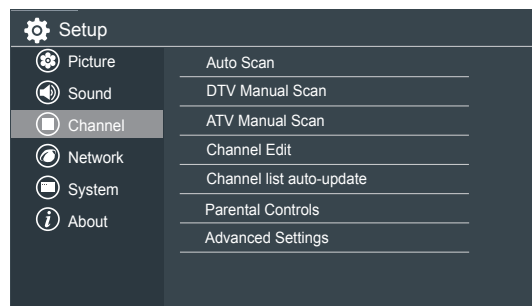


<p>Auto Scan</p>	<p>Automatically scan for channels to view programming from your TV source.</p> <ul style="list-style-type: none"> • Reception: Satellite You can set the Operator, Satellite Mode, Mode setup. • Reception: Cable Operator: You can select UNITYMEDIA, TELECOLUMBUS or Others. <p>NOTE</p> <ul style="list-style-type: none"> • Some countries do not have a operator or show different operators. <p>Channel: You can select All Channels or Free Channels. Scan Mode: You can select ATV, DTV or ATV+DTV. Search Mode: You can select Frequency Scan or Quick Scan. Network ID: You can select auto or 0 (If you select 0, you can manually enter the network ID, click Save). LCN: You can select on or off. (Only available in certain countries) <ul style="list-style-type: none"> • Reception: Antenna Scan Mode: You can select ATV, DTV or ATV+DTV. Channel: You can select All channels or Free channels. LCN: You can select on or off. (Only available in certain countries) </p>
<p>DTV Manual Scan</p>	<p>Allows you to make manual fine tuning adjustments of the channel under DTV mode.</p> <p>When the DTV Manual Scan screen appears, press the [< / >] buttons to select Antenna, Cable or Satellite and then set the corresponding parameter. Press the Search to commence the search of that channel. When the signal has been tuned, signal strength will be displayed on the screen.</p>
<p>ATV Manual Scan</p>	<p>Allows you to make manual fine tuning adjustments if the channel reception is poor under ATV mode.</p> <ul style="list-style-type: none"> • Tuner Mode: You can select Antenna or Cable. • Frequency: Input the channel frequency which you desired. • Picture System: Select the Colour System: Auto, SECAM, PAL, NTSC. • Sound System: Select the sound system: B/G, D/K, L, L', M, I.

Menu


<p>Channel Edit</p>	<ul style="list-style-type: none"> • Display the channels: Click to check the need to display or hide channels. Edit the channels: <ul style="list-style-type: none"> • Delete/undo: Press the [RED] button to delete the selected channel or resume the channel from the list of deleted channels. • Move: Press the [GREEN] button to move the selected channel. • Filter: Press the [BLUE] button, the filter screen will pop up. Press the [OK] button to select Options, the channel list can be updated. Edit the favorite channels: <ul style="list-style-type: none"> • Add/Delete: Press the [RED] button to add the selected channel to the favorite list or delete the channel from the favorite channel list. • Move: Press the [GREEN] button to move the selected channel. • Filter: Press the [BLUE] button, the filter screen will pop up. Press the [OK] button to select Options, the channel list can be updated. • Export to USB: Allows you to export the current channel list to a USB storage device. • Import from USB: Allows you to import a previously exported channel list via a USB storage device.
<p>Channel list auto-update</p>	<p>This mode allows the users to automatically update the channel list. This option is available by setting the Channel List Update Switch to On.</p>
<p>Parental Controls</p>	<p>Turn On Parental Controls to block children from being able to view certain programs.</p> <ul style="list-style-type: none"> • Locks: Enable or disables all locks. All selected locks can be turned off for parental viewing and easily turned on again. • Block Time: Block certain channels and programs during certain periods of time. • Channel Block: Block programs by channels when you turn On the Parental Controls feature. • Program Block: Block certain programs when you turn On the Parental Controls feature. • Input Block : Block content from devices that are connected to certain TV ports. • Restore Parental Control Defaults: Restore Parental Controls back to the factory default setting.
<p>Advanced Settings</p>	<ul style="list-style-type: none"> • EPG Mark: Users can choose colours to indicate different genres in the EPG for quick and easy viewing. • Common Interface: View the CI card information. <input checked="" type="checkbox"/> NOTE: <ul style="list-style-type: none"> • CI Card is not supported in all regions so this option may not be available. • CI card PIN: Set the CI CAM pin. <input checked="" type="checkbox"/> NOTE <ul style="list-style-type: none"> • CI Card is not supported in all regions so this option may not be available. • CAM Profile Search: Operator profile search.

 2.5 Using the Network Menu

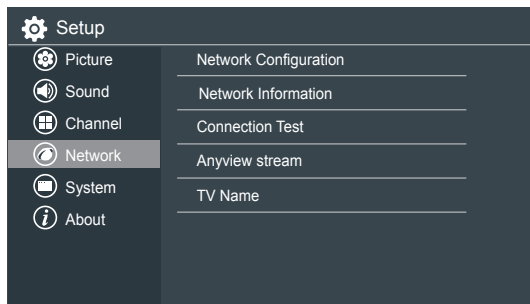

	<p>You can set the TV network by selecting Configuration and press the [OK] button to enter the submenu.</p> <ul style="list-style-type: none"> • Connection Type: Ethernet Choose a wired network connection to access the Internet. • Ethernet: Display the network connection status. • IP Setting Mode: Configure the IP setting for your network connection. • Connection Type: Wireless Choose a wireless network connection to access the Internet. • Advanced Settings: Configure the advanced wireless network settings for the TV. • Available Networks: You can add wireless network or refresh wireless network. • Connection Type: Off Turn off the Internet connection.
Network Configuration	
Network Information	View information about your network connection.
Connection Test	Test network connection is available or not.
Anyview Stream	Share video, music or other content from another device on to your TV screen.
TV Name	Choose a name for your TV. The name will be shown to devices that are available for sharing data.

 2.6 Using the Setup Menu

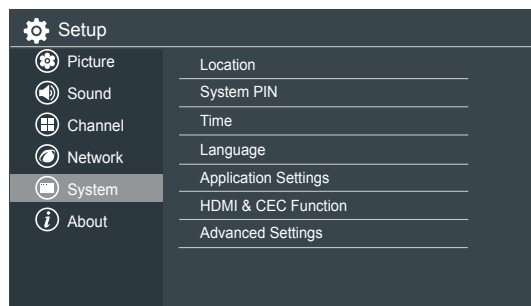

Location	Choose the location from where you will watch your TV.
System PIN	Change your PIN that you use to access Parental Controls, Auto Channel Scan and Reset To Factory Default. NOTE • If you forget your password, call the relevant customer service number for your country.
Time	Set the current time based on your location. <ul style="list-style-type: none"> • Time Mode: Set the date and time to automatically sync with internet/broadcast or manual setup by yourself. • Time Zone: Select your time zone. NOTES <ul style="list-style-type: none"> • Some countries have only one time zone, this option does not allow adjustment. • Daylight Savings: Select whether to apply Daylight Savings Time to the TV. • Date/Time: Set the Date and Time. • Time Format: Set the time to display in a 12 or 24-hour format. • Power On Timer: Enable the Power On Timer to Off, Once or Daily. • Power Off Timer: Enable the Sleep Timer to Off, Once or Daily. • Sleep Timer: Set the Sleep Timer to automatically turn the TV Off within a specified time: Off, 10 Minutes, 20 Minutes, 30 Minutes, 40 Minutes, 50 Minutes, 60 Minutes, 90 Minutes and 120 Minutes.
Language	Adjust the default language settings for the TV.
Application settings	Remove this TV from your Netflix account. Please contact Netflix if you want to stop being billed for your service.

HDMI & CEC
Function

Configure how to control CEC-enabled devices with your TV remote.

- **CEC Control:** Allow the TV to automatically control CEC devices connected to the TV via HDMI.
- **Device Auto Power Off:** Automatically turn off HDMI CEC devices when the TV is turned off and INlink is set to On.
- **TV Auto Power On:** Automatically turn on the TV when the HDMI CEC device is powered on, if allowed by the device.
- **Audio Receiver:** Allow the Audio Receiver to send audio over an HDMI cable and back to or from your TV.
- **Device Connect:** Allow CEC-enabled devices to communicate with each other when connected through an HDMI cable.
- **CEC Device Lists:** View a list of all CEC-enabled devices.

 **NOTES**

 
- HDMI cables must be used to connect HDMI CEC-compatible devices to your TV.
- The HDMI CEC feature of the connected device must be turned on.
- If you connect an HDMI device that is not HDMI CEC-compatible, all the HDMI-CEC control features do not work.
- Depending on the connected HDMI device, the HDMI-CEC Control feature may not work.

Advanced
Settings

Access the Advanced Settings menu.

- **Menu Timeout :** Set the amount of time that you'd like for the menu to display : 10s , 20s , 30s , 60s or Off.
- **Auto Sleep:** Set the amount of time that you'd like for TV auto power off without any activity.
- **PVR & T.Shift:** Set the disk partition and storage space size where you want to store your PVR/Time shift contents.
Start in advance: Set PVR recording time in advance.
Delay ending: Set PVR recording time in delay.
- **Input Labels:** Edit the input labels.
- **Setup Wizard:** Use the Setup Wizard for instructions to help you set up your TV.
- **Store Mode:** Select store mode to effect EPOS and other demo functions.

2.7 Using the About Menu

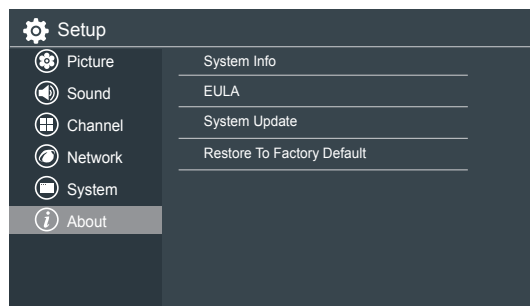

System Info	View system information.
EULA	Read the Hisense Legal Disclaimer.
System Update	<ul style="list-style-type: none"> • Auto Firmware Upgrade: Set your TV to automatically receive the latest firmware. • Check Firmware Upgrade: Check to ensure that your TV has received the latest firmware. • Check OAD Upgrade: Check to ensure that your TV has received the latest OAD. (Only available in UK.)
Restore To Factory Default	Restore your TV back to the factory default.

3.1 Getting familiar with the Home screen

The simple design of the **Home** screen menu makes it easy to navigate. It accesses **Recommended**, **My Apps**, **Media** or **Input**.

To access the **Home** screen, press the [Home] button on your remote control and use the arrows buttons to make your selection.

NOTE

- The menus are only for reference, may vary slightly from the actual screen.



1 Indicators and Icons on the top of the Home screen

You can always view the current time in the top right corner of the **Home** screen.

If your TV is connected to the Internet through a wireless connection or an Ethernet cable, then an icon will display in the top right corner of the screen. This location makes it very convenient for you to determine if you still have Internet connectivity as you use the TV.

In addition, if you have connected a device (such as a thumb drive) to a USB port and your TV recognizes it, then a device icon will also display in the same area.

2 The recommended applications appear on the Home screen

Each time you access the **Home** screen, the recommended applications will display on the screen. You can quickly enter these applications what you want.

 
3 The navigation bar appear on the Home screen

Press the [Up / Down] buttons to select icons of the navigation bar, you can enter to **Premium**, **My Apps**, **Media** and **Inputs**.

3.2 LiveTV

Viewing Channel information

As you use the [CH+/CH-] button on your remote to scroll through channels, an information banner appears on the top of the screen.

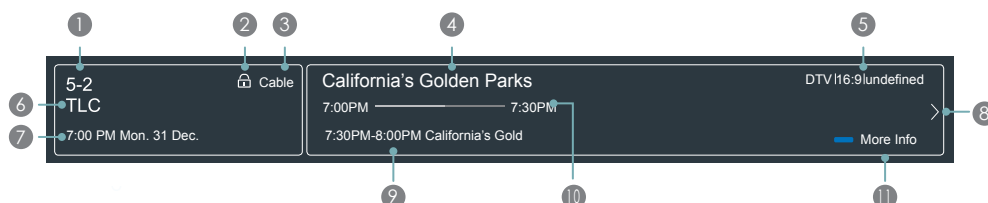

The information banner displays the following information:

- 1 Channel number
- 2 Lock status
- 3 Input
- 4 Program name
- 5 Show identification
- 6 Channel name
- 7 Current date and time
- 8 Prompt
- 9 Beginning and end time of the next program
- 10 Start/Stop time progress bar of the current program
- 11 More info

If you are watching a particular channel, you can also press the up arrow button of your remote to view channel information.

Viewing a channel list

After you have done an automatic channel scan (if you're using an Antenna) or are receiving your channels through a cable provider, you can view your list of channels by pressing [OK] on your remote. You will see the channel list display on the right side of the screen.

Viewing your 'Favorites' list

To view channels that you've added to your Favorites list simply press [OK] on your remote to call out the Channel list.

The channel list appears on the right side of the screen and heart-shaped icons are shown next to the channels that make up your Favorites list.

3.3 Media

Media is a central location for you to upload and view or listen to different types of content (for example, your photos, music and movies) through the following methods:

- A USB thumb drive or hard drive
- Your mobile phone, tablet or other personal device: You can stream movies, pictures and photos that are stored on your personal device and play or view the content on your TV.

When you connect your thumb drive or other personal device to the TV, the TV automatically detects it and displays a device icon in the top right corner of the screen.

Panels that appear on the Media screen

The **Media** screen displays four panels: **Picture**, **Video**, **Music** and **All**.

File formats that may be supported

NOTE: Due to differences in programming tools and other factors, some of the file formats that are listed may or may not be supported.

Medium	File Format
Videos	TRP, M2TS, MKV
Picture	JPG, BMP, PNG, GIF
Music	MP3

Viewing Videos

While viewing videos you will see a number of icons appear at the bottom of the screen. You can use the [D-pad] button of your remote to select these icons that will control the video.

Browsing Content

To browse through content based on the type that you wish to access:



1. Navigate to the appropriate menu tab on the left side of the screen and select **Music**, **Video** or **Picture**. The library of items displays on the right side of the screen.
2. Navigate to the right side of the screen and click on the name of the folder that contains your content.
3. Make your selection to play or view the content.

If you want to close out of the Media center, then press the **[Exit]** button on your remote.

Viewing Pictures as a Slideshow

To view pictures in a slideshow:

1. Navigate to the **Pictures** tab.
2. Click on **Start the Slideshow**.

Press the  button on your screen, the slideshow of your pictures begins to play. To stop the slideshow, press the  button on your screen.

3.4 Apps

Premium

Numerous factory-installed apps are available for you to choose from for your entertainment preferences.

My Apps

AppStore

AppStore contains cloud-based apps optimized for your TV. The apps range from Video, Music, Social Networking, Games and News Information.

Installing an App

Even though your TV has numerous factory-installed apps, there may be others that you'd like to download.

To install an app:

1. From the **Apps** screen, click on the **App Store** icon.
2. Search: Press the **[RED]** button to search what you'd like to download.
3. Install: Press the **[GREEN]** button to install an app.
4. Settings: Press the **[BLUE]** button to set the relevant information.

Removing an App

You can only delete apps that you've downloaded to the TV. Factory-installed apps can not be deleted.

To delete an app:

1. From the **My Apps** screen, use the directional arrows on the navigation buttons of your remote to select the app that you want to remove.
2. Press the **[Red]** on your remote control.
A dialog message displays that asks if you're sure you want to remove the app.
3. Press **[OK]** on your remote.
A confirmation message displays and the icon is removed from the **My Apps** list.
NOTE: If an app is deleted, the information related to that app is also removed.

Moving App Icons around

Select the app you want to move, then press the **[Green]** on your remote control and press **[^ / v / < / >]** to change order.

NOTE

- Apps may be updated without prior notice, please take the actual as standard.
- Some applications may not be available, depending on your TV series and the area you are.

Customizing the name of your TV

If you have several TV's in your home then you may want to customize the name of your TV. By giving your TV a name, it will make it easier for you to identify it when connecting devices to the TV to stream or mirror content.

To customize the name of your TV:

1. Press the **[Settings]** button on your remote to open the Quick Setup menu.
2. Go to **Full menu settings > Network > TV Name**.
3. Select **User Input** and press **[OK]** to bring up the keyboard and begin typing the name.
4. When you are finished, power off the TV and power it back on for the change to take effect.

NOTES

- Hisense does not take responsibility for application services provided by third-party companies, for example their errors or termination.

3.5 Using Anyview Cast to mirror content from your device to the TV screen

The Anyview Cast is an app that enables you to share (or cast) a video, audio or image from your Android-based device to the TV.

From your tablet or phone

To mirror content from your tablet to the TV:

- Press the **Input** button on your remote and select the Anyview Cast app.
- Turn on your Android-based device and go to **Settings > Display > Cast Screen**.

NOTE: Some Android-based devices may not support casting.

- Find your TV in the list of devices that displays and select it.
- Wait for the 'Creating Connection' progress bar to complete on the TV screen and the video or image will display in a moment.

3.6 Software updates for your TV

The software (also referred to as firmware) is part of what powers your TV. We will provide software updates to continuously enhance your TV and correct any issues that may impact your user experience; therefore, we recommend that you keep your TV connected to the Internet to automatically receive updates when they are available.

You can choose to receive updates automatically or check for software updates and install them manually.

Checking for updates automatically

In order for your TV to receive software notification updates automatically, it must be turned 'On' and connected to the Internet or broadcasting signal. The **Auto Firmware Upgrade** setting (which enables your TV to receive the updates automatically) is turned to 'On' by factory default. If you turn the **Auto Upgrade** setting 'Off', it will disable this functionality of your TV.

NOTE

While your TV is on and checking for updates, the program that you are watching will not be interrupted.

Disabling the Auto Firmware

If you do not want your TV to automatically check for updates and to receive notifications when they are available, then:

1. Using your remote, press the  button.
2. Go to **About > System Update > Auto Firmware Upgrade** and turn the feature 'Off'

By doing this, you will have to manually check to see if you have the latest software update.

Checking for the latest firmware / OAD

To manually check for the latest firmware:

1. Using your remote, press the  button.
2. Go to **About > System Update > Check Firmware Upgrade / Check OAD Upgrade**.

Manually installing software updates

If you turned the **Auto Firmware Upgrade** feature Off then you'll need to manually install the software.

1. If the **Check Firmware Upgrade** screen shows there is the latest version, select the **Update** icon.
2. After the software downloaded, select the **OK** icon to start the update progress.

4.1 Troubleshooting

If you have any questions about the TV, first refer to this list. If none of these troubleshooting tips apply, please visit Germany: www.hisense.de

Italy: www.hisenseitalia.it

Spain: www.hisense.es

UK: www.hisense.co.uk

Then click on Support, or contact the call centre listed in this manual.

SYMPTOMS	POSSIBLE SOLUTIONS
No sound or picture.	<ul style="list-style-type: none"> ● Check if the power cord is plugged into a powered AC outlet. ● A power switch on the right side bottom edge of the front panel must be turned on. Press the [POWER] button in the remote control to activate the unit from Standby.
I have connected an external source to my TV and I get no picture and/or sound.	<ul style="list-style-type: none"> ● Check for the correct output connection on the external source and for the correct input connection on the TV. ● Make sure you have made the correct selection for the input mode for the incoming signal.
When I turn on my television, there is a few second delay before the picture appears. Is this normal?	Yes, this is normal. That is the TV searching for previous setting information and initializing the TV.
Picture is normal, but no sound.	<ul style="list-style-type: none"> ● Check the volume settings. ● Check if Mute mode is set "on".
Sound but no picture or black and white picture.	<ul style="list-style-type: none"> ● If black and white picture first unplug TV from AC outlet and re-plug after 60 seconds. ● Check that the Colour is set to 50 or higher. ● Try different TV channels.
Sound and picture distorted or appear wavy.	<ul style="list-style-type: none"> ● An electrical appliance may be affecting TV set. Turn off any appliances, if interference goes away, move appliance farther away from TV. ● Insert the power plug of the TV set into another power outlet.
Sound and picture is blurry or cuts out momentarily.	<ul style="list-style-type: none"> ● If using an external antenna, check the direction, position and connection of the antenna. ● Adjust the direction of your antenna or reset or fine tune the channel.
Horizontal/vertical stripe on picture or picture is shaking.	Check if there is interfering source nearby, such as appliance or electric tool.
The plastic cabinet makes a "clicking" type of sound.	"Click" sound can be caused when the temperature of the television changes. This change causes the television cabinet to expand or contract, which makes the sound. This is normal and the TV is OK.

Other Information

Remote control does not work.	<ul style="list-style-type: none"> ● Confirm that TV still has power and is operational. ● Change the batteries in the remote control. ● Check if the batteries are correctly installed.
Smart Television with wireless network capability Wi-Fi fail to join a local network.	<ul style="list-style-type: none"> ● Configure the local wireless router or access point for WPA-PSK security before attempting to connect the TV to the Wi-Fi network. ● Follow instruction in the User Manual of the television to setup a wireless connection.

☒ NOTES

- This TFT LED panel uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.
- Images throughout this document are for illustrative purposes only and may differ from the actual product.

4.2 Service Contact

Country	Hotline Number	Website
Austria	+43-0820420411	www.eseco.at
Belgium	+32 (0)11 281780	www.servilux.be
United Kingdom	+44 0345 610 4199	www.hisense.co.uk
Denmark	+45-44503039	www.elektronik-centret.dk
France	+33 1 76 49 05 05	www.hisense.fr
Germany	+49-(0)0800 9000169	www.elesco-europa.com
Hungary	+36-614772070	www.aagservice.hu
Ireland	+44 28 3832 6119	www.craigavon.tv
Italy	+39-800 321 999	www.hisenseitalia.it
Norway	+47-815 81 333	www.infocare.no
Spain	+34-902027419	www.hisense.es
Sweden	+46 911 21 14 50	www.assistkedjan.se
Switzerland	+41 (0) 900782400	www.stagicp.ch
The Netherlands	+31 (0) 77-3060708	www.technorep.nl
Portugal	+351 707 780 368	www.hisense.es

www.hisense-europe.com www.hisense.com/en

For more information, please contact the service company of Hisense in your country.

Recycling/Licenses

WEEE (Waste Electronic Electric Equipment)
European Directive 2012/19/EU



This symbol on the product or on its packaging indicates that this product must not be disposed of with your household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Batteries



In accordance with the Battery Directive, used batteries should not be disposed of in the domestic waste. Dispose your batteries in the collection containers specific for this purpose in retail stores.

ROHS (Restriction of Hazardous Substance)
European Directive 2011/65/EU



This European directive limits the use of dangerous and hazardous substances which are difficult to recycle. This allows recycling easily the EEE and contributes to the safeguard of the environment. Substances included in this product match to the RoHS directive.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.