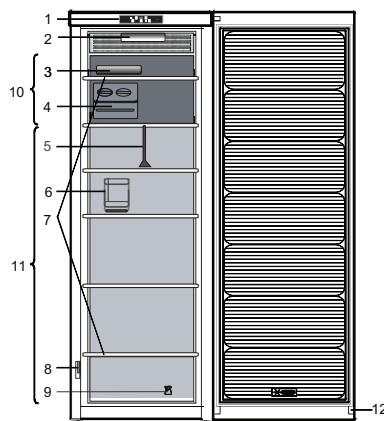 


Read the Instructions for Use carefully before using the appliance.



1. Control panel *
2. Light (LED system) *
3. Ice packs*
4. Ice Mate* or Ice tray*
5. Drawer divider*
6. Bottle rack*
7. Glass shelves
8. Rating plate with commercial name *
9. Door reversibility kit *
10. Area for freezing fresh food or to store frozen food
11. Area for storing frozen foods
12. Door seal

* Available on selected models

HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically. After starting the appliance, wait at least 4-6 hours before placing food into the appliance. When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second.

The default (factory) values of the freezer compartment settings light-up.

HOW TO REVERSE DOOR SWING

- see enclosed Instructions for Use (Version_2)

Is recommended to reverse door swing by two persons.

 
There is not foreseen door reversibility for:

- models with integrated handle
- models with glass panel on the door.

Specifications, technical data and images may vary from model to model.

To receive the assistance call the number shown on the warranty booklet or follow the instruction on the web site www.hotpoint.eu

PROFREEZE FREEZE CONTROL indicator
ProFreeze / Freeze Control is an advanced technology that reduces freeze burns and food preserves its original quality and color.

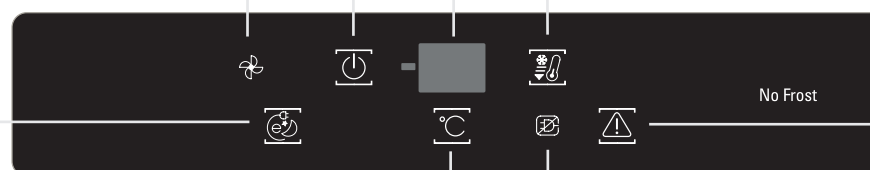 
ON/STANDBY button
To put the product in Stand-by, press and hold for 3 seconds. All the icons turn off except On/Standby indicator . To reactivate the appliance press once (briefly) this button.

FAST FREEZE button
To activate/deactivate the Fast Freeze function simply press Fast Freeze button (see the Instructions for Use). The Fast Freeze function switches off automatically after 50 hours.

ECO NIGHT FUNCTION (NIGHT TIME RATE) / FREEZE CONTROL button
Eco Night Function
Press to activate/deactivate the Eco Night function. The Eco Night function enables appliance energy consumption to be concentrated in the reduced rate hours, generally at night (see the Instructions for Use).

TEMPERATURE DISPLAY

STOP ALARM button
Press in case of alarm (see the below Alarm Table).


 




 



TEMPERATURE SETTING button
The appliance is normally factory-set for operation at the recommended temperature of -18°C. The internal temperature can be adjusted between -16°C and -24°C, proceeding as follows:

- Press to change the set point (°C). The storage temperature can be changed by -1°C with each pressure of the button: the value changes cyclically between -16°C and -24°C.

BLACK OUT ALARM
Long Black-out Alarm indicator. (see the Instructions for Use)

ALARMS TABLE

ALARMS TYPE	Signal	Cause	Cure
Door open alarm	The acoustical alarm is activated and the Alarm Indicator  blinks.	The door has remained open for more than 2 minutes.	Close the door or press the Stop Alarm to mute the acoustical alarm.
Temperature alarm	The Temperature display blinks (°C) and the Alarm Indicator  remains on.	The inside temperature is not adequate.	Press the Stop Alarm button  ; the acoustical alarm stops, the Temperature Display (°C) blinks and the Alarm Indicator  remains on until a temperature < -10°C is reached.
Long Black-Out alarm	The Black Out Alarm icon  remains on, the Alarm indicator  blinks and the Temperature display (°C) blinks, showing the maximum temperature reached during blackout.	Prolonged power failure, able to cause the inside temperature to increase to 0°C.	Press the Stop Alarm button  ; the acoustical alarm stops, the Temperature Display (°C) blinks and the Alarm Indicator  remains on until a temperature < -10°C is reached.
Malfunction	The letter "F" blinks on the display (°C).	Product malfunction.	Contact the After-sales Service.