SAVANNAH DINING CHAIR

Assembly Instructions




Start, here

is some

helpful advice

- We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
- If you follow the instructions carefully the end result should be worth the effort.
- Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
- Assemble this product on a carpet.
- To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.
- We recommend a periodic check on all fixing points to make sure they remain fully tightened.
- Keep glue and fittings out of children's reach.

Component parts and fittings contained in the box

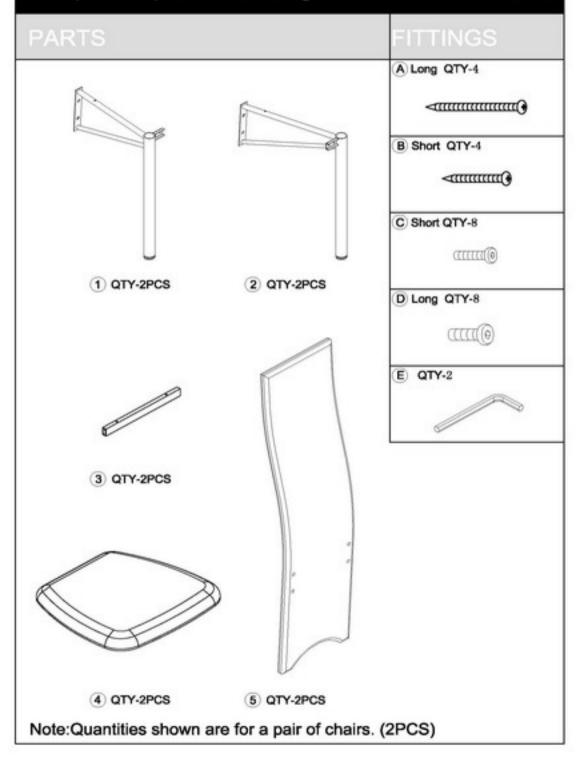


ASSEMBLY




BEFORE BEGINNING
ASSEMBLY, PLEASE NOTE
THE ENDS OF SEAT
SUPPORT STRETCHER (3)
AER CUT AT AN ANGLE.
(SEE EXPLODED DRAWING
FOR ASSEMBLY
GUIDANCE).

1)ASSEMBLE STRETCHER

③ IN BETWEEN FRONT
LEG FRAMES ① AND ②
USING FIXINGS ⑥

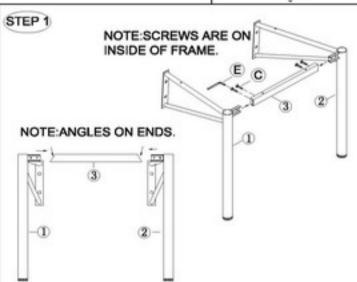


1) ASSEMBLE FRONT LEG ASSEMBLY TO CHAIR BACK USING FIXINGS (1).

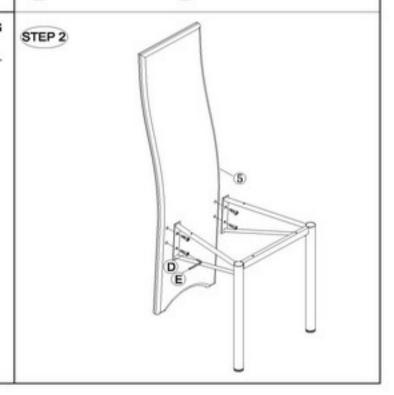


ASSEMBLY



- 1) PLACE SEAT PAD ④
 UPSIDE DOWN ON A
 CLEAN FLAT SURFACE
 (I.E EDGE OF TABLE)
- 2) CAREFULLY ALIGN THE FRAME ON THE SEAT PAD AND SECURE USING LONG SCREWS (A) AT THE FRONT (THROUGH SEAT SUPPORT (3), AND SHORT SCREWS (B) ON EACH SIDE.

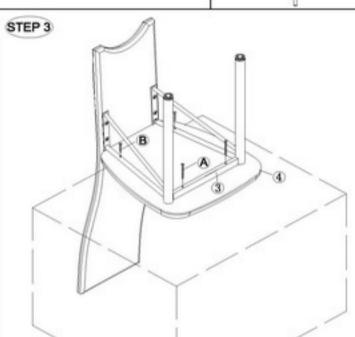

1) STAND THE UNIT UPRIGHT AND ADJUST THE HEIGHT ADJUSTABLE FEET TO ACHIEVE A STABLE BASE

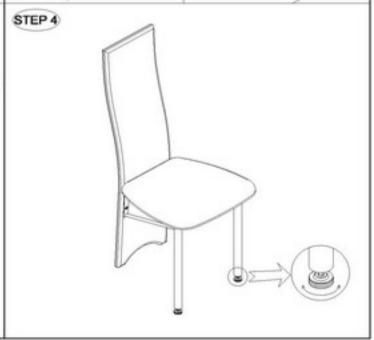

IMPORTANT INFORMATION-DO NOT REMOVE

Foam cushions

Reversible cushions should be turned regularly Switch positions where possible

This will help prevent excessive soiling and wear to one side

OR

Fibre cushions

Must be given a vigorous plumping on a daily basis ideally with the outer case zip opened to get air into the fibres and ensure the case fills the cushions to the correct shape. If plumping is not carried out. The fibres can form a mass causing a flat or uneven appearance:

CARE INFORMATION

Regular cleaning

Vacuum or use a soft brush weekly as accumulated dust and dirt will wear and dull the material

prolonged sunlight and heat

Avoid prolonged exposure to sunlight as this can cause fabric to fade. Protect it by drawing curtains or blinds Avoid placing furniture too close to fires or radiators

Zips

Zips are fitted to assist in the ease of manufacture and do not necessarily mean the cover is removable for washing or cleaning

Loose Threads

Loose threads should be cut not pulled as this may unravel the weave

Beware of sharp or hot objects

Buckles keys toys and jewellry can easily snag on the fabric and cause tears and pulls

Do not allow pets to claw or climb on the furniture

Hot objects, such as heat from mugs or cups can permanently disfigure upholstery

Excessive force

Do not sit on the edge of cushions or arms as this can cause permanent damage

Restrain children from climbing or jumping on the furniture especially in shoes

Awoid

Wearing dark clothing especially denim jeans

Leaving newspapers lying on the furniture Both of the above can result in dyel print being ground into the

fabric and can result in cream /pale finishes going grey in colour

CLEANING INFORMATION

Accidental spillage

Where possible:

Always tip liquid spillages from the surface of the fabric

Blot excess liquid with tissues or tollet roll

If necessary sporge the area but do not over wet as water can

shrink fabrics or their backing fibres

Remember to damp a complete panel to avoid marking

Always remove stains in the direction of the pile .if any

BE GENTLE - Do not rub or scrub as this only spreads the stain and can damage fabrics

General dirt and stains

Use a clean damp cloth(not wet) and if necessary use a gentle cleaning aid

Never use hot water as this can set stain into the fabric

Do not use detergents as these can cause colour loss and leave sticky residues

Follow cleaning symbol guidelines as shown below

Grease or oil based stains

Use a proprietary spot cleaner working from the edge of the stain inward to avoid spreading

If possible, treat the stain from the wrong side of the fabric and never use a hard scrubbing action

Water based stains

 
Use a specialist upholstery cleaner/shampoo If a specialist cleaner is not available a very weak(2%) Solution of washing powder can be sued in hot or cold water

- . Use the mixture sparingly
- Dab gently from the outer edge, inward
- . Dab out shampoo afterwards using warm water

 
DO NOT SOAK

Cleaners are available from most supermarkets and hardware stores BEFORE USING ANY CLEANING AIDS PLEASE READ THE INSTRUCTIONS CAREFULLY AND TEST ON A HIDDEN AREA FIRST

Use of pictorial cleaning guidelines is recommended here but cannot comtradict anything previously advised in writing












OPTIONAL: F&F label, including Batch ID NO.and date of manufacture. Fabric composition.

Savannah Dining Chair

Assembly Instructions - Please keep for future reference

602/5326

602/3988

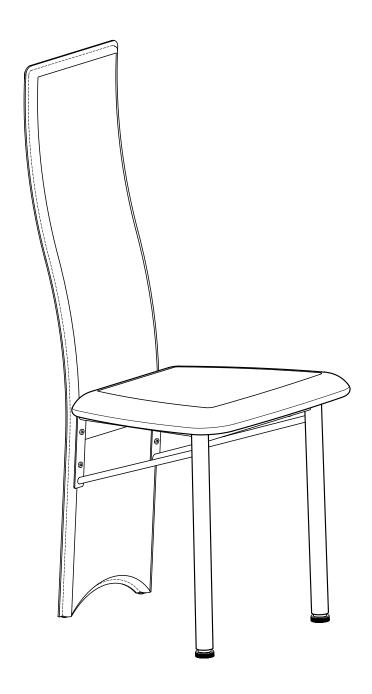

Dimensions

Width - 37.5cm Depth - 54cm

Height - 106.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Dispose of all packaging carefully and responsibly.
- Keep these instructions for further use.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

• To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.

Cleaning Guidance


- Minor stains and spillages should be removed immediately from cushion fabric, by wiping over lightly with a damp cloth and mild soapy water.
- Light marking can also be removed using this method.
- To remove more stubborn stains or marking, a good quality proprietary domestic fabric cleaner can be used, although it should first be tested on and inconspicuous area of the fabric.

Care and maintenance


- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Parts

Please check you have all the parts listed below

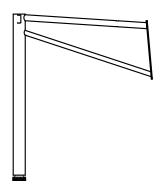

Left leg frame x 2 (44 x 37cm)

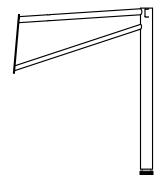


Right leg frame x 2 (44 x 37cm)



3 Stretcher x 2 (30 x 2.6cm)



4 Backrest x 2 (106 x 27cm)

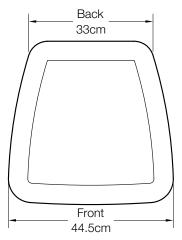


Seat pad x 2 (44.5 x 44cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline:** 08456 400800

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

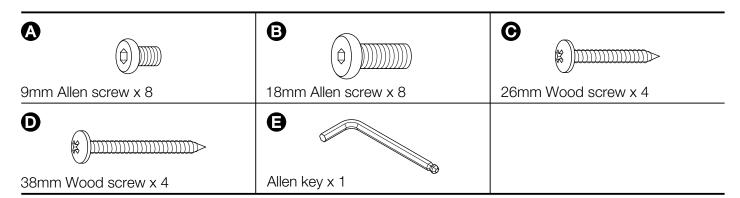

Tools required

 

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Assembly Instructions


Step 1

Attaching legs

Assemble stretcher 3 in between left and right leg frames 1 and 2 using screws A.

Note: Ensure the arrow label on stretcher **3** is facing 'up' as shown.

Note: Do not fully tighten screws **A**.

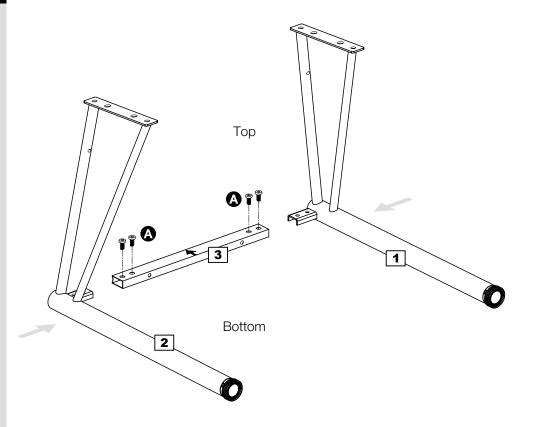

Step 2

Attaching backrest


Place backrest 4 down onto a clean flat surface.

Note: fixing holes must be facing up.

Turn the leg assembly over and place it onto the backrest 4 as shown.

Secure to the backrest using screws **B**.

Note: Do not fully tighten screws **3**.

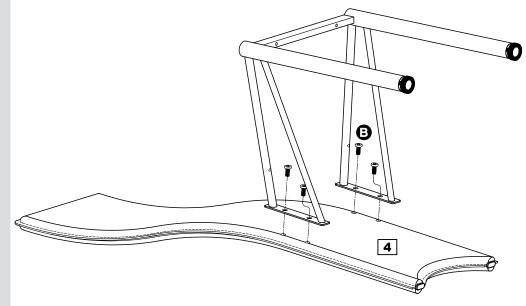

Assembly Instructions

Step 3

Attaching seat pad

Place seat pad **5** upside down onto a clean flat surface (edge of table top).

Align chair frame on top of seat pad and secure using screws **G** and **D**.

Note: Longer wood screws **()** go through stretcher **(3)** at the front.

Step 4


Turn the chair upright

Stand the chair upright.

Whilst applying a firm downward pressure to ensure the chair is stable, fully tighten <u>all</u> screws.

If necessary, stability can be further adjusted using the adjustable front feet.

Assembly is complete.

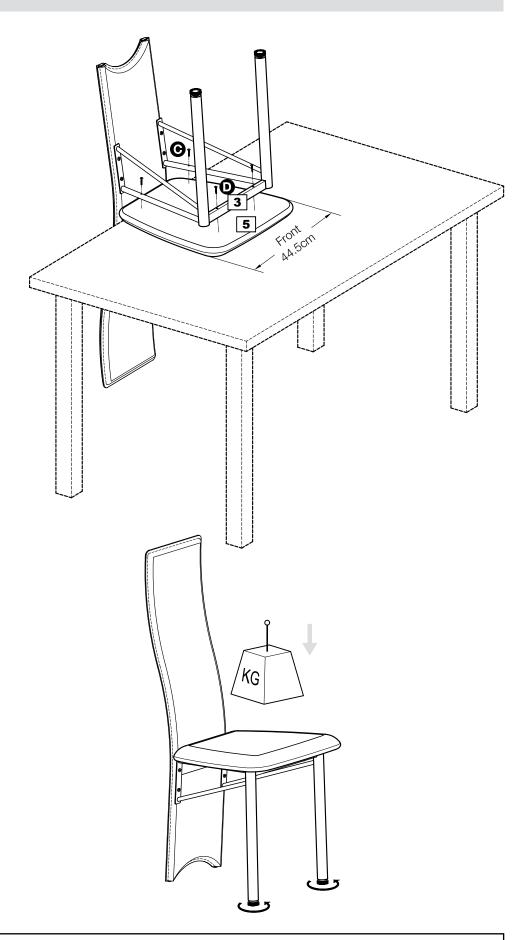

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800** Home Retail Group. 489-499 Avebury Boulevard. Saxon Gate West. Central Milton Keynes. MK9 2NW