 


DINING FURNITURE

Dining Chair

Easy Assembly Instructions

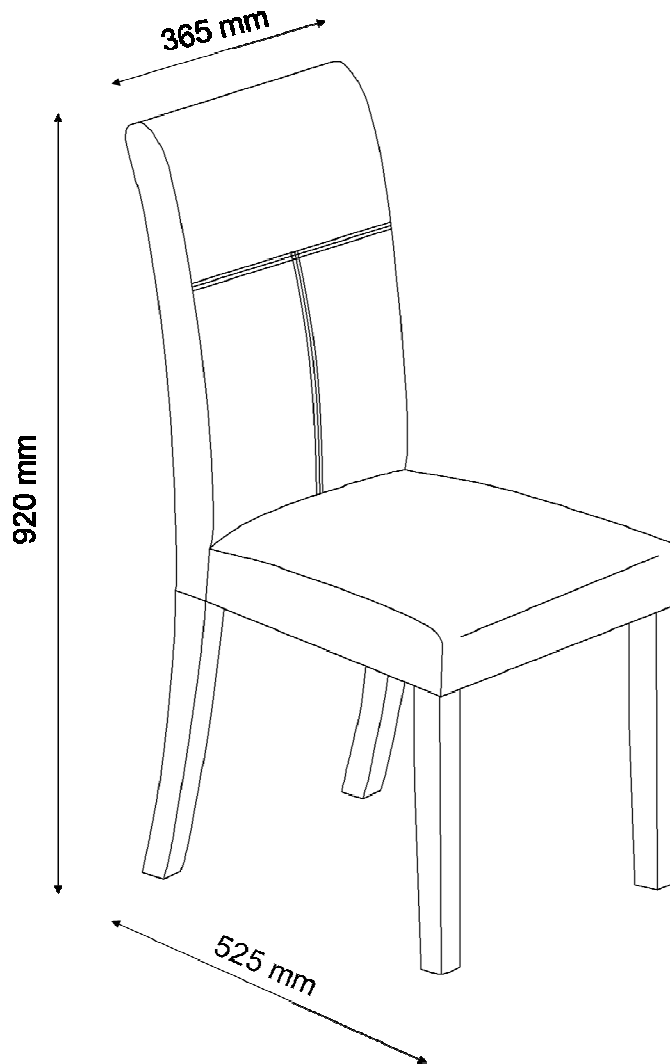

 
 
 
 
 
 
Before you start, here is some helpful advice

1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
3. Assemble this product on a carpet.
4. All you will need to assemble this unit is a screwdriver and light hammer.
5. Keep glue and fittings out of children's reach.

Argos Ltd MK9 2NW

In the unlikely event that this product has missing or damaged parts, please call 0845 640 0800 to obtain spares.

Component parts and fittings contained in the box

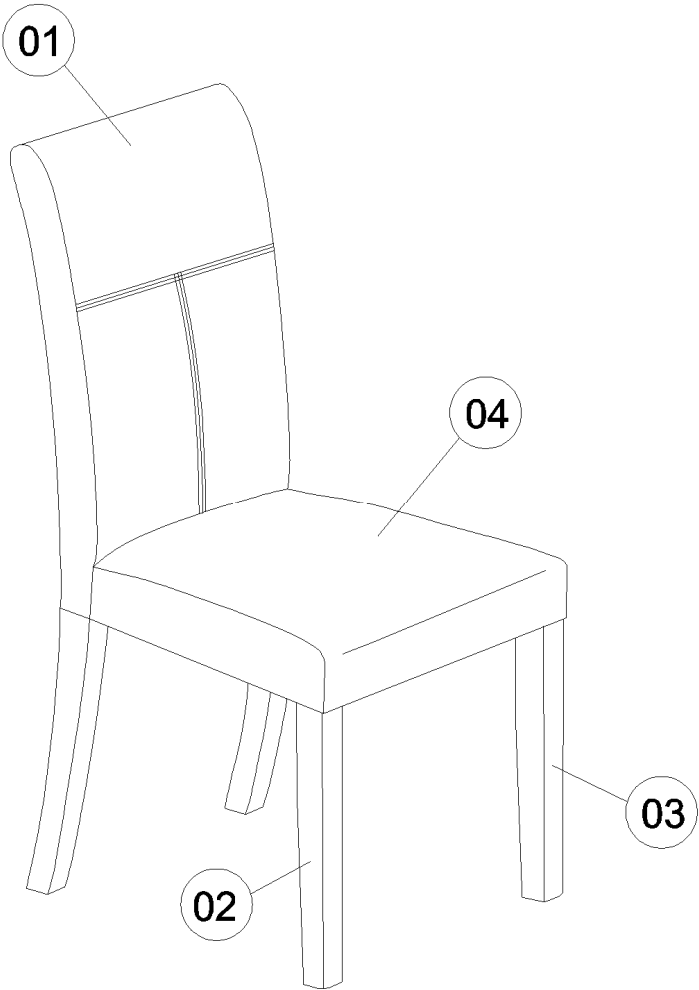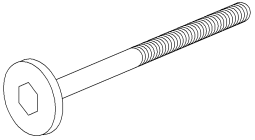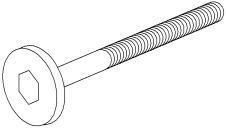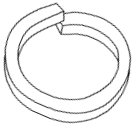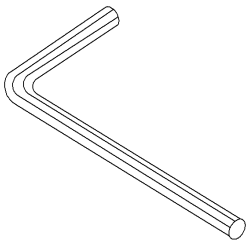Chair	Fittings
	<p>(A) Bolt 90 mm 8 pcs</p> 
	<p>(B) Bolt 55 mm 10 pcs</p> 
	<p>(C) Washer 18 pcs</p> 
	<p>(D) Spring washer 16 pcs</p> 
	<p>(F) Hex Key 1 pc</p> 
	<p>Total: 08 Parts for 2 chairs</p>

ASSEMBLY - STAGE ONE



Chair Assembly

 
1. Locate the corners of the box seat opposite to the center hole.

Insert the legs 02 and 03 into the corners of the box seat.

Insert two bolts B, spring washers D and washers C through the each corner block of the box seat 04.

Tighten the bolts.

1

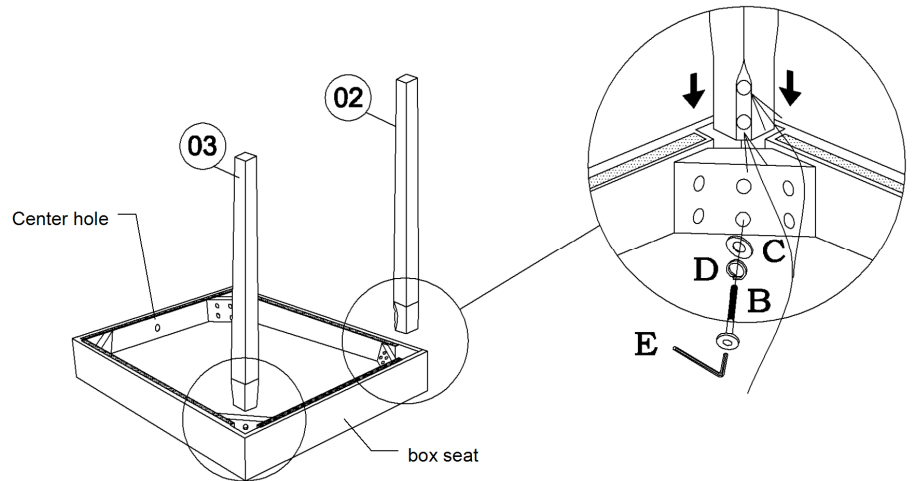


2. Place the box seat on the back frame 01.

Assemble the bolt B and washer C onto the back frame.

Do not tighten the bolt at this point.

 2

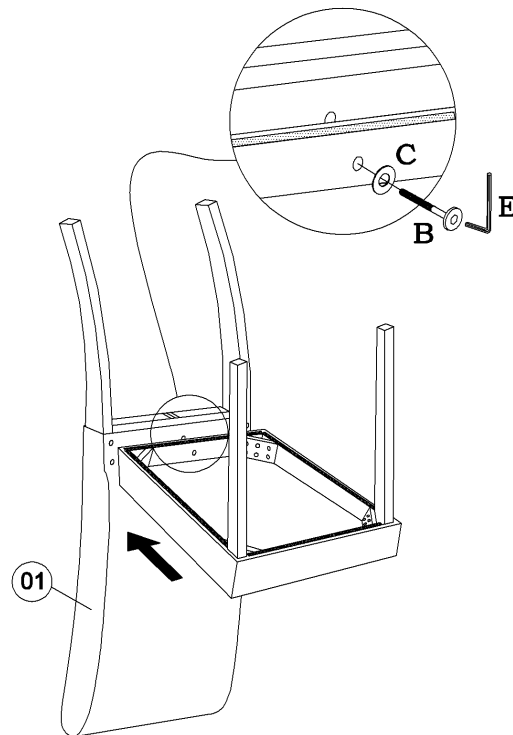

ASSEMBLY - STAGE ONE

 


Chair Assembly

- 3.** Assemble two bolts A, spring washers D and washers C through each corner block of the box seat to the back frame.


Do not tighten the bolts at this point in time.

3

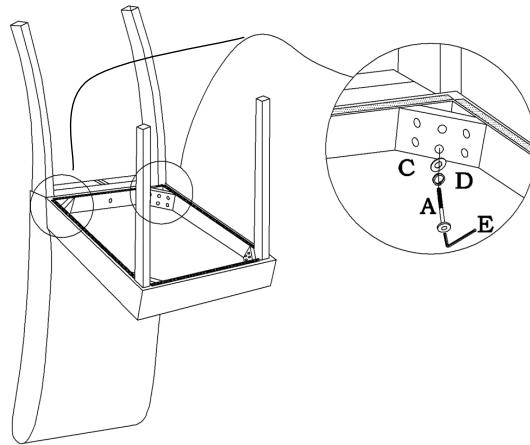

- 4.** Carefully turn the chair over, and put the chair on the floor.

 4

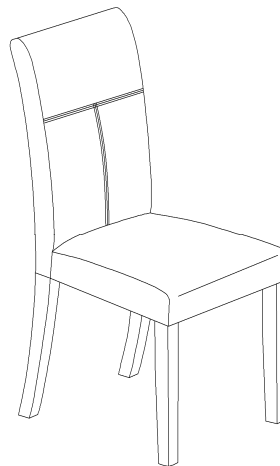

- 5.** Tighten each loose bolt a little at a time while making sure the chair remains level. Repeat until all loose bolts are tight.

Dining Chair

Assembly Instructions - Please keep for future reference

603/4135

 
603/2333

603/2900

603/0452

602/9834

603/2364

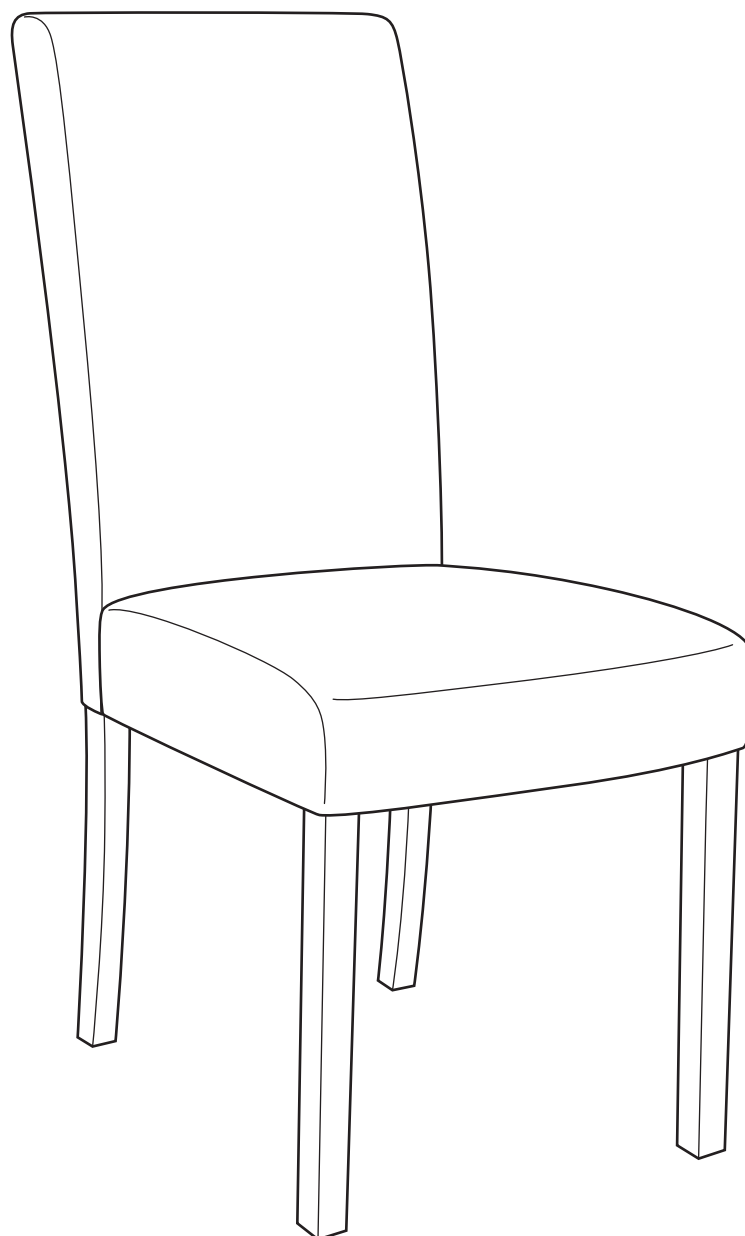

Dimensions

Width - 44cm

Depth - 54cm

Height - 92cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Assemble this product on a flat surface.
- Assemble all parts loosely before tightening any bolts.
- Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

- Discard all extra fittings and keep fittings out of reach of children.
- Unit weight: 4.9kgs.
- Maximum safe weight of user: 110kgs.
- Retain Assembly Instructions for future reference.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Warnings

- This product should only be used on firm, level ground.
- Make sure the legs remain in contact with the ground.
- Do not stand on the product.

 
Care and maintenance

- Please clean the unit surface using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.
- Do not use any abrasive materials when cleaning.
- From time to time check that there are no loose bolts on this unit.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the parts listed below

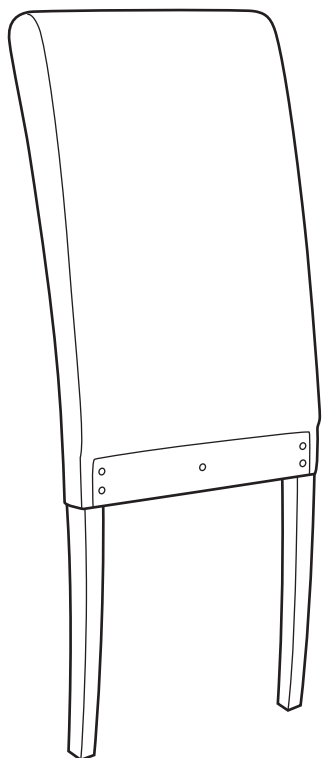

1 Backrest
(36 x 10 x 92cm)

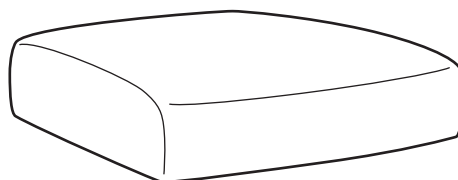 

2 Seat
(43.5 x 41 x 9.5cm)

  
 

 



3 Leg x 2
(3 x 3 x 43cm)


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<p>A </p> <p>M6 x 85mm Bolt x 4</p>	<p>B </p> <p>M6 x 55mm Bolt x 5</p>	<p>C </p> <p>Spring washer x 9</p>
<p>D </p> <p>Washer x 9</p>	<p>E </p> <p>Allen key x 1</p>	

 Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Attaching legs

 
 
Place the seat **2** upside down on a flat protected surface.

Insert the legs **3** into the holes of the seat as shown and fix using bolts **B**, spring washer **C** and washers **D**. Tighten the bolts using allen key **E**.



Important:

Do not fully tighten bolts at this stage.

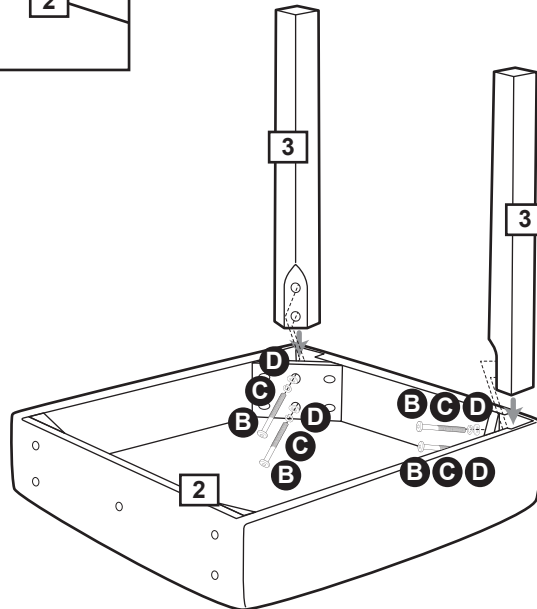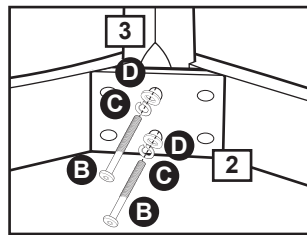

Step 2

Attaching backrest

 
 
Place the backrest on a flat protected surface.

Position the seat **2** on the backrest **1** as shown and fix using bolts **A** & **B**, spring washers **C** and washers **D**. Tighten bolts using allen key **E**.



Important:

Do not fully tighten bolts at this stage.

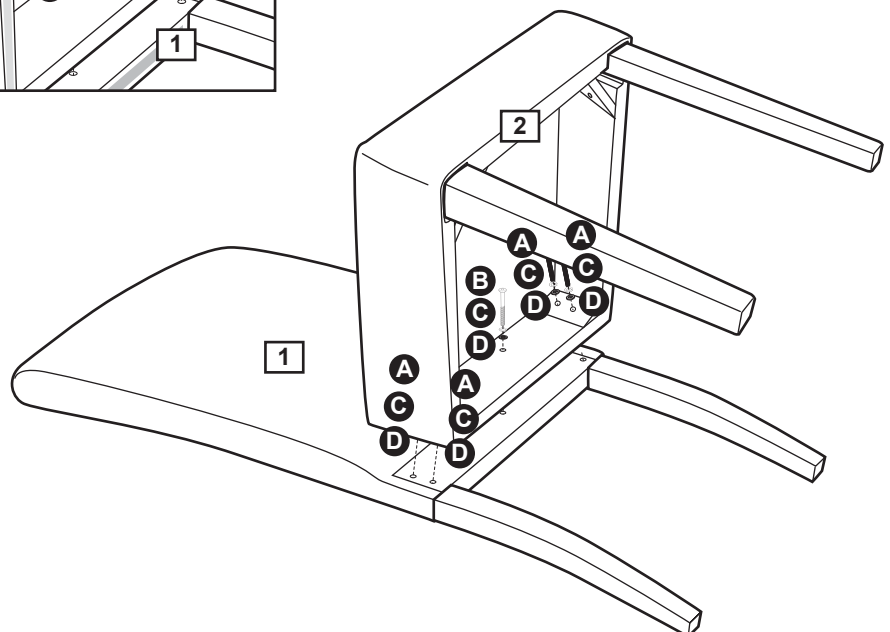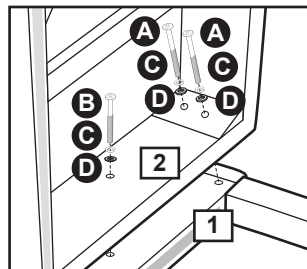

Assembly Instructions

Step 3

Aligning & securing the legs

Carefully turn the chair upright and place on a flat surface.

a: Tighten all bolts using allen key **E**.

Note: This step is essential to prevent the chair from wobbling due to uneven legs.

b: Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.

 
c: After the sitting test, re-tighten bolts again if any adjustment is needed.

Note: It is highly recommended to re-tighten all bolts after using the chair for 7 days.


Note: Keep allen key to re-tighten bolts when required.

Assembly is complete.


a:

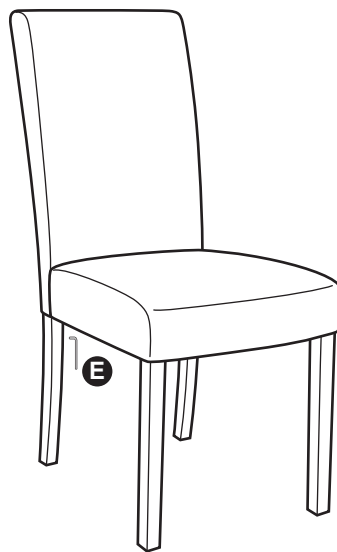

b:

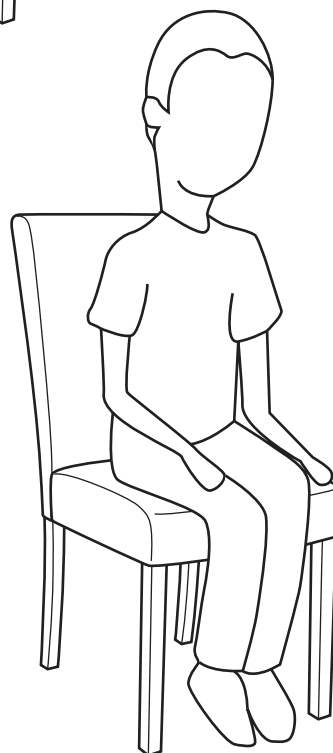 

c:

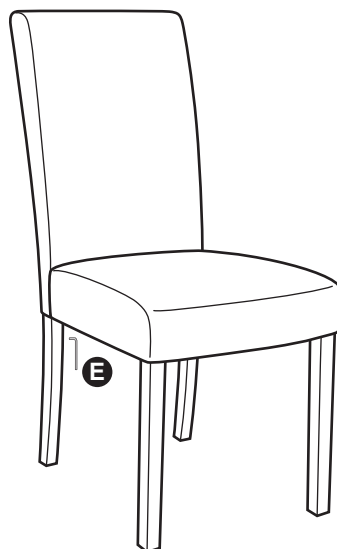 

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Dining Chair

Assembly Instructions - Please keep for future reference

600/1584

603/2364

 
603/0452

600/3654

160/609

603/0830

603/2333

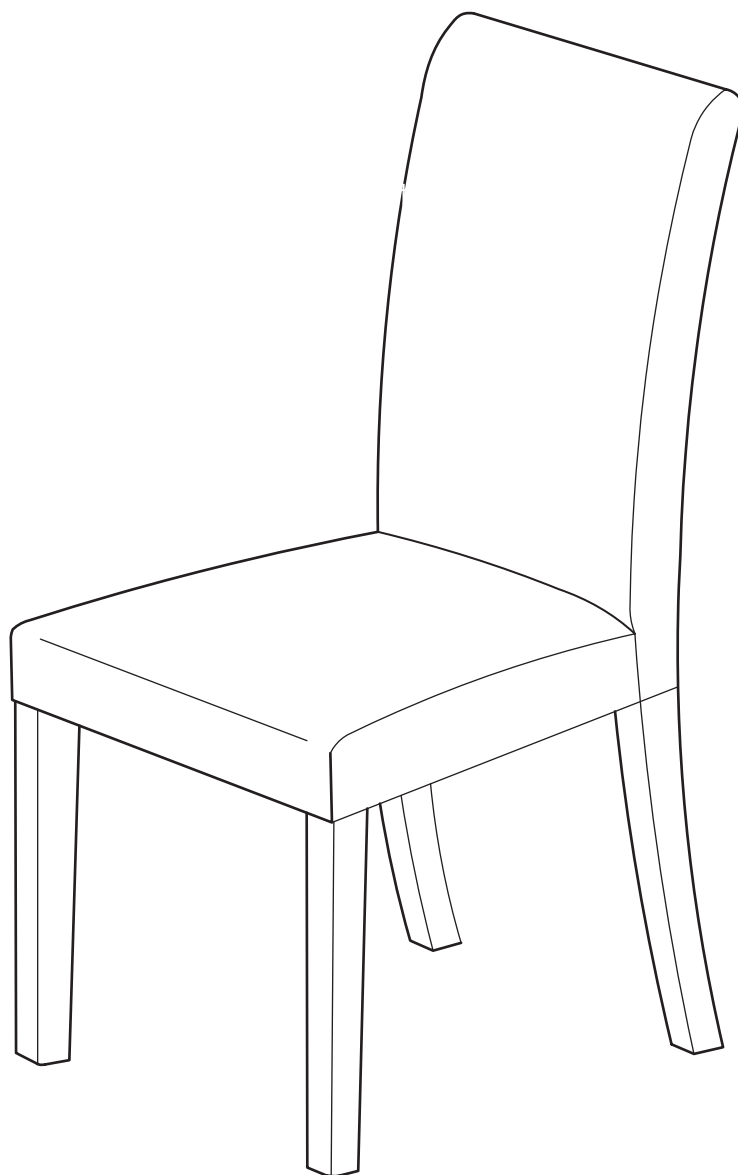

Dimensions

Width - 43.5cm

Deep - 52.5cm

Height - 92cm

Important Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**



afety and Care Advice

Important Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages and .
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room as possible).
- Assemble on a soft level surface to avoid damaging the unit or your oor.
- Parts of the assembly will be easier with people.



• We do not recommend the use of power drill drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.

 
Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Panels

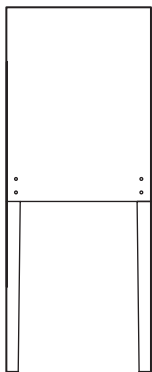

1 Back frame (36.5 x 92cm)

 

2 Leg x 2 (3.2 43)

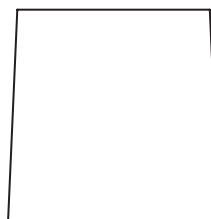 






3 Box seat (43.5 x 41.5cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

  Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


 <p>A</p> <p>M6x85mm Bolt x 8</p>	 <p>B</p> <p>M6x55mm Bolt x 10</p>	 <p>C</p> <p>Ø18x1mm Washer x 18</p>
 <p>D</p> <p>Ø11x1.5mm Spring washer x 16</p>	 <p>E</p> <p>4mm Hex Key x 1</p>	

Tools required



Ruler/tape
measure

 Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

 
 
Fitting legs

Locate the corners of the box seat opposite to the center hole.

Insert the legs **2** into the corners of the box seat **3**.

Assemble bolts **B**, spring washers **D** and washers **C** through each corner block of the box seat **3** using hex key **E**.

Tighten the bolts.

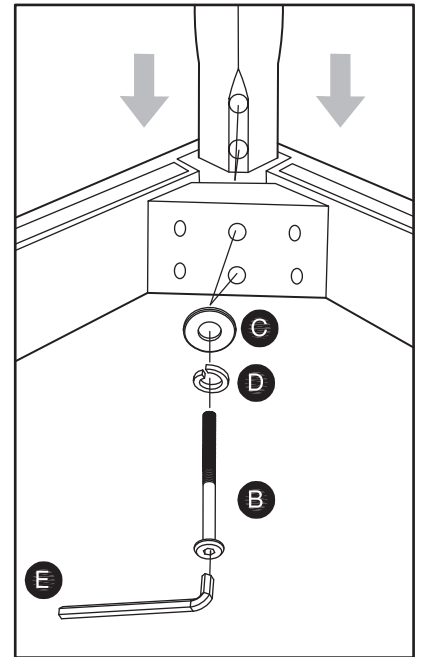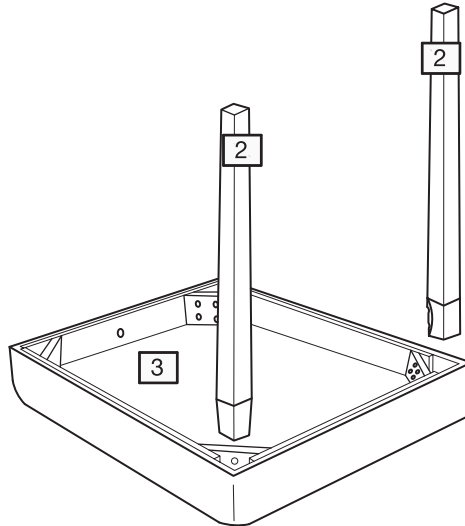



Step 2

Attaching back frame

Place the box seat **3** on the back frame **1**.

Assemble the bolt **B** and washer **C** onto the back frame **1** using hex key **E**.

  Do not tighten the bolts at this point.

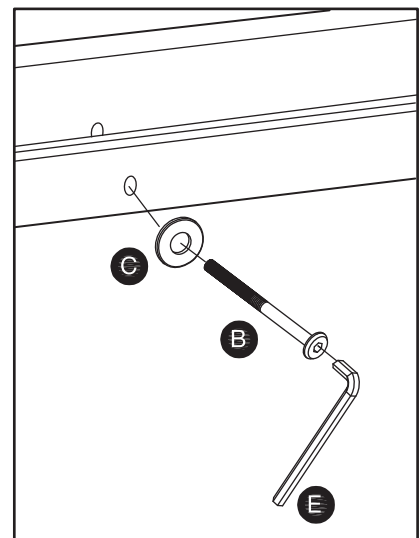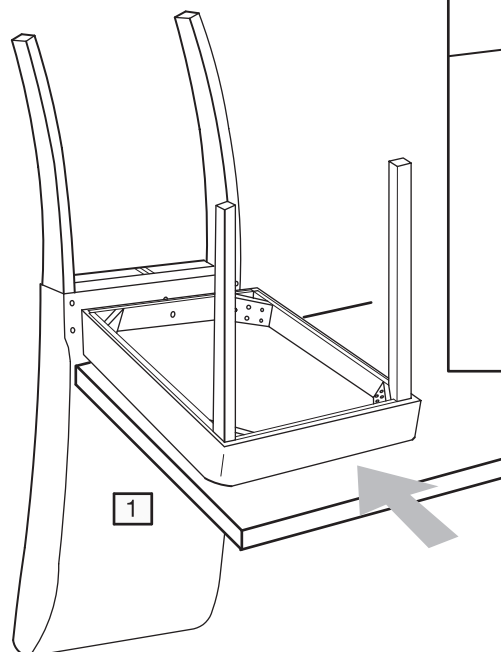


Assembly Instructions

Step 3

Fitting bolts

Assemble bolts **A**, spring washers **D** and washers **C** through each corner block of the box seat **3** to the back frame **1**.

 Do not tighten the bolts at this point in time.

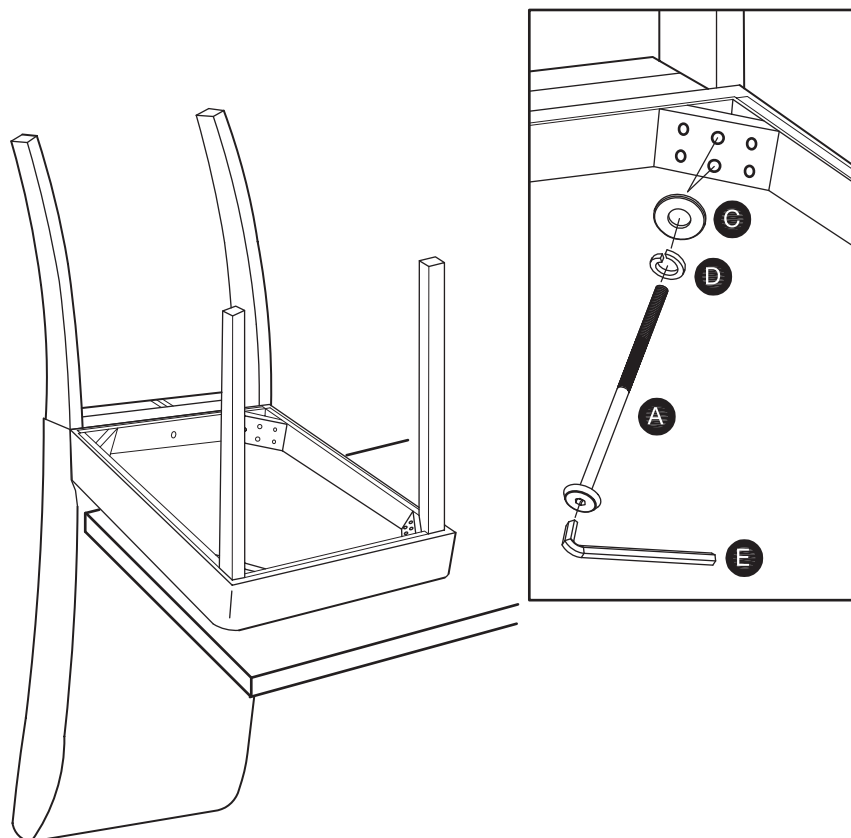

Step 4

Carefully turn the chair over, and put the chair on the oor.

Step 5

Tighten each loose bolt a little at a time while making sure the chair remains level. Repeat until all loose bolts are tight.

Repeat with remaining chairs.

