Dining Chair

Assembly Instructions - Please keep for future reference

600/1584

603/2364


603/0452

600/3654

160/609

603/0830

603/2333

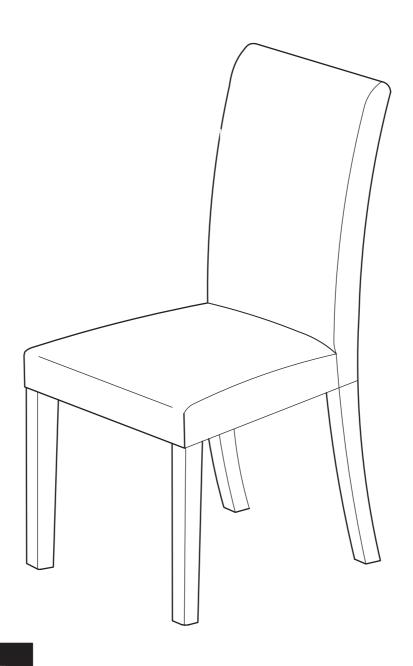

Dimensions

Width - 43.5cm

Deep - 52.5cm

Height - 92cm

Important Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 0800



afety and Care Advice

Important Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages and .
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room as possible.
- Assemble on a soft level surface to avoid damaging the unit or your oor.
- Parts of the assembly will be easier with people.



 We do not recommend the use of power drill drivers for inserting screws,


as this could damage the unit.
Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

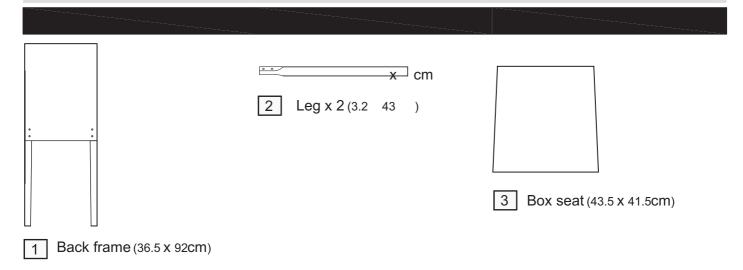

Components - Fittings If you have damaged or missing components, call the Customer Helpline: 0845 640 0800

Please check you have all the ttings listed below

ote: The quantities below are the correct amount to complete the assembly. In some cases more ttings may be supplied than are required.

| A 0 | B 0 | 6 0 |
|---|-------------------|--------------------------------|
| M6x85mm Bolt x 8 | M6x55mm Bolt x 10 | \emptyset 18x1mm Washer x 18 |
| 0 | | |
| \emptyset 11x1.5mm Spring washer x 16 | 4mm Hex Key x 1 | |

Tools required

Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws

5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100105110115 120 125130 135140145 150155160 165 170 <u>Instruduntus lantas l</u>

Step 1


Fitting legs


Locate the corners of the box seat opposite to the center hole.

Insert the legs 2 into the corners of the box seat 3.

Assemble bolts B, spring washers D and washers C through each corner block of the box seat 3 using hex key E.

Tighten the bolts.

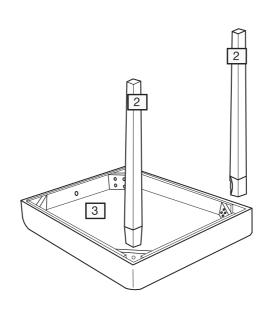

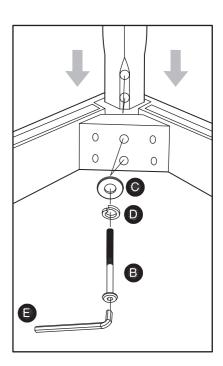


Step 2

Attaching back frame

Place the box seat 3 on the back frame 1.
Assemble the bolt B and washer 6 onto the back frame 1 using hex key E.

Do not tighten the bolts at this point.

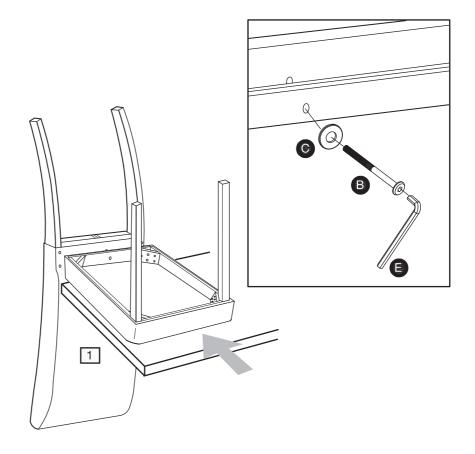


Step 3

Fitting bolts

Assemble bolts A, spring washers D and washers G through each corner block of the box seat 3 to the back frame 1.

Do not tighten the bolts at this point in time.

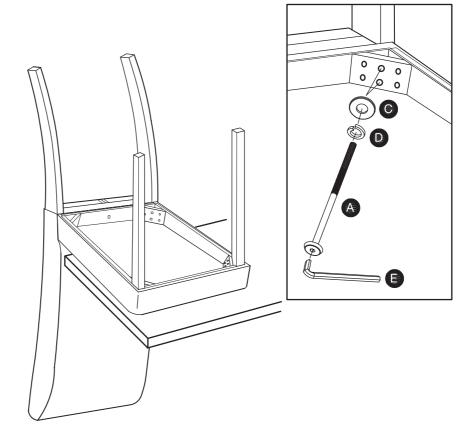


Step 4

Carefully turn the chair over, and put the chair on the oor.

Step 5

Tighten each loose bolt a little at a time while making sure the chair remains level. Repeat until all loose bolts are tight.

Repeat with remaining chairs.

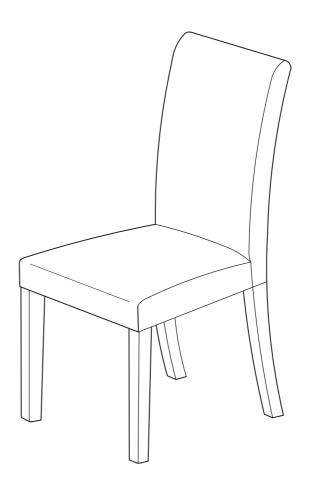

Oslo Oak Table

Assembly Instructions - Please keep for future reference

603/3071



Dimensions

Width - 100cm

Depth - 100cm

Height - 75cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- We suggest you spend a short time reading through this leaflet and follow the simple step by step assembly instructions.
- Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
- Assemble this product on a flat surface.

- Assemble all parts loosely before tightening any bolts.
- Discard all extra fittings and keep fittings out of reach of children.
- Unit weight: 21kgs.
- At least 2 people are required to assemble this product.
- Retain Assembly Instructions for future reference.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

 Dispose of all packaging carefully and responsibly.

Warnings

- This product should only be used on firm, level ground.
- Make sure the legs remain in contact with the ground.
- Do not stand on the product.


Care and maintenance

- Please clean the table surface using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.
- Do not use any abrasive materials when cleaning.
- From time to time check that there are no loose bolts on this unit.

Components - Parts

If you have damaged or missing components, call the **Customer Helpline**: **08456 400800**


Please check you have all the parts listed below

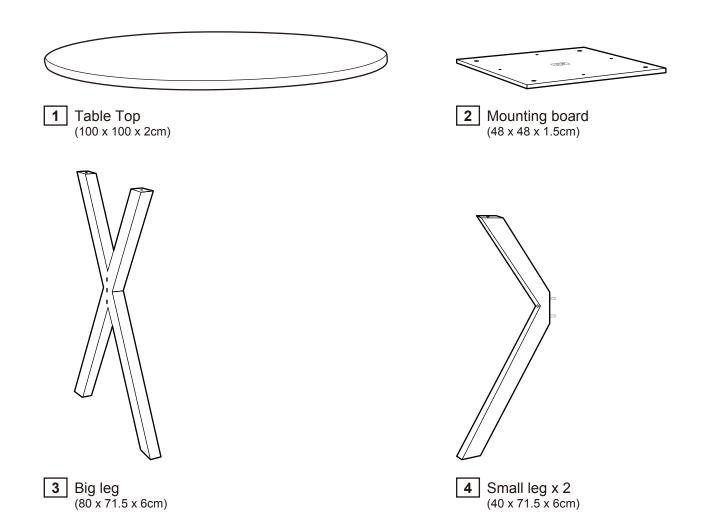

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

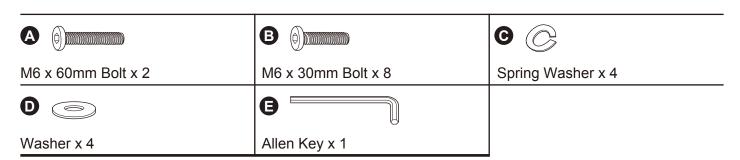


Ruler - Use this ruler to help correctly identify the screws


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Step 1

Attaching legs

Attach the small legs 4 to the big leg 3 by inserting the wooden dowels into holes as shown. Then secure using bolts (A). Tighten bolts using allen key (E).

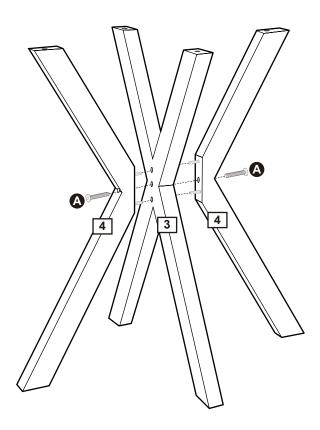


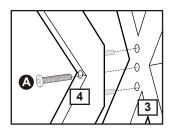


Step 2

Attaching mounting board

Attach the mounting board 2 onto legs and ensure that the surface with the label "TOP" is facing up as shown. Then fix using bolts 3. Tighten bolts using allen key 3.

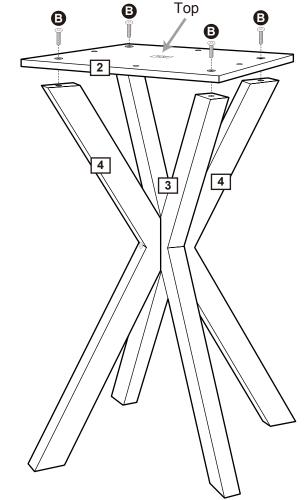


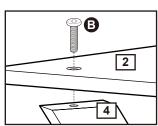

Step 3

Attaching table top

Attach the table top 1 onto the mounting board 2 as shown and secure using bolts 3 washer 0 and spring washer 6. Tighten bolts using allen key 2.

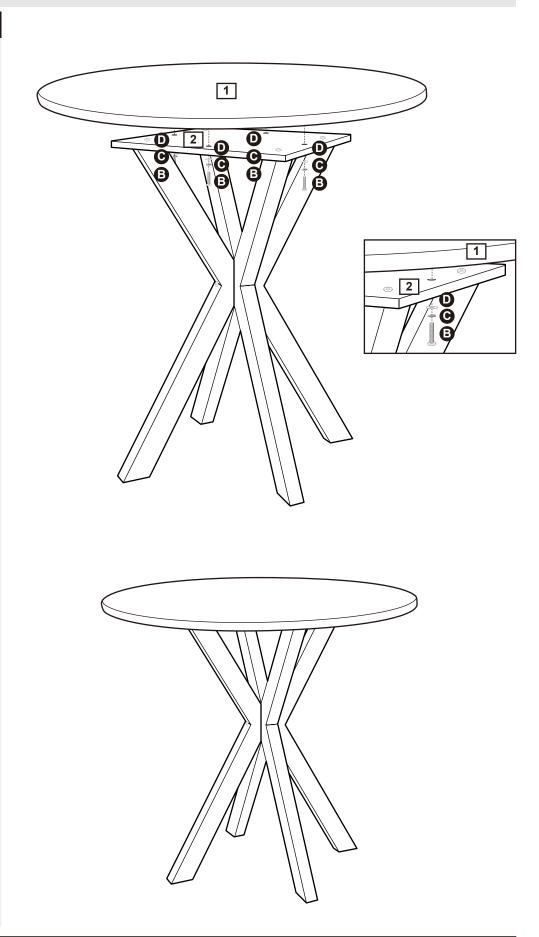

Assembly is complete.

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800