Dining Chair



Important

Height - 92cm

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 0800

Please read these instructions fully before starting assembly



afety and Care Advice

Important Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages and .

- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room as possible.
- Assemble on a soft level surface to avoid damaging the unit or your oor.
- Parts of the assembly will be easier with people.



• We do not recommend the use of power drill drivers *for inserting screws,*

as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Panels

• • •	2 Leg>	x cm (2 (3.2 43)	Box seat (43.5 x 41.5cm)
□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □	6.5 x 92cm)		

Components - Fittings If you have damaged or missing components, call the Customer Helpline: 0845 640 0800

Please check you have all the ttings listed below

ote: The quantities below are the correct amount to complete the assembly. In some cases more ttings may be supplied than are required.

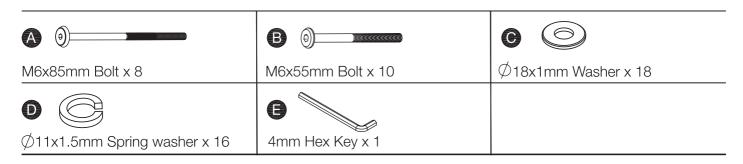

Tools required

համահանունունունուն

Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws

5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100105110115 120 125130 135140145 150155160 165 170 0

Assembly Instructions


Step 1


Fitting legs

Locate the corners of the box seat opposite to the center hole. Insert the legs 2 into the corners of the box seat 3. Assemble bolts B,

spring washers **D** and washers **C** through each corner block of the box seat 3 using hex key **E**.

Tighten the bolts.

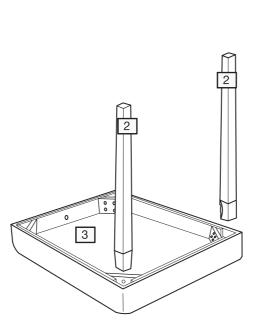

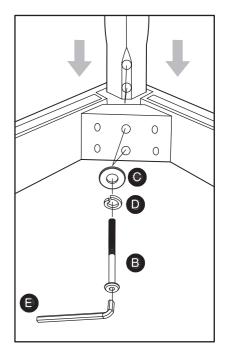


Step 2

Attaching back frame

Place the box seat 3 on the back frame 1. Assemble the bolt **B** and washer **C** onto the back frame 1 using hex key **E**.

Do not tighten the bolts at this point.

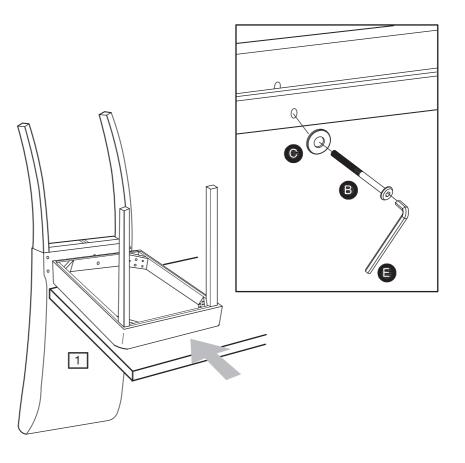


Assembly Instructions

Step 3

Fitting bolts

Assemble bolts A, spring washers D and washers C through each corner block of the box seat 3 to the back frame 1.

Do not tighten the bolts at this point in time.

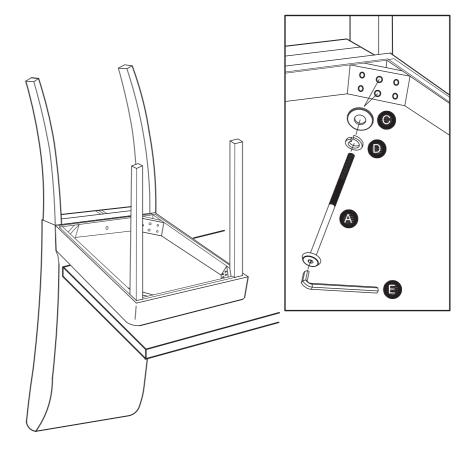


Step 4

Carefully turn the chair over, and put the chair on the oor.

Step 5

Tighten each loose bolt a little at a time while making sure the chair remains level. Repeat until all loose bolts are tight.


Repeat with remaining chairs.

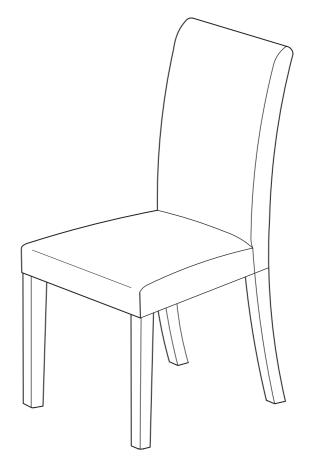

SCHR Eden Oak Veneer Table 180cm

Assembly Instructions - Please keep for future reference

603/3600

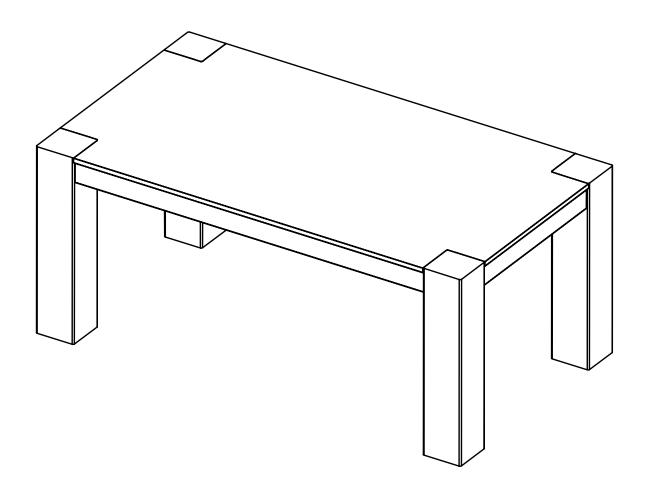

Dimensions

 
Width - 180cm

Depth - 100cm

Height - 76cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 0800



Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**,

as this could damage the unit. Only use hand screwdrivers.


• Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the panels listed below

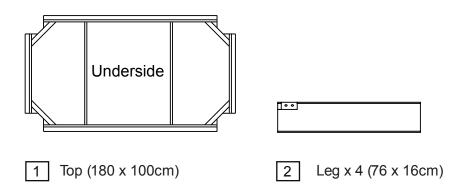

Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

	8	O
Bolt x 8 (M8 x 64mm)	Flat washer x 8	Spring washer x 8
D Hex key x 1		

Tools required

Ruler - Use this ruler to help correctly identify the screws

Assembly Instructions

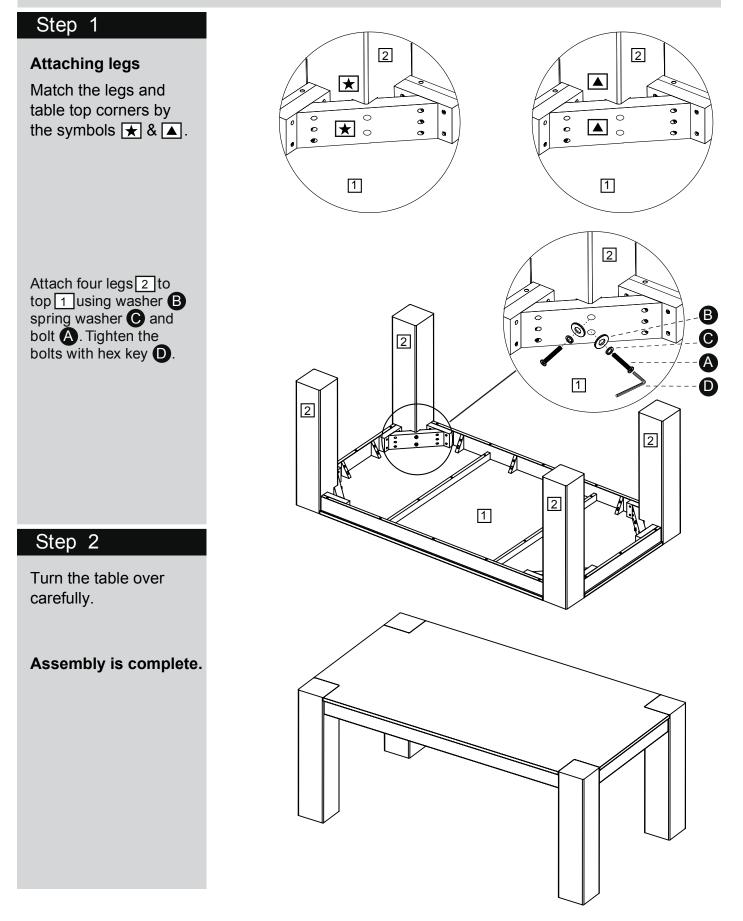

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800** Argos Ltd MK9 2NW