
# **Dining Chair**

Assembly Instructions - Please keep for future reference

603/1035

603/1059

603/1042

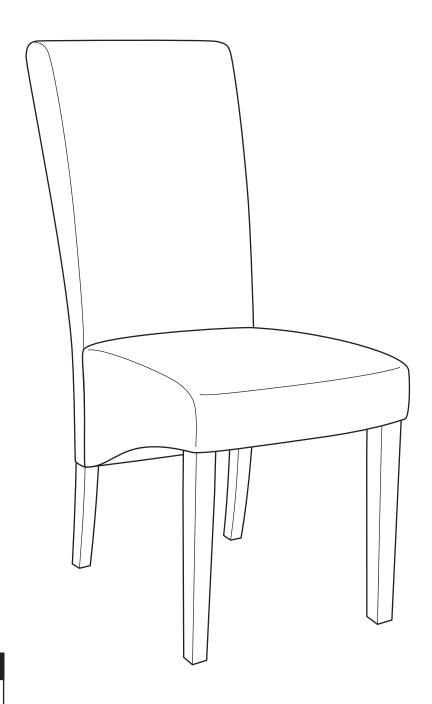

#### **Dimensions**

Width - 44cm

Depth - 54cm

Height - 95cm

### Important - Please read these instructions fully before starting assembly



## Safety and Care Advice

### Important - Please read these instructions fully before starting assembly

- Assemble this product on a flat surface.
- Assemble all parts loosely before tightening any bolts.
- Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
- Discard all extra fittings and keep fittings out of reach of children.
- Unit weight: 5.4kgs.
- Maximum safe weight of user: 110kgs.
- Retain Assembly Instructions for future reference.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

 Dispose of all packaging carefully and responsibly.

### Warnings

- This product should only be used on firm, level ground.
- Make sure the legs remain in contact with the ground.
- Do not stand on the product.


#### Care and maintenance

- Please clean the unit surface using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.
- Do not use any abrasive materials when cleaning.
- From time to time check that there are no loose bolts on this unit.

## Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** 


### Please check you have all the parts listed below

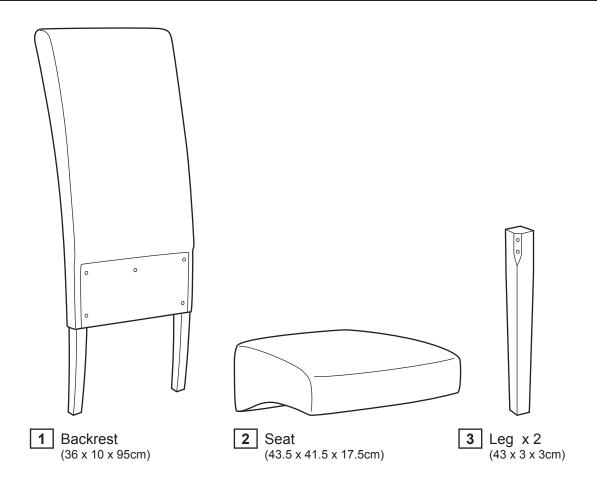

## Components - Fittings

#### Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

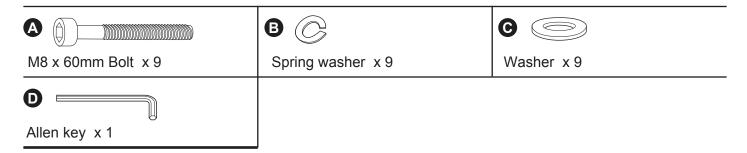

### Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

### Step 1

### **Attaching legs**


Place the seat 2 upside down on a flat protected surface.

Insert the legs 3 into the holes of the seat as shown and fix using bolts A, spring washer B and washers C.



### Important:

Fasten bolts using allen key **D** but do not fully tighten at this stage.

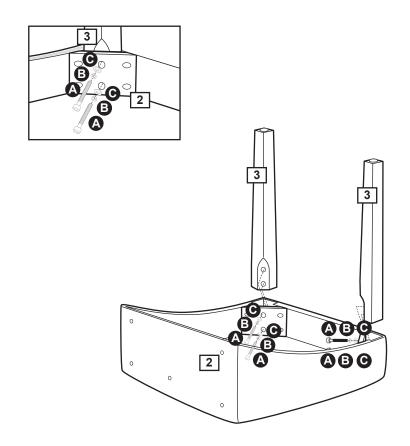

### Step 2

#### **Attaching backrest**


Place the backrest on a flat protected surface.

Position the seat 2 on the backrest 1 as shown and fix using bolts A, spring washers B and washers C.



#### Important:

Fasten bolts using allen key **D** but do not fully tighten at this stage.

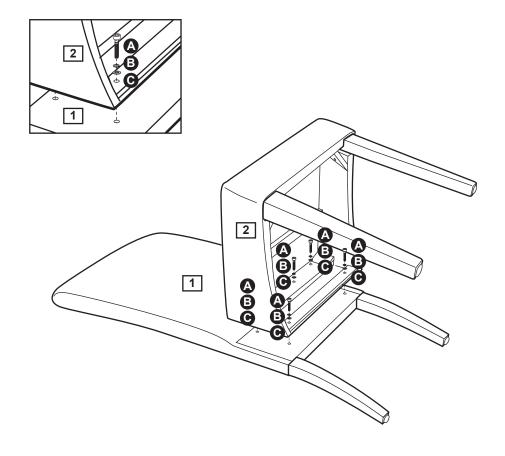

### Step 3

## Aligning & securing the legs

Carefully turn the chair upright and place on a flat surface.

**a:** Tighten all bolts using allen key **D**.

**Note:** This step is essential to prevent the chair from wobbling due to uneven legs.

**b:** Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.

**C:** After the sitting test, re-tighten bolts again if any adjustment is needed.

**Note:** It is highly recommended to re-tighten all bolts after using the chair for 7 days.

**Note:** Keep allen key to re-tighten bolts when required.

a: b: C:

Assembly is complete.

# **Dining Chair**

Assembly Instructions - Please keep for future reference

603/7792


603/7826

603/1035

603/1059

603/1042

603/7802

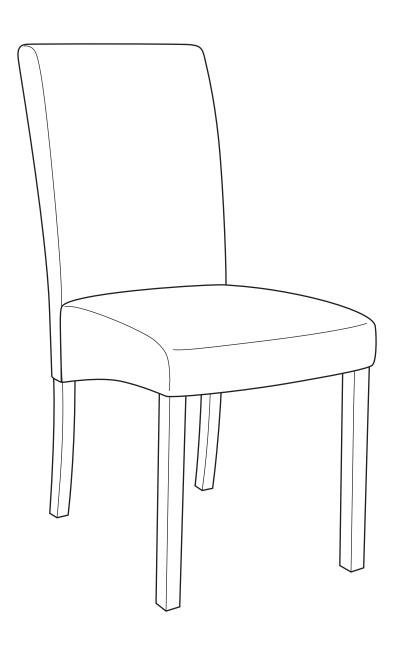

#### **Dimensions**

Width - 43.5cm

Depth - 56cm

Height - 95cm

### Important - Please read these instructions fully before starting assembly



## Safety and Care Advice

### Important - Please read these instructions fully before starting assembly

- Assemble this product on a flat surface.
- Assemble all parts loosely before tightening any bolts.
- Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
- Discard all extra fittings and keep fittings out of reach of children.
- Unit weight: 5.2kgs.
- Maximum safe weight of user: 110kgs.
- Retain Assembly Instructions for future reference.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

 Dispose of all packaging carefully and responsibly.

### Warnings

- This product should only be used on firm, level ground.
- Make sure the legs remain in contact with the ground.
- Do not stand on the product.


#### **Care and maintenance**

- Please clean the product using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.
- Do not use any abrasive materials when cleaning.
- From time to time check that there are no loose bolts on this unit.

## Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** 


### Please check you have all the parts listed below

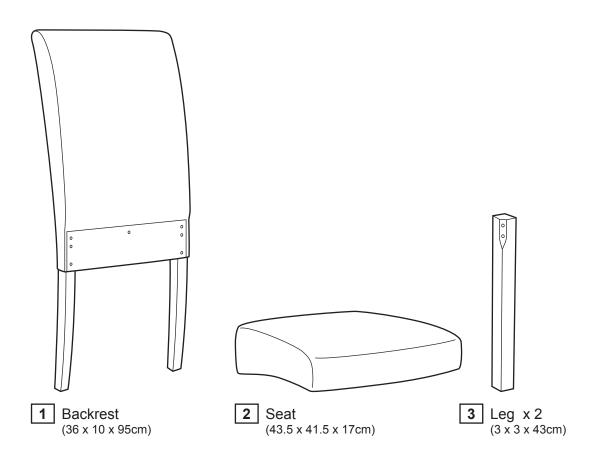

## Components - Fittings

### Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

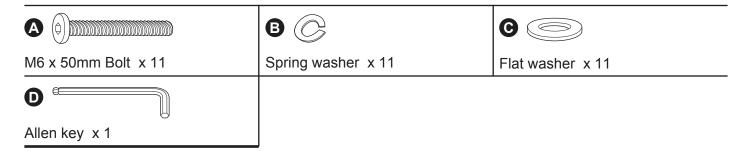

### Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

### Step 1

#### **Attaching legs**

Place the seat 2 upside down on a flat protected surface.

Insert the legs 3 into the holes of the seat as shown and fix using bolts 4, spring washers 6.




#### Important:

Fasten bolts using allen key **D** but do not fully tighten at this stage.

#### Note:

Use oval head of allen key **D** on tight angles.

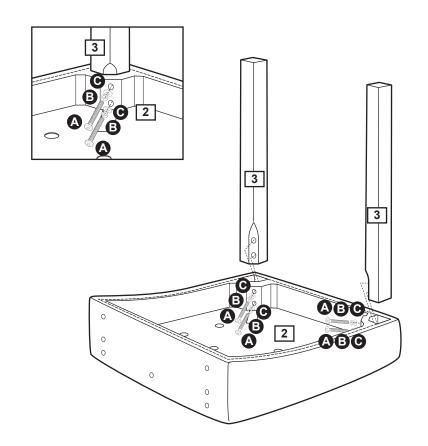

### Step 2

#### **Attaching backrest**

Place the backrest on a flat protected surface.

Position the seat 2 on the backrest 1 as shown and fix using bolts A, spring washers 3 and washers 6.




#### Important:

Fasten bolts using allen key **D** but do not fully tighten at this stage.

#### Note:

Use oval head of allen key **o** on tight angles.

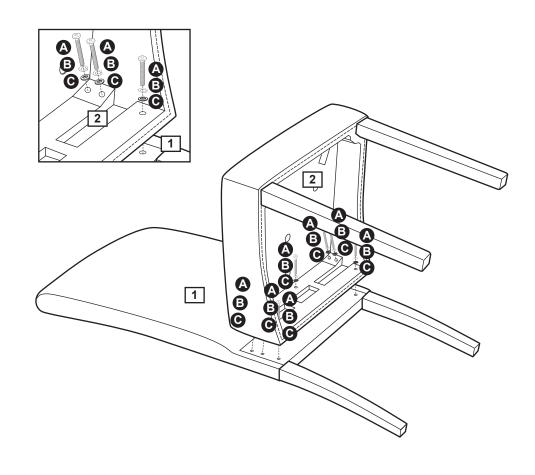

### Step 3

## Aligning & securing the legs

Carefully turn the chair upright and place on a flat surface.

**a:** Tighten all bolts using allen key **D**.

**Note:** Use oval head of allen key **①** on tight angles.

**Note:** This step is essential to prevent the chair from wobbling due to uneven legs.

**b:** Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.

**C:** After the sitting test, re-tighten bolts again if any adjustment is needed.

**Note:** It is highly recommended to re-tighten all bolts after using the chair for 7 days.

**Note:** Keep allen key to re-tighten bolts when required.

a: o b: C: 0

Assembly is complete.


## Melamine Round Table

Assembly Instructions - Please keep for future reference

633/2019

633/2026

633/1993

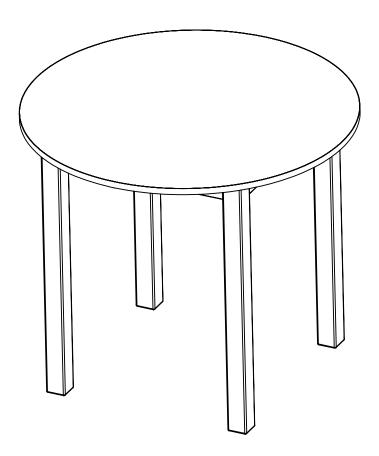

### **Dimensions**

Width - 90cm Depth - 90cm Height - 75cm

### Important – Please read these instructions fully before starting assembly



## Safety and Care Advice

### Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product during assembly, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

 Dispose of all packaging carefully and responsibly.


#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

# Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800** 

### Please check you have all the panels listed below

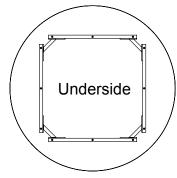

1 Top (90 x 90cm)




2 Leg x 4 (73.2 x 5.5cm)

## Components - Fittings

### Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

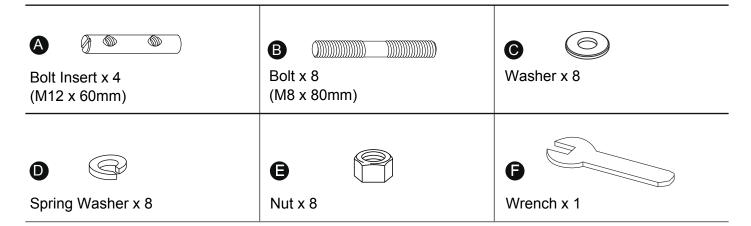

### Tools required




 
Flatblade Screwdriver

### Ruler - Use this ruler to help correctly identify the screws

### Step 1

Insert bolt inserts Ainto legs 2. Use a flatblade screwdriver to align the bolt holes of A and the table leg holes. Screw bolts B in, making sure the lengths are the same.

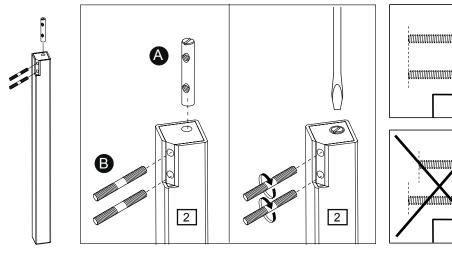




### Step 2

### **Attaching legs**

Attach the four legs 2 to table top 1 using flat washers **©**, spring washers **D** and nuts **E**. Tighten the nuts with wrench **(** 

Turn the table over carefully.

Assembly is complete.

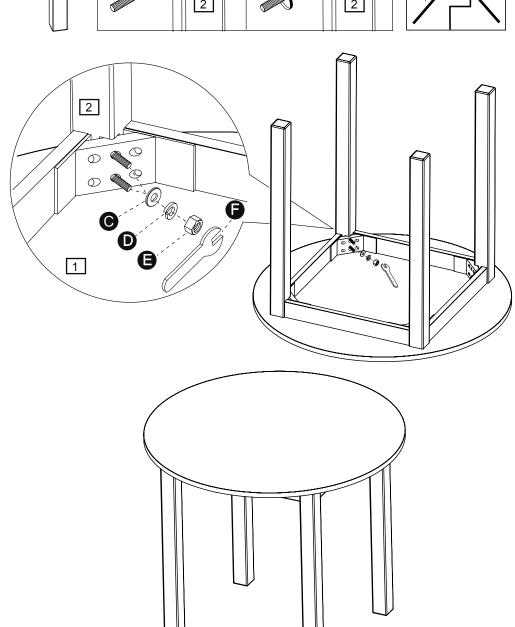

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 0800 Argos Ltd MK9 2NW