
# **Dining Chair**

Assembly Instructions - Please keep for future reference

603/1035

603/1059

603/1042

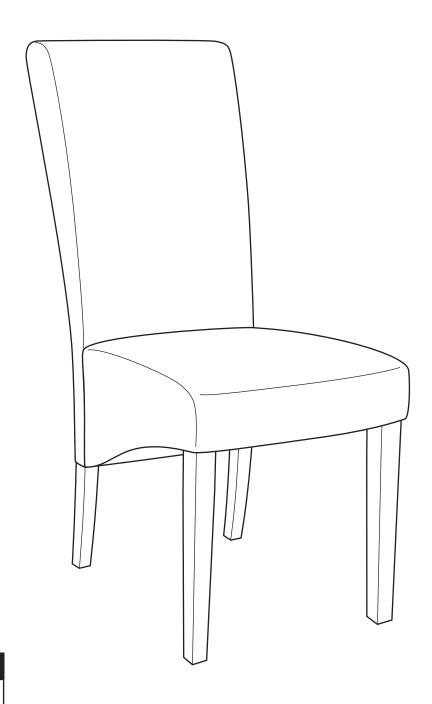

#### **Dimensions**

Width - 44cm

Depth - 54cm

Height - 95cm

## Important - Please read these instructions fully before starting assembly



## Safety and Care Advice

### Important - Please read these instructions fully before starting assembly

- Assemble this product on a flat surface.
- Assemble all parts loosely before tightening any bolts.
- Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
- Discard all extra fittings and keep fittings out of reach of children.
- Unit weight: 5.4kgs.
- Maximum safe weight of user: 110kgs.
- Retain Assembly Instructions for future reference.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

 Dispose of all packaging carefully and responsibly.

### Warnings

- This product should only be used on firm, level ground.
- Make sure the legs remain in contact with the ground.
- Do not stand on the product.


#### Care and maintenance

- Please clean the unit surface using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.
- Do not use any abrasive materials when cleaning.
- From time to time check that there are no loose bolts on this unit.

## Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** 


### Please check you have all the parts listed below

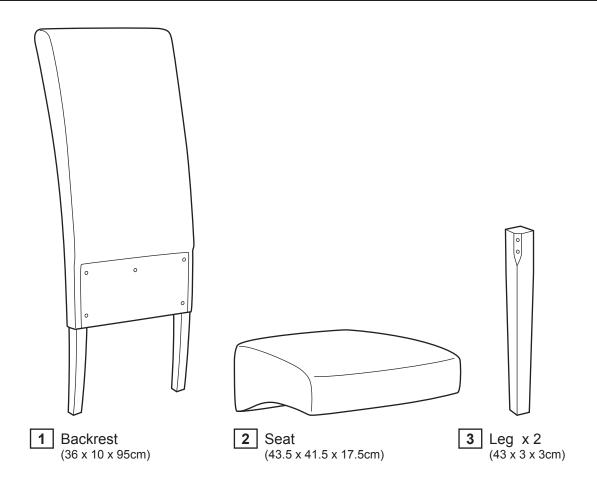

## Components - Fittings

#### Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

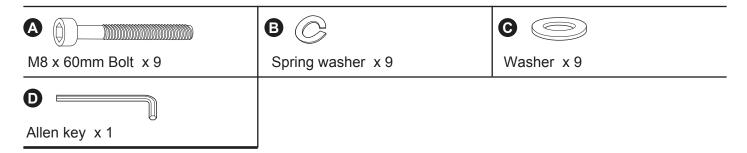

### Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

## Step 1

#### **Attaching legs**


Place the seat 2 upside down on a flat protected surface.

Insert the legs 3 into the holes of the seat as shown and fix using bolts A, spring washer B and washers C.



### Important:

Fasten bolts using allen key **D** but do not fully tighten at this stage.

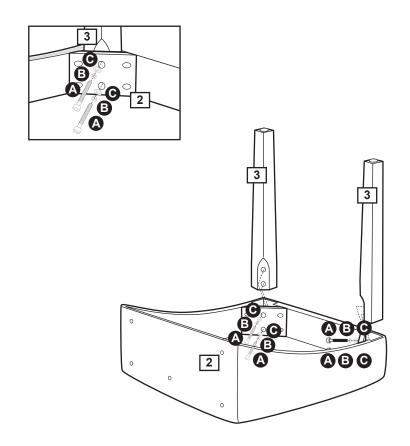

## Step 2

#### **Attaching backrest**


Place the backrest on a flat protected surface.

Position the seat 2 on the backrest 1 as shown and fix using bolts A, spring washers B and washers C.



#### Important:

Fasten bolts using allen key **D** but do not fully tighten at this stage.

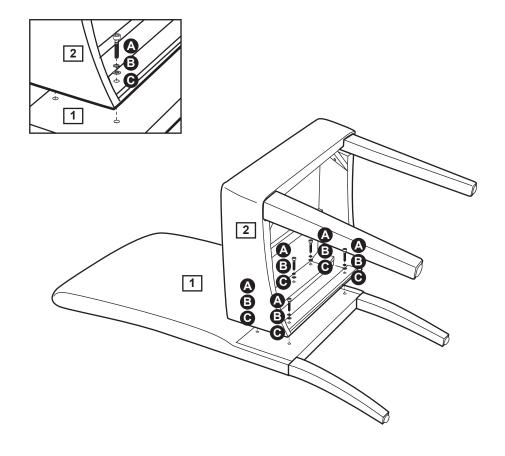

### Step 3

## Aligning & securing the legs

Carefully turn the chair upright and place on a flat surface.

**a:** Tighten all bolts using allen key **D**.

**Note:** This step is essential to prevent the chair from wobbling due to uneven legs.

**b:** Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.

**C:** After the sitting test, re-tighten bolts again if any adjustment is needed.

**Note:** It is highly recommended to re-tighten all bolts after using the chair for 7 days.

**Note:** Keep allen key to re-tighten bolts when required.

a: b: C:

Assembly is complete.

# **Dining Chair**

Assembly Instructions - Please keep for future reference

603/7792


603/7826

603/1035

603/1059

603/1042

603/7802

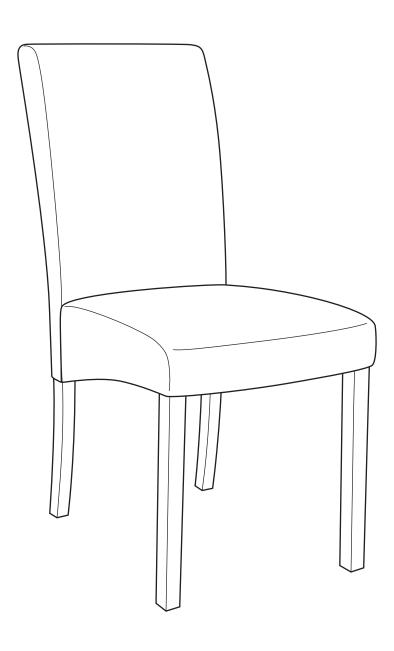

#### **Dimensions**

Width - 43.5cm

Depth - 56cm

Height - 95cm

### Important - Please read these instructions fully before starting assembly



## Safety and Care Advice

### Important - Please read these instructions fully before starting assembly

- Assemble this product on a flat surface.
- Assemble all parts loosely before tightening any bolts.
- Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
- Discard all extra fittings and keep fittings out of reach of children.
- Unit weight: 5.2kgs.
- Maximum safe weight of user: 110kgs.
- Retain Assembly Instructions for future reference.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

 Dispose of all packaging carefully and responsibly.

### Warnings

- This product should only be used on firm, level ground.
- Make sure the legs remain in contact with the ground.
- Do not stand on the product.


#### **Care and maintenance**

- Please clean the product using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.
- Do not use any abrasive materials when cleaning.
- From time to time check that there are no loose bolts on this unit.

## Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** 


### Please check you have all the parts listed below

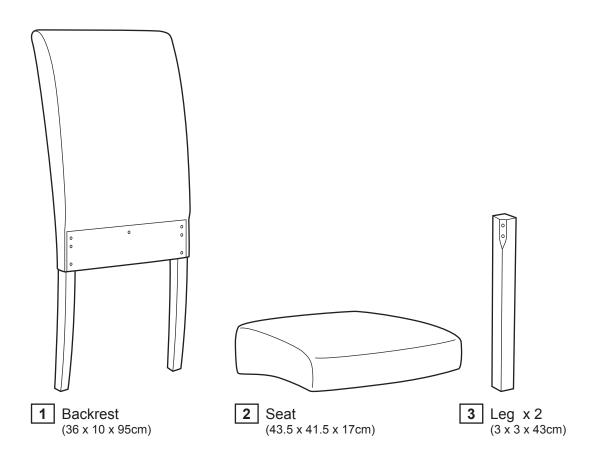

## Components - Fittings

### Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

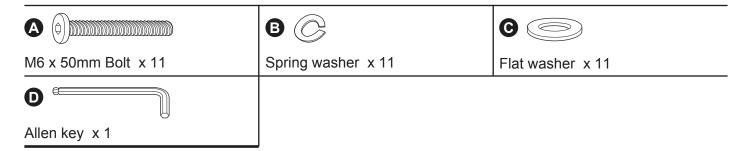

### Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

## Step 1

#### **Attaching legs**

Place the seat 2 upside down on a flat protected surface.

Insert the legs 3 into the holes of the seat as shown and fix using bolts 4, spring washers 6.




#### Important:

Fasten bolts using allen key **D** but do not fully tighten at this stage.

#### Note:

Use oval head of allen key **D** on tight angles.

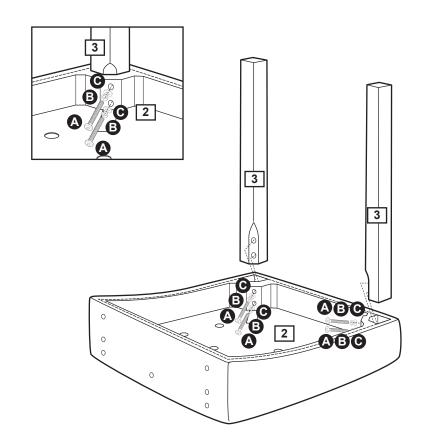

## Step 2

#### **Attaching backrest**

Place the backrest on a flat protected surface.

Position the seat 2 on the backrest 1 as shown and fix using bolts A, spring washers 3 and washers 6.




#### Important:

Fasten bolts using allen key **D** but do not fully tighten at this stage.

#### Note:

Use oval head of allen key **o** on tight angles.

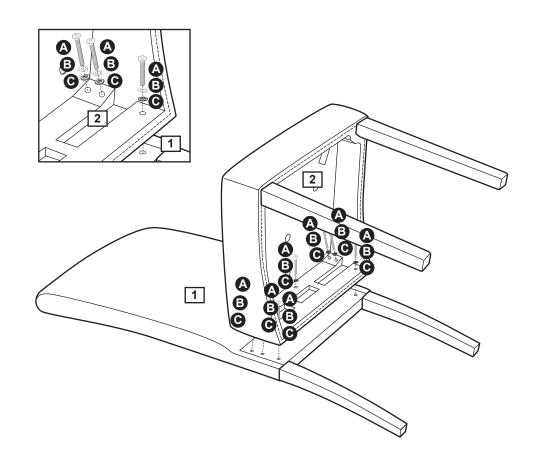

### Step 3

## Aligning & securing the legs

Carefully turn the chair upright and place on a flat surface.

**a:** Tighten all bolts using allen key **D**.

**Note:** Use oval head of allen key **①** on tight angles.

**Note:** This step is essential to prevent the chair from wobbling due to uneven legs.

**b:** Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.

**C:** After the sitting test, re-tighten bolts again if any adjustment is needed.

**Note:** It is highly recommended to re-tighten all bolts after using the chair for 7 days.

**Note:** Keep allen key to re-tighten bolts when required.

a: o b: C: 0


Assembly is complete.

## Wow Madison Table

Assembly Instructions - Please keep for future reference

633/2033

633/3362

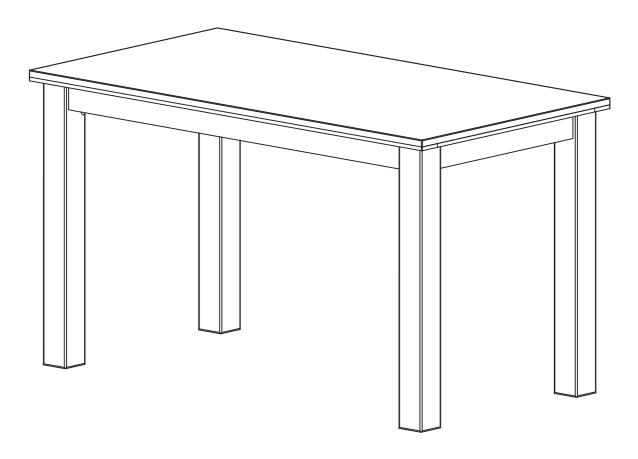

#### **Dimensions**

Length - 120cm

Width - 73cm

Height - 75cm

### Important - Please read these instructions fully before starting assembly



## Safety and Care Advice

### Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product during assembly, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit.
Only use hand screwdrivers.

 Dispose of all packaging carefully and responsibly.


#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

# Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800** 

### Please check you have all the panels listed below

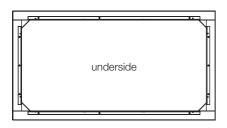

**2** Leg x 4 (6.5 x 72.2cm)

**1** Top (120 x 73cm)

# Components - Fittings

### Please check you have all the fittings listed below

*Note:* The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b> () (1111111111111111111111111111111111	<b>B Q</b> $\triangle$	<b>G</b>
70mm Bolt x 8	Assembly bolt x 4	Washer x 8
<b>D</b>	<b>6</b>	<b>6</b>
13mm Nut x 8	Spring washer x 8	13mm Spanner x 1

### Tools required



### Ruler - Use this ruler to help correctly identify the screws


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170 hardendambardendambardendambardendambardendambardendambardendambardendambardendambardendambardendambardendamb


## Step 1


#### **Fitting bolts**

Insert assembly bolt B into leg 2. Screw bolts A into assembly bolt B.

Repeat with remaining legs 2.

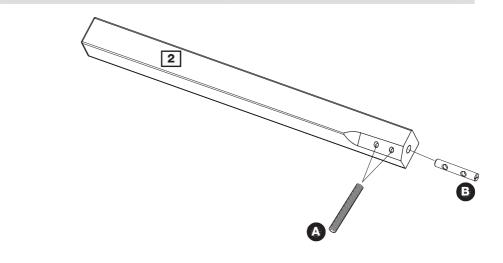

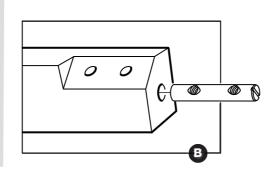

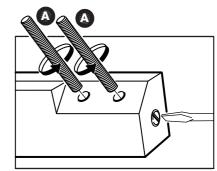

## Step 2

#### **Attaching legs**

Attach the four pieces of legs 2 to top 1 using washer 6, spring washer and nut 0.
Tighten the bolts with spanner 6.

With help, turn the table over carefully.

Assembly is complete.

