
SCHR Eden Oak Veneer Table 180cm

Assembly Instructions - Please keep for future reference

603/3600

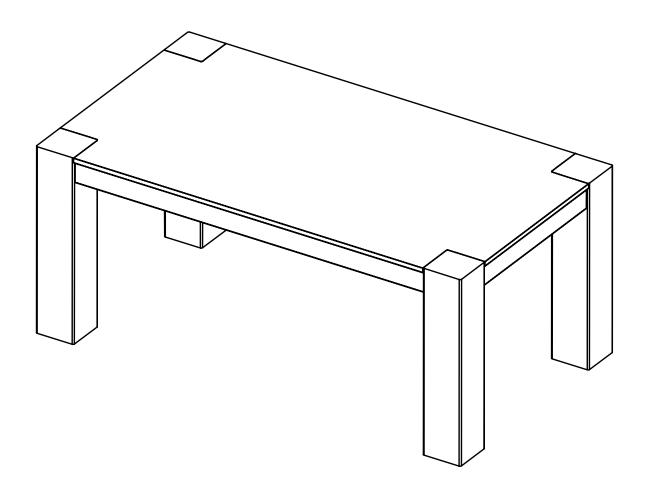

Dimensions

 
Width - 180cm

Depth - 100cm

Height - 76cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 0800



Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**,

as this could damage the unit. Only use hand screwdrivers.


• Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the panels listed below

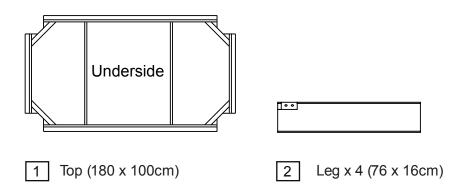

Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

	8	O
Bolt x 8 (M8 x 64mm)	Flat washer x 8	Spring washer x 8
D Hex key x 1		

Tools required

Ruler - Use this ruler to help correctly identify the screws

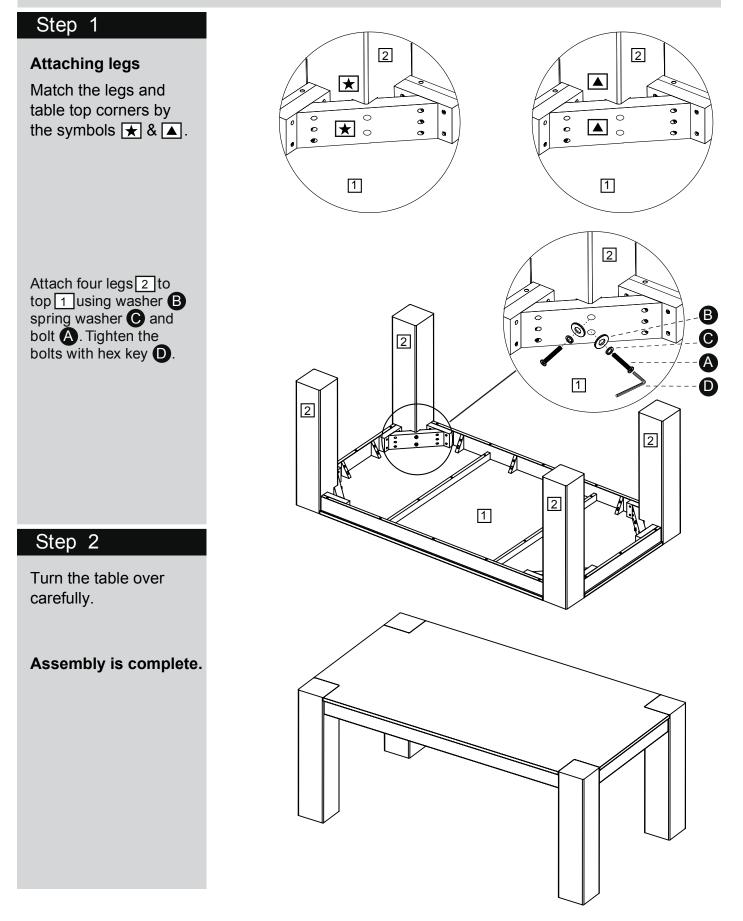


If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800** Argos Ltd MK9 2NW

Warwick Chair

Assembly Instructions - Please keep for future reference

6038447

6037819

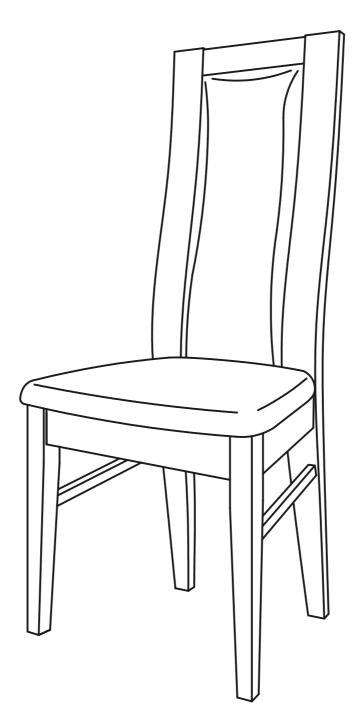

Dimensions

Width - 46.5cm Depth - 54cm Height - 99cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline : 08456 400800

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on page 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommended the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

• The maximum safe weight of user : 110 Kgs.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

• This produt should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you nave damaged or missing components, call the Customer Helpline: 08456 400800

Please check you have all the panels listed below


NOTE: Components, listed below are required for one chair only.

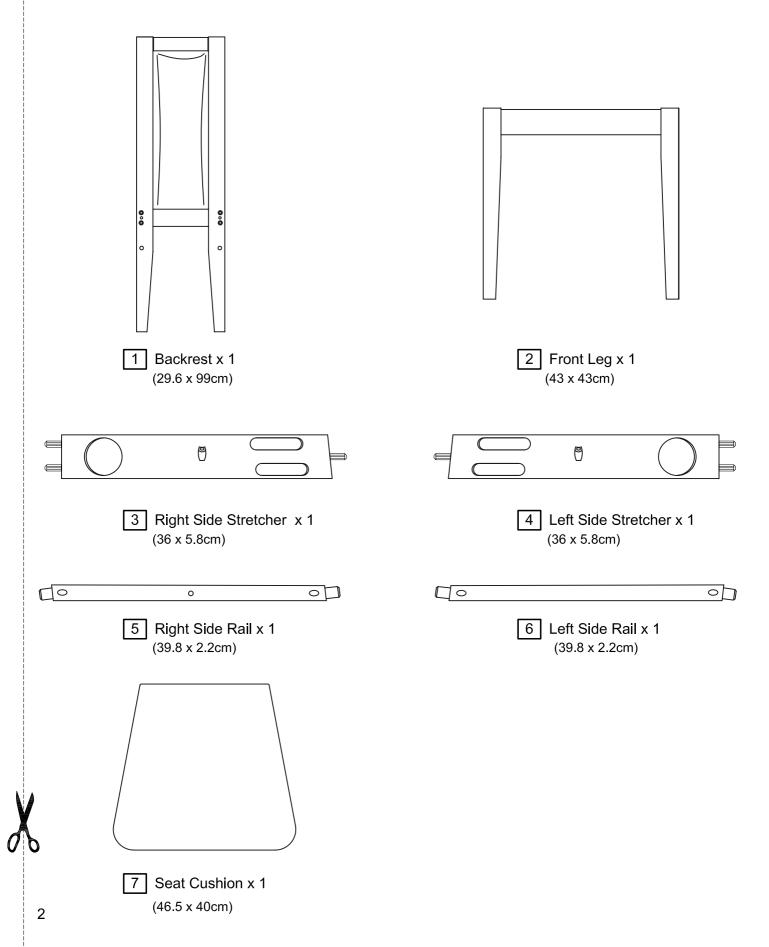


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly for one chair. In some cases more fittings may be supplied than are required.

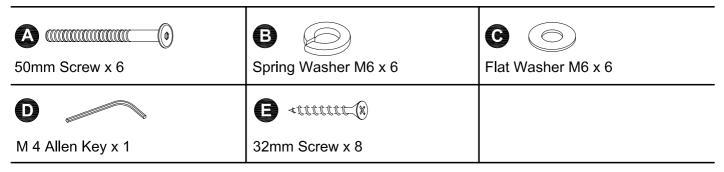

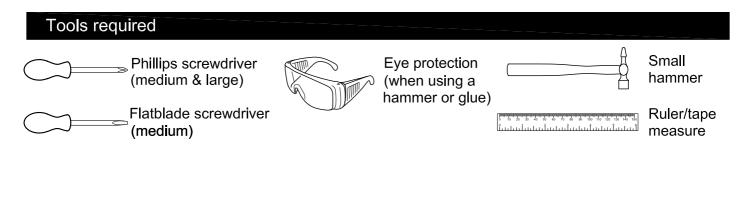

0 	10 	20	30 	40 	50 	60 	70 	80 	90 	100 	110 	120 	130 	140 	150 	160 	170 	180

Step 1

Fitting the Side Stretcher

Note: It would be useful to ask someone to help you at this stage.

a: Insert Screw (A), Spring washer (B), Flat washer (C) with Allen key (D) to fix side stretcher (3) (4) onto backrest. (1)

Note: Do not fully tighten all the screws

Fitting the Side Rail

Note: It would be useful to ask someone to help you at this stage.

b: Insert Screw 🕒 to fix side rail 5 6 onto back back rest 1

Note: Do not fully tighten all the screws

Step 2


Fitting the Front Leg


Note: It would be useful to ask someone to help you at this stage.

c: Insert Screw (A),Spring washer (B),Flat washer (C) with Allen key (D) to fix front leg 2 onto side stretcher 3 4

d: Insert Screw 🕒 to fix side rail 5 6 onto front leg 2

Note: Do not fully tighten all the screws

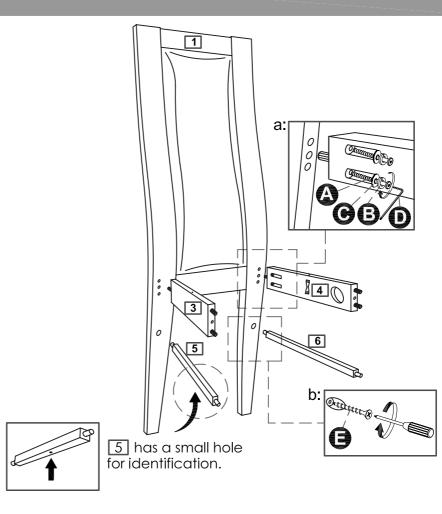

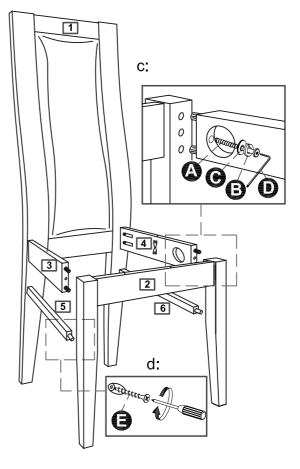


Step 3

Fitting the Cushion

Note: It would be useful to ask someone to help you at this stage.

e: Use Screw 🕒 to fix cushion seat 7 onto the unit.

Note: Fully tighten all the screws now.

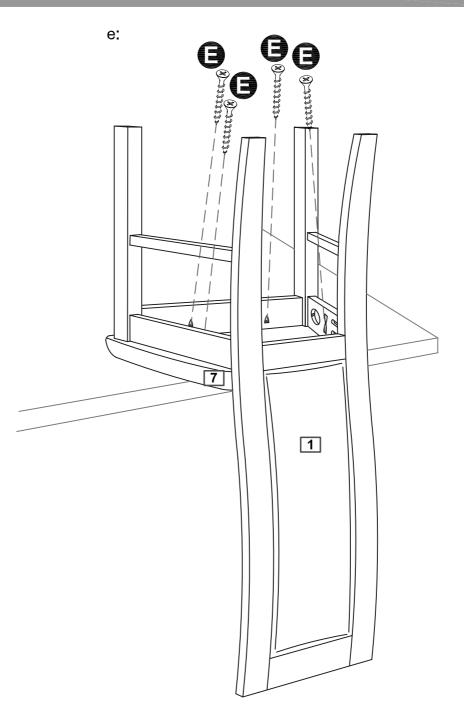

Step 4

Finishing the unit

Note: It would be useful to ask someone to help you at this stage.

With help, place the unit in the intended position.

Note: Before use always make sure the unit is secure.

Note: The maximum safe weight of user: 110kg.



Warning:

•Do not stand on this chair. Do not use this chair as a step ladder.


•Use this product only for seating one person at a time.

•Do not use this chair unless all bolts, screws and knobs are firmly secured. •At least every 4 months, check all bolts, screws and knobs, to be sure they are tight.

• If parts are missing, broken or damaged or worn, stop use of this product until repairs are made & using factory authorized parts.

• Failure to follow these warnings could result in serious injury.

Assembly is complete.

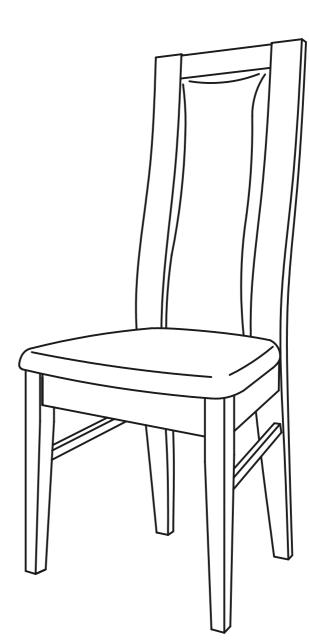

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800