


Romantic TV Unit

Assembly Instructions - Please keep for future reference

607/1758

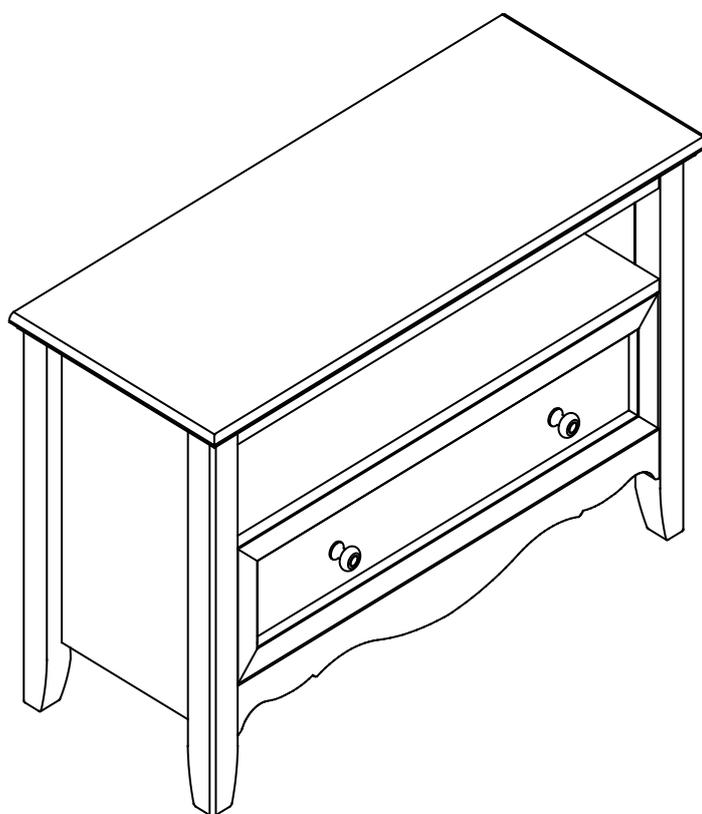

Dimensions

Width - 80cm
Depth - 33cm
Height - 52cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the
Customer Helpline: Argos = 0345 6400800


Please check you have all the panels listed below

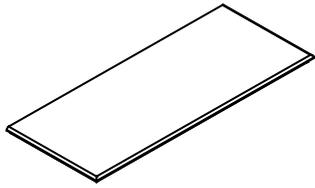


1 Top panel (80 x 33cm)

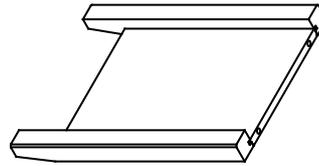


2 Left frame side (49.5 x 30.7cm)

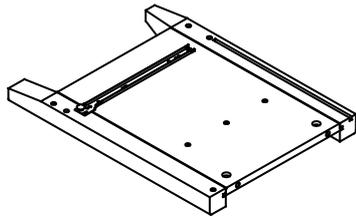


3 Right frame side (49.5 x 30.7cm)

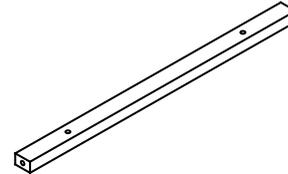


4 Top front rail (68 x 3.8cm)

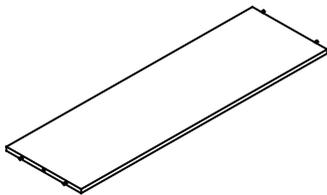


5 Shelf panel (68 x 29cm)

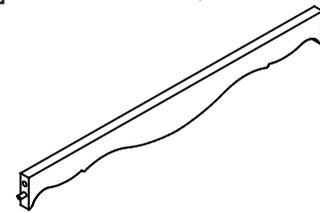


6 Bottom front rail (68 x 7.5cm)

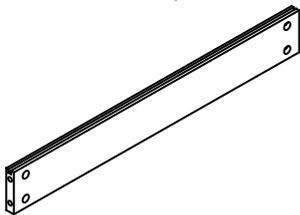


7 Back rail (68 x 8.8cm)

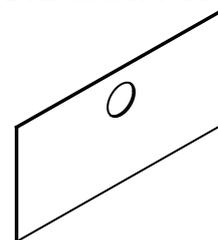


8 Back panel (69.2 x 33.3cm)

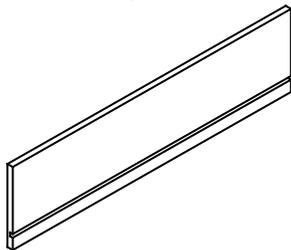


9 Back drawer panel (63.1 x 14.8cm)

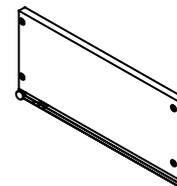


10 Left side drawer panel (26 x 14.8cm)

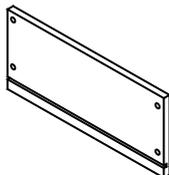

11 Right side drawer panel (26 x 14.8cm)

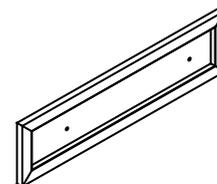

12 Drawer front (67.6 x 17.8cm)

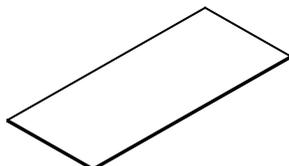





13 Bottom drawer panel (64.3 x 24.8cm)




Components - Fittings

Please check you have all the fittings listed below

   Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

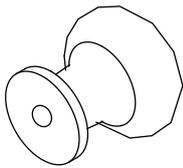
<p>A</p>  <p>25mm Screw x 8</p>	<p>B</p>  <p>30mm Bolts x 2</p>	<p>C</p>  <p>Allen key x 1</p>
<p>D</p>  <p>16mm Flat washer x 2</p>	<p>E</p>  <p>10mm Spring washer x 2</p>	<p>F</p>  <p>35mm Cam bolts x 14</p>
<p>G</p>  <p>15mm Cam locks x 14</p>	<p>H</p>  <p>25mm Bolts x 2</p>	<p>I</p>  <p>30mm Metal handle x 2</p>
<p>K</p>  <p>20mm Pads x 4</p>		

 Tools required



 Phillips screwdriver (medium & large)



 Ruler/tape measure

 Flatblade screwdriver (medium)

  Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (30mm screw shown).


Assembly Instructions

Step 1

Insert Cam bolts



a: Insert Cam bolts **F** into top panel **1** as shown

a:

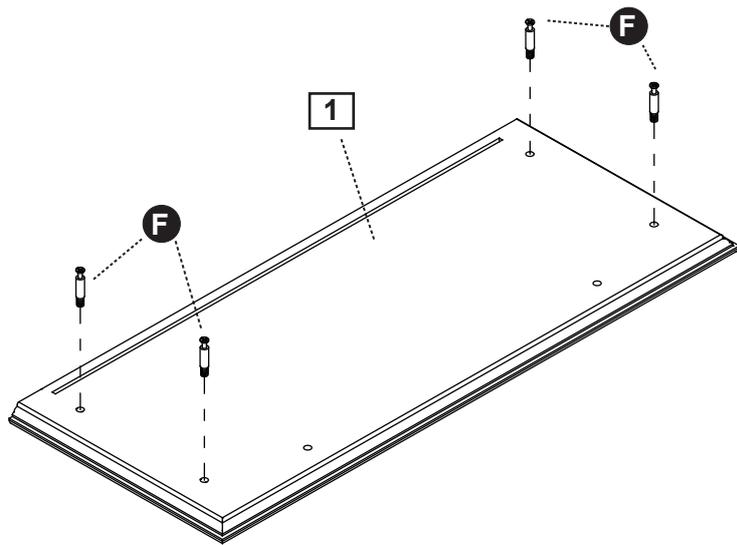

b: Insert Cam bolts **F** into left frame side **2** and right frame side **3** as shown

b:

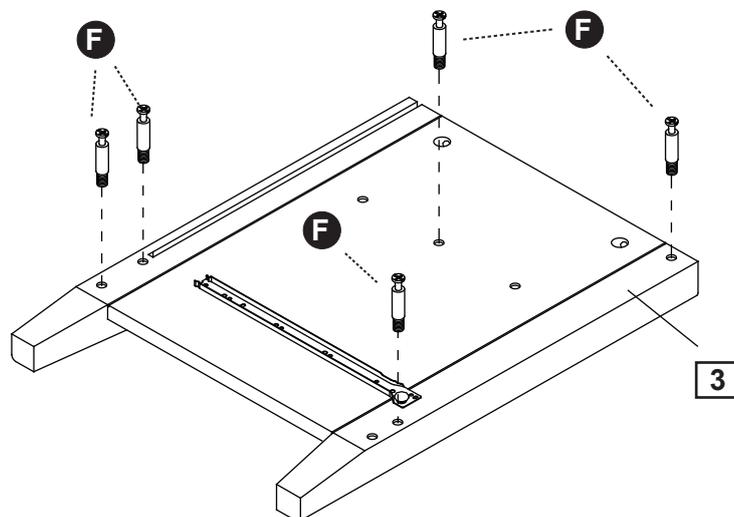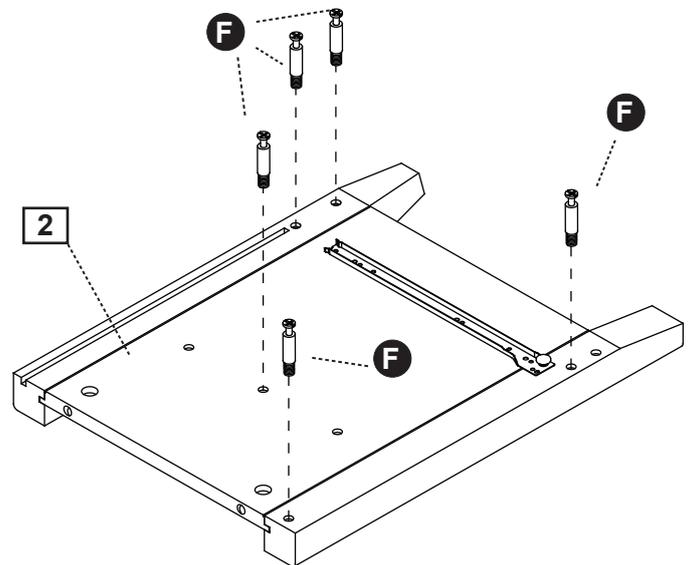


Assembly Instructions

Step 2

Assembly frame side

Insert Cam locks **G** into the shelf panel **5** back rail **7** top front rail **4**, & bottom front rail **6**. Press firmly together. Turn the cam lock clockwise with a philipshead screwdriver to lock. Insert back panel **8** into the slot of back rail **7** & frame side **3**.

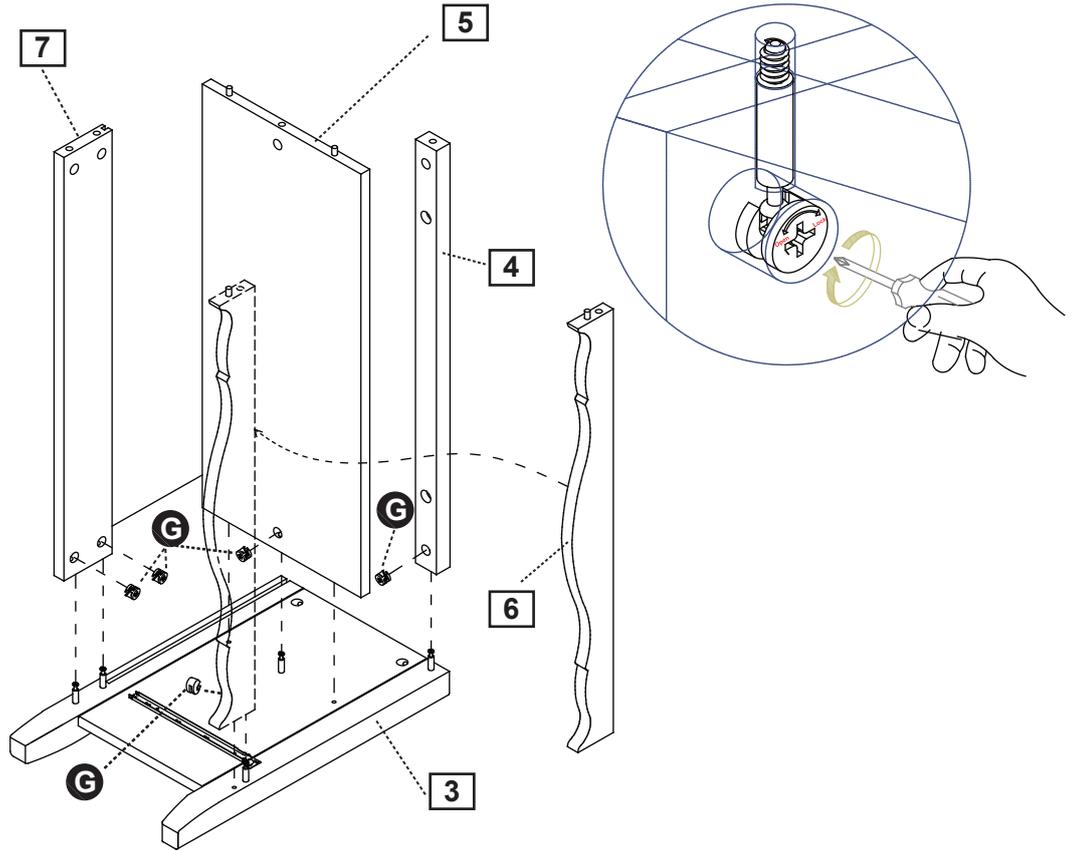


Step 3

a: Assembly frame side

Insert Cam locks **G** into the shelf panel **5** back rail **7**, bottom front rail **6** and top front rail **4**. Press firmly together. Turn the cam lock clockwise with a philipshead screwdriver to lock.

b: Attach the pad

Remove cover paper on the pad **K**. Attach the pad into under the legs. With help stand the assembled unit upright.

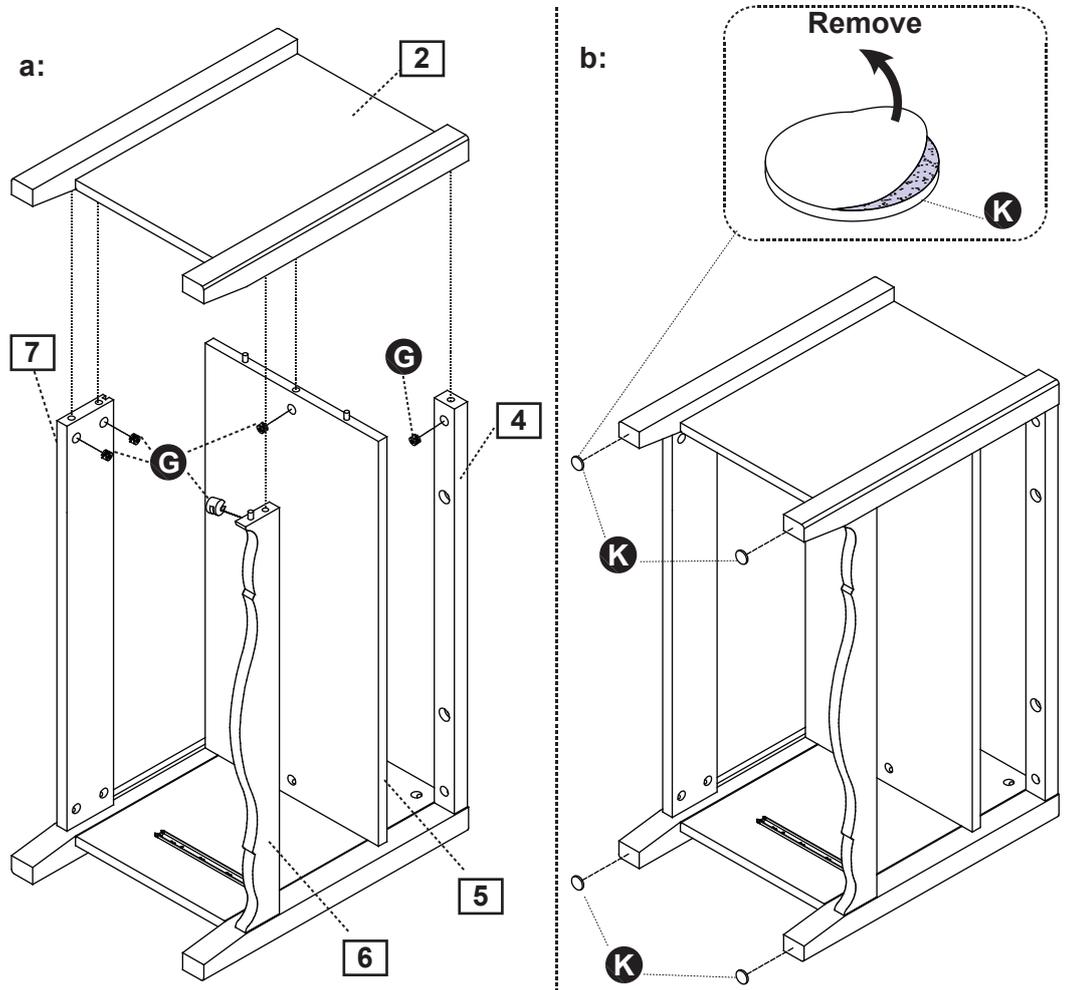


Assembly Instructions

Step 3

Assembly Back panel


Insert back panel **8** into the slot of back rail & frame side .

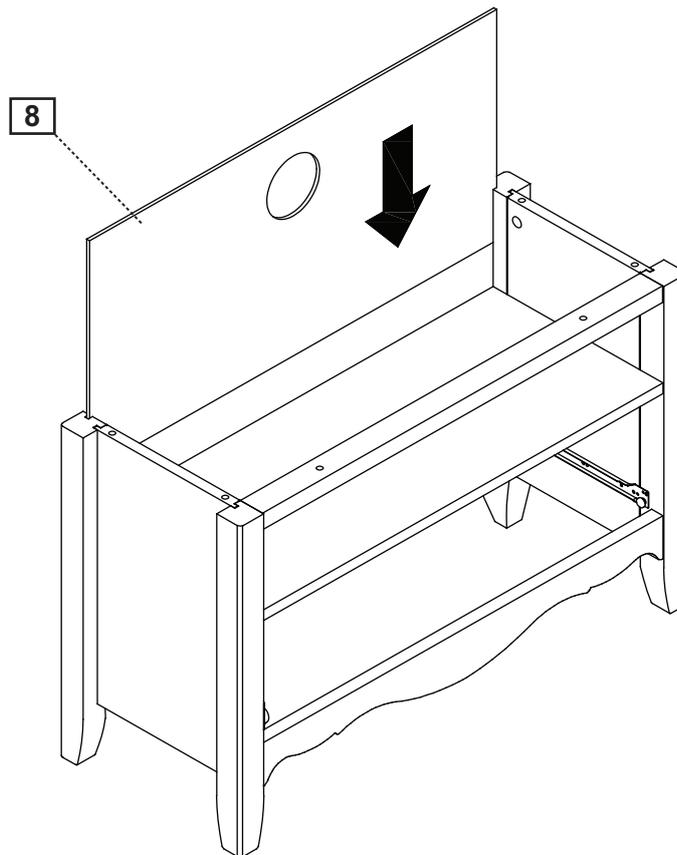

Step 5

Assembly top panel

Insert Cam locks **G** into side panel **2** **3** as shown . Press top panel **1** onto assembly. Turn cam locks to lock . Insert bolts **B** , Spring washer **D** , flat washer **E** , Tighten with supplied allen key **C** . Do not over tighten.

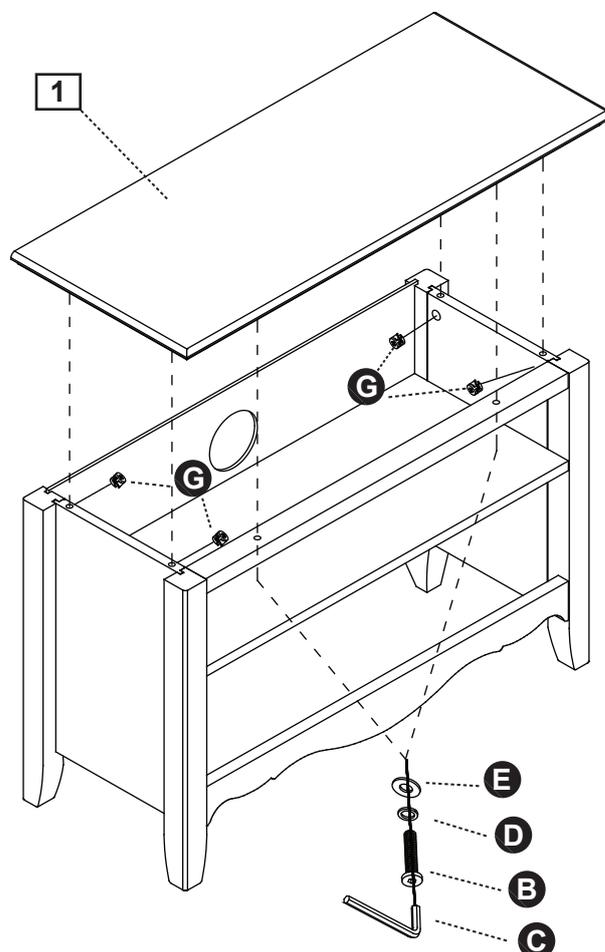


Assembly Instructions

Step 6


Assembly Drawer

a: Position Left side drawer panel **10**, and right side drawer panel **11** into drawer front **12**.
Fix through holes using screw **A**.

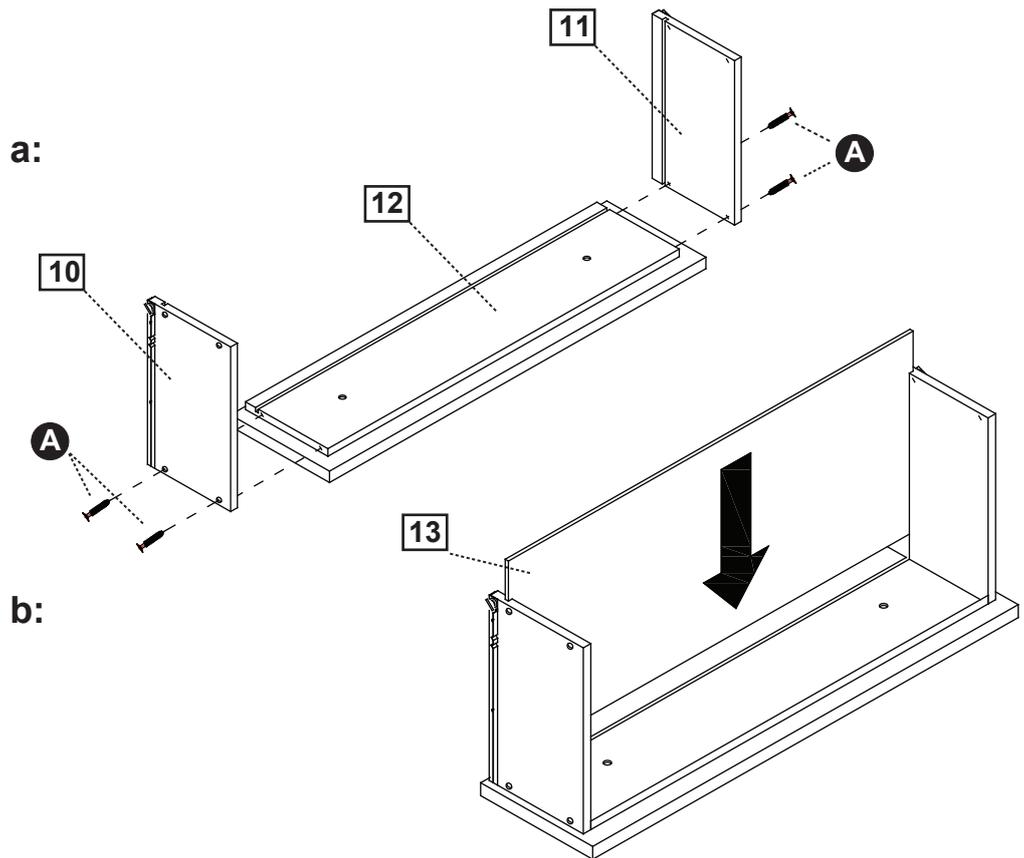


b: Insert bottom drawer panel **13** into the slot of side drawer panel and drawer front panel.

c: Position back drawer panel **9**.
Fix through holes using screw **A**.

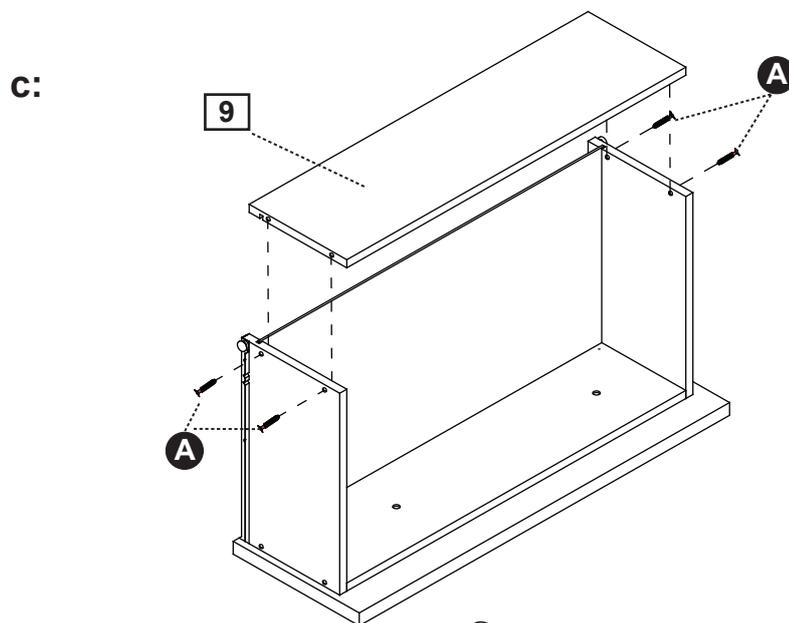

d: Position metal handle **I** into top drawer panel.
Fix through holes using bolt **H**.

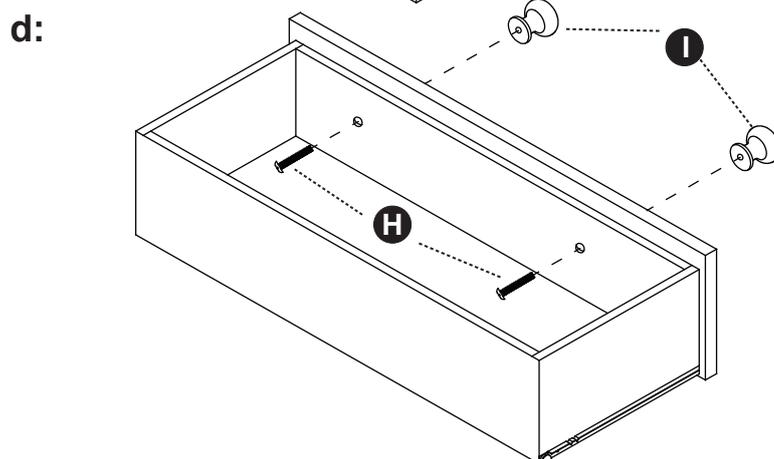

Assembly Instructions

Step 7

Assembly Drawer

Position drawer into the assembled unit .

