


Instruction manual

MP3 PLAYER
MP04 4G BLACK

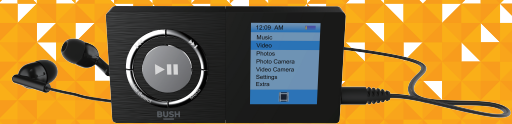

You'll soon be enjoying your new MP3 PLAYER

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your TV. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**.

1 Safety information

Important - Please read these instructions fully before installing or operating

NOTE

Below contents are for how to use the device properly and keep it in good condition, please read carefully

- Avoid serious impact to the device.
- Avoid contact of Benzene or any diluents.
- Avoid closing to strong powerful magnetic or electric fields.
- Avoid direct sunshine or heating devices.
- Do not try to disassemble, repair, or modify the device.
- Do not use the device with earphone while bicycling, driving, or motorcycling.
- Do not listen to music with high volume to avoid damage to your hearing.
- Assort and dispose with care the used packing, used batteries, used electrical devices.

WARNING:




To prevent possible hearing damage, do not listen to this radio at high volume levels for long periods of time.

2 Using your MP3 PLAYER

Let's get started

Device Layout

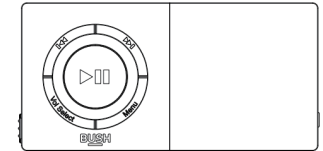

Keys' Functions

- 1. Menu** : Short press to show sub menu, or long press to exit and return to main menu.
- 2. ◀ / ▶ Key** : for choosing previous/next options or files.
- 3. ▶ key** : Play/ Pause key, also act as return key for exiting from current menu to an upper menu.
- 4. VOL Select key** : Volume control, use ◀ / ▶ key to decrease /increase volume.

Fig 1.

Turn on/off device

Push the power switch to ON position to turn on the device, to OFF position to turn off the device. Device will automatically turn off when the Off time in the setting is reached.

Note: The device will automatically turn on when the device is connected to PC or charging even if the switch is at off position.

PC Connection

System Requirement

Operation System: Windows98/ME/2K/XP/Vista/Linux9
CPU: at least Pentium-133MHz
Ram: at least 32MB
Spare Hard disk room: : at least 100MB
USB port

Connecting with PC

When the device is either at on or off status, user can use the USB cable that comes with the device to connect it to the PC as an removable disk, user can copy music or picture files into different folders accordingly.

Music Mode

While the device shows Music, short press ▶ key to enter music playing.
This device has memory function, it will start from the point where last play stopped.
User can press ▶ for play or pause, and press ◀ or ▶ for previous or next track. Long press ◀ or ▶ for skip fast forward or backward. For volume change, press VOL Select to show volume change menu, and press ◀ or ▶ to decrease or increase volume.

Sub Menus

1. When the device is at playing status, press Menu key to show following sub menus: Repeat, Equalizer, Replay Mode, Exit.
2. When the device is at paused playing status, press Menu key to show following sub menus: Local Folder, Delete File, Delete All, Exit.
3. Press ◀ or ▶ to choose different sub menus, press ▶ to confirm and enter, press Menu to exit to upper menu.
4. The device has memory function, when going into the play mode, it will start from the last point where last play stopped.

Video Mode

1. While the device shows Music, short press ▶ key to enter Video playing.. The operation is similar to Music mode, please refer that for reference.

Sub Menus

When the device is at stop playing mode, press Menu key to show following sub menus: Local Folder, Delete File, Delete All, Repeat, Exit. The operation is similar to those of Music Mode.

FM Radio

When the device is at FM radio function, long press ◀ or ▶ for backward or forward scanning, the device will stop scanning when it scans a station. Short press ◀ / ▶ key for manual scanning..

Sub Menu

Save: Save the scanned station
Delete: Delete a saved station
Delete All: Delete all saved station
Auto Search: When using this function, the device will automatically scan stations and save them as CH01, CH02 etc. This device can save up to 20 stations. When auto search stop, the device will go back to play CH01. User can press ▶ to switch from different saved channels
Normal Band: China, /USA band, frequency: range: 87MHz-108MHz.
Japanese Band: frequency: range: 76MHz ~ 90MHZ.

Photo Mode

Press ▶ key to view chose picture, press ▶ key again to exit. Press ◀ or ▶ to show different pictures.

Sub Menus

Sub Menus: Local Folder, Playback Set, Delete File, Delete All, Exit. These functions are similar to those of Music mode except the Playback Set..

Playback Set

Manual Play: User use ◀ or ▶ to manually switch viewing different pictures.

Auto Play: User can set the slide show time for each picture from 2 to 10 seconds.

System Set Up

1. Time/date: Press ▶ to choose Year, Month, Day, Hour, Minute, Second, press ◀ or ▶ to change value and press Menu to save and exit.
2. LCD Set:
Back Light Off time: Can be set from 0~50 seconds
3. Language: Support 24 different languages.
4. Power Off
Off time: Device will turn off automatically after the device is not been used for a certain time, can be set from 0 to 200 seconds.
Sleep time: Device will automatically goes into sleep mode after the device is not been used for a certain time, can be set from 0 to 120 seconds.
5. Memory Info: Shows the total disk space and the percentage that have been used..
6. Firmware info: Shows the firmware version.
7. Exit: Exit and back to Main Menu.

8

E-Book

Sub Menus

When the device shows the E-Book function, press ▶ to enter file list mode, press Menu again to show following sub menus: Local Folder, Playback Set, Delete File, Delete All, Exit, The operations of these sub menus are similar to those of Photo Mode, please refer that for reference.

During the E-Book reading status, press Menu to show other sub menus: Bookmark select, Bookmark delete, Book mark add, Exit.
Bookmark select: List of bookmarks, choose to show any bookmarked section.
Bookmark delete: Delete a bookmark
Bookmark ad: Add a bookmark
Exit: Exit and back to e-book reading status

9

3 Other information

Helpful technical information

Specification

USB	Micro USB 5Pin , USB 2.0 high speed transfer, USB charging
ROM	4GB NAND FLASH
Battery	Polymer Lithium battery 3.7V 160MAH
Music	Support WMA、WAV formats.
Picture	Support JPEG、BMP、GIF formats.
Video	Support AMV、AVI (need to use special software to convert)
Environmental Temperature	-40°C-60°C
Support PC OS	Windows98/ME/2K/XP/Vista/Linux9

Troubleshooting

Device fail to power on	Make sure the power is switched on and battery has power
No sound from earphone	Make sure the volume level is no at 0. and earphone is well plug in
Unreadable screen display	Make sure you choose the right language
Bad FM receiving	Adjust earphone cable's position
Cannot copy files to the device	Make sure the USB cable is well connected Check whether the device's memory is full

10

Help and assistance

If you require any technical guidance or find that your MP3 PLAYER is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on

0345 604 0105.*

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

11

4 Product support

Help is always at hand

Disposal

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For your household waste disposal service or the shop where the product was purchased.



12

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year.
*Calls may be recorded and monitored.

13

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

10

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire, CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Aveybury Blvd. - Milton Keynes - MK9 2NW

14

15