
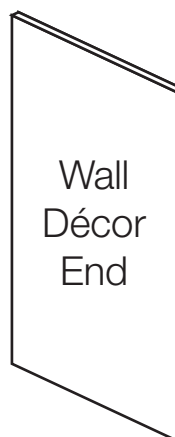


Valencia - Décor End Panels

Assembly Instructions - Please keep for future reference

hygena

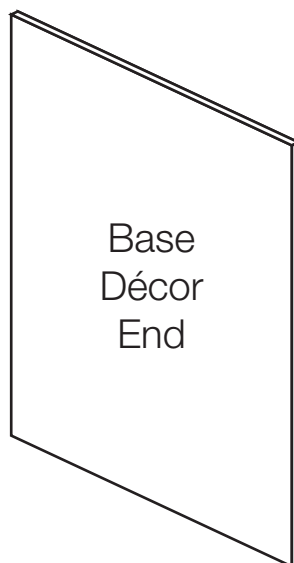

Base - Black Décor End	608/2527
Base - Cream Décor End	608/2541
Base - Oak Décor End	194/9153
Base - White HN Décor End	205/3158
Base - White Décor End	608/2534
Tall - Black Décor End	608/2668
Tall - Cream Décor End	608/2682
Tall - Oak Décor End	205/4755
Tall - White HN Décor End	204/9337
Tall - White Décor End	608/2675
Wall - Black Décor End	608/2596
Wall - Cream Décor End	608/2613
Wall - Oak Décor End	205/4119
Wall - White HN Décor End	205/4999
Wall - White Décor End	608/2606



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Components - Fittings

 
If you have damaged or missing components, call the **Customer Helpline: 08456 400800** quoting the reference numbers below, the kitchen range name and the panel name.

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

- A**  25mm Screw (F50)
6 screws for Tall Décor End / 4 screws for Wall/Base Décor End

Tools required



Cross-head screwdriver

Assembly Instructions

Step 1

Note: You may fit your décor end panel to either side of your unit. Please wait until your units are assembled and in place before fitting your décor end panels.

Line your décor end panel up with the side of your unit.

Ensure the top and rear of your décor end panel are flush with the unit.

Hold the décor end panel securely in place while you attach it using screws **A** through any of the unused holes in your units side panel.

Note: If you have a tall décor end panel you will have 6 screws **A to fit, if you have a wall or base décor end panel you will have 4 screws **A**.**

