

 
SASHA End Table

Assembly Instructions- please keep for future reference

609/5600

609/5617

609/6283

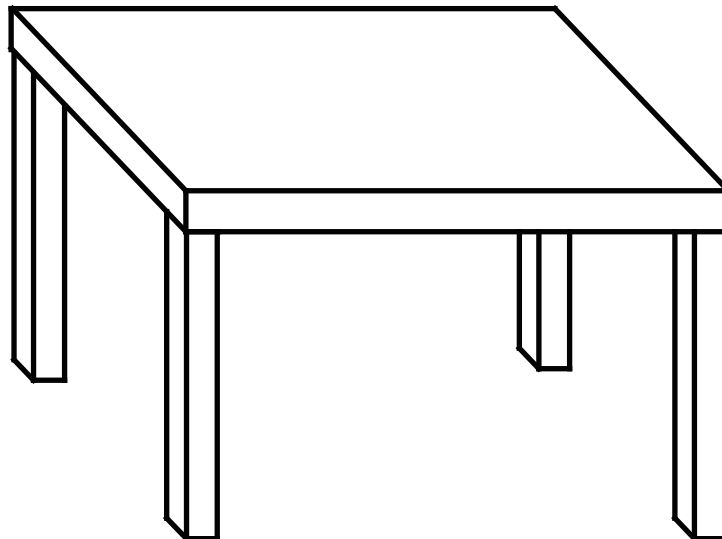

Dimensions

Width - 45cm

Depth - 45cm

Height - 45cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed below and opposite.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly may be easier with 2 people.



 
- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

Please check you have all the panels listed below



A Top panel x 1
45 x 45 x 5 cm

 

B Foot x 4
5 x 5 x 40 cm

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

a



Metal crew x 4
ø 7 x 70 mm

b



 
Foot mat x 4

Assembly Instructions


Step 1

Screw 4 x metal screw **a** into top panel A a little and then screw 4 x foot B through the screw onto top panel A as shown.

Note: the leg should be in right position after assembly and assembled tight enough, otherwise the top will be unstable.

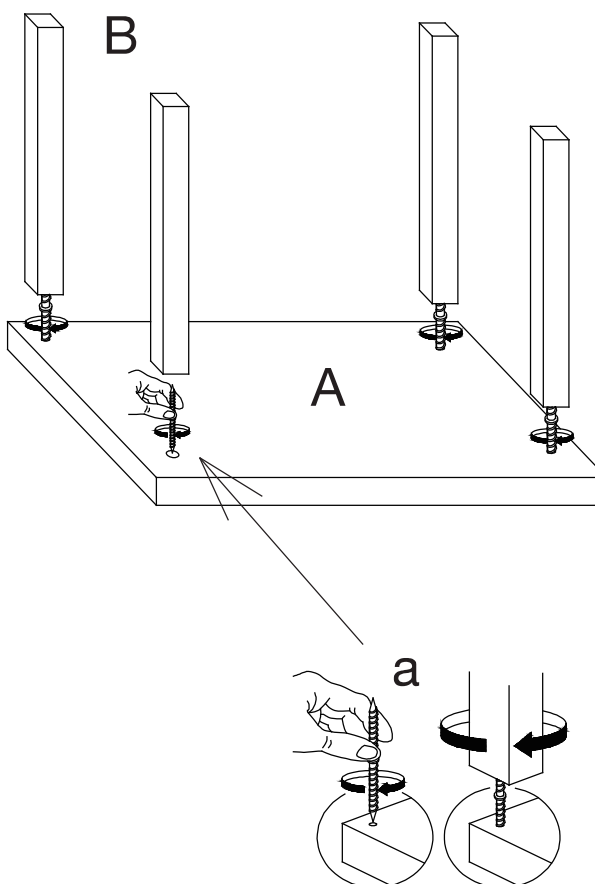

 Attach the 4 x Foot mat **b** onto the feet as shown. assembly is complete.

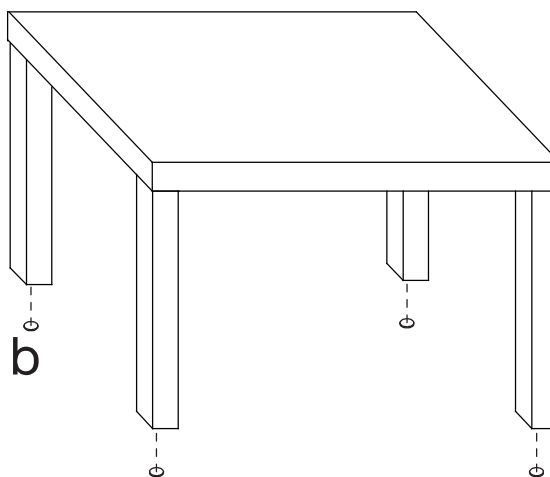

Sasha End Table

 
Assembly Instructions - Please keep for future reference

609/5600

609/5617

609/6283

404/2411

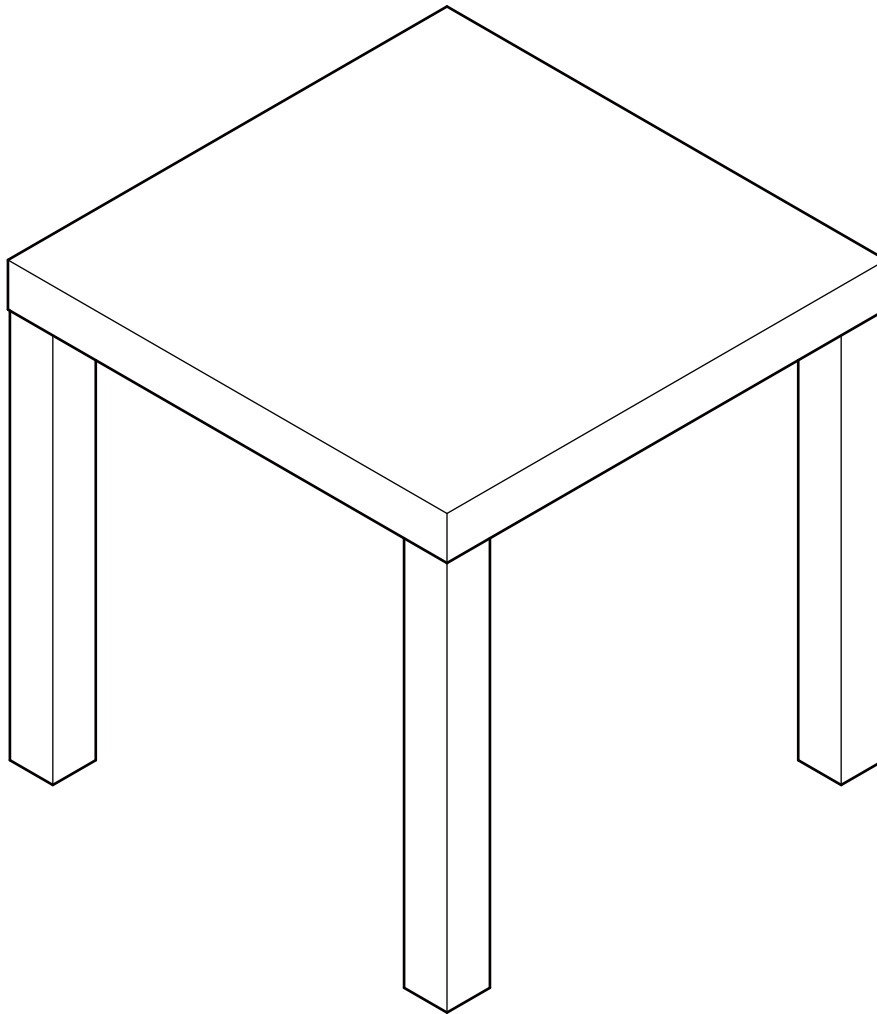

Dimensions

Width - 45cm

Depth - 45cm

Height - 44.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

 
Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.


Components - Panels

If you have damaged or missing components, call the
Customer Helpline: Argos = 0345 6400800

Please check you have all the panels listed below

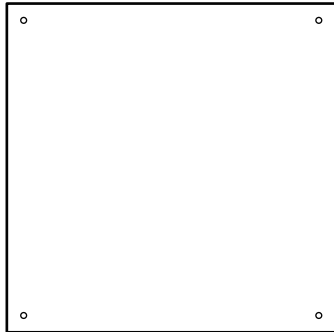

1 Table top (45 x 45cm)

 

2 Leg x 4 (40 x 4.5cm)

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.



72mm Screw x 4

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

 
Step 1

Attaching legs


a: Fasten Screw **A** into the Leg **2** up to half length(36mm).

Note: Please ensure screws are tightly secured.

a:





X 4

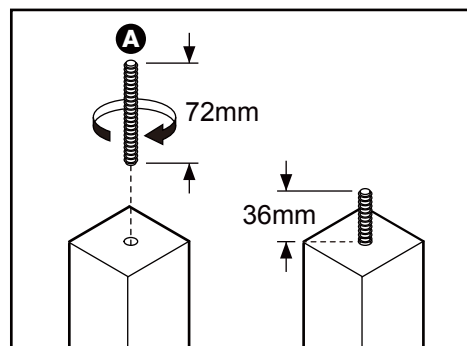 

b: Fix the Legs **2** onto the Table top **1**.

  b:

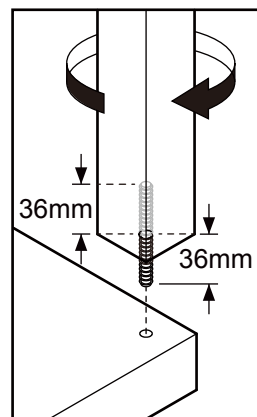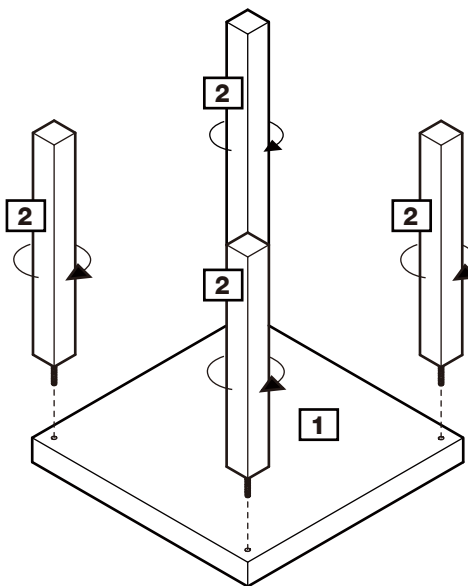


Step 2

Finishing the unit

With help, place the unit in the intended position.

 Assembly is complete.

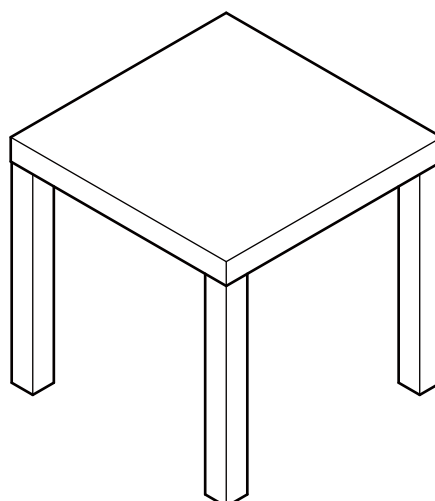

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800