
SASHA Coffee Table

Assembly Instructions- please keep for future reference

609/4883

609/5734

609/6290

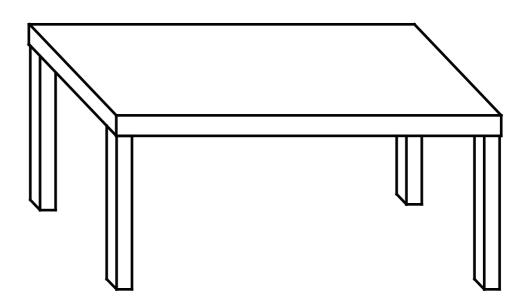

Dimensions

Width - 90cm

Depth - 45cm

Height - 45cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 0800



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed below and opposite.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly may be easier with 2 people.



• We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

 
• Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

Please check you have all the panels listed below



A Top panel x 1 90 x 45 x 5 cm



B Foot x 4 5 x 5 x 40 cm

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline:** 0845 640 0800

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.









Metal screw x 4 \emptyset 7 x 70 mm


Foot mat x 4

Assembly Instructions


Step 1

Screw 4 x metal screw a into top panel A a little and then screw 4 x foot B through the screw onto top panel A as shown.

Note: the leg should be in right position after assembly and assembled tight enough, otherwise the top will be unstable.

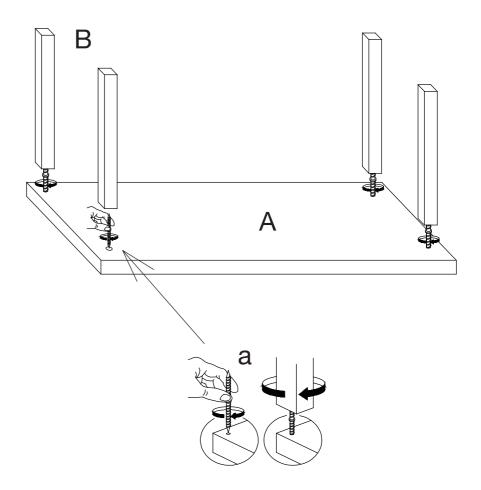

Attach the 4 x Foot mat **()** onto the feet as shown. assembly is complete.

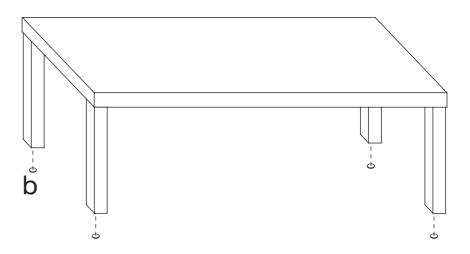

Sasha Coffee Table


Assembly Instructions - Please keep for future reference

609/4883

609/5734

609/6290

404/2222

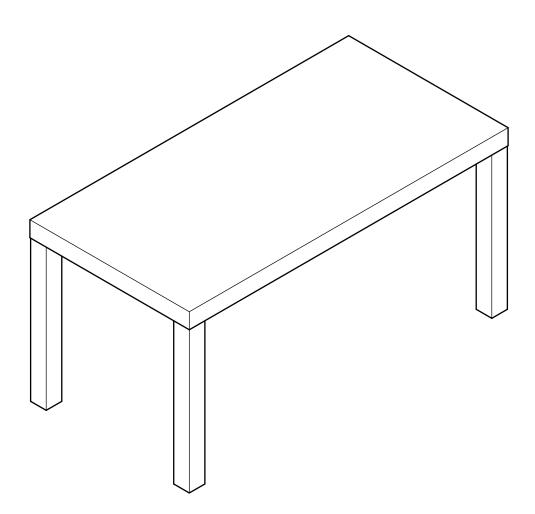

Dimensions

Width - 90cm

Depth - 45cm

Height - 44.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 6400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

Components - Panels

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 6400800

Please check you have all the panels listed below



1 Table top (90 x 45cm)

2 Leg x 4 (40 x 4.5cm)

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

72mm Screw x 4	

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

 
Assembly Instructions


Step 1

Attaching legs

a: Fasten Screw A into the Leg 2 up to half length(36mm).


Note: Please ensure screws are tightly secured. a:




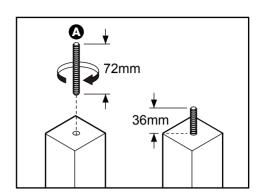

b: Fix the Legs 2 onto the Table top 1.



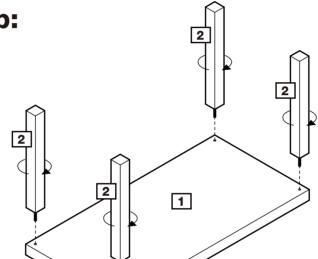

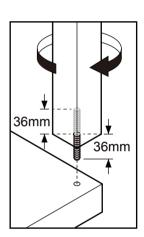


Step 2

Finishing the unit

With help, place the unit in the intended position.

Assembly is complete.

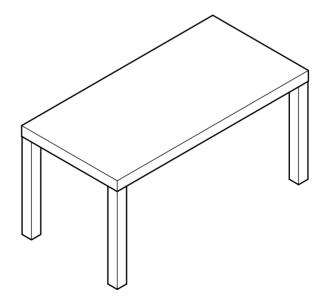

If you need help or have damaged or missing parts, call the **Customer Helpline**:

Argos = 0345 6400800