Tall Wide & Extra Deep Bookcase

Assembly Instructions - Please keep for future reference

609/0117

609/0131


609/1020

609/2043

609/2139

609/3554

610/9534

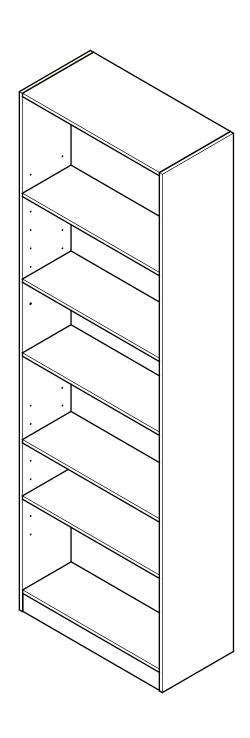

Dimensions

Width - 78cm

Depth - 29.1cm

Height - 180.1cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit.
Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.
- **Note:** Only apply the glue once you are sure of the assembly.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.


Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels


If you have damaged or missing components, call the Customer Helpline: 08456 400800

Please check you have all the panels listed below

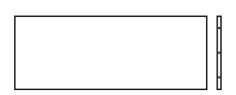

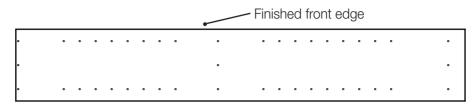


- 1 Fixed panel x 2 (74.9 x 28.4cm)
- **5** Right side panel (180 x 28.6cm)

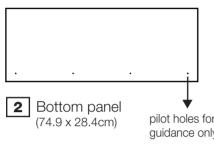









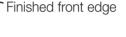





3 Shelf x 4 (74.9 x 28.4cm)

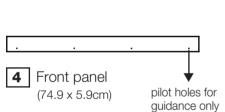

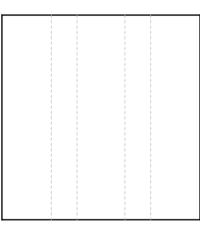

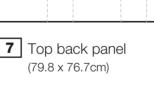

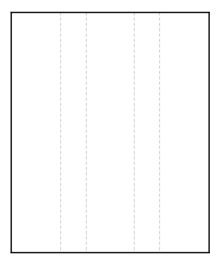

Bottom back panel (93.6 x 76.7cm)

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

A	B #)1000 >	(This screw is included in the bag of wall strap)
Plastic support x 4	14mm Screw x 9	Wall strap x 1
	3 🗆	6
50mm Screw x 12	Support cover x 16	Shelf support x 16
G (====================================	•	
Wooden dowel x 6	Screw cover x 12	Nail x 46
1	C	0
Wall plug x 1	Nail guide x 1	Glue x 1



Ruler - Use this ruler to help correctly identify the screws 0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Step 1

Attaching bottom panel


a: Use Plastic supports **A** and Screws **3** to fix the Front panel **4** onto the Bottom panel **2**.


b: Place a small amount of Glue into the dowel holes of the Bottom panel and Fixed panels 1.

Then insert Wooden dowels © into the Bottom panel 2 and Fixed panels 1.



Caution: Always check the assembly method is correct before applying glue.

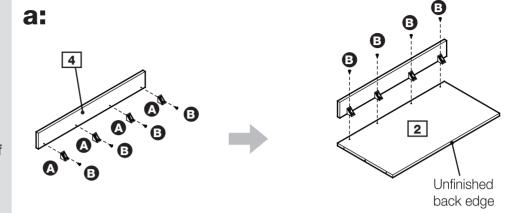

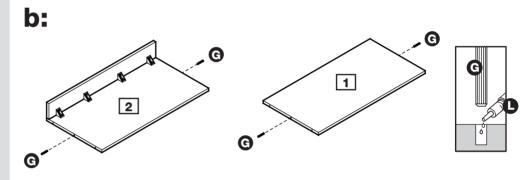


Step 2

Attaching side panels

Place a small amount of Glue onto the joint's surfaces and ends of fitted Wooden dowels .

Use Screws **D** to fix the Left Side panel **6** and Right side panel **5** onto the Bottom panel **2** and Fixed panels **1**.

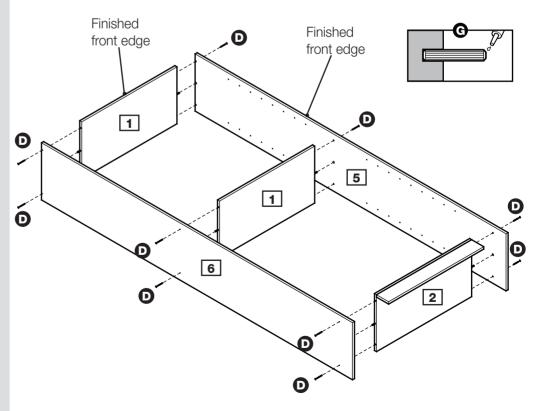

Step 3

Fixing back panels

a: Use Nails **1** to fix the Top Back panel **7** and Bottom Back panel **8** onto the unit.


Note: Use Nail guide **(**to keep a constant distance from the edge.





Important:

The cabinet **MUST** be 'square' when the back is attached.

a:

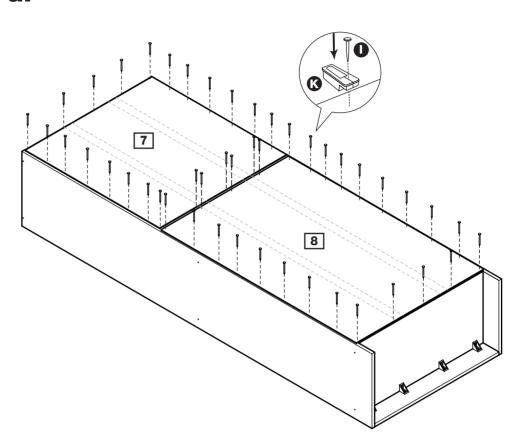

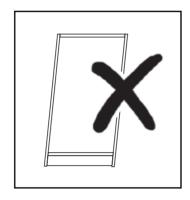

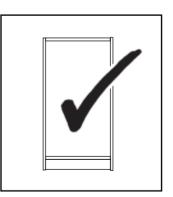

Step 4

Attaching shelf panel

With help, carefully stand bookcase upright.



Warning:

The bookcase is heavy.

Lift with care.


a: Slide support covers **a:** Onto Shelf supports **b.**

Insert Shelf supports (Support covers are included) into the unit.
Ensure they are well fitted before inserting the Shelves.


Note: Set the shelf supports to the desired height.

Use Screw covers to cover the Screw heads.

b: Slide the Shelves **3** into the unit.

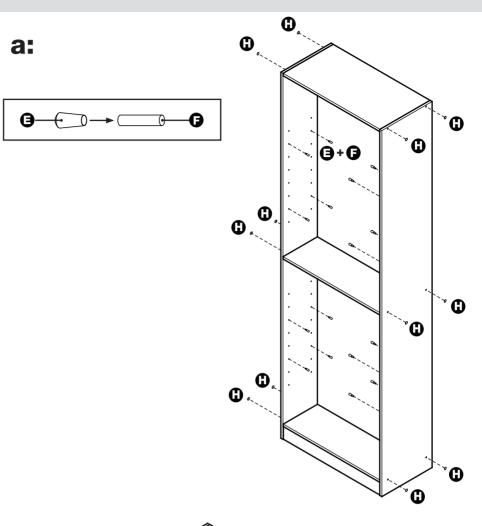

b:

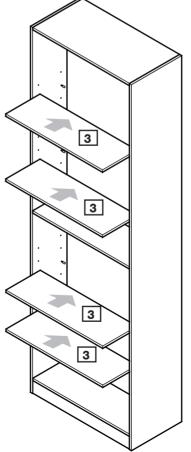

Step 5

Fixing to wall

It is recommended that the bookcase is fixed to a wall.

Use Screw B to fix the Wall strap Conto the top panel.

With help, move bookcase into position.



Warning:

The bookcase is heavy.

Lift with care.

Mark fixing hole on wall and remove bookcase.

Drill a hole and insert Wall plug •.




Warning:

Before drilling, check wall for hidden pipes and and cables.

Reposition bookcase and fix wall strap using Screw **6**.

Note: Before use allow the Glue to dry for 24 hours and make sure the unit is secure.

Assembly is complete.

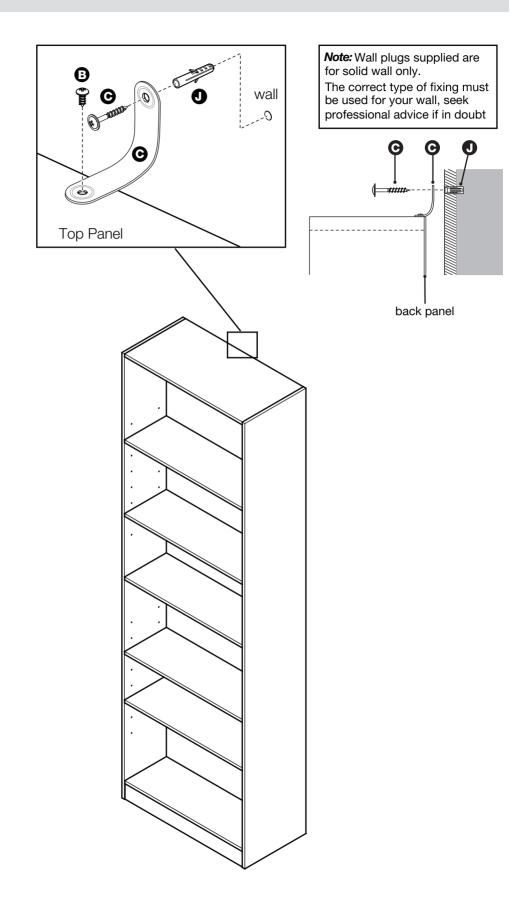

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule: (!) Always use a larger screw and wall plug if you are not sure.
- **2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

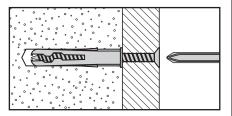


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

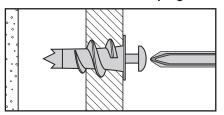


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

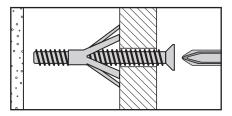


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

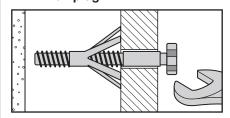


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

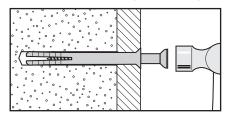

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

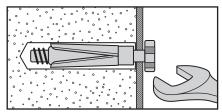

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.



Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Tall Wide Extra Deep Bookcase

Assembly Instructions - Please keep for future reference

609/2139

609/3554


609/4687

609/5758

609/5772

610/9534

317/8575

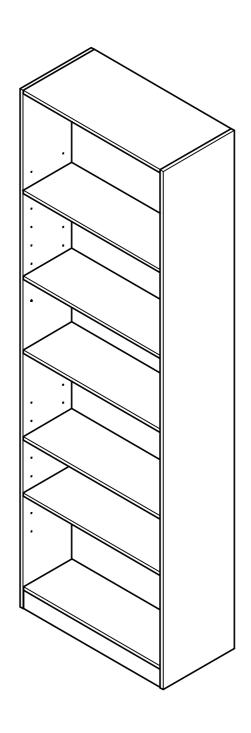

Dimensions

Width - 78cm

Depth - 29cm

Height - 180cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:** Argos = 0345 6400800



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.


Components - Panels

(74.9 x 5.9cm)

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 6400800

8 Bottom back panel (76.7 x 93.6cm)

Please check you have all the panels listed below

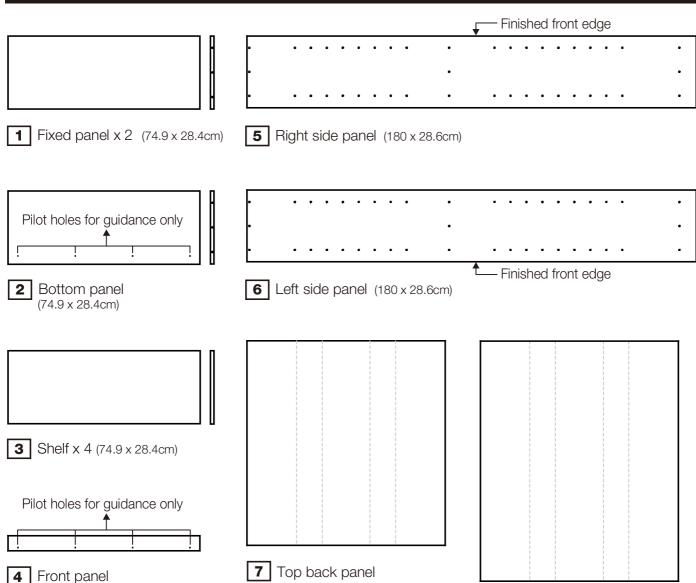


(76.7 x 79.8cm)

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

A	B ()	(This screw is included in the bag of wall strap)
Plastic support x 4	14mm Screw x 9	Wall strap x 1
		6
50mm Screw x 12	Support cover x 16	Shelf support x 16
6	(4)	0 •
30mm Dowel x 6	Screw cover x 12	Nail x 46
O O TAND		
Wall plug x 1		

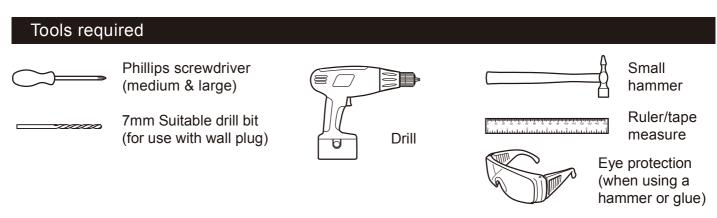

Step 1


Attaching bottom panel

a: Use Plastic supports **A** and Screws **3** to fix the Front panel **4** onto the Bottom panel **2**.

b: Then insert Dowels **©** into the Bottom panel **2** and Fixed panels **1**.



Caution: Always check the assembly method is correct before applying glue.

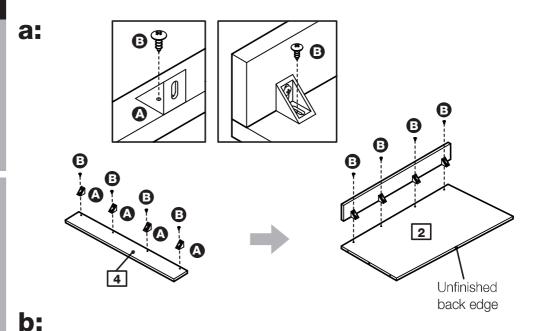

2


G

① 1 X 2

Step 2

Attaching side panels

Use Screws D to fix the Left Side panel 6 and Right side panel 5 onto the Bottom panel 2 and Fixed panels 1.

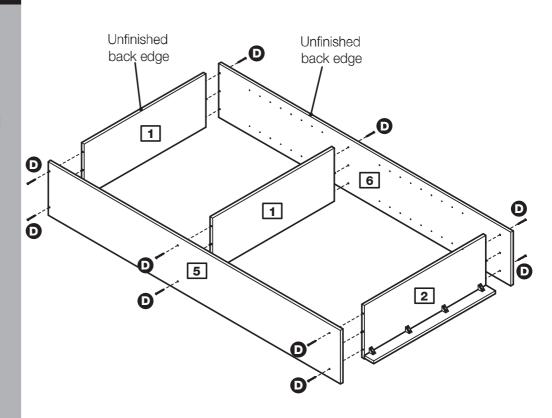


Step 3


Fixing back panels


Attach Top back panel 7 and Bottom back panel 8 onto the unit using Nails 1.



Important: The unit MUST be 'square' when back is attached.

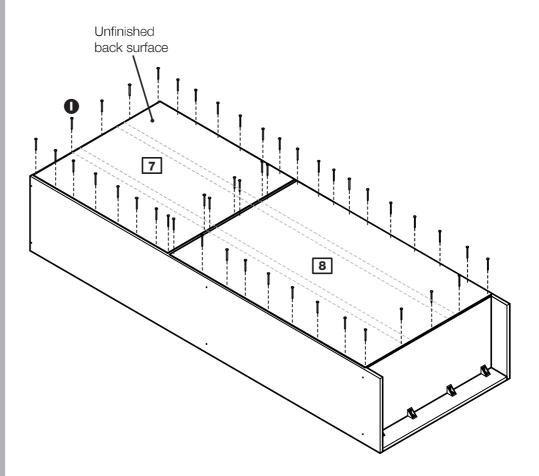

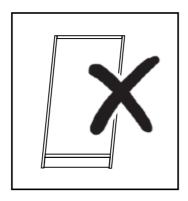

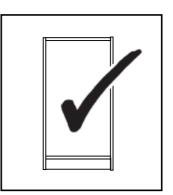

Step 4

Attaching shelves

With help, carefully stand bookcase upright.



Warning:

The bookcase is heavy.

Lift with care.


a: Slide Support covers **a:** Onto Shelf supports **b.**


Insert Shelf supports (Support covers (Pare included) into the unit.
Ensure they are well fitted before inserting the Shelves.

Note: Set the shelf supports to the desired height.

Use Screw covers to cover the screw heads.

b: Slide the Shelves 3 into the unit.

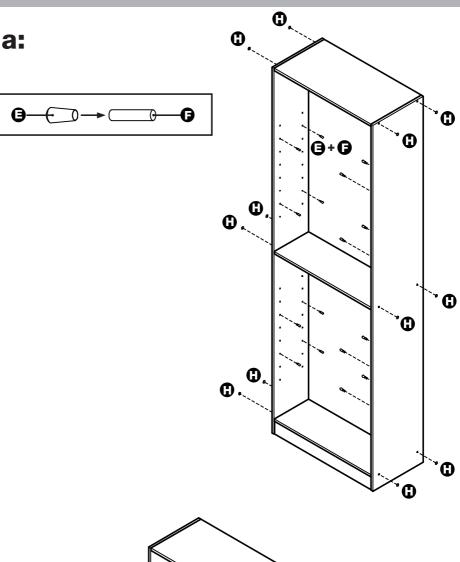

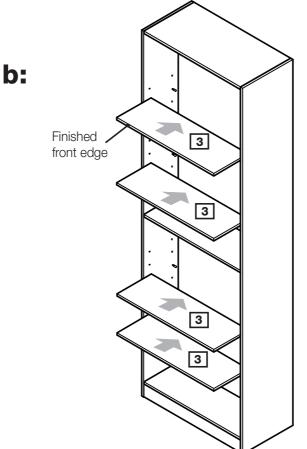

Step 5

Fixing to wall

It is recommended that the bookcase is fixed to a wall.

Fix Wall strap **©** to top panel using Screw **B**.

With help, move bookcase into position.



Warning:

The bookcase is heavy.

Lift with care.

Mark fixing hole on wall and remove bookcase.

Drill a hole and insert Wall plug •.




Warning:

Before drilling, check wall for hidden pipes and cables.

Reposition bookcase and fix wall strap using Screw .

Assembly is complete.

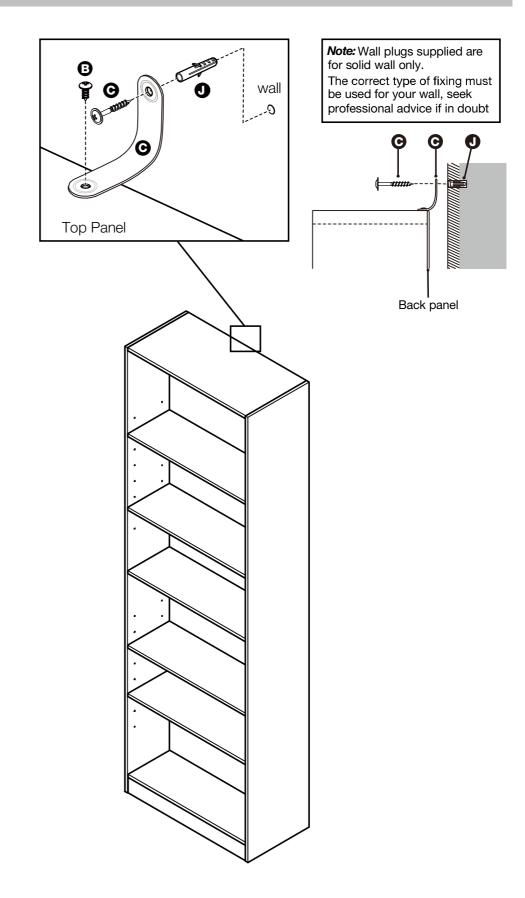

If you need help or have damaged or missing parts, call the **Customer Helpline:**

Argos = 0345 6400800

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- **2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

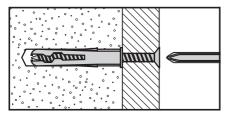


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

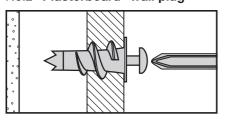


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

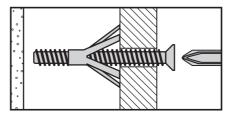


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

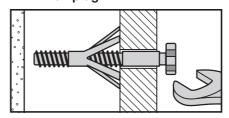


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

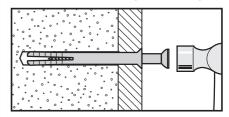

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

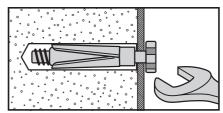


For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.



Safety: Always check the fitting and location to ensure your safety in and around the home.


Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Components

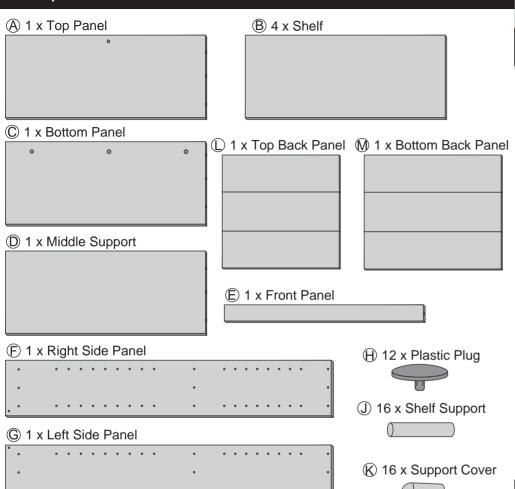

Tall Wide & Extra Deep Bookcase

Simple Assembly Instructions - Please keep for future reference

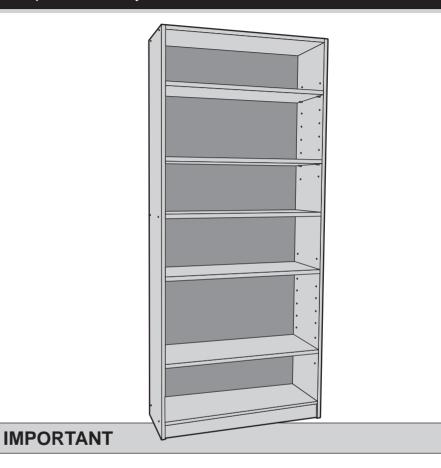

Fittings

























- 1. Read these instructions carefully and familiarise yourself with the procedure before assembling the unit.
- 2. Check that you have all the component parts following the list on the back cover and familiarise yourself with each part before proceeding.
- 3. Take all the fittings out of the plastic bag and separate them into their groups.
- 4. Ensure you have enough space to lay out all the parts before assembly.
- 5. To avoid scratching it is recommended that you assemble the unit on a soft level surface.

Assembly Instructions


Stage 1 — Fitting the Bottom Panel


Stage 2 — Fitting the Back Panel


CAUTION: Always check the assembly method is correct before applying Glue.

NOTE: It would be useful to ask someone to help you at this stage.

- Place a small amount of Glue into the dowel holes. Then insert Dowels into the Top Panel .
 See fig. 1.
- Place a small amount of Glue Into the dowel holes. Then insert Dowels into the Middle Support D.
 See fig. 2.
- Place a small amount of Glue onto the dowel holes. Then use Dowels onto the Front Panel conto the
- Place a small amount of Glue Into the dowel holes. Then insert Dowels Into the Bottom Panel and Front Panel .
 See fig. 4.

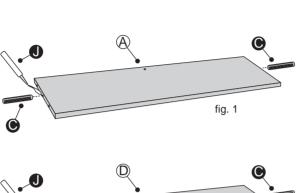

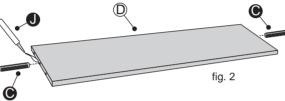


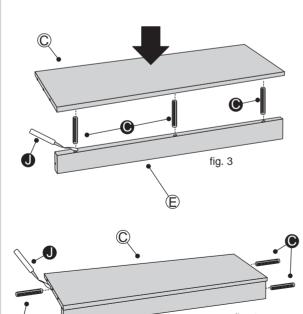

CAUTION: Always check the assembly method is correct before applying Glue.

NOTE: It would be useful to ask someone to help you at this stage.

Place a small amount of Glue into the dowel holes. Then use Screws to fix the Bottom Panel , Middle Support and Top Panel and onto the Left Side Panel and Right Side Panel .
 See fig. 5.

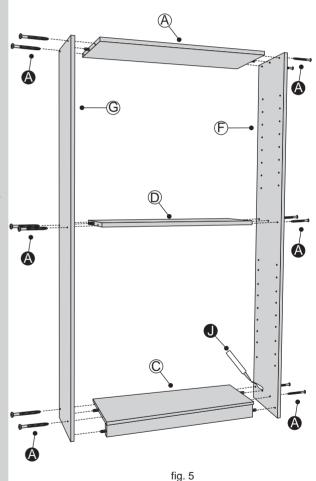

Assembly Instructions


Stage 3 — Fitting the Back Panel

Stage 4 — Fitting the Shelf Supports

NOTE: It would be useful to ask someone to help you at this stage.

 Use Nails to fix the Top Back Panel and Bottom Back Panel onto the unit.
 See fig. 6.

NOTE: Use Nail Guide to keep a constant distance from the edge to Nails 3.

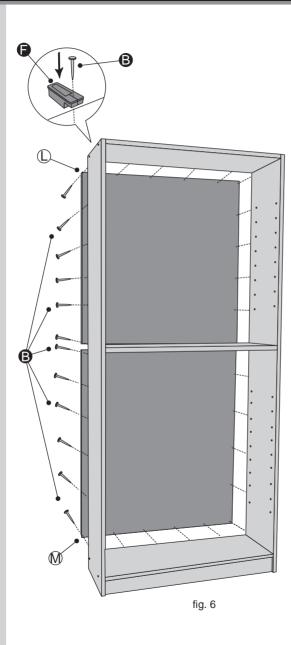



 Slide Support Covers (K) onto Shelf Supports (J).
 See fig. 7.

2. Insert Shelf Supports ① into the unit. Ensure they are well fitted before inserting the Shelves.

See fig. 8.

NOTE: Set the shelf supports to the desired height.

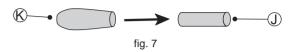

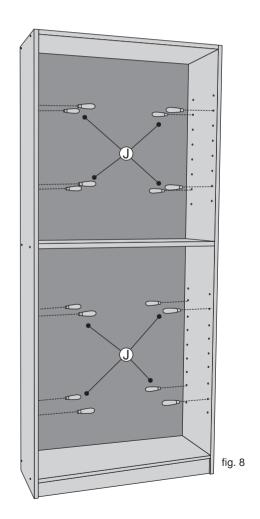

Assembly Instructions


Stage 6 - Finishing the Unit

Stage 5 — Fitting the Shelves

NOTE: It would be useful to ask someone to help you at this stage.

1. Slide Shelves (B) into the unit. See fig. 9.

2. Use Plastic Plugs (H) to cover the Screw Heads. See fig. 9.

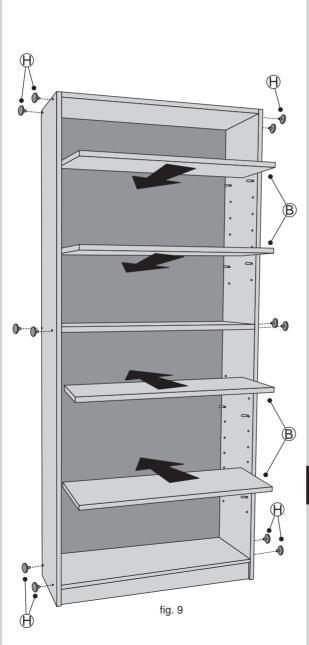

IMPORTANT: When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs supplied are suitable

a qualified tradesperson if you

NOTE: It would be useful to ask someone to help you at this stage.

1. Carefully place the unit in the desired location.


See fig. 12.

are not sure.

- 2. Use Screw **()** to fix the Wall Strap noto the top of the unit. See fig. 11.
- 3. Drill a hole at the desired height and insert Wall Plug G into the hole. Pass Screw through loose end of Wall Strap (1) to fix the unit to the wall.

See fig. 10.

NOTE: Before use always make sure the unit is secure. Please wait 8 hours until Glue is completely dry

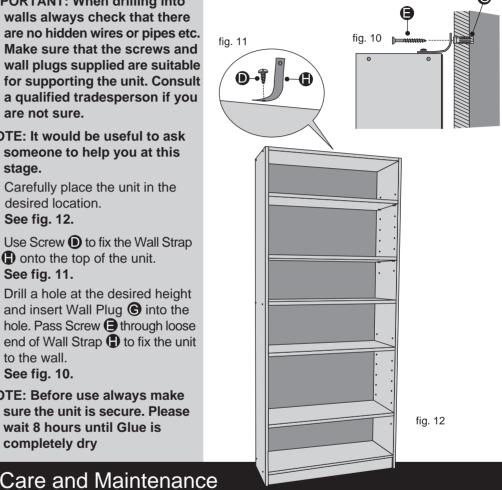

Care and Maintenance

To avoid any risk of suffocation to animals or children dispose of the plastic bags immediately.

Cleaning

As with all surfaces clean with a damp cloth and mild detergent, do not use bleach or abrasive products.

Fitting

From time to time please ensure there are no loose screws on the product.


A Guide to

Wall Mounting & Fixings

Wall Mounting & Fixings

IMPORTANT:

When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

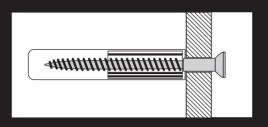


HINTS:

- 1) General Rule Always use a larger screw and wall plug if you are not sure.
- 2) Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
- 5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug **General Wall Materials**

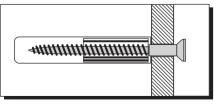

These come in various sizes and are made from plastic or sometimes wood fiber.


No.2 "General Purpose" Wall Plug Aerated / Breeze Block

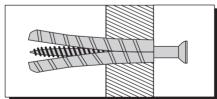

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.


For light loads, a General Purpose Plug can be used.

No.3 "Shield Anchor" Wall Plug **Heavy Loads**

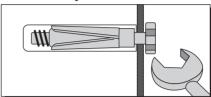


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

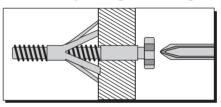


For use with plaster board partitions or hollow wooden doors

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

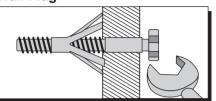

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

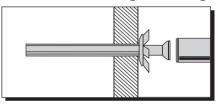

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE



SAFETY

Always check the fitting and location to ensure your safety in and around the home.



FITTING

From time to time check the fitting to ensure the wall plugs or screws do not become loose.