


### parent unit LEDs

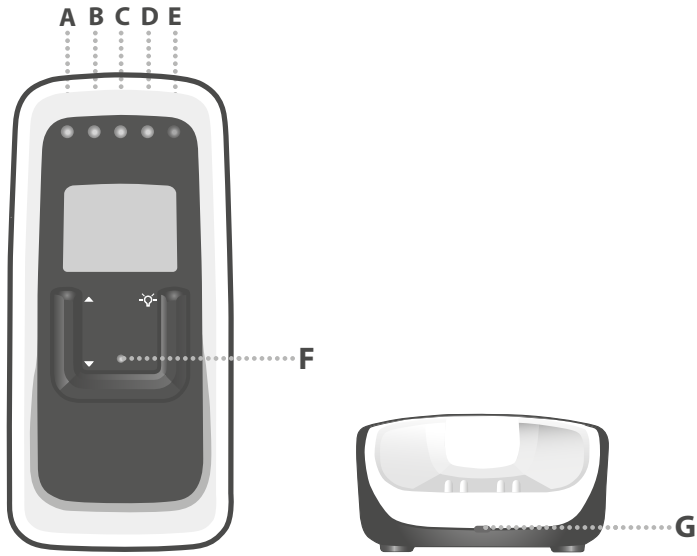


LED	FUNCTION	COLOUR	INDICATION
NO LED		None	Sound level in nursery does not exceed recognition threshold
A	Sound	Blue	Sound level 1
B	Sound	Blue	Sound level 2
C	Sound	Blue	Sound level 3
D	Sound	Blue	Sound level 4
E	Sound	Red	Maximum sound level
F	Power	Orange	Parent unit ON
G	Connection	Red	Parent unit is securely docked on the station and connection is good

### baby unit icons

TEMPERATURE		Degree Celsius Fahrenheit	
BATTERY	ON	Empty and needs to be recharged	
		1/3 Battery Level	
		2/3 Battery Level	
		Full Battery Level	

### baby unit LEDs

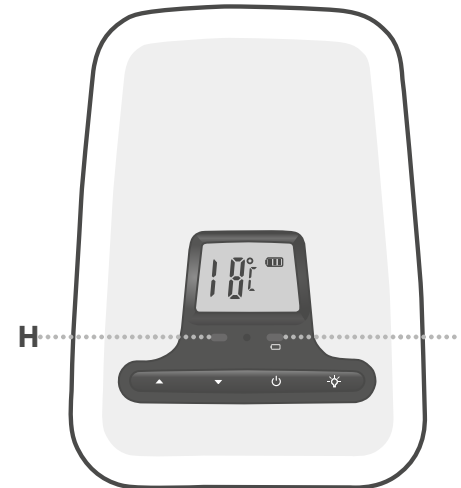

LED	FUNCTION	COLOUR	INDICATION
H	Power on	Green	Power is on
I	Low battery	Red	Battery level is low and needs to be replaced




**DECT digital monitor**  
INSTRUCTIONS FOR USE

model 1082


## baby unit (=BU)

- 1 Power on/off. Screen illuminates when power is on.
- 2 Nightlight control (low, medium, high).
- 3 Low battery.
- 4 Low battery indicator flashes if battery is low.
- 5 Room temperature display.
- 6 Power on.
- 7 Volume control. (This does not control the volume of the baby's sound) **7a** increase **7b** decrease
- 8 Microphone.
- 9 Mains adaptor input socket.
- 10 Battery compartment takes 4 x AA batteries (not included). Remove casing using a screwdriver.
- 11 Thermometer sensor.

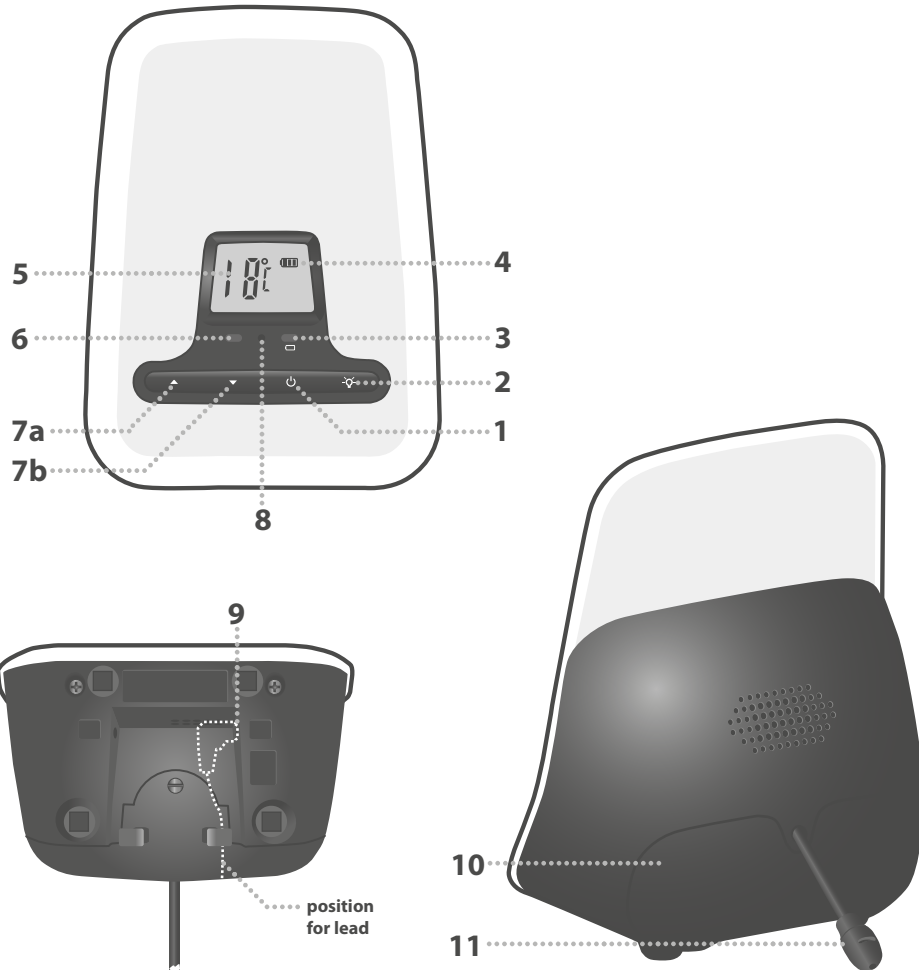

## parent unit (=PU)

- 12 Mains power on/off/menu scroll back.
- 13 Volume Control. **13a** increase **13b** decrease.
- 14 Nightlight control - low, medium, high.
- 15 Menu/ok.
- 16 Power on light.
- 17 Talkback button.
- 18 Microphone.

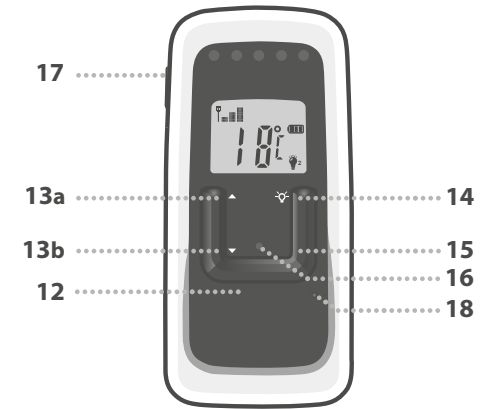








## parent unit docking station

- 19 Charging indicator.
- 20 Mains adaptor input socket.



## parent unit icons

NIGHT LIGHT		High	 3
		Medium	 2
		Low	 1
SPEAKER OFF			
TEMPERATURE		Degree Celsius Fahrenheit	
BATTERY	ON	Empty and needs to be recharged 1/3 Battery Level 2/3 Battery Level Full Battery Level	
SIGNAL STRENGTH		Signal obtained Signal weak Signal good Signal excellent	

## charging your monitor before first use:

### THE PARENT UNIT:

- 1 The parent unit is supplied with rechargeable batteries 2 x AAA (LR3) that should be inserted before use.
- 2 To insert batteries, open the battery casing with a screwdriver. Insert the supplied 2 x AAA (LR3) rechargeable batteries. Take extra care to ensure that the batteries are inserted correctly and the right way round. Refit the battery casing securely with a screwdriver.
- 3 DO NOT use non-rechargeable batteries.
- 4 Place the parent unit on the docking station and recharge for 10 hours before use.
- 5 The charging icon on the LCD will show the charging status.
- 6 Turn on the parent unit by pressing the POWER key (12) for 3 seconds.
- 7 The docking station will light red to show that the parent unit is securely docked on the station and connection is good.
- 8 Turn off the parent unit by pressing the power key (12) for 5 seconds.

### THE BABY UNIT:

- 1 The baby unit does not require batteries if powered from the mains.
- 2 If mains usage is not available, the baby unit will operate on batteries 4 x AA (LR6), which are not supplied.
- 3 To insert batteries, open the battery casing with a screwdriver. Insert 4 x AA (LR6) batteries (rechargeable or non-rechargeable, but not mixed) and close casing securely with screwdriver. Take extra care to ensure that the batteries are inserted correctly and the right way round.
- 4 There is NO charging function on the baby unit for rechargeable batteries.
- 5 The screen will illuminate on the baby unit when switched on.
- 6 The battery icons will indicate if the battery is low.
- 7 Battery power is disconnected automatically when the mains adaptor is in use. If the adaptor is turned off at the mains and still remains connected to the monitor then the batteries will be automatically activated.
- 8 When the baby unit is connected to the power supply, the LCD backlight will be on. With battery power only, the LCD backlight will last only approx. 20 seconds.
- 9 Turn on the baby unit by pressing the POWER key (1).

### WARNING about using the baby unit!


- The baby unit should be 1 to 1.5 metres away from the baby's cot on a flat surface.
- Never place the baby unit in the baby's cot.

### correct use of batteries

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the baby unit before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the monitor.
- **CAUTION: risk of severe malfunction if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.**

### setting up your baby unit

- 1 Connect the mains adaptor into a nearby wall socket in your baby's nursery and switch on the power at the mains.
- 2 Press and hold (1) for 3 seconds until the LCD/Power LED illuminates.

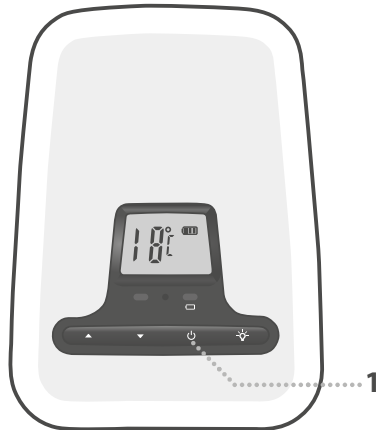

## setting up your parent unit

- 1 Connect the mains adaptor into a nearby wall socket.
- 2 Press and hold (12) for 3 seconds until the LCD/Power LED illuminates.
- 3 A link will now be made between the parent unit and baby unit.



### testing the parent unit

- First ensure that the baby unit has been set up and is working correctly following the previous instructions.
- To test the parent unit you must ensure that it is at least 5 metres away from the baby unit.
- Place a sound source such as a radio in the nursery at least 1 to 1.5 metres away from the baby unit, close the nursery door and go to another room.
- Set up the parent unit in the docking station.
- Turn on the power (12) and adjust the volume up (13a) or down (13b) to a comfortable level.
- You will hear sounds from your nursery and some of the sound lights (A-E) will come on. The louder the sound the more lights will come on.
- Lift the parent unit from the docking station and walk around your house and garden, ensuring that you can hear the sounds from the baby unit at all times. The monitor will work up to a distance range of 300 metres approximately. Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors.
- If you lose the signal from the baby unit an alert tone will be emitted from the parent unit every 10 seconds and the LCD will flash until the link is restored. The LCD will show 'No Link'. If this happens, move closer to the baby unit.



### WARNING about the danger of cords:

**STRANGULATION HAZARD! - Keep cords out of the reach of children.**  
Do not use with an extension cord.



- Check immediately the location of corded monitors to make sure cords are out of arm's reach of your baby and other young children.
- Place cords more than a metre away from any part of the cot. The monitor must not be used in any other sleep environment.
- Check the location of the monitor periodically, as what is within arm's reach to a baby will change as the baby grows.
- Make sure the sensor cords are taut and not dangling to reduce the strangulation hazard.
- Do not place furniture or other obstructions on the adaptor cords and be sure to position them so that nobody can trip over them.
- Keep adaptor cords away from hot surfaces such as radiators and central heating pipes.
- Be careful not to position the adaptor where a child might try to step on it.
- Never use Tommee Tippee monitor adaptors with any other equipment. Nor should you use any other adaptors with your Tommee Tippee monitor.
- Please note that the adaptors become warm in use - this is quite normal and not a hazard.
- The adaptors convert your AC power to safe low DC voltage.
- Use the power adaptor provided.

MODEL	S004LB0600045 or S004LV0600045
Input	100 - 240V~ 50/60Hz 150mA
Output	6V - 450mA


## adjusting the sound sensitivity settings of the baby unit:

- The sound sensitivity settings of the baby unit can be changed only when parent unit is linked with the baby unit.

### TO CHANGE THE SENSITIVITY SETTINGS:

- Press  and +/- to go to SENSITIVITY menu in parent unit.
- Press  and the current sensitivity level is displayed.
- Press +/- to adjust the sensitivity level from Level 1 to Level 5

KEYS	LCD DISPLAY	EXPLANATION
- ↓ ↑ +	level ■■■■■■	level <b>5</b>
	level ■■■■■	level <b>4</b>
	level ■■■■	level <b>3</b>
	level ■■■	level <b>2</b>
	level ■■	level <b>1</b>

- Press  to confirm the settings.
- "SAVED" will display and back to previous screen.

## changing the baby unit volume

The baby unit volume is pre set to level 3. Changing the volume will affect the loudness of voice from the parent unit and the talkback mode.

### TO CHANGE VOLUME LEVEL:

- Press + (**7a**) to increase the speaker volume level (Level 1 to Level 5).
- Press - (**7b**) to lower the speaker volume level (Level 1 to Level 5). There is no volume off option on the baby unit.

KEYS	LCD DISPLAY
- ↓ ↑ +	volume ■■■■■■
	volume ■■■■■
	volume ■■■■
	volume ■■■
	volume ■■


The new volume level is shown on the display for 2 seconds then saved.  
A warning tone is emitted on attaining the maximum or minimum volume level.

## changing the parent unit volume

The parent unit volume is set to level 3. Changing the volume will affect the loudness of voice from the baby unit, so when volume is off there will be no sound from the baby unit.




### TO CHANGE VOLUME LEVEL:

- Press + (**13a**) to increase the speaker volume level (Level 1 to Level 5 and OFF).
- Press - (**13b**) to lower the speaker volume level (Level 1 to Level 5 and OFF).

KEYS	LCD DISPLAY
- ↓ ↑ +	volume ■■■■■■
	volume ■■■■■
	volume ■■■■
	volume ■■■
	volume ■■
	volume off 

The new volume level is shown on the display for 2s then saved.  
A warning tone is emitted on attaining the maximum or minimum volume level.

## changing volume of baby unit from parent unit

- Press  (**15**) and +/- to go to BABY VOLUME menu in parent unit.
- Press  and the current Volume level is displayed. If volume is not changed within 2 seconds, it will go back to idle.
- Press +/- to adjust the Volume level from Level 1 to Level 5
- Press  to confirm the settings.
- "SAVED" will display temporarily.

## using the nightlight

- To turn on the nightlight, press key (**14**) on parent unit and (**2**) on baby unit.
- To adjust the brightness or turn it off, press the key again with the sequence L>M>H>Off.
- If operating the baby unit on batteries the brightness of the nightlight is limited to the lowest level to conserve energy. In battery mode, both the parent unit and the baby unit will have the key sequence L>Off.
- The nightlight on the baby unit operates even if the parent unit is out of battery or turned off.
- Nightlight settings and the corresponding icons are synchronized between baby unit and parent unit if they are connected successfully.
- The nightlight fades out after 5 minutes in battery mode.

### HELPFUL ADVICE ABOUT USING THE NIGHTLIGHT

- You may find it useful to use a lower brightness if you wish your baby not to sleep in complete darkness and then adjust to a higher brightness for when baby needs attention during the night and you do not wish to turn on the main bedroom lights.

## using talkback

Talkback allows you to communicate from the parent unit to the baby unit.

- 1 To use talkback press SIDE button (20) on parent unit and hold. The parent unit screen will show TALK.
- 2 The audio from baby unit will be muted and the parent will not be able to hear the baby until the SIDE button has been released.
- 3 If the volume of parent unit is set to OFF during TALKBACK, volume will be changed to default volume level (medium).




## paging to locate the parent unit

- 1 If both Up + (7a) and Down – (7b) keys are pressed for 3 seconds on the baby unit at the same time, the paging tone is emitted.
- 2 Both parent unit and baby unit will display "PAGING" on the LCD.
- 3 If volume is OFF before paging start, reset it to default volume level (medium).
- 4 During paging, any key pressed on the parent unit or baby unit will stop the paging tone.
- 5 If the link is lost between the parent unit and the baby unit, the paging tone will not be emitted when both Up + (7a) and Down – (7b) keys are pressed together. There will be no change on baby unit.
- 6 If paging is not stopped, it will expire in 2 minutes.




## the room temperature display

The temperature surrounding the baby unit will be displayed on both the baby unit and the parent unit between 10°C and 30°C. Both PU and BU will state **LO** below 10°C and **HI** above 30°C. To ensure accuracy of the temperature display, do not position the baby unit in direct sunlight or near a source of heat.






## selecting CELSIUS or FAHRENHEIT:

- 1 The monitor is preset to measure temperature in CELSIUS.
- 2 To change this setting press  (15) to access main menu.
- 3 Press +/- to select FORMAT then press .
- 4 Press +/- to select CELSIUS or FAHRENHEIT.
- 5 Press  to confirm.
- 6 "SAVED" will display and back to previous screen.
- 7 Both parent unit and baby unit will change to the temperature format selected.
- 8 Temperature format in baby unit and parent unit will be synchronized automatically when parent unit is linked with baby unit.

## selecting a different language

- 1 The monitor is preset in English.
- 2 To change to another language press  (15) on the parent unit and +/- to go to language menu.
- 3 Press  and the current language is displayed.
- 4 Press +/- to select desired language and press  to confirm the settings
- 5 "SAVED" will display and back to previous screen.

## to reset settings to default

- 1 Press  and +/- to go to Reset menu.
- 2 Press  and "CONFIRM?" is displayed.
- 3 Press  to confirm reset or press  /  to ignore the reset request and back to previous menu level.

## GENERAL SAFETY INFORMATION:

- Make sure you store your monitor in a safe place when not in use, away from heat and water.
- Take care not to drop either unit as this may affect the functioning of you monitor.

## correct disposal of this product

Information on the disposal for Waste Electrical & Electronic Equipment (WEEE)

This symbol on the products and accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal for treatment, recovery and recycling, please take these products to designated collection points where they will be accepted on a free of charge basis. In some countries you may be able to return your products to your local retailer upon the purchase of a new product.

Disposing of this product correctly will help you save valuable resources and prevent any possible effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest collection point for WEEE.

Penalties may be applicable for the incorrect disposal of this product in accordance with national legislation.

Do not immerse in water.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Warning! Children should be supervised to ensure that they do not play with the appliance

Keep this instruction sheet for future reference as it includes important information.

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

