


Instruction manual

MP3 PLAYER
MP03 8G BLACK

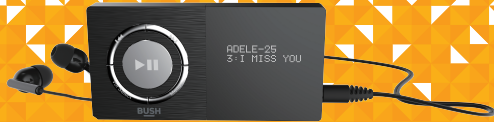

You'll soon be enjoying your new MP3 PLAYER

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your TV. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**.

Turn on/off device

Push the power switch to ON position to turn on the device, to OFF position to turn off the device.

Volume Control

Short press VOL Select key to access volume control menu, and press **◀/▶** key to adjust volume level.

PC Connection

System Requirement

Operation System: Windows98/ME/2K/XP/Vista/Linux9
CPU: at least Pentium-133MHz
Ram: at least 32MB
Spare Hard disk room: : at least 100MB
USB port

Connecting with PC

When the device is either at ON or OFF status, use the USB cable that comes with the device to connect to PC to copy files into the device.

1 Safety information



Important - Please read these instructions fully before installing or operating

NOTE

Below contents are for how to use the device properly and keep it in good condition, please read carefully

- Avoid serious impact to the device.
- Avoid contact of Benzene or any diluents.
- Avoid closing to strong powerful magnetic or electric fields.
- Avoid direct sunshine or heating devices.
- Do not try to disassemble, repair, or modify the device.
- Do not use the device with earphone while bicycling, driving, or motorcycling.
- Do not listen to music with high volume to avoid damage to your hearing.
- Assort and dispose with care the used packing, used batteries, used electrical devices.

WARNING:




To prevent possible hearing damage, do not listen to this radio at high volume levels for long periods of time.

2 Using your MP3 PLAYER

Let's get started

Device Layout

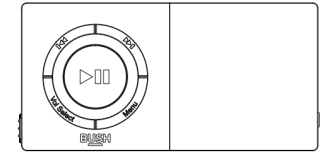

Keys' Functions

- Menu Key:** Menu key, short press to exit any sub menu and go back to a upper menu, long press to exit and back to main menu.
- ◀/▶ Key:** for previous/next track of option.
- ▶ key:** Play/ Pause, also act as confirm key, long press to turn on/off the device.
- VOL Select key:** Volume control, use **◀/▶** key to decrease /increase volume.

Fig 1.

System Setting

While the device shows SETTING, short press the **▶** key to enter the system setting and press the **◀** or **▶** key choose sub menus like TIME, SW VERSION, LANGUAGE, Backlight time, user can short press **▶** key to access any of these sub menus and set up accordingly.

Music Mode

While the device shows Music, press the **▶** key to go into this menu.

Music Play: Short press **▶** key to start playing, and short press again to pause.

Change Tracks: While playing music, short press **◀/▶** to change to previous/next track..

Fast rewind/fast forward: Long press **◀/▶** for fast rewind or fast forward.

VOL Control: Short press M to show volume control window, and press **◀** or **▶** key to decrease or increase volume.

FM Radio

While the device shows FM, press **▶** key to access FM radio function.

Scan Stations

When the device is at FM radio function, long press **◀** or **▶** for backward or forward scanning, the device will stop scanning when it scans a station. Short press **◀/▶** key for manually fine tune scanning..

3 Other information

Helpful technical information

Specification

USB	Micro USB 5Pin , USB 2.0 high speed transfer, USB charging	
ROM	8GB NAND FLASH	
Battery	Polymer Lithium battery 3.7V 120MAH	
Audio Specification	Max. Audio Jack Output	(L) 10mW+(R) 10mW (32ohm)
	F/R	20Hz-20KHz
	Support Music Format	MP3/WMA
Environmental Temperature	-40°C-60°C	
Support PC OS	Windows98/ME/2K/XP/Vista/Linux9	

Troubleshooting

Device fail to power on	Make sure the power is switched on and battery has power
No sound from earphone	Make sure the volume level is no at 0. and earphone is well plug in
Bad FM receiving	Adjust earphone cable's position
Cannot copy files to the device	Make sure the USB cable is well connected Check whether the device's memory is full

Help and assistance

If you require any technical guidance or find that your MP3 PLAYER is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on

0345 604 0105.*

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

8

4 Product support

Help is always at hand

Disposal

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For your household waste disposal service or the shop where the product was purchased.



9

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year.

*Calls may be recorded and monitored.

10

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

11

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire, CV12 8JP.