



GENERATION FUTURE

# HOOVER



USER MANUAL



## INSTRUCTIONS FOR SAFE USE

This appliance should only be used for domestic cleaning, as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

Do not leave the appliance plugged in. Always switch off and remove the plug from the socket after use, or before cleaning the appliance or any maintenance task.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorised Hoover service engineer must replace the power cord.

Keep hands, feet, loose clothing and hair away from rotating brushes.

Use only attachments, consumables or spares recommended or supplied by Hoover.

Static electricity: some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health.

Do not use your appliance out of doors.

Do not pick up hard or sharp objects, matches, hot ashes, cigarette ends or other similar items.

## INSTRUCTIONS FOR SAFE USE

GB

Do not spray with or pick up flammable liquids, cleaning fluids, aerosols or their vapours.

Do not run over the power cord when using your appliance or remove the plug by pulling on the power cord.

Do not continue to use your appliance if it appears faulty.

**Hoover service:** To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised Hoover service engineer.

Do not stand on or wrap the cord around arms or legs when using your appliance.

Do not use the appliance to clean animals or people.

Do not position the appliance above you when cleaning the stairs.

Do not touch the plug or appliance with wet hands.

**For UK and Ireland only:** This appliance has a 13 Amp mains plug. **If you need to change the fuse in the mains plug, use a 13Amp ASTA (BS1362) fuse.**



# GETTING TO KNOW YOUR CLEANER

GB


Congratulations on the purchase of your new Hoover.

Please take the time to read this manual carefully.

You'll then be ready to make the most of the special features only the new Hoover can offer!

When first unpacking your cleaner please check all items are included:

- Cleaner body
- Upholstery brush
- Flexible hose
- Hose bag

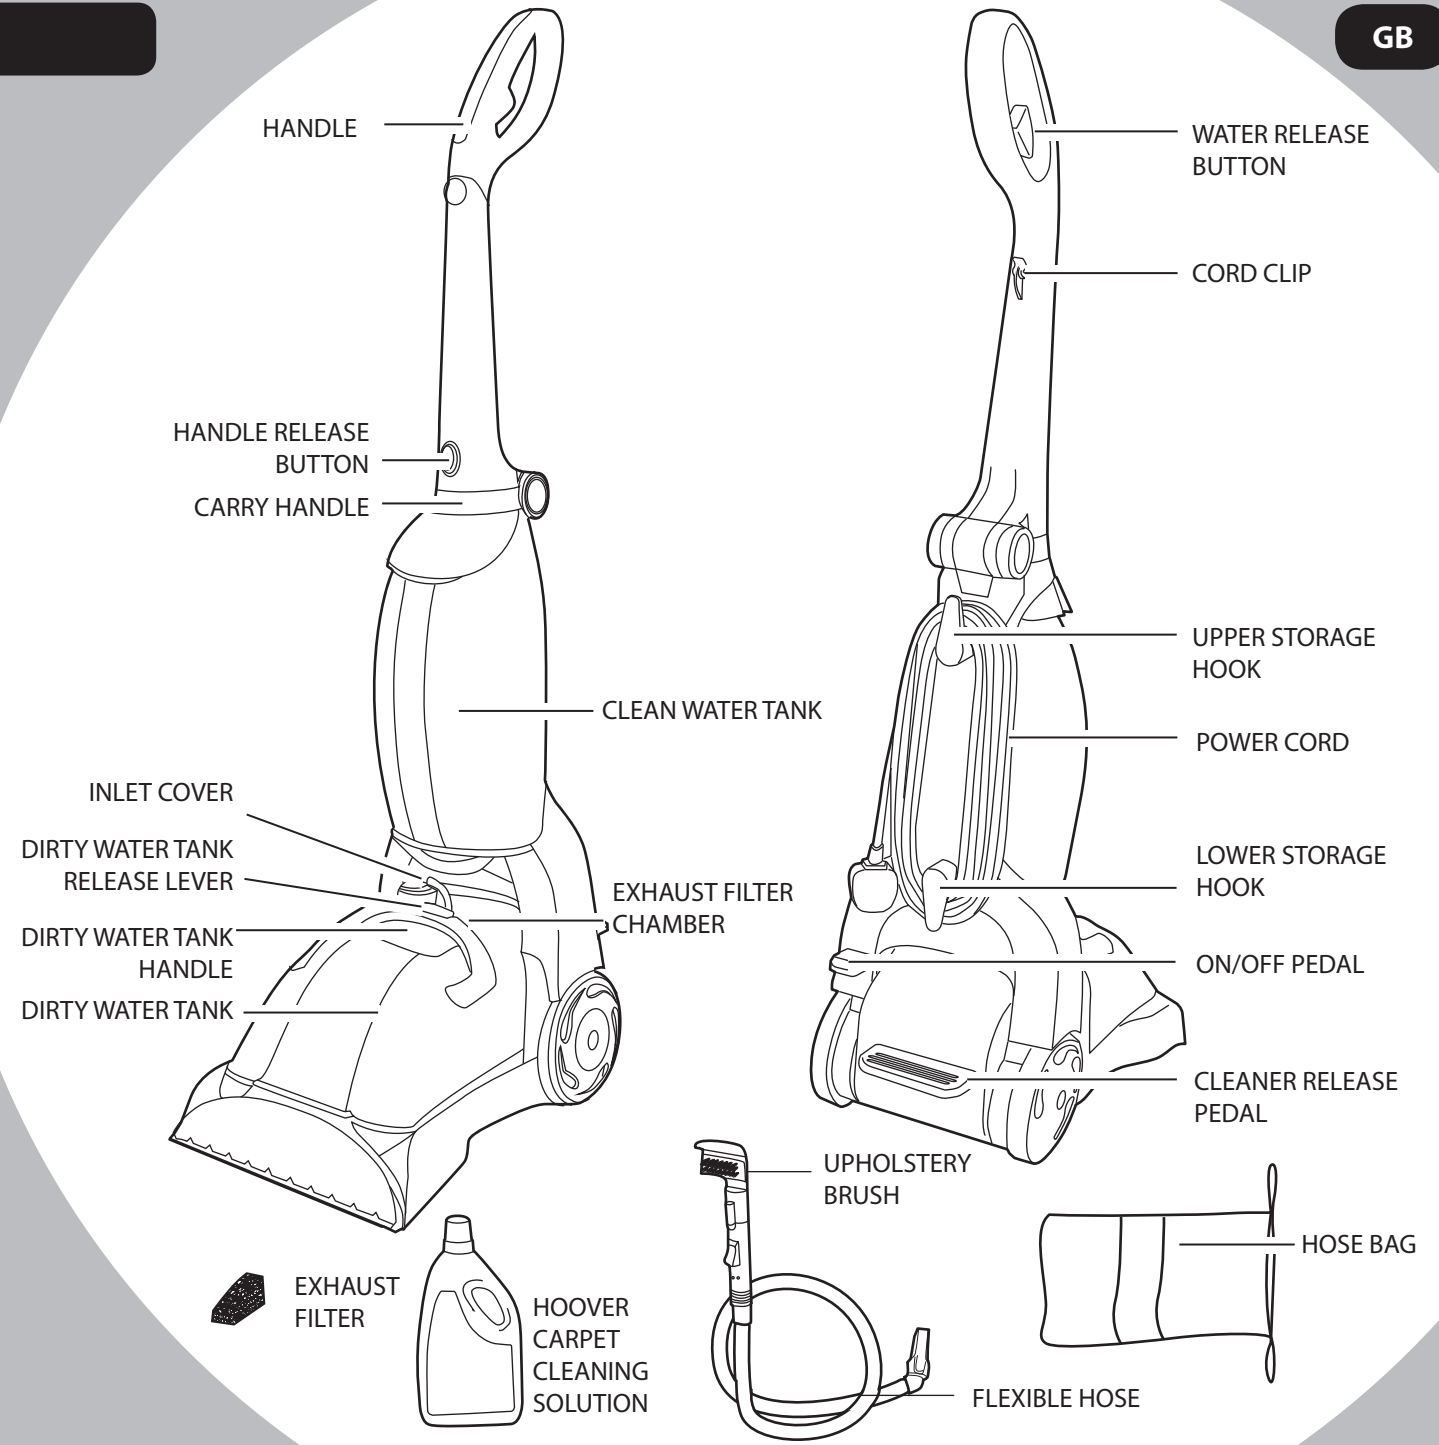


## PREPARING YOUR CLEANER


- 1 Remove the contents of the packaging. You should find the following:

- Cleaner body
- Upholstery brush
- Flexible hose


- 3 To fold the handle press the handle release button and fold to the storage position.

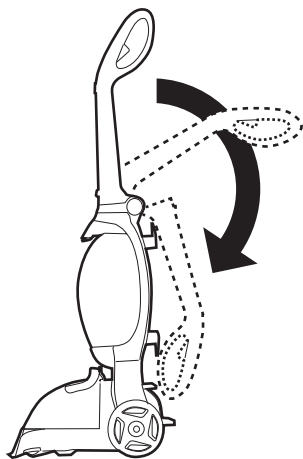

- 2 Raise the handle to the upright position until it locks in place.

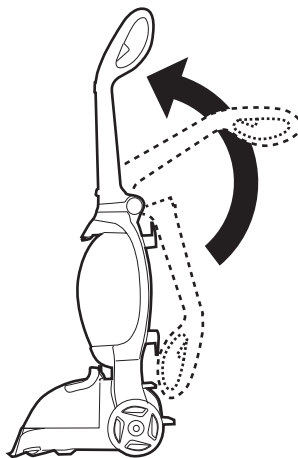

- 4 Once the handle has been lowered lift the carry handle to allow the cleaner to be carried from room to room.

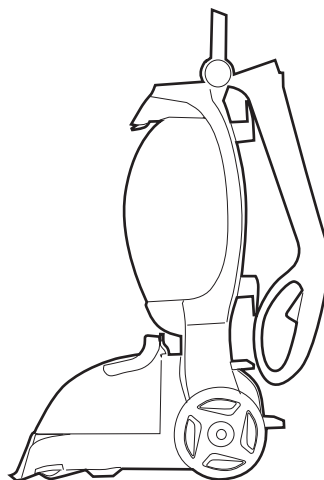

(\*Certain models only)

## BEFORE CLEANING A CARPET

GB

- Vacuum thoroughly.
- Test for colourfastness
- Move the furniture

Test for colourfastness - Wet a white absorbent cloth with the solution. In a small, hidden area of your carpet, gently rub the surface with the dampened cloth.

Wait ten minutes and check for colour removal or bleed with a white paper towel.

If your carpet has more than one colour, check all colours.

When cleaning an entire room, move furniture out of the area to be cleaned. If the furniture is too heavy to move, place aluminium foil or wax paper under legs. This will prevent wood finishes from staining your carpet. Pin up furniture skirts and curtains.

NOTE: Do not over saturate your carpet.



**IMPORTANT: This cleaner should not be used to dry vacuum the carpet.**



# FILLING THE CLEAN WATER TANK


GB

The clean water tank holds the water and cleaning solution.

**IMPORTANT:** Always turn the cleaner off and disconnect from the electrical outlet before filling the clean water tank.

**! IMPORTANT:** When filling the clean water tank, do not exceed the max fill line.


**NOTE:** Before using this appliance, please ensure dirty water tank release lever and inlet cover are fully locked.

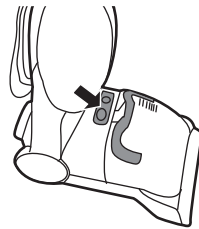


**1** Add the required amount of cleaning fluid to a measuring jug. (approx. 40ml per 1L of water)




**2** Mix the solution with warm water. (Max. temperature - 40°C)

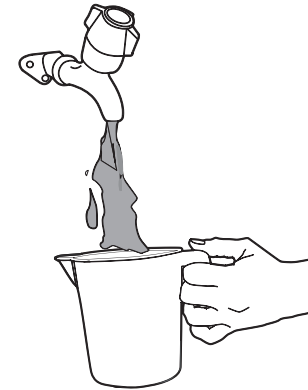

**3** Press the clean water tank release latch and remove from the cleaner.

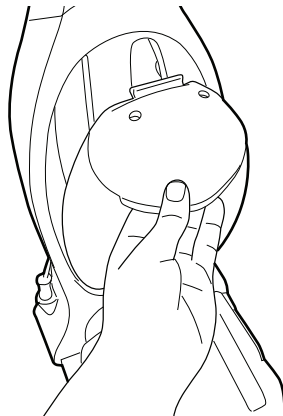

**4** Open the screw cap on the bottom of the tank.

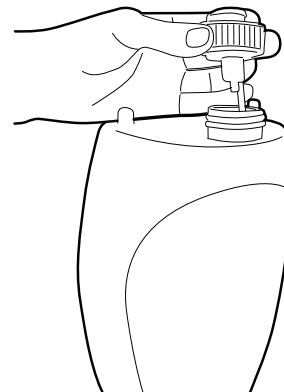

**5** Pour the solution into the clean water tank. Do not exceed the max fill line. Replace the cap and return the clean water tank to the cleaner.



**! WARNING:** Use only Hoover carpet cleaning solution. Using other solution brands may cause excess foaming and will prevent the cleaner from working effectively. Using other solutions may affect your warranty



# CLEANING CARPETS


GB

Dry vacuum the carpet thoroughly before cleaning your carpet.


Ensure the carpet has been checked for colour fastness.

**! IMPORTANT: This cleaner should not be used to dry vacuum the carpet.**


**1** Unwrap the power cord and plug the cleaner into the power supply.

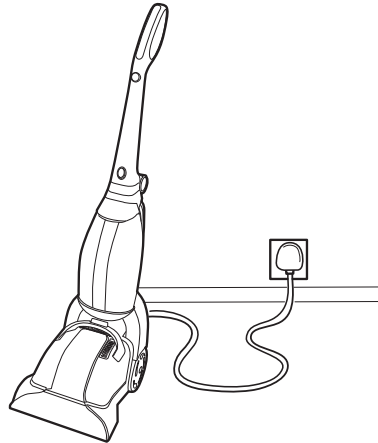

**2** Press the ON/OFF pedal.

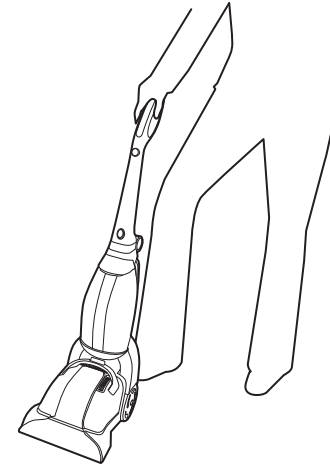


**3** Press the cleaner release pedal and recline the cleaner.

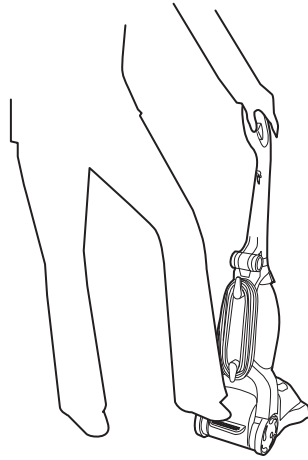

**4** Press the solution mix trigger to release the solution.



**5** For best results apply the solution on the forward stroke (press trigger) and recover the solution on the backward stroke (release trigger).

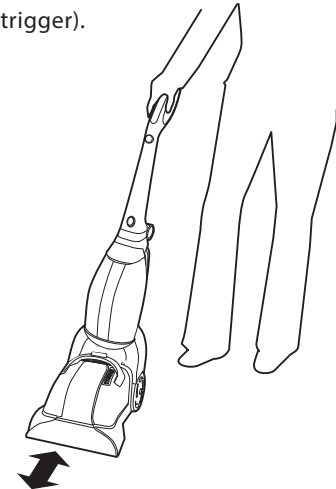

**! WARNING: Use only Hoover carpet cleaning solution. Using other solution brands may cause excess foaming and will prevent the cleaner from working effectively. Using other solutions may affect your warranty.**

**! CAUTION: This product is intended for cleaning purpose only. Do not use the main suction head or upholstery brush to remove large spills.**




# USING THE UPHOLSTERY BRUSH


GB

**NOTE:** Do not over saturate your upholstery.  
**NOTE:** The clean water tank will need to be filled with solution and water before use.


1 Take out the flexible hose and the upholstery brush

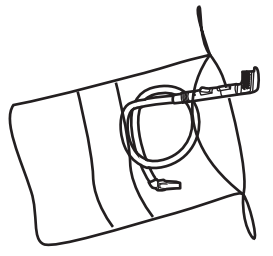


5 Press trigger to release solution.

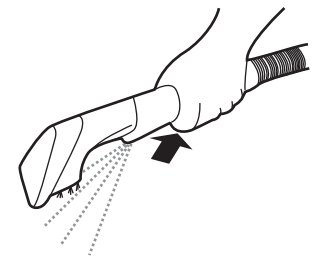


2 Lift the inlet cover

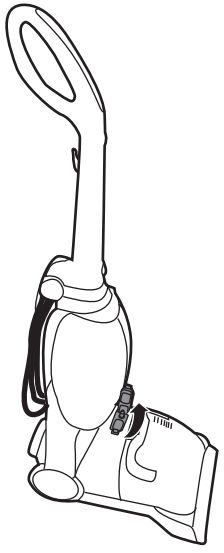


6 Pull upholstery brush back over spill to pick up liquid.  
For best results apply solution on the forward stroke and release the trigger to recover on the back ward stroke.

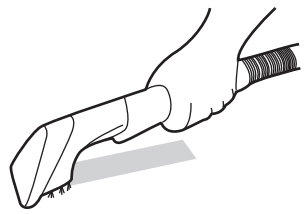



3 Insert the hose connector

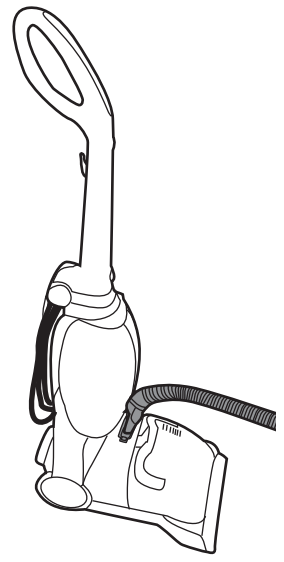

7 Upholstery brush can only work with the cleaner in the upright position

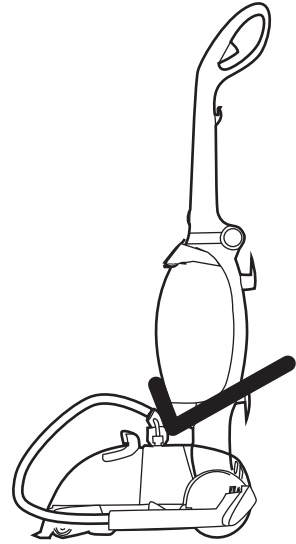

4 Press the ON/OFF pedal

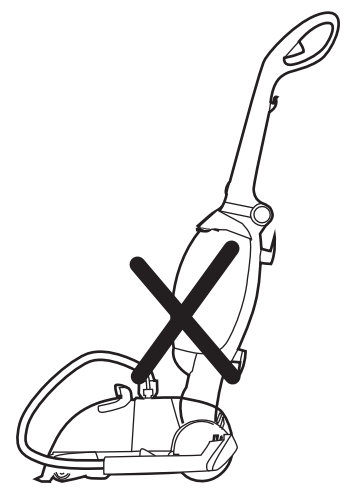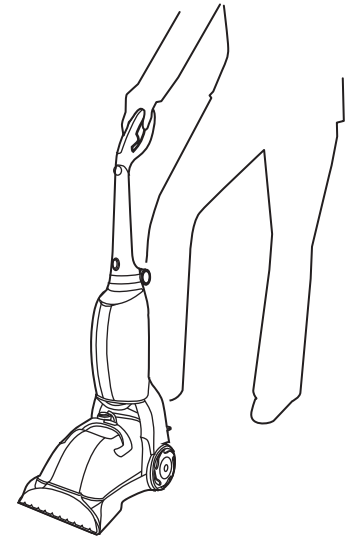




## STORAGE

Before storing the cleaner:

Turn the cleaner off and disconnect from the electrical socket.


Empty and rinse the dirty water tank. Allow to air dry.

Press the handle release button and lower the handle for storage.

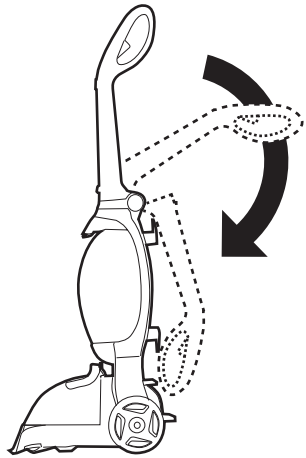

Do not store the cleaner on a wood surface unless the cleaner is completely dry.


Put the flexible hose and the upholstery brush back into the bag for storage.

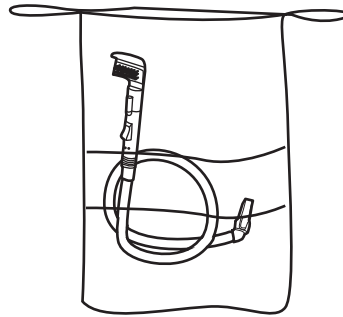

## CORD STORAGE

Turn the cleaner off and remove the plug from the electrical socket. Wind the power cord around the cord storage hooks.

Rotate the storage hooks to quickly release the full length of the power cord.

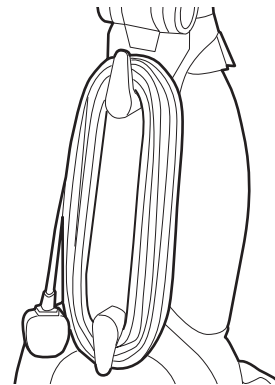


## CORD CLIP

GB

Do not run over the power cord.

Clip the power cord in the cord clip at the back of the handle to avoid accidentally running the cleaner over the cord and causing any damage.

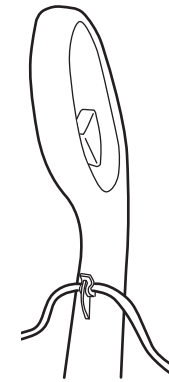

\*Certain models only







## EMPTYING THE DIRTY WATER TANK

**! WARNING: DO NOT exceed the max fill line on the dirty water tank.**


**1** Press the dirty water tank release lever.

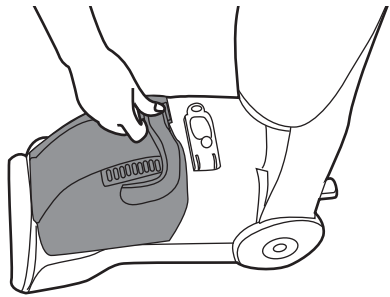


**2** Remove the dirty water tank from the cleaner.

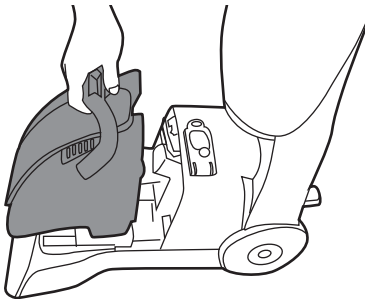

**3** Turn the tank cap anti-clockwise to open.

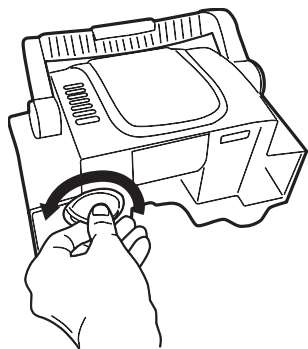

**4** Empty the tank. Rinse the tank with clean water and allow to dry before storing the cleaner.

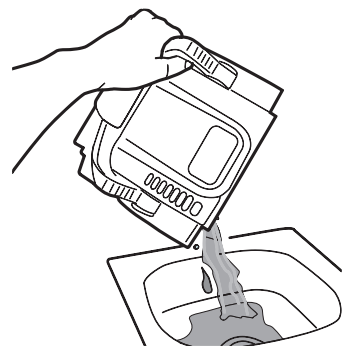


**! WARNING: Always switch the cleaner off and unplug it from the electrical socket before emptying the dirty water tank.**


## CLEANING THE EXHAUST FILTER

**GB**


Press the exhaust filter release latch.

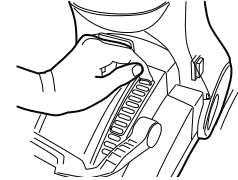

Remove the exhaust filter chamber.

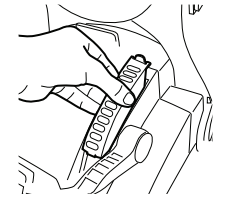


Remove the filter from the chamber. Rinse under hand warm water to remove any debris. Allow to completely dry before returning to the cleaner.

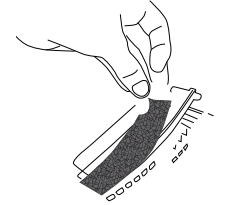


## CLEANING THE PRE MOTOR FILTER

Remove the dirty water tank from the cleaner.

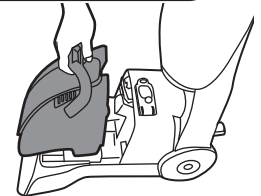

Take out the pre motor filter, then clean it.

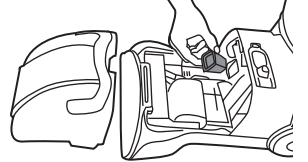


**! IMPORTANT: Clean the filters after each use.**  
**! WARNING: Ensure both filter are fitted to the cleaner before use.**




## CLEANING THE BRUSHBAR\*

Turn the cleaner upside down. Remove any threads or debris from the brush bar.

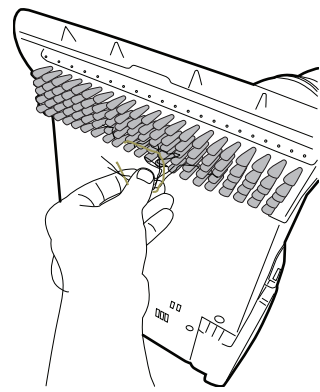

## CLEANING THE AGITATOR\*

Remove any threads or debris ensuring the agitator can rotate freely.

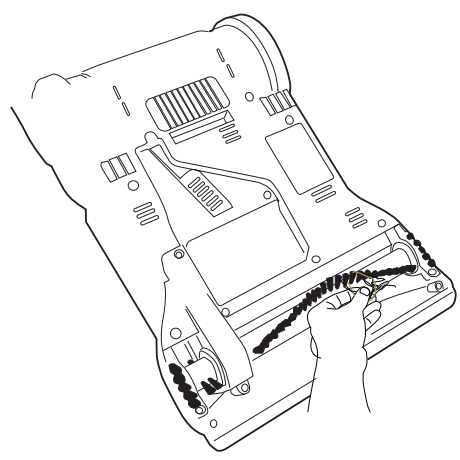


**! THIS FEATURE VARIES ACCORDING TO MODEL**  
Please check the underside of your cleaner and follow the appropriate instructions.


\*Certain models only

## CHANGING THE BRUSHBAR\*

**1** Press the dirty water tank release lever and remove the dirty water tank. Unscrew 4 retaining screws on the top surface.

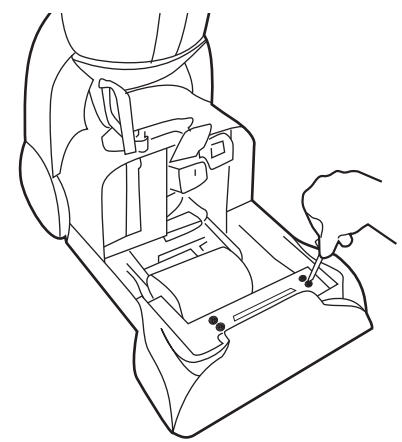

**3** Unscrew 2 retaining screws located on the underside of the detergent nozzle. Remove the brushbar from the nozzle.

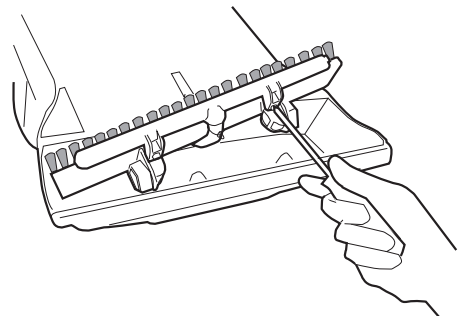


**! THIS FEATURE VARIES ACCORDING TO MODEL**  
Please check the underside of your cleaner and follow the appropriate instructions.


**! IMPORTANT:** Switch the cleaner off and remove the plug from the electricity supply before dismantling cleaner

**GB**

**2** Turn the cleaner over. Remove the brushbar alignment brackets.

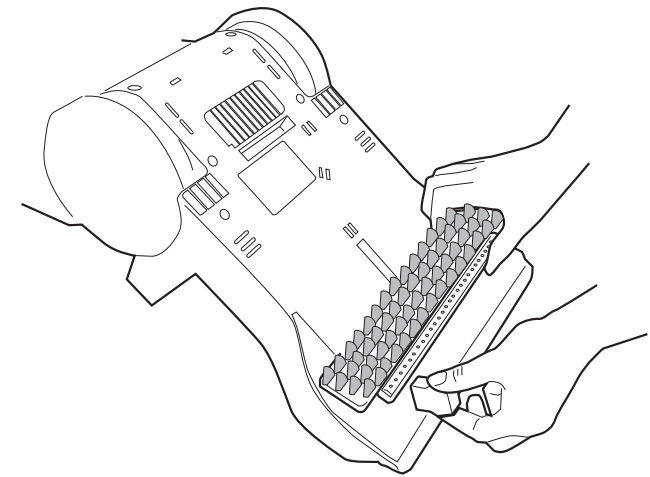

**4** Replace the brush bar and attach to the nozzle. Attach the alignment brackets and assemble to the cleaner.

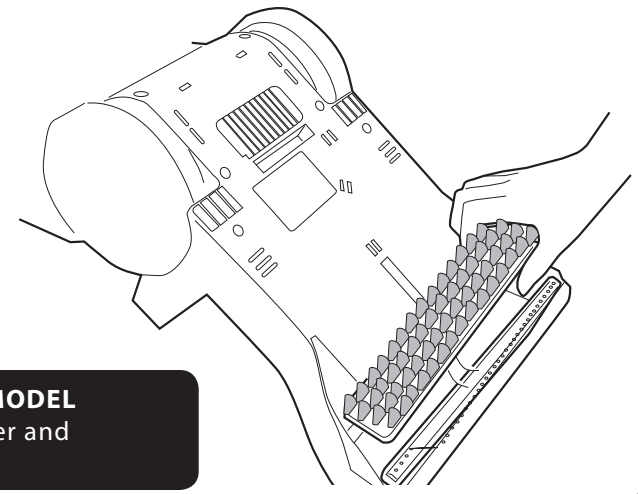




# CHANGING THE AGITATOR / BELT\*


**! IMPORTANT:** Switch the cleaner off and remove the plug from the electricity supply before dismantling cleaner.

**GB**


**1** Turn cleaner over and remove 7 retaining screws.

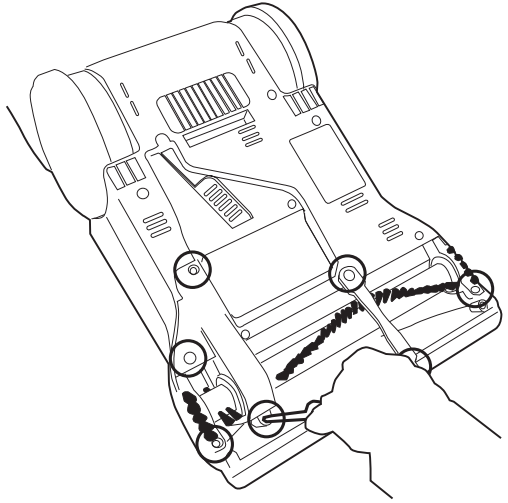


**2** Remove the belt cover and safety bar.

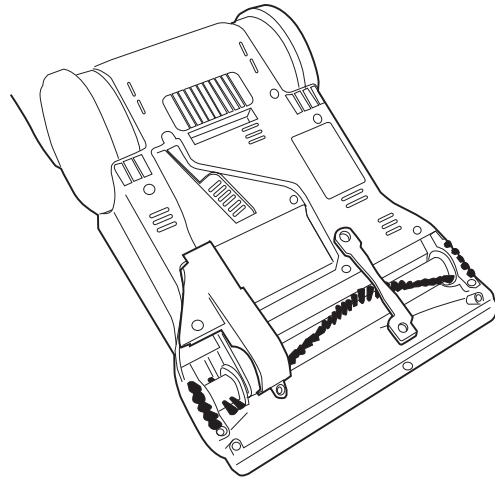


**3** Slide the agitator assembly out of the cleaner and check the belt for wear.

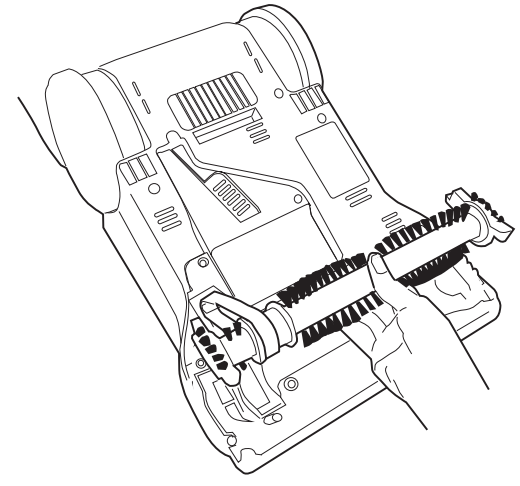


**4** Remove the agitator brackets

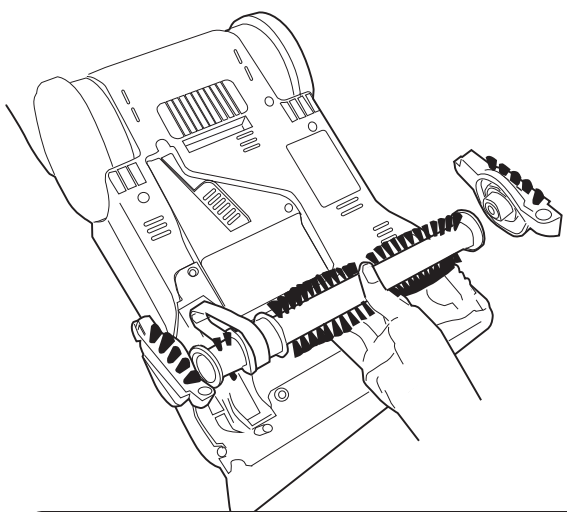

**5** Replace the agitator by looping the belt round the agitator making sure it sits securely in the belt channel.

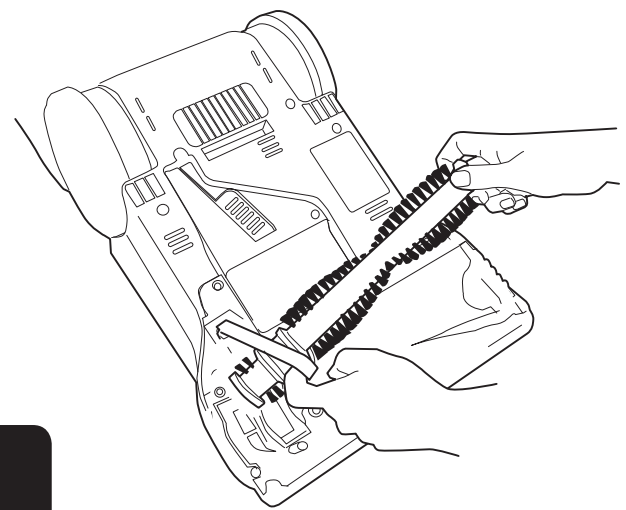

**6** Reassemble the agitator assembly to the cleaner ensuring the agitator can rotate freely.

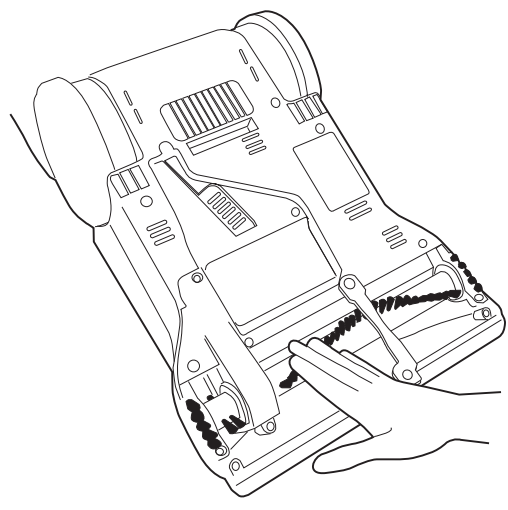

**! THIS FEATURE VARIES ACCORDING TO MODEL**  
Please check the underside of your cleaner and follow the appropriate instructions.

\*Certain models only



**GB**

### Troubleshooting

If your cleaner is not working properly run through the following checklist.

**WARNING: To reduce the risk of personal injury, unplug the carpet washer before performing maintenance/troubleshooting checks.**

#### Why won't the carpet washer turn on?

- It may not be plugged into the electrical outlet correctly: ensure that the plug is pushed in securely and switched on.
- The power button on the unit hasn't been fully depressed.
- If unit cuts out during use, disconnect the unit from the wall socket, allow to cool for one hour, clean the filter and empty the dirty water tank and check hose, brushbar for blockages.

#### Why won't the cleaner pick up solution/spills?

- The dirty water tank may be full. Empty the dirty water tank.
- Ensure the dirty water tank is fitted correctly and the tank cap is securely fitted.
- Check the brushbar for blockages.

#### Why won't the solution/clean water dispense?

- The solution/clean water tank may be empty.
- Ensure dirty water tank is fitted securely.

## USE ONLY HOOVER SPARES

SPARE PARTS	CODE
AGITATOR	Y30 35601321
FLEXIBLE HOSE	D144 35601409
UPHOLSTERY TOOL AND BRISTLES INSERT	MFT4 35601410
FILTER& BRISTLES INSERT	U70 35601411
BELT	V35 35601322
BRUSH	F4 35601324
CLEANJET SOLUTION	35601351

### Hoover Service

Should you require service at any time, please contact your local Hoover Service Office. Hoover spares and Consumables Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering parts always quote your model number.

### Quality

Hoover's factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001.

### Environment



The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.



This product complies with the European Directives 2006/95/EC, 2004/108/EC and 2011/65/EC.

HOOVER Limited Pentrebach, Merthyr Tydfil, Mid Glamorgan CF48 4TU, UK

### Your Guarantee

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Subject to change without notice



®

GENERATION FUTURE

Hoover Limited  
Pentrebach  
Merthyr Tydfil  
Mid Glamorgan  
CF48 4TU

HOOVER CUSTOMER HELPLINE  
03444 995 599

© 2015 48017673