



OPERATING INSTRUCTIONS

2250W Double Hot Plate



MODEL: E832

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- 1500W + 750W Power Consumption
- 185mm & 155mm Diameter Cast Iron Hotplates
- Durable, Easy-Clean Surface
- Adjustable Temperature Controls
- Temperature Indicator Lights
- Corrosion Resistant
- Overheat Protection
- Non-Slip Rubber Feet



SPECIFICATIONS

Operating Voltage:	220-240v ~ 50Hz
Power Consumption:	1500W and 750W



IMPORTANT SAFEGUARDS AND PRECAUTIONS



SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- Do not use for any purposes other than the appliances intended use.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Do not use if any part of this appliance is damaged in any way.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- Do not cover the appliance whilst in operation.
- Do not operate in the presence of explosive and/or flammable fumes.
- Ensure adequate space around, above and beneath to permit free circulation of air around the appliance.
- Do not place near or come in contact with flammable material (curtains, draperies, furnishings, wallpaper etc) whilst in operation.
- Burns can occur from touching the hot metal parts. Use handles or knobs provided.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Suitable heat resistant containers should be used with this appliance. Do not use containers that may melt or crack with the high temperature.

LOCATION OF CONTROLS

- 185mm (A) & 155mm (B) Diameter Cast Iron Hotplates
- Durable, Easy-Clean Surface (C)
- Adjustable Temperature Controls (D)
- Temperature Indicator Lights (E)
- Non-Slip Rubber Feet (F)





IMPORTANT SAFEGUARDS CONTINUED



CAUTION!

This appliance operates at very high temperatures. Extreme caution should be exercised during operation. **DO NOT TOUCH HOT SURFACES!** This appliance will remain hot, after being switched off for a period of time.

OPERATION

PREPARATION BEFORE USE

1. Clean the hot plate with a soft damp cloth. Place your hot plate on the level and stable surface near the electrical socket.
2. Check that the voltage marked on the product corresponds with your supply voltage. Ensure the controller is in the "OFF" position before plug in.
3. Always use flat bottom saucepans or containers that make close contact with the heating element. Ideally, the saucepans or containers should be 185-200mm in diameter.
4. Keep the surface of the heating element clean and dry.
5. Do not use plastic, ABS or other combustible items on or near this appliance.

OPERATION

1. Place hotplate on a dry, level and heat resistant surface.
2. Connecting to the power supply socket.
3. Place cooking vessel (ie Saucepan), in which the food will be cooked, onto the hotplate.
DO NOT PLACE FOOD DIRECTLY ONTO HOTPLATE.
4. Turn the switch from "OFF" TO "MAX" position and the indicator light is on for working, the hot plate is in a state of heating.
5. When desired temperature has reached the Indicator light will extinguish.
6. Turn down the temperature if desired.
7. When you have finished using the hot plate, turn the switch to "OFF" position and unplug it from the socket. Wait until the appliance is completely cooled down before moving or cleaning.

NOTE: When using this hot plate for the first time, there may be a smell of smoke coming from the surface of the heating element. This is normal because of the invisible protective coating in production.

CLEANING AND CARE

MAINTENANCE:

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

WARNING! Before performing any maintenance or cleaning on this appliance, disconnect the appliance from the electricity supply.


WEEE/ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

UK PLUG REWIRING

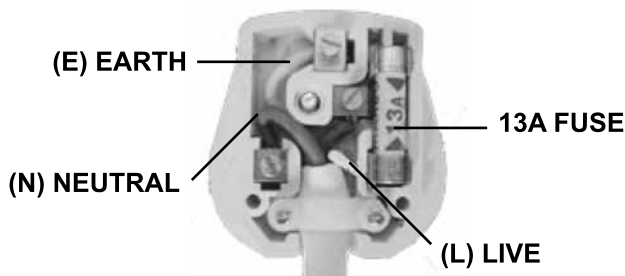

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 13 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

call: 08454 81 8808

email: customerservice@lloytron.com

web: www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at **www.lloytron.com**
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K