

vaxTM
Power

**BAGLESS CYCLONIC
CYLINDER VACUUM**

LET'S GET STARTED.

CCMBPCV1P1
CCMBPCV1T1
CCMBPCV1C1
CCMBPNV1P1
CCMBPNV1T1
CCMBPNV1C1
CCMBPDV1P1
CCMBPDV1T1
CCMBPDV1C1
CCMBPV1P1
CCMBPV1T1
CCMBPV1C1



Let's talk safety



Basic safety precautions

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

- Only use the vacuum cleaner indoors on dry surfaces and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the vacuum cleaner.
- Only Vax recommended tools and accessories should be used with this vacuum cleaner.



Don'ts

- Don't use the vacuum cleaner if it has been dropped, damaged or left outdoors.
- Don't run over the power cord or use vacuum cleaner if the power cord or plug is damaged.
- Don't handle the plug or use the vacuum cleaner with wet hands.
- Don't pull or carry the vacuum cleaner by the power cord.
- Don't use the power cord as a handle, pull the power cord around corners, sharp edges or close a door over the power cord.
- Don't unplug vacuum cleaner by pulling on the power cord.



Do's

- Turn off all controls on the vacuum cleaner before disconnecting or connecting the power cord.
- Always make sure the filters are in place before use.
- Always switch off the vacuum cleaner before disconnecting or connecting the hose and accessories.
- Keep all openings clear and free from debris as this may affect the airflow/suction.
- Always replace the fuse in the plug with a British 13amp fuse. Always protect the power cable from heated surfaces and open flames.

- This vacuum cleaner can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the vacuum cleaner in a safe way and understand the hazards involved. Children shall not play with the vacuum cleaner. Cleaning and user maintenance shall not be made by children without supervision.

- Don't vacuum up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the vacuum cleaner in an area with explosive vapours or liquid.
- Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).
- Don't attempt to remove blockages with sharp objects as this may cause damage to the vacuum cleaner.
- Don't vacuum up hard or sharp objects such as glass, nails, screws or coins etc.
- Don't use the vacuum cleaner with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.

- Take extra care when positioning and using the vacuum cleaner on the stairs.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Store the vacuum cleaner in a cool, dry area. If filters have been cleaned as per user guide instructions ensure they are thoroughly dry before storing away.

Please keep instructions for further use.

Thank you for buying this Power product.

Taking care of your carpets and hard floors

The Power series is designed to make vacuuming carpets and hard floors regularly, as effective and efficient as possible and this user guide will help you get the most out of your machine.

Maintaining your carpets and hard floors will ensure they keep their appearance for longer. You've chosen the carpets and hard floors for your home for a reason and Vax will help you take good care of them.

Taking care of your Power product

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your carpets and hard floors.

Taking care of you

The Vax logo is displayed in a bold, orange, sans-serif font with a trademark symbol (TM) to the upper right of the 'x'.

We're here if you need us. Instead of taking me back to the shop, simply visit our online support:

vax.co.uk/support

Still need to get in touch?

Our UK based Customer Care Team are here to support you - for help with assembly, operational/performance problems or buying and fitting new accessories. Whether you wish to chat, use Facebook, Twitter or Email, you can find all our contact details at **vax.co.uk/contactus**

This user guide can be found online at: **vax.co.uk/support**



Let us know what you think @VaxUK

Contents

 Let's talk safety

 Getting to know your machine


 Getting started

 Using your machine

 Taking care of your machine

 Let's talk technical

 Accessories

 What to do if it goes wrong

 Getting in touch

Included with your machine

Power Series

 
(Included with all models)



Hose



Telescopic extension tube



Combination floorhead



3-in-1 Tool

Included with some models

(Check the contents panel on the back of the box to find out what's included with your model)



 
TurboTool



Stretch hose



Mattress Tool




Soft Dusting Brush

Initial Setup for normal operation

1. Use the base accessories.
 - a. Shortest hose.
 - b. Extension tube set to shortest practicable length.
2. Clean filters installed.
3. Dust receptacle empty.
4. All air vents must be closed.
5. Floorheads/tools set to Carpet Mode for carpet cleaning.
6. Mechanical Agitation turned ON for carpet cleaning.
7. Floorheads/tools set to Hard Floor Mode for hard floor cleaning.
8. Mechanical Agitation turned OFF for hard floor cleaning.

 Getting to know your machine

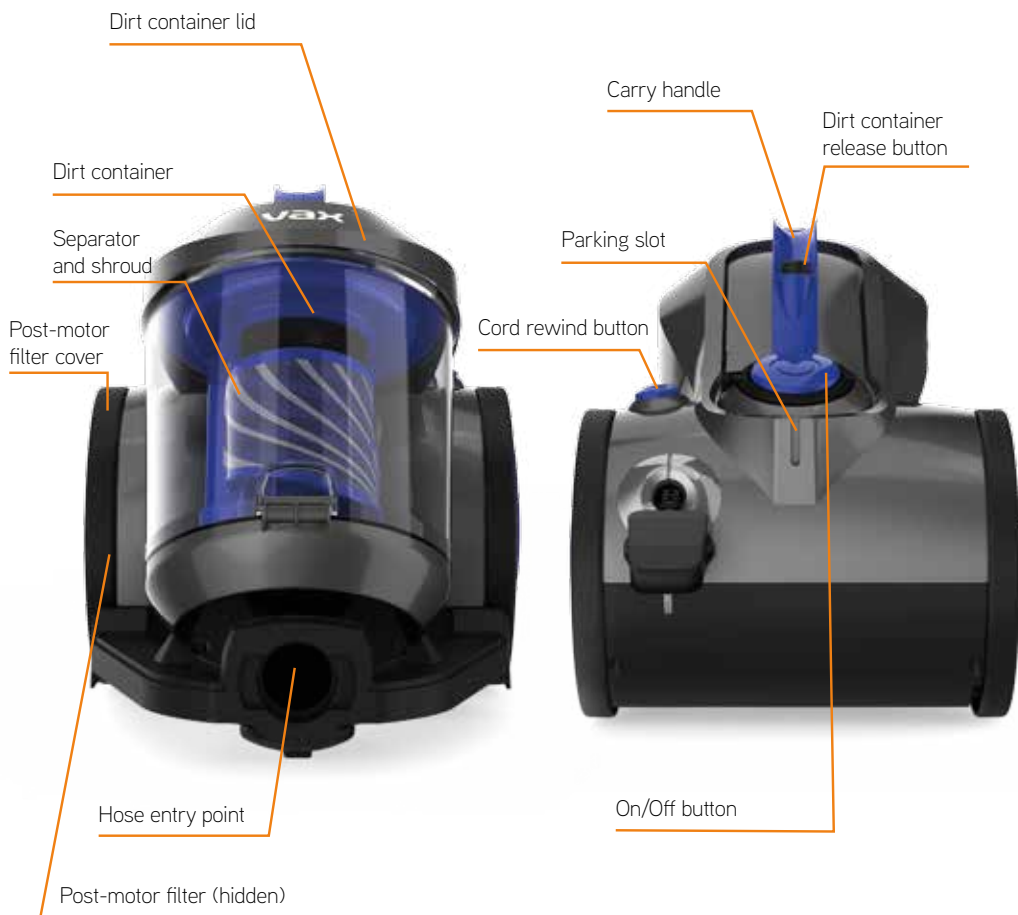

Images are illustrative only.

Technical Specification

Name **Power**
Voltage **See rating label on machine for details**
Wattage **See rating label on machine for details**
Cord Length **5-6m**
Weight **4.3kg**

Accessories & Consumables

| | |
|---|---|
| Filter Kit (Type 95) 1-1-134231 | Carbon Filter (Pet Odour Filter) 1-7-138825 |
| 3-in-1 Tool 1-9-130815 | Mattress Tool 1-9-138879 |
| TurboTool (Type 6) 1-1-134419 | Soft Dusting Brush 1-9-138880 |

Subject to technical change without notice.

*To purchase consumables and accessories, please visit vax.co.uk

PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE

 
Before you begin cleaning

CAUTION: Always switch off the vacuum cleaner before connecting or disconnecting the hose/attachments, or removing and emptying the dirt container.


IMPORTANT: The vacuum cleaner is equipped with a thermal cut-out. If for any reason the vacuum cleaner does overheat the thermostat will automatically turn the vacuum cleaner off. If this happens, switch the vacuum cleaner off and unplug. Remove and empty the dirt container also check the vacuum cleaner for blockages. Allow the vacuum cleaner to cool for approximately 1 hour (if you have cleaned the filters please wait 24 hours for the filters to fully dry before putting back into the machine).

Clean the pre-motor filter every time the dirt container is emptied and replace the filters every 12 months.


Assembling your vacuum cleaner

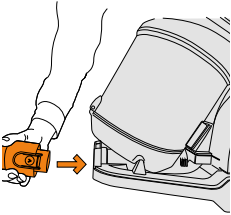

 
Press both buttons at the end of hose and insert into hose entry point.



 Insert hose grip into telescopic extension tube.

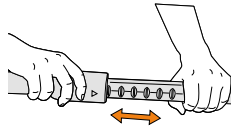


 Press button on telescopic extension tube and adjust to required length.

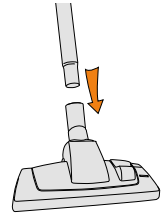

Insert the other end of the telescopic tube into the floorhead.

 Using your accessories

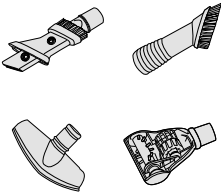

Choose an accessory.



 
Push the accessory onto the telescopic extension tube or hose end.

Using your machine


IMPORTANT: The base of the vacuum cleaner should always be positioned flat on the floor when starting and in use. The dirt container should be locked into place before lifting the vacuum cleaner by the carry handle.

IMPORTANT: The power cord must always be completely unwound, do not pull further than the yellow marker.


Operating the appliance and accessories

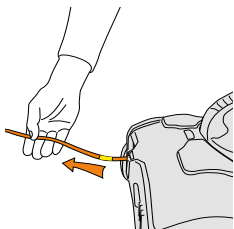

 Unwind the power cord. Do not pull further than the yellow marker.

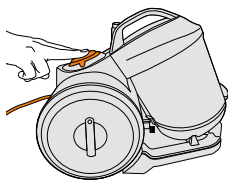

 
Plug into mains and press the On/Off button to switch the machine on.

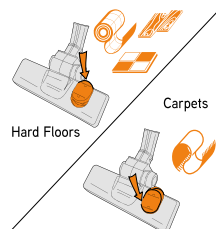


For use on carpets, click rocker switch forward. For use on hard floors click rocker switch back.



 Raise brushes for carpets.



Lower brushes for hard floors.

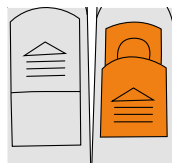 

Slide vent cover on hose grip open to reduce suction if required.

 
Brushes on the floorhead should be visible when using on hard floors.



Taking care of your machine

IMPORTANT: Unplug and switch off vacuum cleaner before performing maintenance or troubleshooting checks.

Emptying and cleaning the dirt container

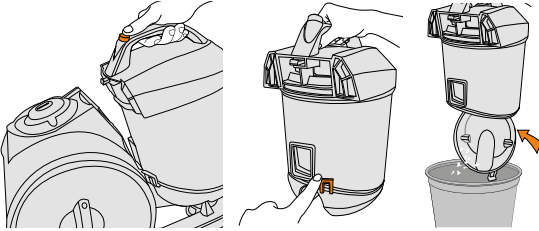

Press dirt container release button. Lift to remove dirt container from machine.

 
Hold dirt container over the bin. Press release clip at the bottom of the container, the dirt release door will open allowing dirt/debris to fall out.

Don't over fill the dirt container to avoid blocking the air flow through the vacuum cleaner.



Cleaning the pre-motor filter


NOTE: Clean the pre-motor filter every time the dirt container is emptied and replace the filters every 12 months.
Filters available at www.vax.co.uk

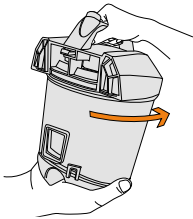

Turn the dirt container lid anti-clockwise to remove.




 
Lift to remove the pre-motor filter out of dirt container.

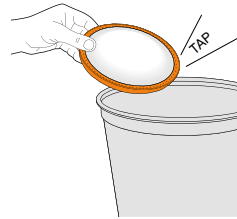

Tap the filter against a bin to remove excess debris.



  
Wash pre-motor filter under running water.



Leave to dry for 24 hours or until fully dry before placing back in the machine.

Taking care of your machine

 Cleaning the separator

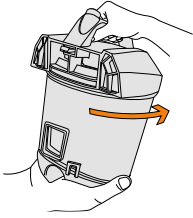


Turn the dirt container lid anti-clockwise to remove.



Lift to remove the pre-motor filter out of dirt container.



 Using central grips lift to remove separator from dirt container.

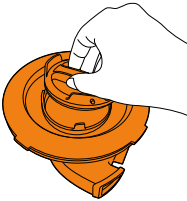

Twist grips clockwise and remove cap from separator.

 


Tap the separator against a bin to remove any dirt or debris.

For any stubborn dirt/debris remaining in the separator, use a soft brush to remove.



Refitting the separator

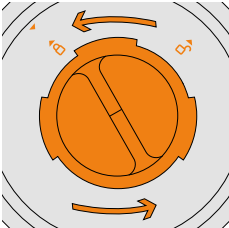

Replace the separator cap, twist clockwise to lock.



 
Replace separator into dirt container, make sure the rectangular hole in the dirt container lines up with the rectangular hole on the separator.

IMPORTANT: Incorrect fitting of the separator will reduce suction.


Taking care of your machine

Post-motor filter maintenance


IMPORTANT: The exhaust filter is designed to offer long life with no maintenance. The filter should be checked periodically and when heavily discoloured it should be replaced. Please do not wash, scrub or brush the filter as this will damage the delicate filter media.

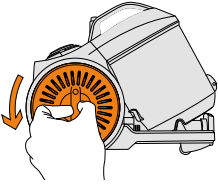

 
Turn the post-motor filter cover anti-clockwise to remove.

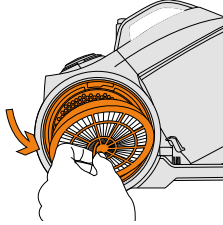


Pull to remove post-motor filter.

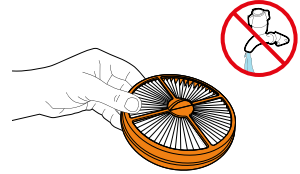 

 Check the post-motor filter for discolouration.

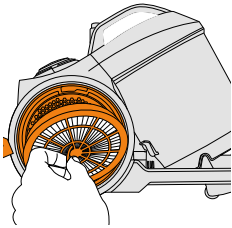

 
Push post-motor filter into wheel and re-fit.

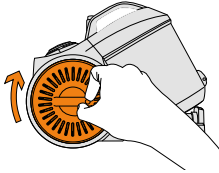


Line up the filter cover tabs with the wheel and turn clockwise. The filter cover will be locked into place when the centre trim is in the horizontal position.

Pet odour filter maintenance

 IMPORTANT: Do not wash, scrub or brush the pet odour filter as this will damage it. Replace filters at least every 6-9 months.

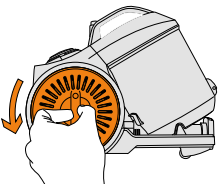

 Turn the post-motor filter cover anti-clockwise to remove.

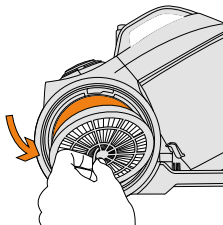


Pull to remove post-motor filter to gain access to the pet odour filter.




Tap the pet odour filter against a bin to remove any dirt or debris.

Let's talk technical

 Storing your vacuum cleaner

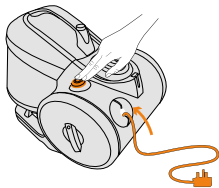

 
Unplug from the mains and hold the cord rewind button in, the cord will retract into the vacuum cleaner.

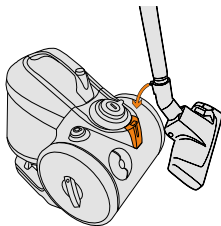


Place floorhead into parking slot located at back of vacuum cleaner for storage and carrying.

CAUTION: Make sure to hold the cord with your other hand to prevent injury when re-winding.

 
Removing blockages from the TurboTool (some models only)

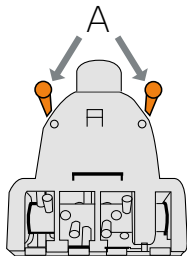

 Clean the TurboTool by removing the 2 screws (A), located on the bottom cover, with a crosshead screwdriver.

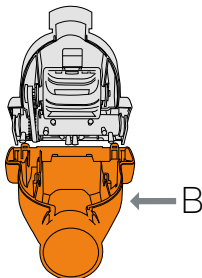

 
Remove the bottom cover (B). Clean out any debris or hair from the brushbar and turbine fan.

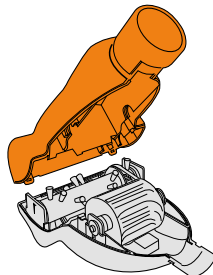

Replace the bottom cover, insert and tighten the screws.

CAUTION: To reduce the risk of injury from moving parts – unplug before servicing. The brushbar is equipped with bearings which contain sufficient lubrication for their lifetime. Do not add lubricant to the brushbar.

 Removing a blockage from the hose

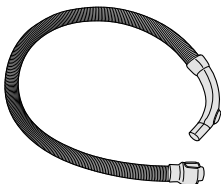

Remove the hose from the vacuum cleaner and telescopic tube. Insert a blunt instrument into the hose to remove the blockage.

Don't forget your accessories!

Order at: www.vax.co.uk/spares-and-solutions

Pro Cleaning Kit (Type 2)

1-1-133326

All our best tools in one kit that makes cleaning your home quicker, easier and with even better results. We've taken care of cleaning all of the hard to reach areas, such as on top of cupboards and in between blinds, as well as the dust that collects behind and within the radiator.



TurboTool (Type 6)

1-1-134419

Use the TurboTool for vacuuming your stairs, upholstery and car interiors. It's great for picking up stubborn pet hair.



Fur 'n' Fluff Tool

1-1-131392

Specifically designed to remove extra stubborn pet hair from upholstery, furniture and carpets.



What to do if it goes wrong

Problem

Is there an accessory missing?

Solution

- Check the contents panel on the back of the box to make sure the part is included with your vacuum cleaner.

Why won't the vacuum cleaner pick up?

- The dirt container may not be correctly fitted, remove the dirt container from the vacuum cleaner and check it's assembled correctly, refit ensuring it's locked into place.
- The separator is blocked. Go to 'Taking care of your machine'.
- The separator is incorrectly fitted. Go to 'Taking care of your machine'.
- The filter may be clogged, clean the filter. Go to 'Taking care of your machine'.
- The dirt container may be blocked, empty the dirt container. Go to 'Taking care of your machine'.
- There may be a blockage in the hose/tube. Disconnect from the vacuum cleaner and carefully remove any blockages. Go to 'Let's talk technical'.

Why does my vacuum cleaner have no power?

- The plug may not be fully pushed into the electrical socket.
- Check the fuse in the plug if this needs replacing, always replace with a 13amp fuse.
- The motor thermostat may have tripped. If this has happened, unplug the vacuum cleaner. Remove and empty the dirt container and check the hose for blockages. Clean the filters and allow the vacuum cleaner to cool for approximately 1 hour (if you have washed the filters you will need to wait 24 hours for the filters to fully dry before putting them back into the vacuum cleaner).

Why is dust escaping from the vacuum?

- The filters may be clogged, clean the filter. Go to 'Taking care of your machine'.

CAUTION: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance /troubleshooting checks.

It's quick and easy to
register for your **FREE**

**2 year
guarantee[†]**

Online at: **vax.co.uk/registration**

Please retain your original receipt for proof of purchase.

we're here if you need us
vax.co.uk/support

GET IN TOUCH

@ info@vax.co.uk i vax.co.uk f VaxVacuums t @VaxUK

EU Statement of Compliance: Manufacturer/EU importer: Vax Limited, hereby on our own responsibility, declare that the CCMBPCV1P1/CCMBPCV1T1/CCMBPNV1P1/CCMBPNV1T1/ CCMBPNV1C1/CCMBPV1P1/CCMBPV1T1/CCMBPV1C1/CCMBPDV1P1/CCMBPDV1T1/CCMBPDV1C1/CCMBPCV1C1 are manufactured in compliance with the following Directives:

Safety: 2014/35/EU Low Voltage Directive. **EMC:** 2014/30/EU Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

© 2017 Vax Limited. All rights reserved. The VAX trade mark and Vax lozenge are the property of Techtronic Floor Care Technology Ltd and are registered in the EU and may be pending or registered in other countries.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

