

Instruction manual

MP3 PLAYER
MP07 64G BLACK



You'll soon be enjoying your new MP3 PLAYER

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your TV. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**.

1 Safety information

Important - Please read these instructions fully before installing or operating

NOTE

Below contents are for how to use the device properly and keep it in good condition, please read carefully

- Avoid serious impact to the device.
- Avoid contact of Benzene or any diluents.
- Avoid closing to strong powerful magnetic or electric fields.
- Avoid direct sunshine or heating devices.
- Do not try to disassemble, repair, or modify the device.
- Do not use the device with earphone while bicycling, driving, or motorcycling.
- Do not listen to music with high volume to avoid damage to your hearing.
- Assort and dispose with care the used packing, used batteries, used electrical devices.

WARNING:

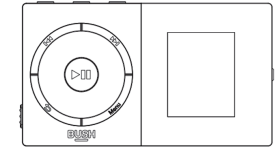


To prevent possible hearing damage, do not listen to this radio at high volume levels for long periods of time.

2 Using your MP3 PLAYER

Let's get started

Device Layout



Keys' Functions



 


1. Menu Key: During playing mode, short press to show sub menus.
2. : Short press for previous track or option, long press for fast rewind.
3. : Short press for next track or option, long press for fast forward.
4. : Play/ Pause key, also act as confirm key.
5. : Return key, short press to exit and return to upper menu.
6. : Power on/off key, long press to turn on/off device (only works when the power switch at on position).

Fig 1.

Turn on/off device

Push the power switch to ON position to turn on the device, to OFF position to turn off the device.

PC Connection

System Requirement


Operation System: Windows98/ME/2K/XP/Vista/Linux9
CPU: at least Pentium-133MHz
Ram: at least 32MB
Spare Hard disk room: : at least 100MB
USB port

Connecting with PC






When the device is either at ON or OFF status, use the USB cable that comes with the device to connect to PC to copy files into the device.

Music Mode

Main Menus

Choose Music in the main window, and press  to show main menus: All songs, Artists, Albums, Genres, Playlists, Create Playlist.

Basic operation

Press  for play or pause, and press  or  for previous or next track. Long press  or  for skip fast backward or forward.

For volume change, press + key to increase volume, and - key to decrease volume.

Sub Menus


During music playing, press MENU key to show sub menus: Play mode, Sound settings, Add to Playlist, Remove from Playlist, Delete.

Movie Mode





Choose Video in the main window, and press  to show the files list.

Sub Menus: During video playing mode, long press MENU to show sub menus: Brightness, Repeat, Delete video, Create playlist.

FM Radio


Choose Radio in the main window and press  key to enter this function. Press Menu key to show menus: Auto tune, Manual tune, Presets, Save to preset, Clear preset.

Photos Mode

Choose Photos in the main window, and press  to show the list of all photos. Press  key to view photos and use  /  to view previous/nest ones.

Sub Menus: During photo viewing, press MENU key to show sub menus: Now playing, Brightness, Backlight timer, Slideshow Settings, Delete picture, Create.

E-Book



 

Choose E-Book in the main window, and press  to enter this function and show the list of files.

Sub Menus: During E-Book reading, press MENU key to show sub menus: Now playing, Play setting, Delete ebook, Bookmark Select, Delete bookmark, Add bookmark, Page select.

Settings

Main Menus: Power off, Display settings, Language, System, Factory settings, Date and time, Format internal memory, Exit setting.

Files Browser

Choose BROWSER in the main window, and press  to show list of files. Use  and  to choose different files and press  again to open or play it.

Bluetooth

choose Bluetooth in the main window and press ► to enter this function and show menus: Bluetooth Status, Bluetooth Search, Bluetooth Device List, All songs, Music.

3 Other information

Helpful technical information

Specification

USB	Micro USB 5Pin , USB 2.0 high speed transfer, USB charging
ROM	64GB NAND FLASH
Battery	Polymer Lithium battery 3.7V 400MAH
Music	Support MP3, WMA, OGG, APE, FLAC, AAC formats.
Picture	Support JPEG, BMP, GIF formats.
Video	Support AMV. AVI(need to use special software to convert) formats.
Environmental Temperature	-40 °C-60 °C
Support PC OS	Windows98/ME/2K/XP/Vista/Linux9

Troubleshooting

Device fail to power on	Make sure the power is switched on and battery has power
No sound from earphone	Make sure the volume level is no at 0. and earphone is well plug in
Unreadable screen display	Make sure you choose the right language
Bad FM receiving	Adjust earphone cable's position
Cannot copy files to the device	Make sure the USB cable is well connected Check whether the device's memory is full

8

9

Help and assistance

If you require any technical guidance or find that your MP3 PLAYER is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on

0345 604 0105.*

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

4 Product support

Help is always at hand

Disposal

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For your household waste disposal service or the shop where the product was purchased.



10

11

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year.

*Calls may be recorded and monitored.

12

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

13

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House
17 Leicester Street, Bedworth, Warwickshire, CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

14