


8 Tier Shoe Rack White

Assembly Instructions - Please keep for future reference

631/1494

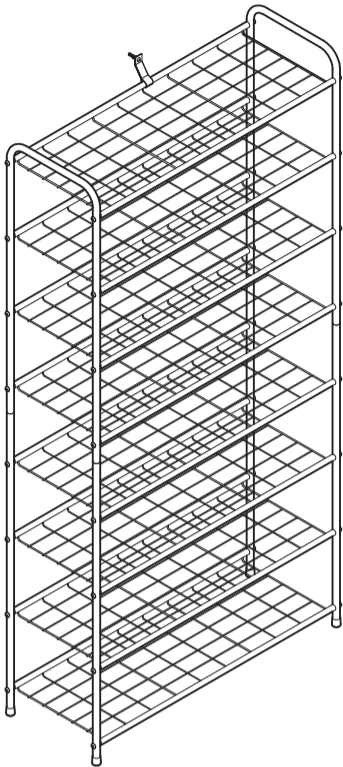

Dimensions

Width - 75cm
Depth - 28cm
Height - 154.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 640 0800**


Issue 1 - 04/11/16

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 640 0800**

Please check you have all the panels listed below

 
1 Net x 8

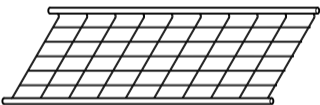

4 Upper side support x 2



 
2 Lower side support (front) x 2

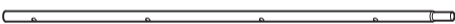

5 PP cap x 4



 3 Lower side support (back) x 2

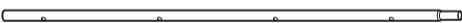





6 Wall strap x 1



Components - Fittings

Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

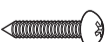A  32mm Screw x 32	B  Allen key x 1	C  25mm Screw x 1
D  Wall plug x 1		



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- If using power tools, please follow the safety instructions supplied with the tools.
- Assemble the unit as close to its final position (in the same room) as possible.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

1

Assembly Instructions

Step 1

Note: It would be useful to ask someone to help you at this stage.



 
Fitting the lower shelvings.

a: Insert the PP cap **5** into the end of the Lower side support **2** **3**. Repeat the same step for another Lower side support **2** **3**.

b: Attach Screw **A** to the Lower side support **2** **3** and Net **1**, then tighten by using Allen key **B** as shown in fig. 1. Repeat same step for both side.

Fitting the Upper shelvings.

c: Attach Screw **A** to the Upper side support **4** with Net **1**, then tighten by Allen key **B** as shown in fig. 2 and fig. 3.

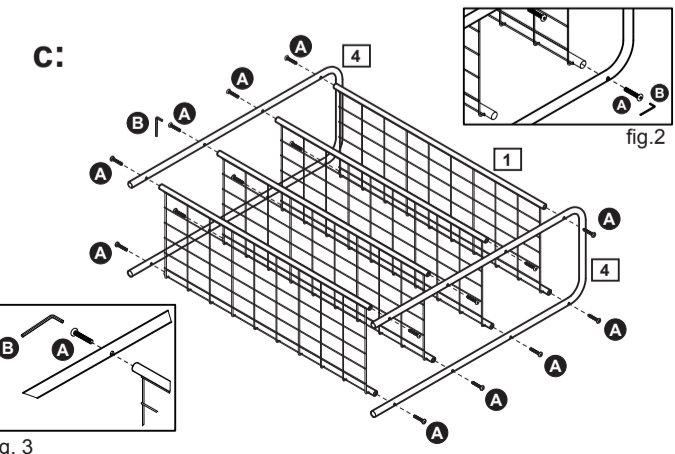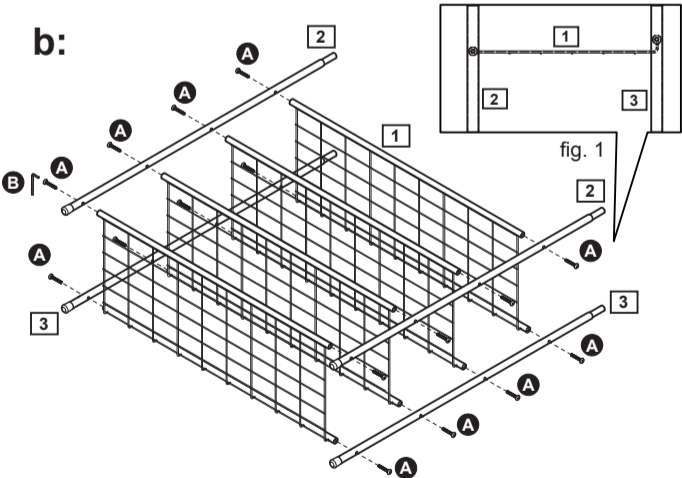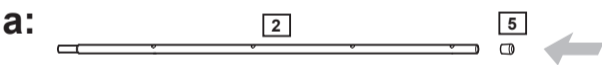

2


3

Assembly Instructions

Step 2


Finishing the Unit

a: Inset the lower shelvings in Step 1 b: , then press firmly the upper shelvings in step 1 c: onto the lower shelvings.

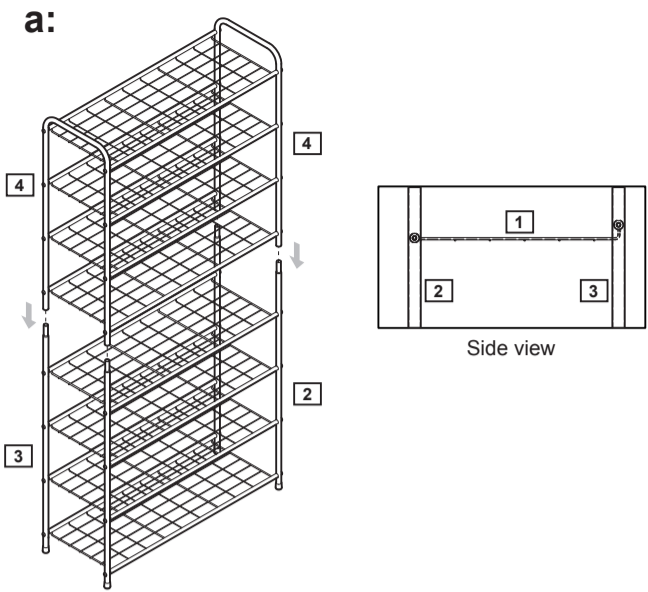

Fixing to wall

b: Mark the fixing hole on wall and using Wall strap **6** over the Net **1**. Drill 25mm Screw **C** and insert the Wall plug **D**.

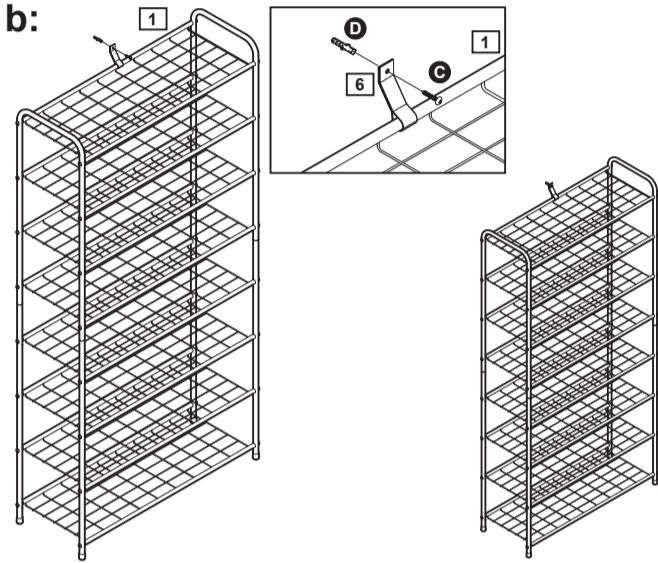

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800