
Romantic Large TV Unit

Assembly Instructions - Please keep for future reference

653/9441

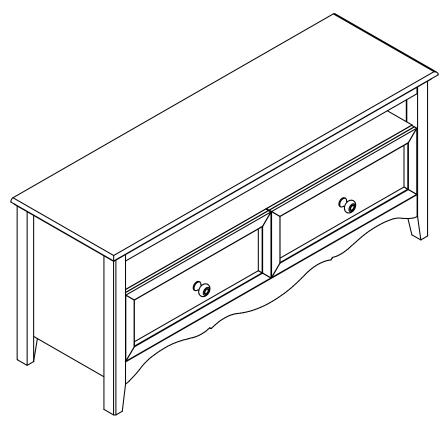



Dimensions

Width - 120cm

Depth - 38cm

Height - 52.6cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 6400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.

Handy Hints

 
- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 6400800

Please check you have all the panels listed below

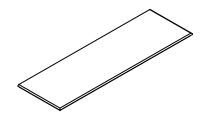

1 Top panel (120 x 38cm)

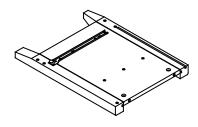


3 Right frame side (50.1 x 36.4cm)




5 Shelf panel (108 x 32.8cm)



 
7 Back rail (108 x 8.8cm)




9 Back panel (109.2 x 34.4cm)

 

 
11 Left side drawer panel x 2 (30 x 16.5cm)




13 Left drawer front (53.7 x 21.3cm)

 

 15 Bottom drawer panel x 2 (49.6 x 28.8cm)




2 Left frame side (50.1 x 36.4cm)

 


4 Top front rail (108 x 3.8cm)



 6 Bottom front rail (108 x 7.5cm)



8 Center panel (35.1 x 32cm)

 

10 Back drawer panel x 2 (48.4 x 16.5cm)



12 Right side drawer panel x 2 (30 x 16.5cm)




14 Right drawer front (53.7 x 21.3cm)




Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

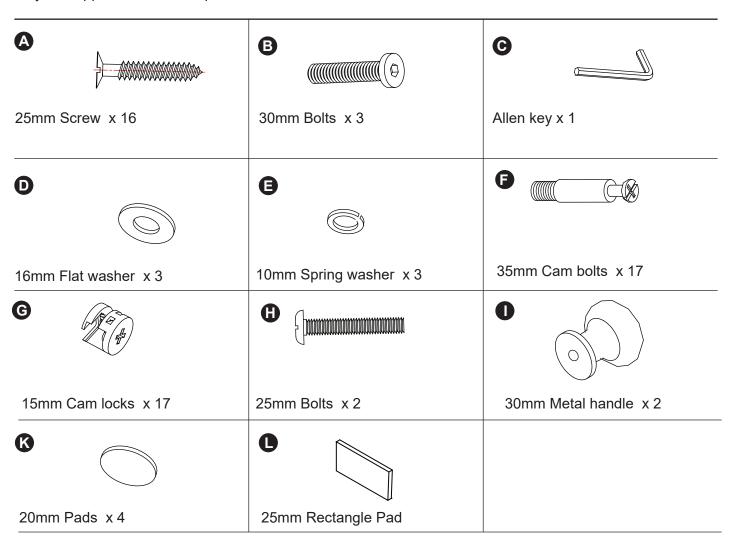

Tools required Phillips screwdriver (medium & large) Flatblade screwdriver (medium) Ruler/tape measure

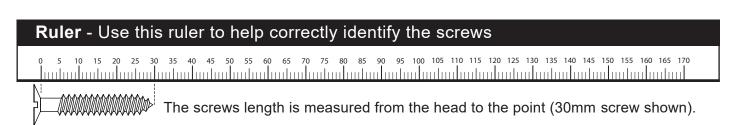


Step 1

Insert Cam bolts

a: Insert Cam bolts into top panel as shown


b: Insert Cam bolts finto left frame side and right frame side as shown

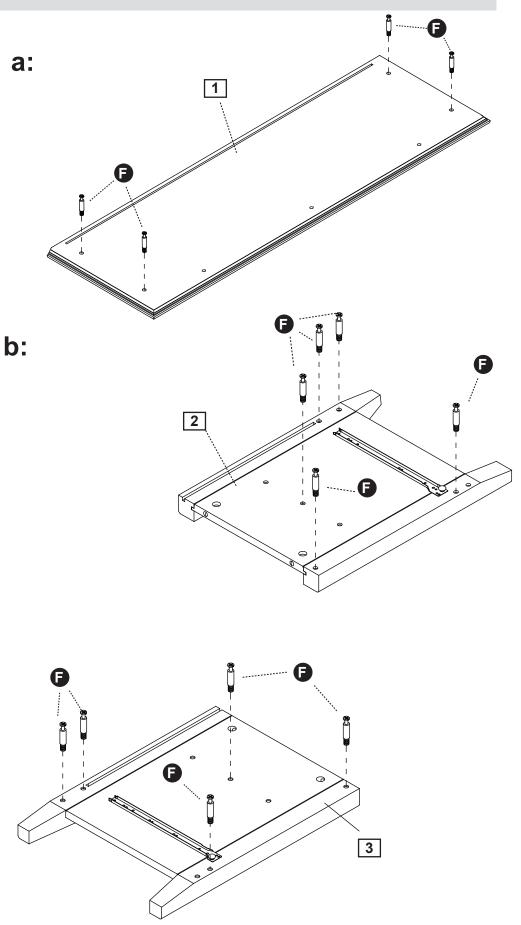

Insert Cam bolts


c: Insert Cam bolts into shelf panel 5 as shown

C:

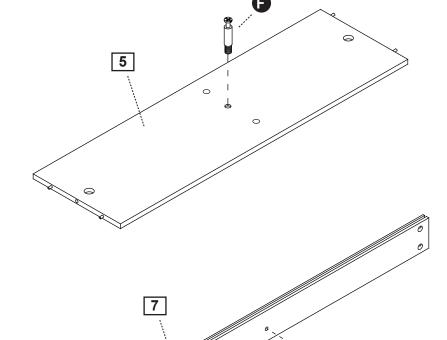

d: Insert Cam bolts into back railand bottom front railas shown


d:

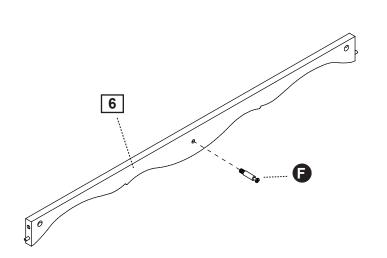

Step 2

Assembly frame side


Insert Cam locks **G**into the shelf panel **5**back rail **7** and top
front rail **4**. Press
firmly together. Turn the
cam lock clockwise with
a philipshead screwdriver
to lock.

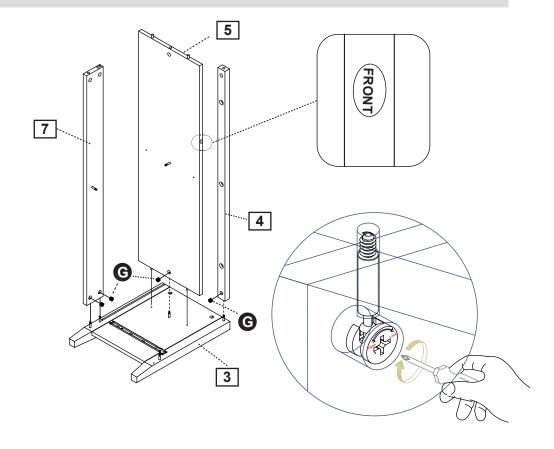

Step 3

Assembly center panel

Insert Cam locks (into the bottom front rail (into the bot

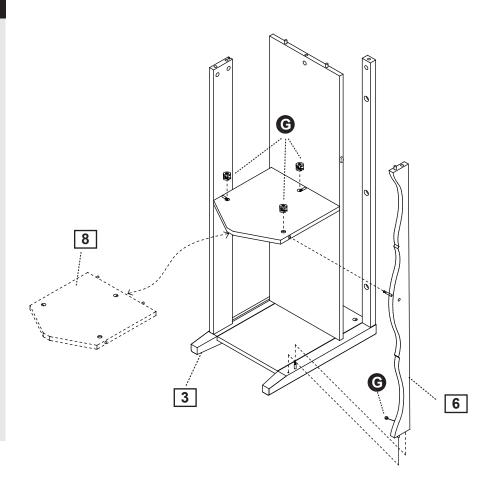

Step 4


a: Assembly frame side


Insert Cam locks **G**into the shelf panel **5**back rail **7**, bottom
front rail **6** and top
front rail **4**. Press
firmly together. Turn the
cam lock clockwise with
a philipshead screwdriver
to lock.

b: Attach the pad

Remove cover paper on the pad . Attach the pad into under the legs.
Remove cover paper on the pad . Attach the pad into under the center panel. With help stand the assembled unit upright.

b. A44-ab 4ba wad

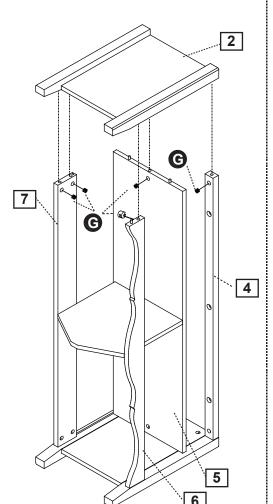


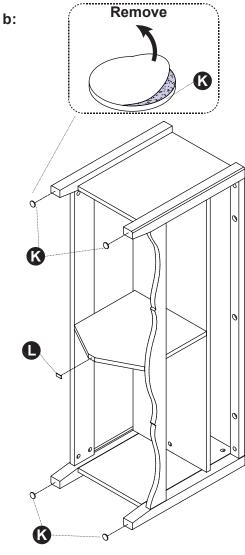

Step 5

Assembly back panel

Insert back panel 9 into the slot of back rail & frame side.

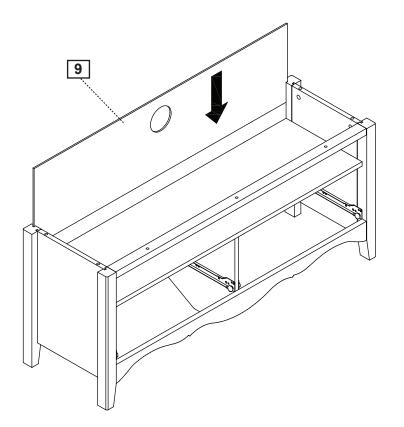

Step 6

Assembly top panel

Insert Cam locks G
into side panel 2 3
as shown .Press top panel
1 onto assembly.Turn cam
locks to lock . Insert bolts
B , Spring washer D ,
flat washer E , Tighten
with supplied allen key C
Do not over tighten.

Step 7


Assembly Drawer


a: Position Left side
drawer panel 11, and
right side drawer panel
12 into left drawer front
13
Fix through holes
using screw

a:

b:

b: Insert bottom panel drawer 15 into the slot of side drawer panel & drawer front panel.

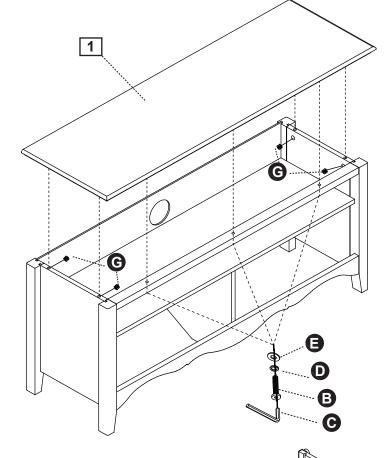

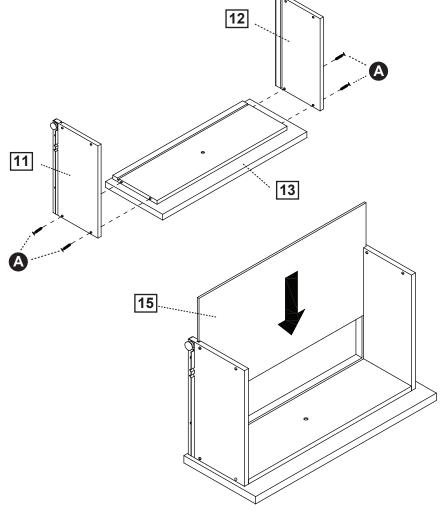

C: Position back panel drawer 10

Fix thourgh holes using screw **A**

d: Position metal handle into drawer front panel.

Fix through holes using bolt **H**

Repeat (step 7) for second drawer with right drawer front 14.

Step 8

Assembly Drawer

Position two drawers into the assembled unit.

