

OPERATION INSTRUCTIONS—Electronic Safe

Operation

Open the safe

- Press “START” button, the LCD will show “-----”.
- Enter your own user code or emergency code.
- The green light will be on and the door is unlocked.
- Turn the knob clockwise and pull the door open within 4 seconds.

Note:

The green light goes out after 4 seconds and safe will auto-lock again. If the green light is on and the door is not open, please turn the knob back (counter-clockwise) and then turn clockwise again. The door will open. When the wrong code is entered, the yellow light flashes with 3 buzzes, if 3 times the wrong code is entered consecutively, the keypad will auto-lock for 3 minutes.

Set the emergency code:

1. Press the “RESET” button, the LCD will show“-----”, and “-----” will flash.
2. Then press the “START” button, the “-----” will stop flashing.
3. Enter your own emergency code.
4. The LCD will show “In”, the new emergency code is set.

If you want to reset the emergency code, repeat the above process

NOTE:

For your security, please set the emergency code different the user code. Do not use same series of number at the beginning of user code as used with the emergency code.

Lock the safe:

- Close the door.
- Turn the knob counter-clockwise and the door is unlocked.

Low Battery:

Every time you use the safe, you need to press “START” button first, when the battery is low, the LCD will show “Lo-Bat”, and you need to replace the battery as soon as possible. “Use alkaline batteries ONLY”.

Emergency Override Key:

The safe door can be open anytime with the emergency override key. Remove the keyhole cover at the front of the unit and then use your override key to open the safe. See the section “Initial Setup-Open the safe door with Override Key” for the details.

Environment:

Where possible recycle unwanted materials instead of disposing of them as waste. All parts and packing should be sorted, taken to a recycling centre and disposed of in an environmetally friendly manner.

Argos, Avebury
489-499 Avebury Boulevard,
Milton Keynes MK9 2NW

OPERATION INSTRUCTIONS—Electronic Safe

Save this instruction for your future reference

WARNING:

- TAKE CARE NOT TO LOCK YOUR OVERRIDE KEY IN THE SAFE
- KEEP YOUR OVERRIDE KEY IN A SAFE PLACE



1. fascia
2. knob
3. LCD
4. keypad
5. Emergency cover

Initial Setup

Open the safe door with Override Key

1. Move the emergency key cover with acerose hook (Fig 1)
2. Take out the emergency keys from the Plastic bag and fully insert into the lock
3. Turn the emergency key counter-clockwise to a positive stop




4. Hold the key in counter-clockwise position, and turn the knob clockwise to open the door (Fig 2)



Install batteries


1. Slide the battery compartment cover open (Fig 3)
2. Fit the 4X 1.5V AA batteries provided to the battery compartment
3. Replace the battery cover

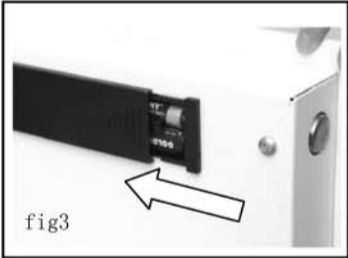

Set security code

1. Press “ START” button, the LCD will show “-----”
2. Enter your 6 digit code, and then press the “RESET” button which located at the back of the door. (Fig 4)
3. The LCD will show “In”, the user code is set.

If you want to reset the user code, just repeat the above process.

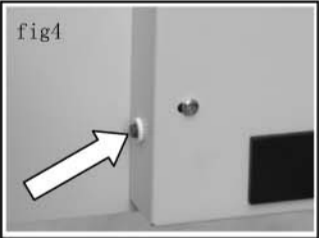

Ready to use your safe

1. Close the safe door
2. Turn the door knob anticlockwise to lock the door
3. Turn the override key clockwise, remove and store it in a safe place
4. The safe should now be locked confirm by turning the knob clockwise
5. The setup of the electronic safe is now accomplished