 




BORN INNOVATIVE

HOOVER

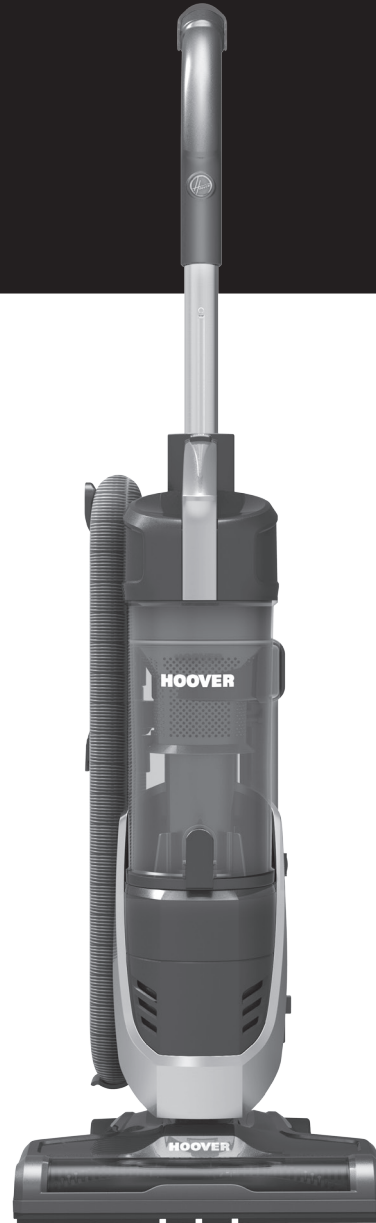

USER MANUAL

IMPORTANT SAFETY REMINDERS

This appliance should only be used for domestic cleaning, as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

Do not leave the appliance plugged in. Always switch off and remove the plug from the socket after charging, or before cleaning the appliance or any maintenance task.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the charger cable is damaged stop using the appliance immediately. To avoid a safety hazard, replace with a genuine spare part.

Keep hands, feet, loose clothing and hair away from rotating brushes.

Use only the original charger supplied with the appliance.

Check that your supply voltage is the same as that stated on the charger.

This appliance is supplied with a double insulated battery charger which is only suitable for insertion in a 230V (UK 240V) socket outlet.

Plug the charger in to suitable socket outlet and connect the charger jack plug to the appliance.

For first use, charge the battery pack for 5.5 hours.

To charge the battery pack, detach it from the cleaner by pressing the battery pack release button and plug the

charger into the charging port located on the battery pack.

The battery pack can also be charged when inserted into the cleaner.

Ensure that the cleaner is switched off during charging.

When the charger is connected, the battery LED lights on the battery pack will illuminate in turn as the battery charges, until all four lights are illuminated.

Once fully charged, the four LED lights will remain lit and will turn off after 5 minutes.

Re-connect the appliance to the charger after use to recharge the battery.

Never charge the batteries in temperatures above 45°C or below 0°C.

It is normal for the charger to become warm to the touch when charging. When charging the cleaner, it will automatically turn off.

Do not unplug the charger by pulling on the power cord.

Unplug the charger in the event of prolonged absence (holidays, etc.). Recharge appliance again before use as batteries may self discharge over increased periods of storage.

If the appliance is to be disposed of the batteries must first be removed. The appliance must be disconnected from the supply mains when removing the battery. Dispose of the batteries safely. Run the appliance until it stops because the batteries are fully discharged. Used batteries should be taken to a recycling station and not disposed of with household waste. To remove the batteries, please contact the Hoover Customer Centre or proceed according to the following instructions.

IMPORTANT SAFETY REMINDERS

IMPORTANT: Always fully discharge the batteries before removal and ensure the charger is unplugged.

Run the cleaner until the batteries are completely empty.

Remove the charger jack plug from the appliance.

Push the battery release button to eject the battery pack. Remove the battery pack slowly from the slot.

NOTE: Should you experience any difficulty in dismantling the unit or for more detailed information on treatment, recovery and recycling of this appliance, please contact your local city office or your household waste disposal service.

Do not replace the batteries with non-rechargeable batteries.

Use only attachments, consumables or spares recommended or supplied by Hoover.

When using cleaning tools ensure that the appliance is kept in the upright (parked) position. This will avoid possible damage to the carpet or floor covering. When cleaning stairs, do not position the appliance above you.

Static electricity: some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health.

Do not use your appliance out of doors or on any wet surface or for wet pick up.

Do not pick up hard or sharp objects, matches, hot ashes, cigarette ends or other similar items.

Do not spray with or pick up flammable liquids, cleaning fluids, aerosols or their vapours.

Do not run over the power cord when using your appliance or remove the plug by pulling on the power cord.

Do not continue to use your appliance if it appears faulty.

Hoover service: To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised Hoover service engineer.

Do not stand on or wrap the cord around arms or legs when using your appliance.

Do not use the appliance to clean animals or people.

When using the cleaning tools, ensure to always steady the appliance with your other hand. This will ensure that the appliance does not fall while in use.

The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.

 


CE This appliance complies with the European Directives 2014/35/EU, 2014/30/EU and 2011/65/EU.

CANDY HOOVER GROUP S.r.l. Via Privata Eden Fumagalli, 20861 Brugherio (MB) Italy

GETTING TO KNOW YOUR CLEANER


Effortless cleaning with your new Hoover

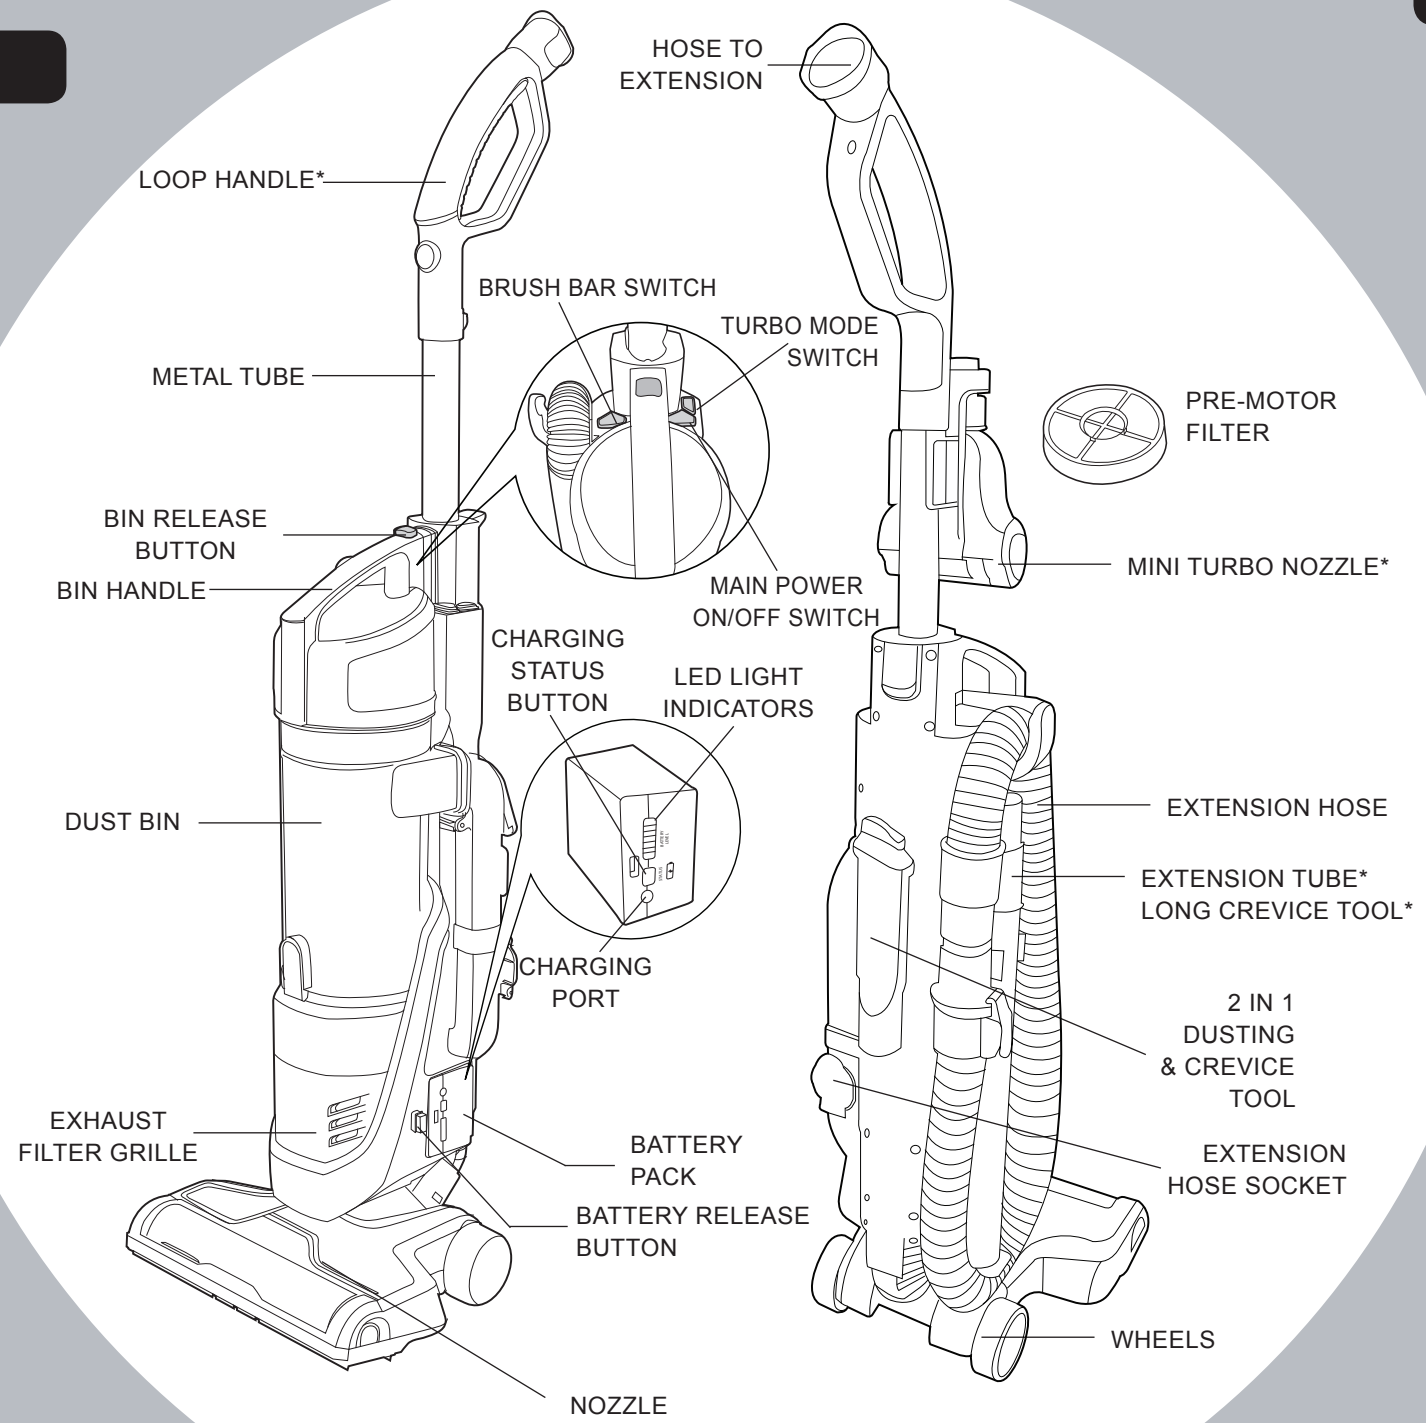


* Certain models only

PREPARING YOUR CLEANER

 Insert the main handle in the cleaner body and then adjust handle up/down to the desired height.

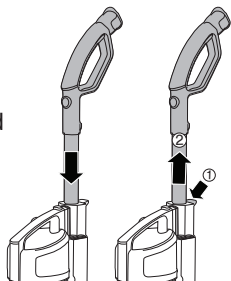

 Insert the battery pack by pushing it into the cleaner slot ensuring it is fixed in position, you will hear a click when fully located.

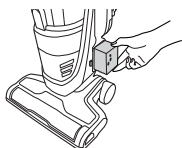


ACCESSORY STORAGE & ASSEMBLY*

Assemble the mini turbo brush holder to the handle tube of the cleaner, fit the mini turbo nozzle to the holder.*

Fit the 2 in1 Dusting & Crevice tool to the cleaner.

 Insert the long crevice into the extension tube and fit to the cleaner.

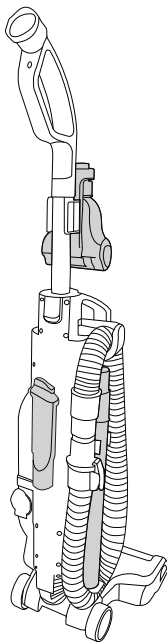


SWITCH

Always ensure the battery has sufficient electrical charge by pressing the charging status button prior to use.




1. Main Power On/Off Switch

 The Product will always start working in standard mode when you press the ON/OFF button.

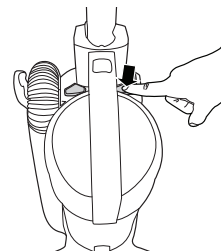


2. Turbo Mode Switch

 To enable turbo mode press turbo power button for deep clean.

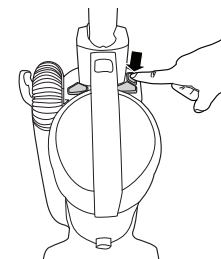


3. Brush Bar Switch

 Press the brush bar on/off button at the top of the unit.
Brush Bar ON - recommended for carpets.
Brush Bar OFF - suitable for hard floors.

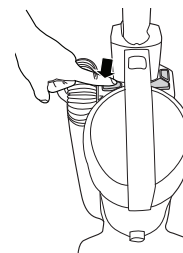


CLEANER RELEASE

 Recline to unlock the cleaner

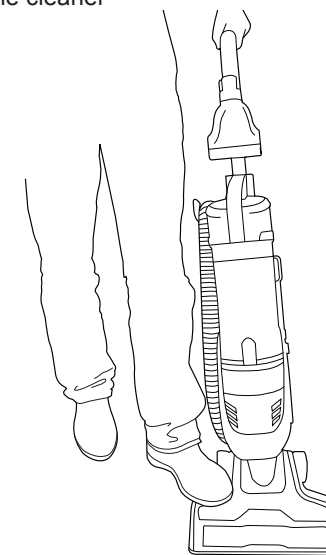

 Twist the handle to manoeuvre under or around furniture.*

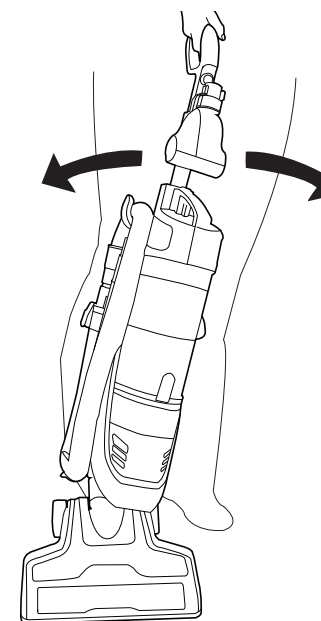

CHARGING/DISCHARGING

1. Discharging

Check the remain capacity status by pressing the charging status button on the battery pack.

LED Indication signal

- ○ ○ ● <15%, flashing
- ○ ● ● 15%~25%
- ● ● ● 26%~50%
- ● ● ● 51%~75%
- ● ● ● 76%~100%

IMPORTANT: Always ensure battery has sufficient battery charge before use.

Charge your cleaner immediately if one LED light is flashing (remaining capacity<15%).

2.Charging

To charge the battery you can connect the charger plug to the battery pack directly when it is in the appliance or you can remove the battery pack from the appliance by pressing the battery release button, this allow you to charge the battery pack only. It will take around 5.5 Hrs from full discharge to fully recharge the battery.

During the charging process you will see the charge level indicated by the LED on the battery pack. If the battery charge level is below 25% you will see the first LED blink until it reaches above 25% , then it will stay illuminated .This process will continue on all four point of the LED indicating level of battery charge 25%, 50% , 75% ETC. When the battery charge has reached 100% all 4 points will be illuminated.

BATTERY LEVEL INDICATOR :

 
 
- ○ ○ ● <15%, flashing
- ○ ● ● 15%~25%
- ● ● ● 26%~50%
- ● ● ● 51%~75%
- ● ● ● 76%~100%

The LED light will keep flashing during the charging process and will turn off 5 minutes after the battery has been fully charged.

IMPORTANT: The appliance on/off switch must always be in the OFF position during charging.

Use only the charger supplied with your cleaner to recharge. It is normal for the charger to become warm to the touch when charging.

NOTE: To optimise your battery performance you should fully charge your battery on a regular basis or at least once per year.

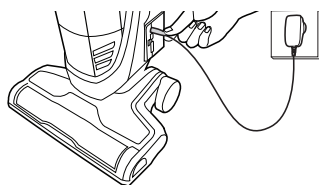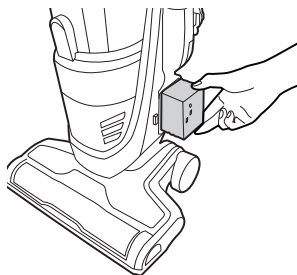

3.Battery Pack Use

 
 
- a. Insert the battery pack by pushing it into the cleaner slot ensuring it is fixed in position, you will hear a click when fully located.
- When the product is turned on the LED light will illuminate automatically.
- b. Push the battery release button to release the battery pack.
- c. Pull the battery pack slowly from the slot.
- d. Remove the battery pack to recharge or replace with the new battery pack.

CLEANING TOOLS

All accessories can be fitted directly onto the hose, handle and handle tube. Combine accessories depending on use.




Connecting accessories to Hose

- 1 Plug in the long stretch hose to the hose extension socket.
- 2 Choose your accessory and connect it to hose.

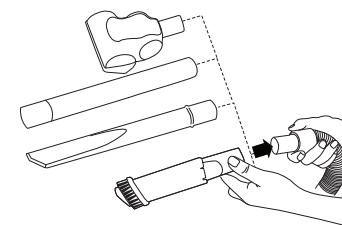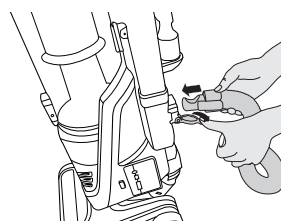

Connecting accessories to Handle Tube

   - 1 Remove handle tube.
- 2 Connect the hose to handle tube. Choose your accessory and connect it to the handle tube.

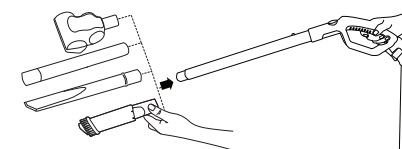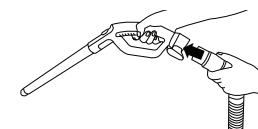

WARNING: Do not try to open the battery pack and repair it by yourself. Dispose of the batteries safely. Used batteries should be taken to a recycling station and not disposed of with household waste.

 


IMPORTANT! When using cleaning tools, the cleaner must be kept in the upright position, particularly when cleaning stairs. Hold unit while using hose or handle tube.

CLEANING THE STAIRS

It is dangerous to place the cleaner above you when cleaning stairs.

Ensure it is always operated in an upright position.

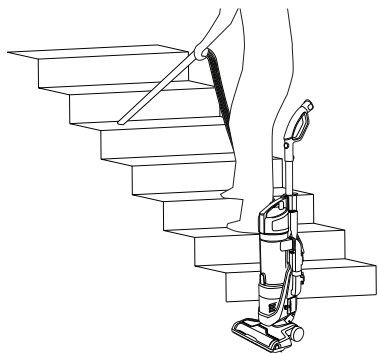

! IMPORTANT! When using cleaning tools, the cleaner must be kept in the upright position, particularly when cleaning stairs. Hold unit while using hose or handle tube.

EMPTYING THE BIN

 
1 To remove the bin from the cleaner press the bin release button.

2 Hold the container over the Bin and press the easy open button.

The container release flap will open and you can empty the debris into the waste bin with no dust contact.

3 Once emptied, gently tap or shake the container to release any excess dust.


Do not overfill the bin above the max level line.

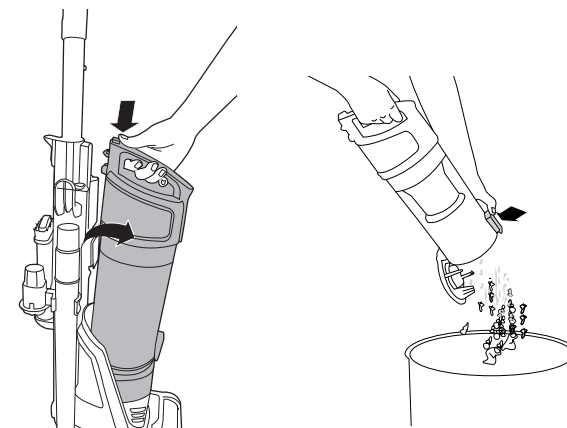


! IMPORTANT: Before emptying the bin, make sure vacuum cleaner has been switched off.

CLEANING THE PRE MOTOR FILTERS

 
1 Rotate the upper part of the dust bin to open.

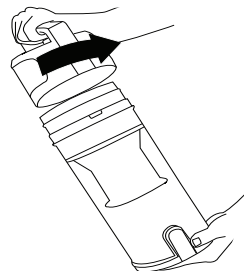

 
3 Gently tap both filters to release any excess dust.

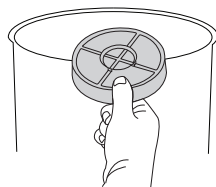

2 Take out the pre-motor filter.

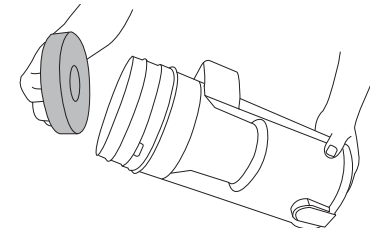 

 4 Wash both filter and sponge under warm water until the water runs clean. Remove excess water by shaking and leave to dry for 24 hours. Reassemble and refit filters to cleaner, only when they are completely dry.

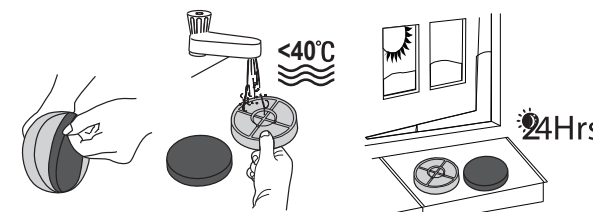

CHANGING THE BELT OR BRUSHES

 
If your cleaner is not picking up efficiently, the belt or brushes (or both) may need replacing, but first please make sure you have:

- Emptied the bin
- Cleaned the filters
- Checked for blockages




IMPORTANT: Ensure the cleaner is switched off, and remove the battery pack from the cleaner before attempting any maintenance.


- 1** Turn the cleaner over and remove 2 rear rollers and 2 retaining screws.

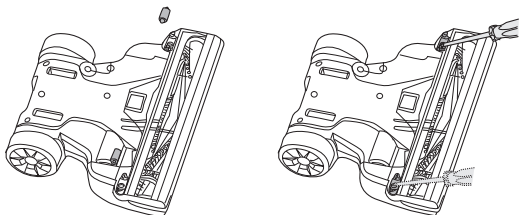

- 2** Remove the brush guard.

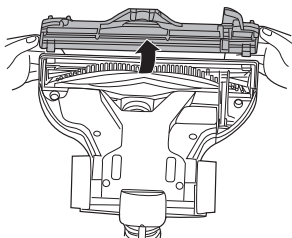 


 - 3** Remove brush assembly and check for wear on the belt. Loop the new belt around the motor and brush channel.

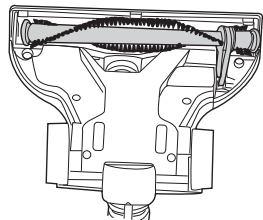


NOTE: If the brush gets blocked and stops rotating, switch off the cleaner, remove the battery pack from the cleaner and clear the blockage. If the brush has hair or thread wrapped around it, use scissors to clear.

 
- 4** Hold the brush assembly and stretch the belt until the brush can be slotted back into the cleaner housing.

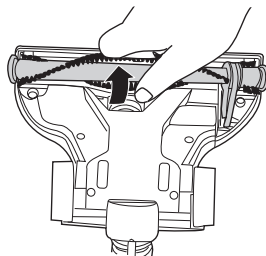

 - 5** Rotate the brush to ensure free movement of the belt.

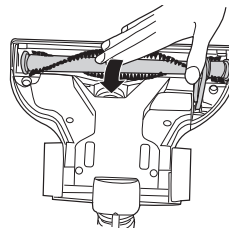

 - 6** Refit the brush guard with 2 retaining screws and 2 rear rollers..

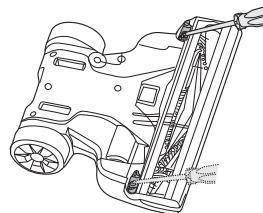


CLEARING A BLOCKAGE




IMPORTANT: Ensure the cleaner is switched off, and remove the battery pack from the cleaner before attempting any maintenance.

 
Check the cleaning tools and hose for blockages.

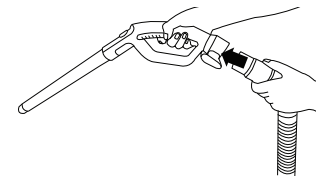


The hose can be removed at both ends.

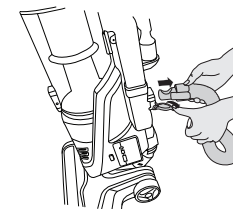 

 Turn the cleaner over and rotate the brushes to identify any obstructions including hair.

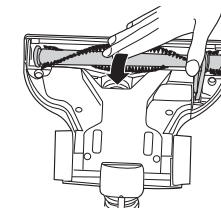

 Check for a blockage in the hose socket. Use a flexible rod to remove any obstruction.

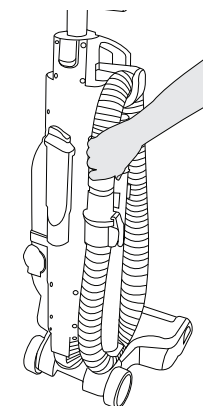

User checklist

If your cleaner is not working properly run through the following checklist.

1. Is there enough charge in the battery to operate the cleaner?
Check by pressing the charge status button, see User Manual P4.
2. Is the bin full or choked with fine dust?
To empty the bin, see the User Manual on P6.
3. Is the hose blocked?
To clear a blockage, see the User Manual on P7.
4. Is there a blockage in the cleaner base?
To clear a blockage, see the User Manual on P7.
5. Are the filters blocked?
To clean filters, see the User Manual on P6.
6. Are the brushes rotating correctly?
To check the brushes, see the User Manual on P7.

If there is any doubt call the Hoover Service Office for advice. They may be able to assist you over the telephone. A service charge will be made if the cleaner is examined and found to be in working order, has not been assembled in accordance with these instructions or has been used incorrectly.

The battery cannot be charged?

1. No LED light.

This may be a result of very long storage periods (over one year). Contact Hoover customer service to arrange battery replacement.

2. ◯●●● flashing 30seconds.

This may be over charge current protection.

Please only use the charger supplied with your cleaner to recharge.

You need remove charger, turn on product, then charge function will reset.

3. ●○○● flashing 30seconds.

This may be Incorrect charger plugged in.

Use only the charger supplied with your cleaner to recharge.

You need remove charger, turn on product, then charge function will reset.

IMPORTANT: Do not run cleaner over the charger cable as this could damage the charger cable insulation.

IMPORTANT INFORMATION

Hoover Service

Should you require service at any time, please contact your local Hoover Service Office.

Hoover spares and Consumables

Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering parts always quote your model number.

Quality

Hoover's factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001

GUARANTEE STATEMENT

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

IMPORTANT: The battery in this cleaner is guaranteed for 1 year from the date of purchase. After 1 year the customer is liable for the cost of a new battery.

Subject to change without notice.



®

BORN INNOVATIVE