

# REMINGTON®

## Complete Hair Gift Pack



GUARANTEE <sup>+1</sup>  
**2** yr

S3500GP

Register online for  
**£10,000 prize draw**  
EXTRA year guarantee  
FREE rewards gallery




Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister)  
You must register within 28 days  
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

- 1 Warning – for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice.
- 2 For UK household use only. Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 3 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 4 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 5 Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water. 
- 6 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- 7 Do not immerse the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.
- 8 Keep direct airflow away from eyes or other sensitive areas.
- 9 Do not allow any part of the appliance touch the face, neck or scalp.
- 10 During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- 11 Ensure the inlet grille is free from obstructions such as fluff, loose hair etc.
- 12 Keep the power plug and cord away from heated surfaces.
- 13 Do not leave the appliance unattended while plugged in.
- 14 Only set the appliance down on a heat-proof surface.
- 15 Do not place the appliance on any soft furnishings.
- 16 Do not use attachments other than those we supply.
- 17 Do not set the appliance down while still on.
- 18 Do not twist or kink the cable, or wrap it round the appliance.
- 19 Do not use the appliance if it is damaged or malfunctions.

- 20 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 21 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 22 This appliance is not intended for commercial or salon use.
- 23 Let the appliance cool down before cleaning and storing away.

## Power Dry 2000




### KEY FEATURES

- 1 Ceramic-Ionic coated grille
- 2 3 heat settings
- 3 2 speed settings
- 4 Cool shot
- 5 Concentrator
- 6 Removable easy clean rear grille
- 7 Hang up loop
- 8 Cord

---

## PRODUCT FEATURES

---

- 1650 – 2000 watts.
- Ceramic Ionic grille for even heat and anti-static.
- Eco setting - using the dryer on the mid heat setting (  ) saves more energy than using it on the high heat setting.


---

## INSTRUCTIONS FOR USE

---

- Wash and condition your hair as normal.
- Squeeze out excess moisture with a towel and comb through.
- ★ Hairsprays contain flammable material – do not use while using this product.
- Plug the product into the mains power supply.
- For fast drying use the high heat / high speed function.
- Select the desired temperature and speed setting using the switches on the handle.
- To create smooth styles use the concentrator and a round hair brush (not included) whilst drying.
- To set your style, press the cool shot button whilst styling then release it to reactivate the heat.
- After use, turn the appliance off and unplug.
- To turn off slide the speed setting switch down to the '0' position.
- Let the appliance cool down before cleaning and storing away.

### ★ Eco Setting

- To use the dryer on the eco setting align the heat and speed setting switches with the eco symbol (  ).


---

## CLEANING AND MAINTENANCE

---

- Unplug the appliance and allow to cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.
- To remove the rear grille, for cleaning, hold the dryer handle in one hand, then with the other place your thumb and index finger either side of the rear grille. Pull the rear grille away from the dryer.
- To replace the rear grille hold in place with thumb and index finger again and click back onto the dryer.

## Straightener 230

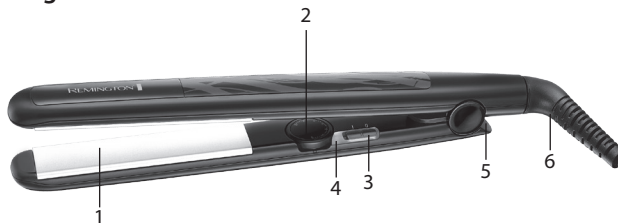

---

### KEY FEATURES

---

1. Ceramic coated plates
2. Variable temperature setting dial
3. On/Off switch
4. LED indicator Light
5. Hinge Lock
6. Swivel Cord

---

### PRODUCT FEATURES

---

- Anti static, ceramic, tourmaline, smooth glide plates for extra shine with less static\*
- \*vs. Remington standard ceramic coating
- High heat 230°C
- Floating plate – for even pressure on the hair as you straighten.
- Fast heat up - ready in 15 seconds
- Automatic safety shut off – The unit will automatically turn itself off if left on after 60 minutes and no button is pressed
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

---

### INSTRUCTIONS FOR USE

---

- Before use, ensure the hair is clean, dry and tangle-free.
- For extra protection use a heat protection spray.
- ★ Hairsprays contain flammable material – do not use while using this product.

- Section the hair prior to styling. Style the lower layers first.
- Plug the product into the mains power supply.
- CAUTION : the appliance will begin to heat-up as soon as the power supply is switched on.
- Working on one section at a time, run the straightener through the entire length of the hair without stopping.
- Only repeat twice per section to prevent damage to the hair.
- After use, turn the appliance off and unplug.
- Let the appliance cool down before cleaning and storing away.


---

## CLEANING AND MAINTENANCE

---

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

## Curl Create Wand

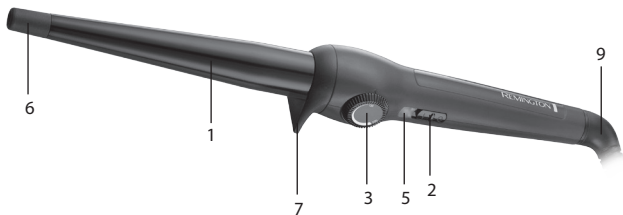

---

## KEY FEATURES

---

- 1 4 x Protection coated barrel
- 2 On-off switch
- 3 Temperature controls
- 4 Temperature level indicator
- 5 Ready indicator light
- 6 Cool tip
- 7 Stand
- 8 Heat resistant glove – first line protection only
- 9 Swivel cord

## PRODUCT FEATURES

- 4 x protection coating - \*Anti-static, ceramic tourmaline ionic, smooth glide.
- \*vs. Remington standard ceramic coating.
- High heat – 130°C to 200°C.
- Fast heat up - ready in 30 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

## INSTRUCTIONS FOR USE

- Before use, ensure the hair is clean, dry and tangle-free.
- For extra protection use a heat protection spray.
- ✳ Hairsprays contain flammable material – do not use while using this product.
- Section the hair prior to styling. Style the lower layers first.
- Plug in the appliance and slide the switch to turn on.
- Start styling on lower temperatures first. Select appropriate temperature for your hair type using the controls on the side of the product.
- To increase the temperature rotate the temperature controls to the right moving the temperature level indicator towards the top temperature. To decrease the temperature rotate the controls to the left moving the temperature level indicator towards the lowest temperature.

### ✳ Temperature Wheel settings:

- 0 = Off
- 130 = Lowest temperature
- 200 = Maximum temperature

### ✳ Recommended temperatures:-

Temperature	Hair Type
130°C - 150°C	Thin/fine, damaged or bleached hair
150°C - 170°C	Normal, healthy hair
170°C - 200°C	Thick, very curly and difficult to style hair

- Caution: the hottest temperatures should only be used by experienced stylists.

- The indicator light will stop flashing once the desired temperature is reached.
- Use the heat protection glove to avoid accidental burns.
- Hold the handle and wrap the hair around the heated barrel.
- Wait about 10 seconds for the curl to form.
- Unwind the tong and release the curl.
- Allow the hair to cool before styling.
- Repeat this around the head to create as many curls as desired.
- When finished slide the switch down to turn off and unplug the appliance.
- Let the appliance cool down before cleaning and storing away.

---

## CLEANING AND MAINTENANCE

---

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

---

## ENVIRONMENTAL PROTECTION

---

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



---

## SERVICE AND GUARANTEE

---

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at [www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)




---

## ➔ SERVICE CENTRE

---

### United Kingdom

 Tel 0345 6460 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.remington.co.uk](http://www.remington.co.uk)

---

## REGISTER ONLINE FOR

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.

## Model No. S3500GP

17/UK/ S3500GP T22-0005065 Version 03/17

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2017 Spectrum Brands, LTD